Dell UltraSharp U2417H Dell Display Manager User's Guide





NOTE: A NOTE indicates important information that helps you make better use of your computer.


Copyright © 2015 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws.

Dell[™] and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

Contents

Overview	. 4
Using the Quick Settings Dialog	. 5
Setting Basic Display Functions	. 6
Assigning Preset Modes to Applications	7
Applying Energy Conservation Features	. 8
Organizing Windows with Easy Arrange	. 9

Dell Display Manager is a Windows application used to manage a monitor or a group of monitors. It allows manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on select Dell monitors. Once installed, Dell display manager runs each time the computer starts and its icon is placed in the notification tray. Information about monitors connected to the computer is displayed when you hover the mouse pointer over the notification tray icon.

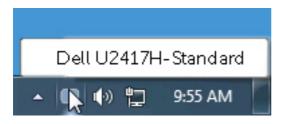

Clicking Dell Display Manager's notification tray icon opens the **Quick Settings** dialog box. When more than one supported Dell model is connected to the system, a specific target monitor can be selected using the menu provided. The **Quick Settings** dialog box allows convenient adjustment of the monitor's brightness and contrast levels. You can manually select a preset mode or enable automatic selection of a preset mode depending on the active application.

Disp	× Ilay Manager
Display: Resolution:	Dell U2417H 1920 x1060 Change
 Auto Mode Manual Mode 	Configure Standard •
Brightness: Contrast:	75%
	Open Dell Display Manager
	🔺 🔲 🏟 🏴 江 11:34 AM

The **Quick Settings** dialog box also provides access to Dell display manager's advanced user interface, which is used to adjust basic functions, configure Auto Mode, and access other features.

Setting Basic Display Functions

A preset mode for the selected monitor can be manually applied using the menu on the **Basic** tab. Alternatively, Auto Mode can be enabled. Auto Mode causes your preferred preset mode to be applied automatically when specific applications are active. A message momentarily appears on the screen showing the selected preset mode.

The selected monitor's brightness and contrast can also be directly adjusted from the **Basic** tab.

Display	Manager			8 Dali U2417H
Desk	Auto Mode	Easy Arrange	Options	0
Resolution: 193	20 x 1080			Change
	e annighments für active ap	dicators		Configure
Manual Mode Choose a preset	t mode:		Standard	-
Brightness:		75%		
Contrasti	· · · ·	75%		

Assigning Preset Modes to Applications

The **Auto Mode** tab allows you to associate a specific preset mode with a specific application, and apply it automatically. When Auto Mode is enabled, Dell Display Manager automatically switches to the corresponding preset mode whenever the associated application is activated. The preset mode assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to the next.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu, or elsewhere, and drop it onto the current list.

NOTE: Preset mode assignments targeting batch files, scripts, and loaders, as well as non-executable files such as zip archives or packed files, are not supported and will be ineffective.

In addition an option can be enabled that activates the **Game** preset mode when a Direct3D application is run in full-screen mode. To override this behavior for individual game titles, add them to the assignment list with a different Preset Mode. Applications present in the assignment list take priority over the general Direct3D setting.

Basic	Auto Mode	Easy Arrange	Options	
vergin a preset mode to a s	pecífic ap <mark>licatio</mark> n	. To add an <mark>application, drag</mark> (t to the list:	
Application		Preset Mode		*
Microsoft Office Were	1 5	Standard	+	
Raint		Standard	-	
Kindows DVD Maker		Standard	¥1	
🔘 Windows Media Cent	er	Standard	•	
Wide a Meta Paya		Standard	* Biog	
🔝 Windows Wordped Ap	noteolog	Standard		· · · ·


Applying Energy Conservation Features

On supported Dell models, an **Options** tab is available to provide PowerNap energy conservation options. When the screensaver activates, the monitor's Brightness can automatically be set to minimum level or the monitor can be put to sleep in order to save additional power.

Organizing Windows with Easy Arrange

Some Dell models feature Easy Arrange, which allows the selected monitor's desktop to be organized into various predefined or custom window layouts. When Easy Arrange is enabled, windows can easily be repositioned and resized automatically to fill specific regions within a window layout.

To get started with **Easy Arrange**, choose a target monitor and select one of the predefined layouts. The regions for that layout are displayed momentarily on the monitor. Next, drag an open window across the monitor. While the window is being dragged, the current window layout is displayed and an active region gets highlighted as the window passes over it. At any time, drop the window into the active region to place the window in that region.

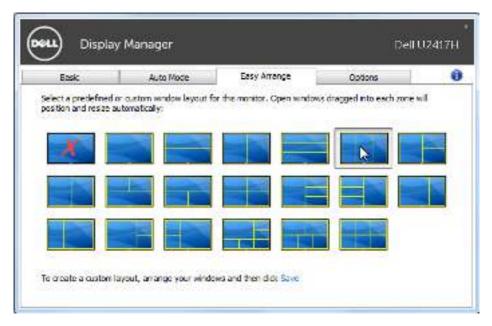

To create a custom window layout, size and position the windows (maximum 10) on the desktop and then click the **Save** link in **Easy Arrange**. The size and position of the windows is saved as a custom layout and the custom layout icon is created.

NOTE: This option does not save or remember the applications that are open. Only the size and position of the windows is saved..

	Auto Made	Casy Arrange	Optons	
sect a predefine aston and resize		or this monitor. Open window	is dragged into each zone	ы
Ewy Arra	mg#	-		3
	Your current window I	ayout has been assigned to	o the custom layout	
	button.	**************************************		
			OK	
	- Locon		ОК	

To use the custom layout, select the custom layout icon. To delete the currently saved custom layout, close all windows on the desktop and then click the **Save** link in **Easy Arrange**.

Basic	Auto Node	Easy Arrange	Optone	
Select a predefined position and resize .		or this monitor. Open windo	vs dragged into each zone	will
X				
10.0				
	and the second			
				العطي
52 Jan 19		All Sectors and and sectors of		