# Dell E1920H/E2020H/E2220H/ E2420H/E2420HS/E2720H/ E2720HS

Dell Display Manager User's Guide





NOTE: A NOTE indicates important information that helps you make better use of your computer.

© 2019 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2020 - 01

Rev. A00

# Contents

Overview	4
Using the Quick Settings Dialog	5
Setting Basic Display Functions	6
Assigning Preset Modes to Applications	7
Organizing Windows with Easy Arrange	8
Managing Multiple Video Inputs	10
Restoring Application Positions	12
Applying Energy Conservation Features	14
Troubleshooting	15




### Overview

Dell Display Manager is a Microsoft Windows application used to manage a monitor or a group of monitors. It enables manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on selected Dell monitors. After installation, Dell Display Manager runs each time the system starts and places its icon in the notification tray. Information about monitors connected to the system is available when hovering over the notification tray icon.



NOTE: Dell Display Manager uses DDC/CI channel to communicate with your monitor. Ensure that DDC/CI is enabled in the menu as below.

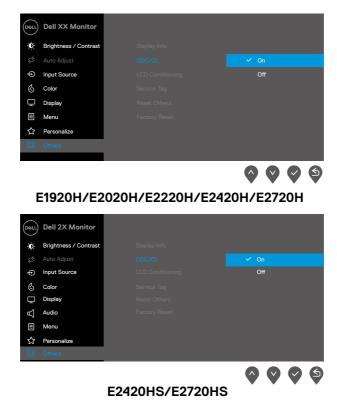

### Using the Quick Settings Dialog

Click the Dell Display Manager's notification tray icon to open the **Quick Settings** dialog box. When more than one supported Dell model is connected to the computer, a specific target monitor can be selected using the menu. The **Quick Settings** dialog box enables convenient adjustment of the monitor's brightness and contrast levels. You can select **Manual Mode** or **Auto Mode**, and the screen resolution can be changed.

(and Display	Manager		*
Dicplay:	Del 82400H		
Resolution:	1920s-1000		<u>Change</u>
🔿 Auto Node			Configure
(i) Ranual Hode		Standard	~
Bilgithmass			75%
Desisaria		·	258.
×			>
	Cost Cel Display H	leneger	

#### E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS

The **Quick Settings** dialog box also provides access to Dell Display Manager's advanced user interface that is used to adjust basic functions, configure auto mode and access other features.

# **Setting Basic Display Functions**

You can select **Manual Mode** that enables you to manually select a preset mode or select **Auto Mode** that applies a preset mode based on the active application. An on-screen message displays the current preset mode whenever it changes. The selected monitor's **Brightness** and **Contrast** can also be directly adjusted from the **Basic** tab.

Basic	Auto Made	Easy Amange	Input Manage	r Options	
Resolution	1830x10	80			Change
C Auto Mode Use preset	node assignmento fi	or active applications			Configure
Manual Plot Choose a p	ie recet mode:			Standard	Ŷ
bightness:			75%		
Contrasti			79%		

E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS

NOTE: When multiple Dell monitors are connected, select "Enable display matrix control" to apply brightness, contrast and color presets controls to all monitors.

	Auto Mode Easy Amerge	ingst Hanager	Options	
descilators.	1947-044 (1980)			Change
30 Manual Med				Califyre
Owners a p	esel moder		Sandard	~
лутык				
		100.		

E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS

# **Assigning Preset Modes to Applications**

The **Auto Mode** tab allows you to associate a specific **Preset Mode** with a specific application, and apply it automatically. When **Auto Mode** is enabled, Dell Display Manager automatically switches to the corresponding **Preset Mode** whenever the associated application is activated. The **Preset Mode** assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to another.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu or elsewhere, and drop it onto the current list.

#### NOTE: Preset Mode assignments for batch files scripts, loaders, and nonexecutable files such as zip archives or packed files, are not supported.

You can also configure the Game preset mode to be used whenever a Direct3D application runs in full-screen mode. To prevent an application from using mode, assign a different preset mode to it.


Bealc solgri a press	Auto Mode at mode to a specific app	Easy Amange Acation, To add	Diput Planagar ari application, dragit (	Optione to this list:	
Ipplication	,	Pre	oet Made		*
Tetas	t for desitop appil	90	andard	0	
Defed	t for fullaction Direct30,	) <u>St</u>	andard		
Defaul	t for universal Windows	appa) We	513 ST	~	
👹 arterne	it England	W	NOR .		
THE MILLION	ft bige	W	671		*

E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS



# **Organizing Windows with Easy Arrange**

**Easy Arrange** helps you to effectively organize your application windows on the desktop. You first choose a pre-defined layout pattern which suits your work, then you just need to drag the application windows into the defined zones. Press ">" or use Page Up/Page Down key to find more layouts. To create a custom layout, arrange the open windows and then click **Save**.

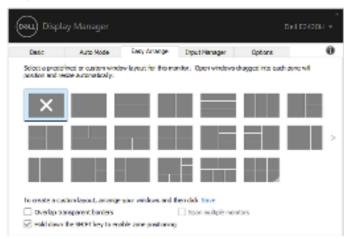

#### E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS

For Windows 10, you can apply different window layouts for each of the virtual desktops.


If you often use Windows snap feature, select the "**Hold down the SHIFT key to enable zone positioning**". This gives Windows snap priority over **Easy Arrange**. You will then need to press the Shift key to use **Easy Arrange** positioning.



Displ	sy Manager				Dell E2420H +
Seals	Auto Made	Sary Arrange	InputNenaper	Optional	0
Select a presid position and re	fired or caston wind size automaticallys	ow layout for this mo	eiter. Open windows	shagged into each	and off
×					_
					-
		-			
Overlap to	areparent borders	e pour windows and the able zone positioning	Spon multiple more	iloro	

E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS

If you are using multiple monitors in an array or matrix, **Easy Arrange** layout can be applied across to all the monitors as one desktop. Select "**Span multiple monitors**" to enable this feature. You need to align your monitors properly to use it effectively.

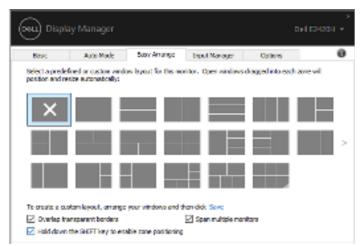

E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS



9

### **Managing Multiple Video Inputs**

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell monitor. It makes it easy to switch between inputs while you work with multiple computers.

All video input ports available to your monitor are listed. You can give each input a name as you like. Save your changes after editing.


You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.

Bask, As	Ge Mode Boxy Arrang	: DoutHanagor	Options	
Input port:	Input name:			
WGA (Active)	(clob to ed t)			
D9	(Clock to edd)			
Server the input sher lead Cel + Alt + Hum 1	licy: 22 VHZ	<i>.</i> ,,	Orange active in	put
input shiftsh shortout k	272			
None	32 OP	v 000	ega -	÷

E1920H/E2020H/E2220H/E2420H/E2720H

	o Mode - Enve Amonge	Input Manager	Options
Input port:	Enputnene:		
VGN	(Click to edit)		
ENE (Active)	Slick to edd)		
			Seve
events input shertcat i	101		
ti + Alt + s	20 <b>K</b> GA		Change active input
put evitch shortout ke	f		
24 + 44 + 2	20 1046	~ (0)	YGA

You can use the dropdown list to switch to any available input source.

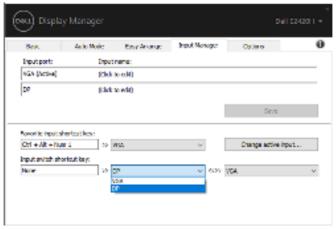

E1920H/E2020H/E2220H/E2420H/E2720H

Book.	Auto Nede	Basy Amongo	Trout Nenegor	Cotte	10	
Input port:	Input	memor				
VGA.	(06)	ta cel ()				
HDHI (Adha)	(data	ta edit)				
feverits input she Carl + Alt + 1	<u> </u>	VCA	v	Chang	e active inputs.	
put with the	autikeys					
CHI ALLA 2		IDM3	$\sim 00$	NSA.		
		NGA				

E2420HS/E2720HS

NOTE: DDM communicates with your monitor even when the monitor is displaying video from another computer. You can install DDM on the computer you frequently use and control input switching from it. You may also install DDM on other computers connected to the monitor.




### **Restoring Application Positions**


DDM can help you restore application windows into their positions when you reconnect your computer to the monitor(s). You can quickly access this feature by right-clicking on DDM icon in the notification tray.

	Open Dell Display Manager Attach to active window
	Save current window layout Restore saved window layout Auto-restore window layout
	Online documentation Check for new version
4	Exit Na 🖬 😻 🐭 🕬 10/20/2019 🛤

If you choose **"Auto-restore window layout"**, your application windows' positions are tracked and remembered by DDM. DDM automatically puts the application windows into their original positions when you reconnect your PC to your monitor(s).

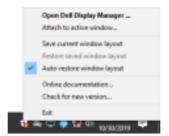

If you want to go back to a favorite layout after you have moved the application windows around, you can first **"Save current window layout"** and later **"Restore saved window layout"**.

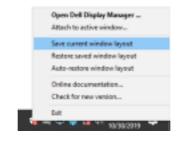



You may use monitors with different models or resolutions in your daily routine, and you may apply different window layouts on them. DDM is able to know the monitor you have reconnected and restore application positions accordingly. In case you need to replace a monitor in a monitor matrix configuration, you can save the window layout before replacement and restore the layout after a new monitor is installed.



**NOTE:** You should keep your applications running in order to benefit from this feature. DDM does not launch applications.



# **Applying Energy Conservation Features**

On supported Dell models, an **Options** tab is available that provides PowerNap energy conservation options. You can choose to set the monitor's brightness to the minimum level, or to put the monitor to sleep when the screensaver is activated.

Best	Auto Mede	Easy Amongo	Stout Planager	Optional	
Z Rowertka	p options:				Configure
® sedu	te brightness when so	reensaver activates			
ORet	e display to deep who	en octeensaver activ	atec		
hogensite	teat keyn		Application window sh	or toot, keys	
CH + Shift +	-0		Chi + Shift + Num 0		
Casy Amange	NRU shortcut keys				
CH + Shift +	Num 7				

E1920H/E2020H/E2220H/E2420H/E2420HS/E2720H/E2720HS




### Troubleshooting

If DDM does not work with your monitor, DDM will show below icon in your notification tray.



Click on the icon, DDM shows a more detailed error message.

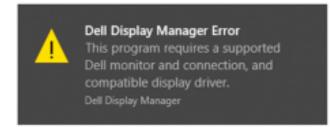

Please note that DDM only works with Dell branded monitors. If you are using monitors from other manufacturers, DDM does not support them. If DDM is unable to detect and/or communicate with a supported Dell monitor, please take below actions to troubleshoot:

- **1.** Make sure the video cable is properly connected between your monitor and your computer. Ensure the connectors are firmly inserted into position.
- 2. Check the monitor OSD to ensure DDC/CI is enabled.
- **3.** Make sure you have the right graphics card driver from the vendor (Intel, AMD, NVIDIA, etc.). Graphics driver is often the cause of DDM failure.
- **4.** Remove any docking stations, cable extenders, and converters between the monitor and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/CI properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your computer.

DDM may not work with below monitors:

- Dell monitor models that shipped earlier than 2013 and D-series of Dell monitors. For more information see **www.dell.com/support/monitors**.
- Gaming monitors using Nvidia-based G-sync technology.
- Virtual and wireless displays do not support DDC/CI.
- Some early models of DP 1.2 monitors, it may be necessary to disable MST/DP 1.2 using the monitor OSD.

If your computer is connected to the Internet, you will be prompted to upgrade to a new version of DDM when it is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon while pressing and holding 'shift' key.

	Open Dell Display Manager Attach to active window
	Refresh
	Save monitor asset report
	Save diagnostic report
	Save current window layout
	Restore saved window layout
	Auto-restore window layout
~	Auto-load at startup
~	Onscreen notifications
	Online documentation
	Check for new version
	Exit

Dell