

USER MANUAL **G-MASTER**

LCD Monitor

ENGLISH

G-MASTER GB2730HSU G-MASTER G2730HSU

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



iiyama | Servicecard



Dear user, we congratulate you on the purchase of your iiyama LCD.

please check the iiyama website. For details on warranty and locally used pixel policies that apply directly after installation of your product

your local support centre found at www.iiyama.com/service To report a fault, please contact

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

| model number *

- purchase receipt and serial number *
- name and address for collection
- telephone/fax number, for availability during the day
- Convenient collection date (date time)
- convenient collection date (date, time)
- short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

* see the identification plate on the back of the case.



CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive"

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No · PI 2730H



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: http://www.iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- As an ENERGY STAR[®] Partner, iiyama has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.

TABLE OF CONTENTS

FOR YOUR SAFETY1
SAFETY PRECAUTIONS1
SPECIAL NOTES ON LCD MONITORS
CUSTOMER SERVICE
CLEANING
BEFORE YOU OPERATE THE MONITOR
FEATURES4
CHECKING THE CONTENTS OF THE PACKAGE4
WALL MOUNTING5
FITTING AND REMOVAL OF BASE : G-MASTER GB2730HSU6
FITTING AND REMOVAL OF BASE : G-MASTER G2730HSU7
CONTROLS AND CONNECTORS : G-MASTER GB2730HSU8
CONTROLS AND CONNECTORS : G-MASTER G2730HSU9
CONNECTING YOUR MONITOR : G-MASTER GB2730HSU 10
CONNECTING YOUR MONITOR : G-MASTER G2730HSU 11
COMPUTER SETTING12
ADJUSTING THE VIEWING ANGLE : G-MASTER G2730HSU 12
ADJUSTING THE HEIGHT AND THE VIEWING ANGLE :
G-MASTER GB2730HSU13
PANEL ROTATION : G-MASTER GB2730HSU13
OPERATING THE MONITOR14
ADJUSTMENT MENU CONTENTS15
SCREEN ADJUSTMENTS22
POWER MANAGEMENT FEATURE25
TROUBLE SHOOTING
RECYCLING INFORMATION
APPENDIX
SPECIFICATIONS : G-MASTER GB2730HSU
SPECIFICATIONS : G-MASTER G2730HSU
DIMENSIONS : G-MASTER GB2730HSU
DIMENSIONS : G-MASTER G2730HSU
COMPLIANT TIMING

ENGLISH

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. Do not remove the tilt stand when operating the monitor. Ventilation slots on the back of the cabinet will be blocked and the monitor may overheat if the stand is removed. This may cause fire or damage. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height. (Just for height adjustable model.)

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

ENGLISH

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- **NOTE** When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

NOTE If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

- **WARNING** If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.
- **CAUTION** For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Spray-type cleaner
Benzine	Wax
Abrasive cleaner	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.
- **CABINET** Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.
- LCD Periodic cleaning with a soft dry cloth is recommended.
- **SCREEN** Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- Supports Resolutions up to 1920 × 1080
- High Contrast 1000:1 (Typical), Adv. Contrast Function Available / Brightness 300cd/m² (Typical)
- Quick Response Time 1ms (Gray to Gray)
- ◆ Supports AMD FreeSync[™] technology (through HDMI/DisplayPort-inputs)
- Flicker Free
- Blue Light Reducer
- Digital Character Smoothing
- Automatic Set-up
- 2 × 2W Stereo Speakers
- Plug & Play VESA DDC2B Compliant Windows[®] 7/8.1/10 Compliant
- Power Management (ENERGY STAR[®] and VESA DPMS Compliant)
- VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.


- Power Cable*¹
- Stand-Base*³
- Stand*²
- Cable Holder*²
- HDMI Cable
- USB Cable
- Stand-Base (Screw for stand fixing attached)*²
- Screw for stand fixing (3pcs)*³
- Safety Guide
- Quick Start Guide

CAUTION

- *1 The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/ 250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.
 - *² Accessory for G-MASTER G2730HSU.
 - *3 Accessory for G-MASTER GB2730HSU.

WARNING When you use with the wall mounting, in consideration of thickness of the mounting stage, tighten the M4 Screw with washer which "L" length is 7mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

Please check if the wall or ceiling can support the weight of the monitor before mounting it.

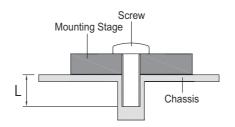


FITTING AND REMOVAL OF BASE : G-MASTER GB2730HSU

CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid electric shock or damage.

<Installation>

- Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched.
- Lay the monitor flat on a table with front face down.
- ② Hold the monitor and push the Stand-Base.
- ③ Use 'thumb screw' provided to secure base to monitor column.

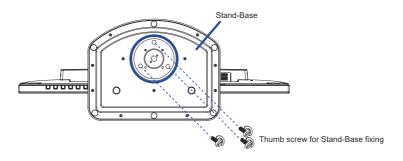


<Removal>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- 2 Remove 'thumb screw' to remove base from monitor column.

<Stopper>

Put the monitor on a flat surface. Press the stopper at the back of the stand while pushing the monitor from the top. Careful attention is required as the monitor is sprung loaded and the stand may expand quickly.

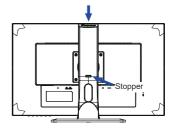


FITTING AND REMOVAL OF BASE : G-MASTER G2730HSU

CAUTION


- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid electric shock or damage.

<Installation>

 - (1) Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- (2) Hold the monitor and install the stand. Secure it using the screw provided.
- ③ Install the stand-base to the stand.
- (4) Use 'thumb screw' provided to secure base to monitor column.
- (5) Place the Cable Holder.





for Stand-Base fixing

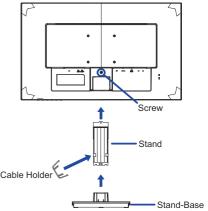


<Removal>

  
- (1) Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- (2) Remove 'thumb screw' to remove base from monitor column.
- ③ Unfix the screw and remove the Stand.
- (4) Pull the hook of the Cable Holder outside and remove it





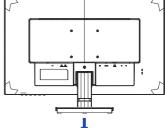

CONTROLS AND CONNECTORS : G-MASTER GB2730HSU

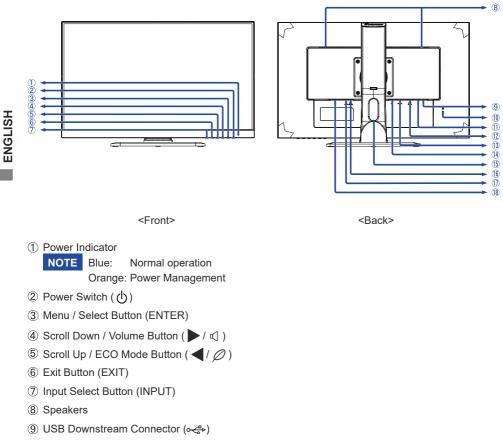


1 Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

- 1 USB Upstream Connector (
- 12 VGA Connector (D-SUB)
- (1) HDMI Connector (HDMI)
- ① DisplayPort Connector (DP)
- (15) Cable Holes
- (16) Headphone Connector (LINE OUT)
- 1 Audio Connector (LINE IN)
- (18) AC Connector (\sim : Alternating current) (\sim)

CONTROLS AND CONNECTORS : G-MASTER G2730HSU

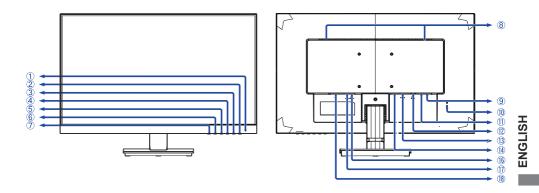

<Front>



- Power Indicator
 NOTE Blue: Normal operation
 Orange: Power Management
- ② Power Switch (⊕)
- 3 Menu / Select Button (ENTER)
- ④ Scroll Down / Volume Button (► / 🗹)
- ⑤ Scroll Up / ECO Mode Button (◀ / Ø)
- 6 Exit Button (EXIT)
- ⑦ Input Select Button (INPUT)
- ⑧ Speakers
- ⑨ USB Downstream Connector (⊶)
- 1 Keyhole for Security Lock

NOTE


You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

- 1) USB Upstream Connector (
- 12 VGA Connector (D-SUB)
- 1 HDMI Connector (HDMI)
- (1) DisplayPort Connector (DP)
- (1) Headphone Connector (LINE OUT)
- 1 Audio Connector (LINE IN)
- (18) AC Connector (\sim : Alternating current) (\sim)

CONNECTING YOUR MONITOR : G-MASTER GB2730HSU

- 1 Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the monitor to the audio equipment with the Audio Cable for computer when using the audio features.
- ④ Connect the Power Cable to the monitor first and then to the power supply.
- ⑤ Turn on your monitor and computer.
- **NOTE** The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
 - For connection to Macintosh computers, contact your local iiyama dealer or regional iiyama office for a suitable adaptor.
 - Make sure you tighten the finger screws at each end of the signal cable.
 - The Class I pluggable equipment Type A must be connected to protective earth.
 - The socket-outlet shall be installed near the equipment and shall be easily accessible.
 - Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.


[Example of Connection]

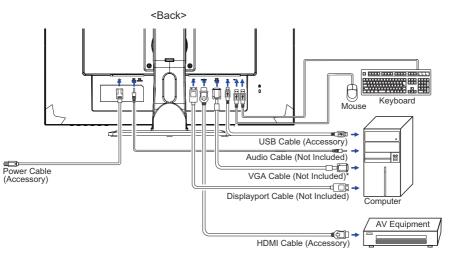

* VGA cable is not supplied with the monitor. If you use low quality VGA cable, it may cause a result of electro-magnetic interference. Please contact the iiyama Support Centre in your country if you wish to connect the monitor via the VGA input.

[Collect Cables]

 
- ① Put the cables through the cable hole.
- 2 Collect cables at the back of the stand.



CONNECTING YOUR MONITOR : G-MASTER G2730HSU

- 1 Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the monitor to the audio equipment with the Audio Cable for computer when using the audio features.
- ④ Connect the Power Cable to the monitor first and then to the power supply.
- (5) Turn on your monitor and computer.
- **NOTE** The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
 - For connection to Macintosh computers, contact your local iiyama dealer or regional iiyama office for a suitable adaptor.
 - Make sure you tighten the finger screws at each end of the signal cable.
 - The Class I pluggable equipment Type A must be connected to protective earth.
 - The socket-outlet shall be installed near the equipment and shall be easily accessible.
 - Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.


[Example of Connection]

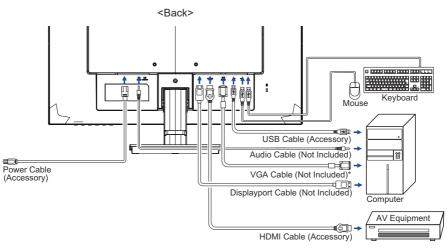

* VGA cable is not supplied with the monitor. If you use low quality VGA cable, it may cause a result of electro-magnetic interference. Please contact the iiyama Support Centre in your country if you wish to connect the monitor via the VGA input.

[Collect Cables]

 - ① Put the cables through the cable holder.
- 2 Collect cables at the back of the stand.



BEFORE YOU OPERATE THE MONITOR 11


COMPUTER SETTING

Signal Timing

Change to the desired signal timing listed on page 31: COMPLIANT TIMING.


ADJUSTING THE VIEWING ANGLE : G-MASTER G2730HSU


- For optimal viewing it is recommended to look at the full face of the monitor.
- Hold the stand so that the monitor does not topple when you change the monitor's angle.
- You are able to adjust the monitor's angle up to 22° upward, 5° downward.
- In order to ensure a healthy and relaxed body position when using the monitor at visual display workstations, it is recommended that the adjusted tilt angle should not exceed 10 degrees. Adjust the monitor's angle to your own preference.
 - NOTE Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to catch your fingers or hands when you change the angle.

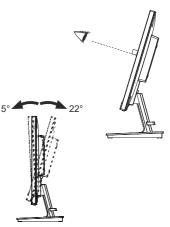

ADJUSTING THE HEIGHT AND THE VIEWING ANGLE : G-MASTER GB2730HSU

 - For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 130mm, angle up to 45 degrees right and left, 22 degrees upward and 5 degrees downward.
- NOTE Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to catch your fingers or hands when you change the height or the angle.
 - Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.

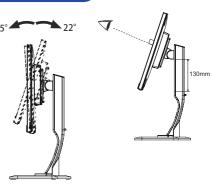






PANEL ROTATION : G-MASTER GB2730HSU

- 1) Adjust the mother's height.
- ② Rotate the panel 90 degrees. Portrait: Turn clockwise.

Landscape: Turn counter clockwise.

- NOTE
- Attempting to rotate without fully extending upward may cause damage to stand.
- Video card for portrait display will be required for rotating the image on the screen.
- ③ Adjust the monitor's angle to your preference.

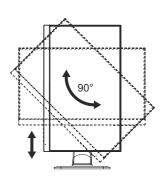

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 31. You are also able to adjust the picture by following the button operation shown below. For more detailed adjustments, see page 22 for SCREEN ADJUSTMENTS.

- Press the ENTER Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the ◀ / ▶ Buttons.
- ② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the ENTER Button. Then, use the ◀ / ▶ Buttons to highlight the desired adjustment icon.
- ③ Press the ENTER Button again. Use the ◀ / ▶ Buttons to make the appropriate adjustment or setting.
- Main Menu

 ☆ Picture Adjust

 □2 Input Select

 ① Audio Adjust

 □ Store User Setting

 ☞ Color Adjust

 □ Inage Adjust


 ③ Language

 ① Setup Menu

 ④ Display Information

 [20]
- ④ Press the EXIT Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for vertical position, select Menu item of Image Adjust and then press the ENTER Button. Then, select Geometry by using the \triangleleft / \blacktriangleright Buttons. An adjustment page appears after you press the ENTER Button. Then, select V.Position by using the \triangleleft / \blacktriangleright Buttons.

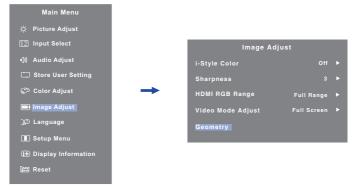

An adjustment page appears after you press the ENTER Button. Then, use the \triangleleft / \triangleright Buttons to change the vertical position settings. The vertical position of the overall display should be changing accordingly while you are doing this.



Press the EXIT Button lastly, it ends, all changes are saved in the memory.

NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Time Out has passed. Also, press the EXIT button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- Adjustments for H. / V. Position, Pixel Clock and Phase are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.

14 BEFORE YOU OPERATE THE MONITOR

. Picture Adjust

Adjustment Item	Proble	em / Option Button to Press	
Contrast *2	Too dull Too inten	ise \checkmark	
Brightness * ^{1,2,3}	Too dark Too brigh	_	
Overdrive	It will impr	-1 / 0 / +1 / +2 ove the gray level response time of the LCD panel.	
Adv. Contrast	Off	Typical Contrast Ratio	
	On	Increased Contrast Ratio	
	Off	Normal	
ECO Mode Direct	Mode1	Brightness of back-light is reduced.	
	Mode2	Brightness of back-light is reduced more than Mode1.	
	Mode3	Brightness of back-light is reduced more than Mode2.	
	Off	Typical	
Blue Light Reducer Direct	Mode1	Blue light is reduced.	
Bide Light Reducer	Mode2	Blue light is reduced more than Mode1.	
	Mode3	Blue light is reduced more than Mode2.	
	From -5 1	to +5	
Black Tuner	You can adjust Dark shades.		
Color Saturation	From -5 to +5 You can adjust Dark shades. Too weak Too strong		
Gamma	You can set the Gamma. 1.8 / 2.2 / 2.6		

*¹ Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

- *² Contrast and Brightness adjustments are disabled when Adv. Contrast mode is activated.
- *³ Brightness adjustment is disabled when ECO Mode is activated.

Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

- Blue Light Reducer : Pressing and holding of the EXIT Button for 2-3 seconds when the Menu is not displayed.

12 Input Selec	ct			
Adjustmen	it Item	Problem / O	ption	Button to Press
		VGA	Select the Analog input.	
		HDMI	Select the Digital (HDMI)	input.
Input Select	Direct	DisplayPort	Select the Digital (Display	/Port) input.
		Auto	Search for an available inp automatically.	ut source and select
NOTE Input sour	ce is fixed, not	selected automa	atically when VGA, HDMI a	nd DisplayPort which

Direct

are selected.

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Input Select : Press the INPUT Button when the Menu is not displayed.

∎())) Audio Adjust				
Adjustment Item	Problem /	Option E	Button to Press	
Volume Direct	Too soft Too loud		* *	
Mute	Off	Return the sound volume to the	previous level.	
Mule	On	Turn off the sound temporarily.		
NOTE Mute On and Off are switched as follows by pressing the ▶ Button successively.				
	Line-In	Select the Line-In input.		
Digital Audio *	HDMI	Select the HDMI input.		
	DP	Select the DisplayPort input.		

* Suitable for HDMI/DisplayPort input only.

Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Volume : Press the > Button when the Menu is not displayed.

📩 St	ore User Setting				
A	djustment Item	Problem / O	ption	Button to Press	
		User Mode 1	Save the settings of the	screen adjustment.	
Store Us	er Setting	User Mode 2 Save the settings of the screen adjustment.			
		User Mode 3	Save the settings of the	screen adjustment.	
NOTE	NOTE You can memorize your customized monitor settings.				
The following settings can be memorized: Contrast, Brightness, Overdrive, Adv. Contrast, ECO mode, Volume, Mute, Color Adjust, i-Style Color, Sharpness, Black Tuner, Video Mode Adjust					

Color Adjust			
Adjustment Item	Probler	n / Option	Button to Press
Cool	Bluish whit	e	
Normal	Greenish w	vhite	
Warm	Reddish w	hite	
	Red	T	-
User Color	Green	Too weak Too strong	
	Blue		

Image Adjust		
Adjustment Item	Problem / Op	tion Button to Press
	Off	Return to a state set by color adjustment except i-Style Color.
	Standard	For general windows environment and monitor default setting.
	Sport Game	For Sports game environment.
i-Style Color *1 Direct	FPS Game	For FPS game environment.
	Strategy Game	For Strategy game environment.
	Text	For text editing and viewing in a word processing environment.
	User Mode 1	Applies customized monitor settings.
	User Mode 2	Applies customized monitor settings.
	User Mode 3	Applies customized monitor settings.
	12345	🔶 🕨
Sharpness	Press the Butto	e picture quality from 1 to 5 (sharp to soft). on to change the picture quality in Press the Button to change the picture numerical order.
	Full Range	For full-range color scale signal
HDMI RGB Range *2	Limited Range	For limited color scale signal
Vide a Mada Adiust *3	Full Screen	Expansion display
Video Mode Adjust * ³	Aspect Ratio	Expansion display of Aspect
	Auto Adjust *4	Adjust H. / V. Position, Clock and Phase automatically.
	H. Position	Too left
Geometry *5	V. Position	□ Too left ● □ Too right ● □ Too low ● □ Too high ● □ Too narrow ●
	Clock	□ Too narrow □ Too wide
	Phase	To correct flickering text or lines

*¹ i-Style Color adjustment is disabled when Blue Light Reducer is activated.

*² Only HDMI input.

*³ Only HDMI/DisplayPort input.

*⁴ For best results, use the Auto Adjust in conjunction with the adjustment pattern. See page 22 for SCREEN ADJUSTMENTS.

*⁵ Only Analog input.

Direct You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Auto Adjust : Pressing and holding of the INPUT Button for 2-3 seconds when the Menu is not displayed.

• i-Style Color : Press the EXIT Button when the Menu is not displayed.

18 OPERATING THE MONITOR

ي Language

Adjustment Item	Problem / Option			Button to Press
	English	English	Nederlands	Dutch
Language	Français	French	Ĉesky	Czech
	Deutsch	German	Русский	Russian
	Italiano	Italian	日本語	Japanese
	Polski	Polish	简体中文	Simplified Chinese
	Español	Spanish		

Setup Menu				
Adjustment Item	Probl	Problem / Option Button to Press		
OSD Position	H.Positio	n l	OSD is too left	
	V.Position		OSD is too low OSD is too high	
OSD Time Out	You can set the OSD display duration time between 5 and 30 seconds.			
Opening Logo	Off iiyama Logo does not display when the mo turned on.		ma Logo does not display when the monitor is led on.	
	On	iiyama Logo displayed when the monitor is turned o		
ErooSuno *	Off The FreeSync		e FreeSync function is turned off.	
FreeSync *		Enable the FreeSync function.		

* Only HDMI/DisplayPort input.

Display Information Displays information regarding the current input signal coming from the graphic card in your computer. Display Information 1920x1080 @60Hz NOTE See your graphic card user guide for more information about changing the resolution and refresh.

Reset			
Adjustment Item	Pro	blem / Option	Button to Press
Reset All	No	Return to Menu.	
NeselAll	Yes	Factory-preset data is restored.	

• Lock Mode

<OSD Menu>

- 1. The OSD lock will be activated by pressing the front button ENTER for about 10 seconds. If you try to access the OSD by pressing any of the buttons, message "OSD Locked" will appear on the screen.
- 2. The OSD lock will be deactivated by pressing the front button ENTER again for about 10 seconds.

<Power Switch>

- 2. The power switch lock will be deactivated by pressing the front button < again for about 10 seconds.

SCREEN ADJUSTMENTS

Adjust the image by following the procedure below to get the desired picture when selecting Analog input.

- The screen adjustments described in this manual are designed to set image position and minimize flicker or blur for the particular computer in use.
- The monitor is designed to provide the best performance at resolution of 1920 × 1080, but can not provide the best at resolutions of less than 1920 × 1080 because the picture is automatically stretched to fit the full screen. It is recommended to operate at resolution of 1920 × 1080 in normal use.
- Displayed text or lines will be blurred or irregular in thickness when the picture is stretched due to the screen enlargement process.
- It is preferable to adjust the image position and frequency with the monitor controls, rather than the computer software or utilities.
- Perform adjustments after a warm-up period of at least thirty minutes.
- Additional adjustments may be required after the Auto Adjust depending on the resolution or signal timing.
- The Auto Adjust may not work correctly when displaying the picture other than the screen adjustment pattern. In this case, manual adjustments are required.

There are two ways to adjust the screen. One way is automatic adjustment for Position, Pixel Clock and Phase. The other way is performing each adjustment manually.

Perform the Auto Adjust first when the monitor is connected to a new computer, or resolution is changed. If the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Adjust, manual adjustments are required. Both adjustments should be made by using the screen adjustment pattern (Test.bmp) obtained via the IIYAMA web site (http://www.iiyama. com).

Adjust the image by following the procedure below to get the desired picture. This manual explains adjustment under Windows[®] OS.


① Display the picture at the optimum resolution.

② Enter the Test.bmp (screen adjustment pattern) to wallpaper.


NOTE Consult the appropriate documentation for doing this.

Test.bmp is made at resolution of 1280 × 1024. Set the display position to center in the wallpaper setting dialogue box.


[Adjustment pattern]

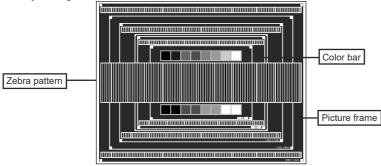

 
- ③ Pressing and holding of the INPUT Button for 2-3 seconds when the Menu is not displayed. (Auto Adjust)
- ④ Adjust the image manually by following procedure below when the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Adjust.
- (5) Adjust the V.Position so that the top and bottom of the picture frame will fit to the display area.



 
(6) 1) Adjust the H.Position so that the left side of the picture frame will move to the left edge of the display area.



  2) Stretch the right side of the picture frame to the right edge of the display area by adjusting the Pixel Clock.









- NOTE
 - When the left side of the picture frame moves apart from the left edge of the display area during the Pixel Clock adjustment, adjust steps 1) and 2).
 - Another way to make the Pixel Clock adjustment is to correct the vertical wavy lines in the zebra pattern.
 - The picture may flicker during the Pixel Clock, H.Position and V.Position adjustment.
 - In case the picture frame is bigger or smaller than the data display area after the Pixel Clock adjustment, repeat steps from ③.

  ⑦ Adjust the Phase to correct horizontal wavy noise, flicker or blur in the zebra pattern.







- NOTE In case the strong flicker or blurs remain on a part of the screen, repeat steps 6 and ⑦ because the Pixel Clock may not be adjusted correctly.
 - Adjust the H.Position after the Phase adjustment if the horizontal position moves during the adjustment.
- ⑧ Adjust the Brightness and Color to get the desired picture after you complete the Pixel Clock and Phase adjustments.

Put back your favorite wallpaper.


POWER MANAGEMENT FEATURE

The power management feature of this product complies with power saving requirement of ENERGY STAR[®] and VESA DPMS. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

To use the feature, the monitor needs to be connected to a VESA DPMS compliant computer. There is a power management step the monitor takes as described below. The power management function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

Power Management Mode

When the H-sync signal / V-sync signal / H and V sync signals from the computer are off, the monitor enters into Power Management Mode which reduces the power consumption to less than 0.5W. The screen becomes dark, and the power indicator turns to orange. From Power Management Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

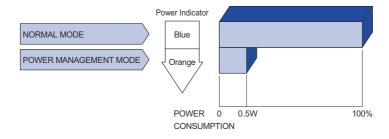

- **NOTE** Even when using the power management mode, the monitor consumes electricity. Turn off the Power Switch whenever the monitor is not in use, during the night and weekends, to avoid unnecessary power consumption.
 - It is possible that the video signal from the computer may be on while the H or V sync signal is missing. In this instance, the POWER MANAGEMENT feature may not work properly.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- 2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- 3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem

Check

1	The	picture	does
	not a	ppear.	

	(Power indicator does not light up.)	 The Power Cable is firmly seated in the socket. The Power Switch is turned ON. The AC socket is live. Please check with another piece of equipment.
	(Power indicator is blue.)	 If the blank screen saver is in active mode, touch the keyboard or the mouse. Increase the Contrast and/or Brightness. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
	(Power indicator is orange.)	 If the monitor is in power management mode, touch the keyboard or the mouse. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
2	The screen is not synchronized.	 The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor. The video output level of the computer is within the specification of the monitor.
3	The screen position is not in the center.	□ The signal timing of the computer is within the specification of the monitor.
4	The screen is too bright or too dark.	□ The video output level of the computer is within the specification of the monitor.

Problem

Check

(5	The screen is shaking.	□The power voltage is within the specification of the monitor.□The signal timing of the computer is within the specification of the monitor.
6	No sound.	 The audio equipment (computer etc.) is ON. The Audio Cable is properly connected. The Volume is turned up. The Mute is OFF. The audio output level of the audio equipment is within the specification of the monitor.
7	The sound is too loud or too quiet.	□The audio output level of the audio equipment is within the specification of the monitor.

⑧ A strange noise is □The Audio Cable is properly connected. heard.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor. Please visit our web site: www.iiyama.com/recycle for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : G-MASTER GB2730HSU

Size Category		27"			
	Panel technology	TN			
	Size	Diagonal: 27" (68.6cm)			
	Pixel pitch	0.311mm H × 0.311mm V			
LCD Panel	Brightness	300cd/m ² (Typical)			
1 diloi	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available			
	Viewable angle	Right / Left : 85 degrees each, Up / Down : 80 degrees each (Typica			
	Response time	1ms (Gray to Gray)			
Display C	Colors	Approx. 16.7M			
Sync Frequency		VGA: Horizontal: 30.0-83.0kHz, Vertical: 55-75Hz HDMI(without FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 55-75Hz HDMI(with FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 40-75Hz DisplayPort(without FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 55-75Hz DisplayPort(with FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 40-75Hz			
Native Re	esolution	1920 × 1080, 2.1 MegaPixels			
Support max. resolution		VGA: 1920 × 1080 60Hz HDMI(without FreeSync): 1920 × 1080 75Hz HDMI(with FreeSync): 1920 × 1080 75Hz DisplayPort(without FreeSync): 1920 × 1080 75Hz DisplayPort(with FreeSync): 1920 × 1080 75Hz			
Input Cor	nnector	VGA, HDMI, DisplayPort			
Plug & Pl	ay	VESA DDC2B [™]			
Input Syn	nc Signal	Separate sync: TTL, Positive or Negative			
Input Vide	eo Signal	Analog: 0.7Vp-p (Standard), 75 <u>Ω,</u> Positive Digital: HDMI, DisplayPort			
USB Star	ndard	USB2.0			
Number of Connector	of USB Ports or shape	1 Upstream : Series B 2 Downstream : Series A			
Input Aud	lio Connector	ø 3.5mm mini jack (Stereo)			
Input Aud	lio Signal	1.0Vrms maximum			
Headpho	ne Connector	ø 3.5mm mini jack (Stereo)			
Speakers	3	2W × 2 (Stereo speakers)			
Maximum	n Screen Size	597.60mm W × 336.15mm H / 23.5" W × 13.2" H			
Power So	ource	100-240VAC, 50/60Hz, 1.5A			
Power Consumption*		19W typical, Power management mode: 0.5W maximum Energy Efficiency Class: A+			
Dimensions / Net Weight		613.5× 397.5 - 527.5 × 230.0mm / 24.2 × 15.6 - 20.8 × 9.1" (W×H×D) 6.9kg / 15.21lbs			
Tilt Angle		Upward: 22 degrees Downward: 5 degrees, Left/Right: 45 degrees each			
Environm Consider		Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 80% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 5 to 85% (No condensation)			
Approvals		CE, TÜV-GS, CU, ENERGY STAR®			

NOTE * Audio/USB equipment is not connected.


28 APPENDIX

SPECIFICATIONS : G-MASTER G2730HSU

Size Category		27"			
	Panel technology	TN			
	Size	Diagonal: 27" (68.6cm)			
	Pixel pitch	0.311mm H × 0.311mm V			
LCD Panel	Brightness	300cd/m ² (Typical)			
	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available			
	Viewable angle	Right / Left : 85 degrees each, Up / Down : 80 degrees each (Typical			
	Response time	1ms (Gray to Gray)			
Display C	Colors	Approx. 16.7M			
Sync Frequency		VGA: Horizontal: 30.0-83.0kHz, Vertical: 55-75Hz HDMI(without FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 55-75Hz HDMI(with FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 40-75Hz DisplayPort(without FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 55-75Hz DisplayPort(with FreeSync): Horizontal: 30.0-84.0kHz, Vertical: 40-75Hz			
Native Re	esolution	1920 × 1080, 2.1 MegaPixels			
Support max. resolution		VGA: 1920 × 1080 60Hz HDMI(without FreeSync): 1920 × 1080 75Hz HDMI(with FreeSync): 1920 × 1080 75Hz DisplayPort(without FreeSync): 1920 × 1080 75Hz DisplayPort(with FreeSync): 1920 × 1080 75Hz			
Input Cor	nnector	VGA, HDMI, DisplayPort			
Plug & Pl	ay	VESA DDC2B [™]			
Input Sync Signal		Separate sync: TTL, Positive or Negative			
Input Vid	eo Signal	Analog: 0.7Vp-p (Standard), 75Ω, Positive Digital: HDMI, DisplayPort			
USB Star	ndard	USB2.0			
Number of Connector	of USB Ports or shape	1 Upstream : Series B 2 Downstream : Series A			
Input Auc	lio Connector	ø 3.5mm mini jack (Stereo)			
Input Auc	lio Signal	1.0Vrms maximum			
Headpho	ne Connector	ø 3.5mm mini jack (Stereo)			
Speakers		2W × 2 (Stereo speakers)			
Maximum Screen Size		597.60mm W × 336.15mm H / 23.5" W × 13.2" H			
Power Source		100-240VAC, 50/60Hz, 1.5A			
Power Consumption*		19W typical, Power management mode: 0.5W maximum Energy Efficiency Class: A+			
Dimensions / Net Weight		613.5 × 440.5 x 197.0mm / 24.2 × 17.3 × 7.7" (W×H×D) 5.3kg / 11.68lbs			
Tilt Angle		Upward: 22 degrees Downward: 5 degrees			
Environm Consider		Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 80% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 5 to 85% (No condensation)			
Approvals		CE, TÜV-GS, CU, ENERGY STAR [®]			


NOTE * Audio/USB equipment is not connected.


DIMENSIONS : G-MASTER GB2730HSU

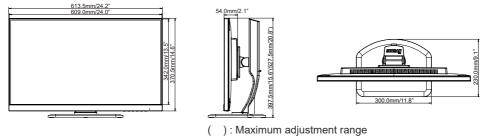

40.5mm/17.3

 DIMENSIONS : G-MASTER G2730HSU

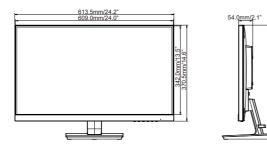



COMPLIANT TIMING

	Video Mod	le	Horizontal Frequency	Vertical Frequency	Dot Clock
	VGA	640 × 480	31.469kHz	59.940Hz	25.175MHz
	SVGA	800 × 600	37.879kHz	60.317Hz	40.000MHz
			46.875kHz	75.000Hz	49.500MHz
	XGA	1024 × 768	48.363kHz	60.004Hz	65.000MHz
			60.023kHz	75.029Hz	78.750MHz
VESA	SXGA	1280 × 1024	63.981kHz	60.020Hz	108.000MHz
VESA			79.976kHz	75.025Hz	135.000MHz
	WXGA+	1440 × 900	55.935kHz	59.887Hz	106.500MHz
			70.635kHz	74.984Hz	136.750MHz
	WSXGA+	1680 × 1050	65.290kHz	60.000Hz	146.250MHz
	Full HD	1920 × 1080	66.590kHz	59.930Hz	138.500MHz
			83.890kHz	74.970Hz	174.500MHz

NOTE * HDMI and DisplayPort input only.

*