

USER MANUAL

G-MASTER

LCD Monitor

ENGLISH

G-MASTER GB2470HSU

G-MASTER G2470HSU

G-MASTER GB2770HSU

G-MASTER G2770HSU

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read carefully through this brief but comprehensive manual before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



**Dear user, we congratulate you
on the purchase of your iiyama LCD.**

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

**To report a fault, please contact
your local support centre found at www.iiyama.com/service**

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

- | model number *
- | purchase receipt and serial number *
- | name and address for collection
- | telephone/fax number, for availability during the day
- | convenient collection date (date, time)
- | short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

* see the identification plate on the back of the case.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterized by their connection to the public low voltage power supply system.

IYAMA CORPORATION: Wijkmeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL2470H, PL2770H



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: <http://www.iiyama.com>

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- Eprel registration number GB2470HSU-B1 : 361426, G2470HSU-B1 : 361435
GB2770HSU-B1 : 361482, G2770HSU-B1 : 361492

TABLE OF CONTENTS

| | |
|---|----|
| FOR YOUR SAFETY | 1 |
| SAFETY PRECAUTIONS..... | 1 |
| SPECIAL NOTES ON LCD MONITORS | 3 |
| CUSTOMER SERVICE | 3 |
| CLEANING | 3 |
| BEFORE YOU OPERATE THE MONITOR | 4 |
| FEATURES..... | 4 |
| CHECKING THE CONTENTS OF THE PACKAGE | 4 |
| INSTALLATION | 5 |
| FITTING AND REMOVAL OF BASE : | |
| G-MASTER GB2470HSU / G-MASTER GB2770HSU | 7 |
| Fitting and Removal of Base : | |
| G-MASTER G2470HSU / G-MASTER G2770HSU | 8 |
| CONTROLS AND CONNECTORS : | |
| G-MASTER GB2470HSU / G-MASTER GB2770HSU | 9 |
| CONTROLS AND CONNECTORS : | |
| G-MASTER G2470HSU / G-MASTER G2770HSU | 10 |
| CONNECTING YOUR MONITOR : | |
| G-MASTER GB2470HSU / G-MASTER GB2770HSU | 11 |
| CONNECTING YOUR MONITOR : | |
| G-MASTER G2470HSU / G-MASTER G2770HSU | 12 |
| COMPUTER SETTING | 13 |
| ADJUSTING HEIGHT AND VIEWING ANGLE : | |
| G-MASTER GB2470HSU / G-MASTER GB2770HSU | 13 |
| ADJUSTING VIEWING ANGLE : | |
| G-MASTER G2470HSU / G-MASTER G2770HSU | 14 |
| OPERATING THE MONITOR..... | 15 |
| ADJUSTMENT MENU CONTENTS | 16 |
| STANDBY FEATURE | 28 |
| TROUBLE SHOOTING | 29 |
| RECYCLING INFORMATION..... | 30 |
| APPENDIX | 31 |
| SPECIFICATIONS : G-MASTER GB2470HSU | 31 |
| SPECIFICATIONS : G-MASTER G2470HSU | 32 |
| SPECIFICATIONS : G-MASTER GB2770HSU | 33 |
| SPECIFICATIONS : G-MASTER G2770HSU | 34 |
| DIMENSIONS : G-MASTER GB2470HSU | 35 |
| DIMENSIONS : G-MASTER G2470HSU | 35 |
| DIMENSIONS : G-MASTER GB2770HSU | 36 |
| DIMENSIONS : G-MASTER G2770HSU | 36 |
| COMPLIANT TIMING | 37 |

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR IF YOU ARE AWARE OF ANY PROBLEMS

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height. (Just for height adjustable model.)

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- NOTE**
- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

- NOTE**
- If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

- WARNING**
- If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

- CAUTION**
- For safety reasons, turn off the power switch and unplug the monitor before you clean it.

- NOTE**
- To protect the LCD panel, do not scratch or rub the screen with a hard object.
 - Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

| | |
|------------------|--------------------------|
| Thinner | Spray-type cleaner |
| Benzine | Wax |
| Abrasive cleaner | Acid or Alkaline solvent |

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

LCD SCREEN Periodic cleaning with a soft dry cloth is recommended.
Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 1920 × 1080
- ◆ High Contrast 1100:1 (Typical), Advanced Contrast Function Available, Brightness 250cd/m² (Typical)
- ◆ Moving Picture Response Time 0.8ms
- ◆ Supports AMD FreeSync™ Premium Technology
- ◆ Flicker - Free
- ◆ Blue Light Reducer
- ◆ Digital Character Smoothing
- ◆ 2 × 2W Stereo Speakers
- ◆ Standby Feature (VESA DPMS Compliant)
- ◆ VESA Mounting Standard (100mm×100mm) Compliant
- ◆ Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- | | | |
|-----------------------------|---------------------------|----------------------------|
| ■ Power Cable ^{*1} | ■ HDMI Cable | ■ DisplayPort Cable |
| ■ USB Cable | ■ Stand-Base with a screw | ■ Stand-Neck ^{*2} |
| ■ Safety Guide | ■ Quick Start Guide | |

CAUTION

^{*1} The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.

^{*2} Accessory for G-MASTER G2470HSU / G-MASTER G2770HSU

INSTALLATION


WARNING

- Before installation, make sure the wall, ceiling or desktop arm is strong enough to hold the necessary weight of the display and the mount.

[WALL MOUNTING]

WARNING


- When you use with the wall mounting, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) with washer which "L" length is 7mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

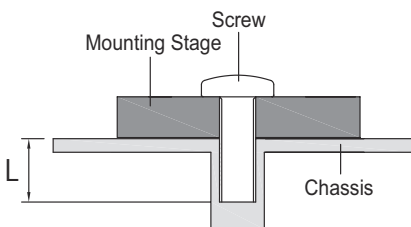

[ROTATING THE MONITOR]

• G-MASTER GB2470HSU / G-MASTER GB2770HSU

The monitor is designed to be compatible with both landscape and portrait modes.
Video card for portrait display will be required for rotating the image on the screen.

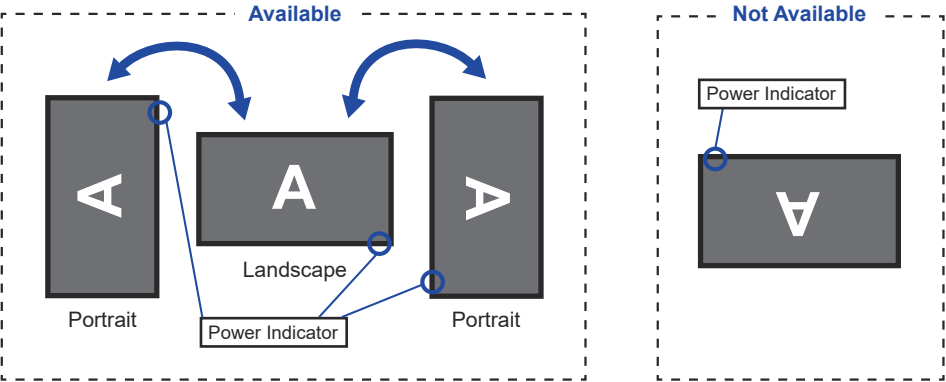


With Stand:

- NOTE
- Adjust the monitor's height before panel rotation.
 - Attempting to rotate the panel forcibly without adjusting the stand height may cause damage to the panel or the stand.

• G-MASTER G2470HSU / G-MASTER G2770HSU

The monitor is designed to be compatible only with the landscape mode.

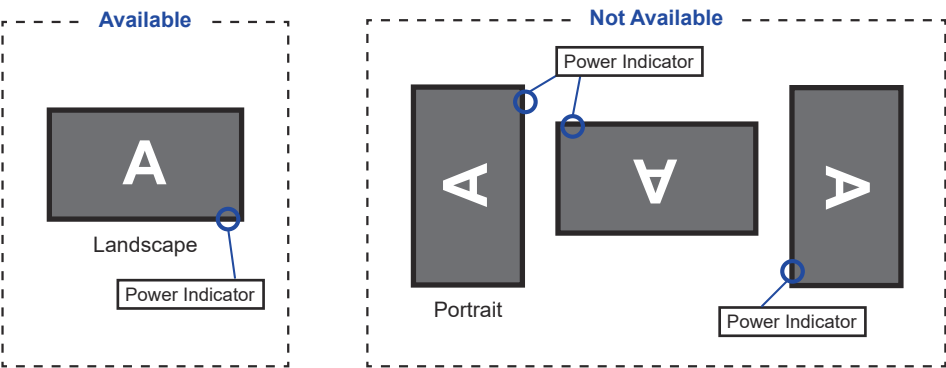


FITTING AND REMOVAL OF BASE : G-MASTER GB2470HSU / G-MASTER GB2770HSU

CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched.
Lay the monitor flat on a table with front face down.
- ② Install the Stand-Base as shown on below picture.
- ③ Tighten the 'thumb screw' to secure the Stand-Base to the monitor.

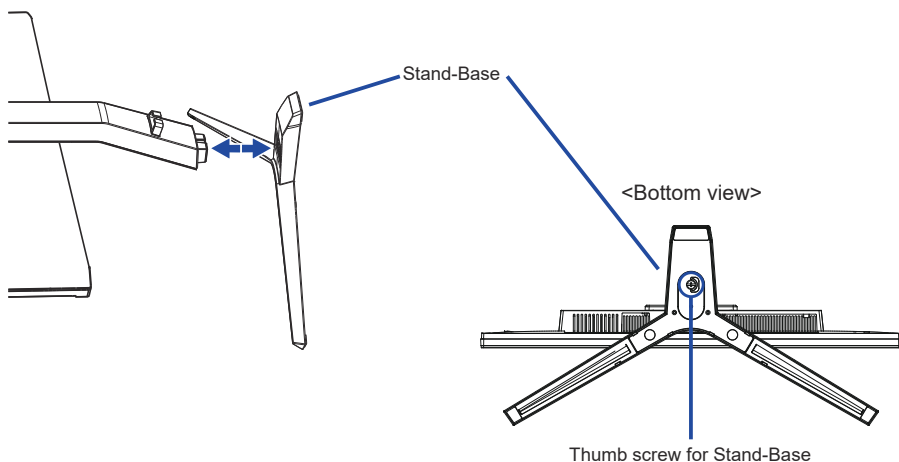

<Removal>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched.
Lay the monitor flat on a table with front face down.
- ② Loosen the 'thumb screw' to remove the Stand-Base from the monitor.



FITTING AND REMOVAL OF BASE : G-MASTER G2470HSU / G-MASTER G2770HSU

CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>


- ① Combine the Stand-Neck and the Stand-Base.
- ② Tighten the 'thumb screw' to secure the Stand-Base.
- ③ Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ④ Hold the monitor and install the Stand-Neck to the monitor until it clicks to secure.

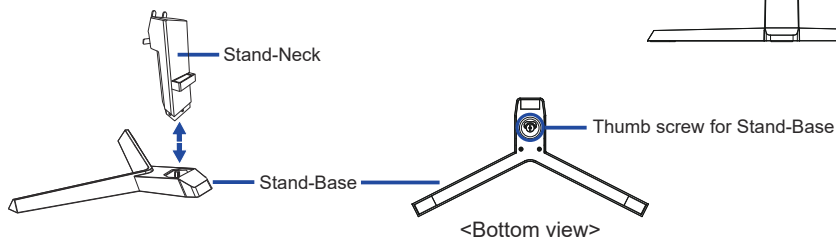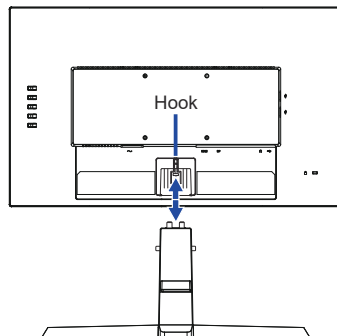

<Removal>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Press the Hook on the back of the monitor and remove the Stand-Neck from the monitor.
- ③ Loosen the 'thumb screw' to remove the Stand-Base from the Stand-Neck.

CONTROLS AND CONNECTORS : G-MASTER GB2470HSU / G-MASTER GB2770HSU

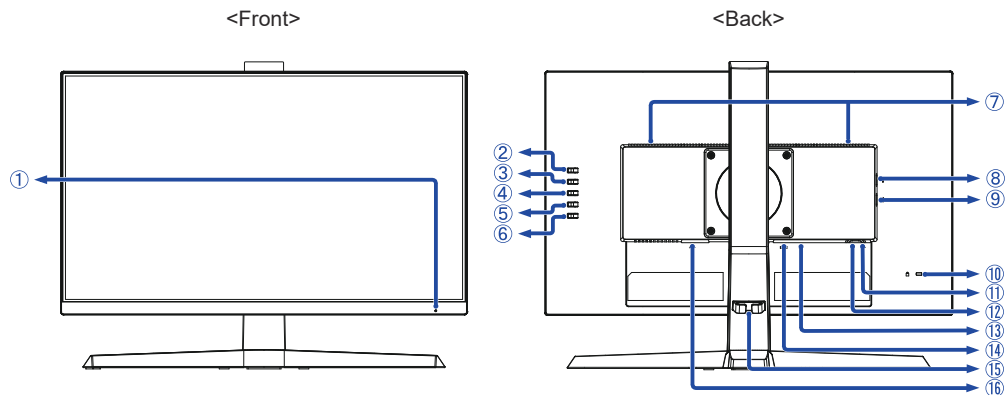

① Power Indicator

NOTE Blue: Normal operation
Orange: Standby mode

② Signal Select / Exit Button (INPUT) *

③ + / Volume Button (+) *

④ - / i-Style Color Button (-) *

⑤ Menu Button (MENU)

⑥ Power Switch ()

⑦ Speakers

⑧ USB Downstream Connector (5V, 500mA)

⑨ USB Downstream Connector (5V, 500mA)

⑩ Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

⑪ USB Upstream Connector ()

⑫ Headphone Connector ()

⑬ DisplayPort Connector (DP)

⑭ HDMI Connector (HDMI)


⑮ Cable Holder

⑯ AC Connector (~ : Alternating current)


* You can skip the Menu items and directly display an option setting screen or an adjustment scale.

CONTROLS AND CONNECTORS : G-MASTER G2470HSU / G-MASTER G2770HSU

<Front>

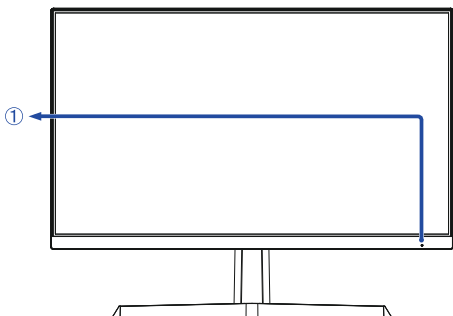

<Back>

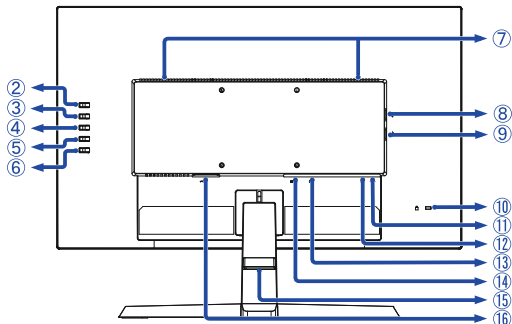

① Power Indicator

NOTE Blue: Normal operation
Orange: Standby mode

② Signal Select / Exit Button (INPUT) *

③ + / Volume Button (+) *

④ - / i-Style Color Button (-) *

⑤ Menu Button (MENU)

⑥ Power Switch ()

⑦ Speakers

⑧ USB Downstream Connector (5V, 500mA)

⑨ USB Downstream Connector (5V, 500mA)

⑩ Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

⑪ USB Upstream Connector ()

⑫ Headphone Connector ()

⑬ DisplayPort Connector (DP)

⑭ HDMI Connector (HDMI)

⑮ Cable Holder

⑯ AC Connector (~ : Alternating current)

* You can skip the Menu items and directly display an option setting screen or an adjustment scale.


CONNECTING YOUR MONITOR : G-MASTER GB2470HSU / G-MASTER GB2770HSU

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Cable.
- ④ Connect the Power Cable to the monitor first and then to the power source.
- ⑤ Turn on your monitor and computer.

NOTE


- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear/headphones can cause hearing damage/hearing loss.

[Example of Connection]

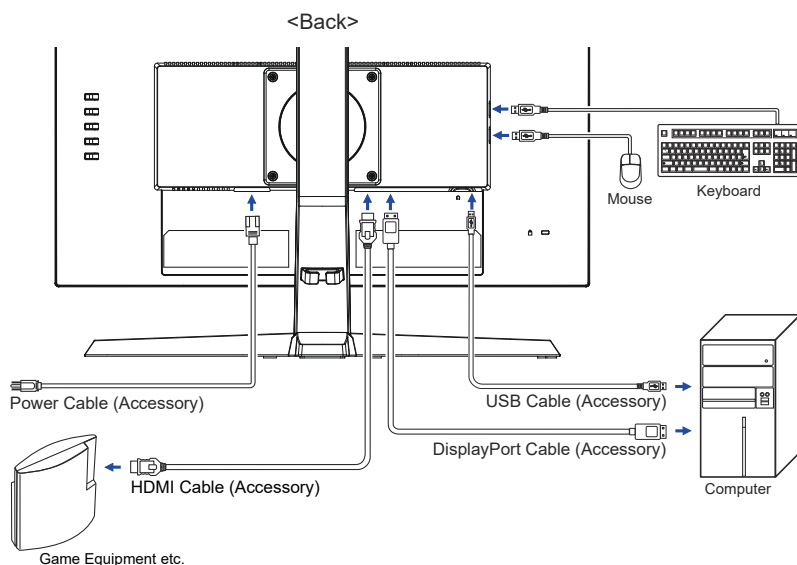

[Collect Cables]

Put the cables through the Cable Holder to bundle them.

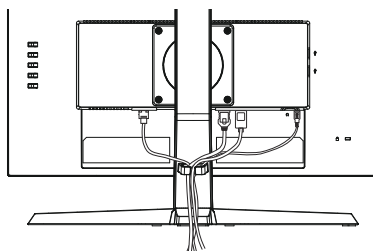


CONNECTING YOUR MONITOR : G-MASTER G2470HSU / G-MASTER G2770HSU

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Cable.
- ④ Connect the Power Cable to the monitor first and then to the power source.
- ⑤ Turn on your monitor and computer.

NOTE


- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]

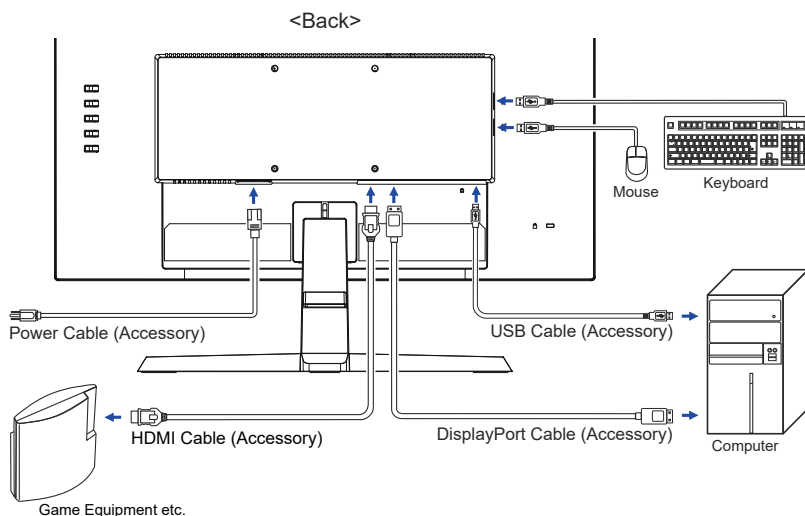

[Collect Cables]

Put the cables through the Cable Holder to bundle them.

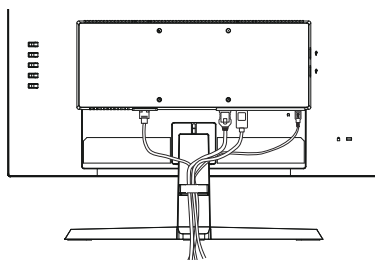

COMPUTER SETTING

■ Signal Timing



Change to the desired signal timing listed on page 37: COMPLIANT TIMING.

ADJUSTING HEIGHT AND VIEWING ANGLE : G-MASTER GB2470HSU / G-MASTER GB2770HSU

- For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 130mm, angle up to 18° upward and 3° downward.

NOTE

- Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.

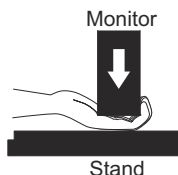
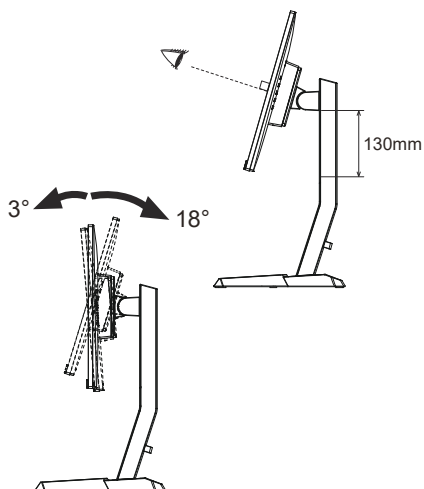


ADJUSTING VIEWING ANGLE : G-MASTER G2470HSU / G-MASTER G2770HSU

- For optimal viewing it is recommended to look at the full face of the monitor.
- Hold the stand so that the monitor does not topple when you change the monitor's angle.
- You are able to adjust the monitor's angle up to 21.5° upward, 3.5° downward.
- In order to ensure a healthy and relaxed body position when using the monitor at visual display workstations, it is recommended that the adjusted tilt angle should not exceed 10°. Adjust the monitor's angle to your own preference.

NOTE

- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to catch your fingers or hands when you change the angle.

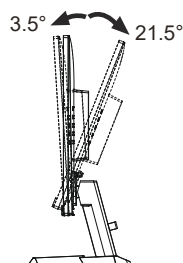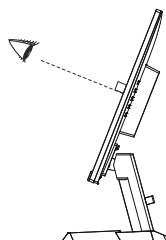

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 37. You are also able to adjust the picture by following the button operation shown below.


- ① Press the MENU Button to start the On Screen Display feature.



- ② Use the + / – Buttons to select the Menu which contains the item you want to adjust or set and then press the MENU Button.
- ③ Use the + / – Buttons to highlight the desired adjustment / setting icon and then press the MENU Button.
- ④ Use the + / – Buttons again to make the appropriate adjustment or setting and then press the MENU Button.
- ⑤ Press the INPUT Button to leave the menu, and the adjustment or setting you just made would be automatically saved.

For example, to correct for OSD vertical position, select Menu item of Setup Menu and then press the MENU Button. Then, select OSD Vertical Position by using the + / – Buttons. An adjustment scale becomes active after you press the MENU Button.

Use the + / – Buttons to change the OSD vertical position settings. The OSD vertical position of the overall display should be changing accordingly while you are doing this.

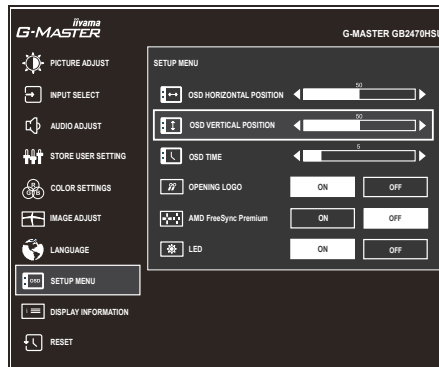

Press the MENU Button and finally the INPUT Button to close the On Screen Display feature. All changes are saved in the memory.


NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Time has passed. Also, press the INPUT Button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- All adjustments have only one setting which applies to all signal timings.

ADJUSTMENT MENU CONTENTS



Picture Adjust *1

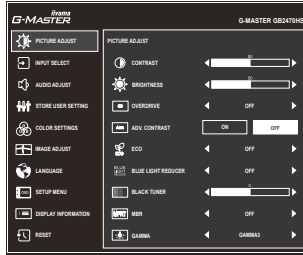

| Adjustment Item | Problem / Option | | Button to Press |
|--------------------|--|--|-----------------|
| Contrast | Too dark Too bright | | |
| Brightness *2 | Too dull Too intense | | |
| Overdrive | Off / -2 / -1 / 0 / +1 / +2 It will improve the gray level response time of the LCD panel. A higher level results in a faster response time. | | |
| Adv. Contrast *3 | On | Increased Contrast Ratio | |
| | Off | Typical Contrast Ratio | |
| Eco | Off | Normal | |
| | Mode1 | Brightness of back-light is reduced. | |
| | Mode2 | Brightness of back-light is reduced more than Mode1. | |
| Blue Light Reducer | Mode3 | Brightness of back-light is reduced more than Mode2. | |
| | Off | Typical | |
| | Mode1 | Blue light is reduced. | |
| Black Tuner | Mode2 | Blue light is reduced more than Mode1. | |
| | Mode3 | Blue light is reduced more than Mode2. | |
| Black Tuner | From -5 to +5 You can adjust Dark shades. | | |
| MBR *3,4 | Off / -3 / -2 / -1 / 0 / +1 / +2 / +3 Improve the moving picture response time of the LCD panel. | | |
| Gamma | Gamma1 | | |
| | Gamma2 | | |
| | Gamma3 | | |


- *¹ The availability of each item depends on which item is activated. See the Function Correlation Matrix below for more details.
- *² Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.
- *³ Not available when AMD FreeSync Premium is active.
- *⁴ MBR is available only when the refresh rate is higher than 75Hz.

■ Function Correlation Matrix

| <div> <div>Active item</div> <div>Selected item</div> </div> | Picture Adjust | | | | Image Adjust |
|--|----------------|-----|--------------------|-----|---|
| | Adv.Contrast | Eco | Blue Light Reducer | MBR | i-Style Color |
| | | | | | Standard Sport Game FPS Game Strategy Game Text |
| Contrast | — | ✓ | ✓ | ✓ | — |
| Brightness | — | — | ✓ | — | — |
| Overdrive | ✓ | ✓ | ✓ | — | — |
| Adv. Contrast | — | — | — | — | — |
| Eco | | — | — | — | — |
| Blue Light Reducer | — | | — | — | — |
| Black Tuner | ✓ | ✓ | | — | — |
| MBR | — | — | — | — | — |
| Gamma | ✓ | ✓ | ✓ | | ✓ |


✓ : Available

— : Not available



Input Select

Direct

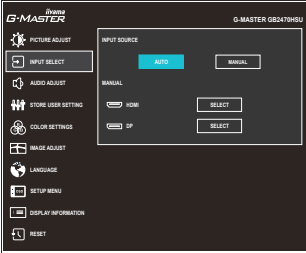

| Adjustment Item | Option | | |
|-----------------|--------|--|---|
| Input Source | Auto | Search for an available input source and select automatically. | |
| | Manual | HDMI | Select the Digital (HDMI) input. |
| | | DP | Select the Digital (DisplayPort) input. |

 
NOTE

Input source is fixed, not selected automatically when HDMI and DisplayPort are selected.

Direct


You can skip the Menu items and directly display an option setting screen by using the following button operations.

- Input Select : Press the INPUT Button when the Menu is not displayed.





Audio Adjust

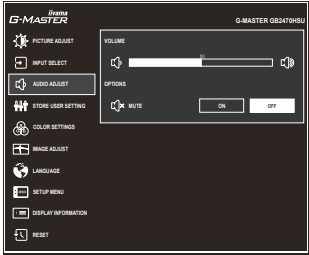

| Adjustment Item | Problem / Option | | Button to Press |
|---|----------------------|--|----------------------|
| Volume Direct | Too soft Too loud | | + - |
| Mute | On | Turn off the sound temporarily. | |
| | Off | Return the sound volume to the previous level. | |
| NOTE Mute On and Off are switched as follows by pressing the + / – Buttons successively. ⇒ On → Off | | | |


Direct

You can skip the Menu items and directly display an adjustment scale by using the following button operations.

- Volume : Press the + Button when the Menu is not displayed.




Store User Setting

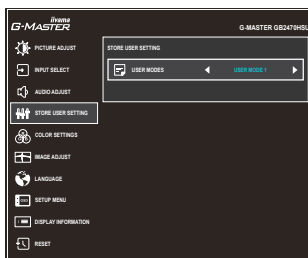





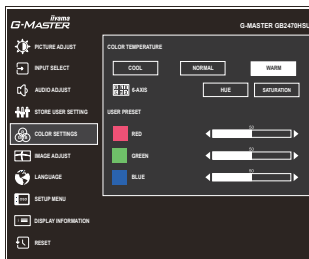

| Adjustment Item | Option | |
|---|-------------|---|
| User Modes | User Mode 1 | Save the settings of the screen adjustment. |
| | User Mode 2 | Save the settings of the screen adjustment. |
| | User Mode 3 | Save the settings of the screen adjustment. |
| <p>NOTE You can memorize your customized monitor settings.</p> <p>The following settings can be memorized: Contrast, Brightness, Overdrive, Adv. Contrast, Eco, Black Tuner, MBR, Gamma, Volume, Mute, Color Settings, Sharp and Soft, Video Mode Adjust</p> | | |






Color Settings *



| Adjustment Item | Problem / Option | | Button to Press | |
|-------------------|------------------|------------------------|---|---|
| Color Temperature | Cool | Cool color | | |
| | Normal | Normal color | | |
| | Warm | Warm color | | |
| 6-Axis | Hue | Red | Too weak Too strong |   |
| | | Yellow | | |
| | | Green | | |
| | | Cyan | | |
| | | Blue | | |
| | | Magenta | | |
| | Saturation | Red | Too weak Too strong |   |
| | | Yellow | | |
| | | Green | | |
| | | Cyan | | |
| | | Blue | | |
| | | Magenta | | |
| User Preset | Red | Too weak Too strong |   | |
| | Green | | | |
| | Blue | | | |

  * Not available when Blue Light Reducer is active.

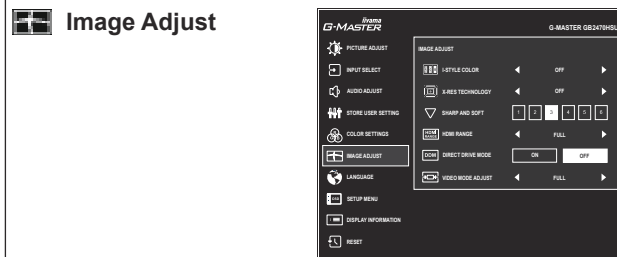

| Adjustment Item | Option Button to Press | |
|--|--|---|
| i-Style Color Direct | Off | Return to a state set by color adjustment except i-Style Color. |
| | Standard | For general windows environment and monitor default setting |
| | Sport Game | For Sports game environment |
| | FPS Game | For FPS game environment |
| | Strategy Game | For Strategy game environment |
| | Text | For text editing and viewing in a word processing environment |
| | User Mode 1 | Applies customized monitor settings. |
| | User Mode 2 | Applies customized monitor settings. |
| | User Mode 3 | Applies customized monitor settings. |
| X-Res Technology | Off | Normal |
| | Soft | Enhance the picture edge. |
| | Middle | Enhance the picture edge more than the Soft option. |
| | Hard | Enhance the picture edge more than the Middle option. |
| Sharp and Soft | 1 2 3 4 5 6   You can change the picture quality from 1 to 6 (sharp to soft). Press the + Button to change the picture quality in numerical order. Press the – Button to change the picture quality in reverse numerical order. | |
| HDMI Range * ¹ | Full | For full-range color scale signal |
| | Limited | For limited color scale signal |
| Direct Drive Mode * ² | On | Reduce the input-lag. |
| | Off | Typical |
| NOTE Changing Resolution and Refresh rate or turning Power Off/On might disable the Direct Drive Mode function. | | |

*¹ Available for HDMI input only.
 *² Not available when Adv. Contrast or MBR is active.


Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

- i-Style Color: Press the – Button when the Menu is not displayed.



Image Adjust

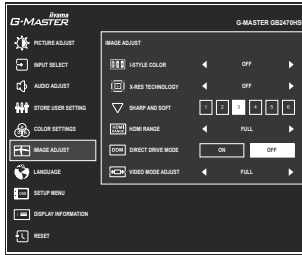

| Adjustment Item | Option | |
|---------------------------------|--------------------------|---|
| Video Mode Adjust ^{*3} | Full | Expansion display |
| | Aspect ^{*4} | Expansion display of Aspect |
| | Dot by dot ^{*5} | Display the picture dot by dot. |
| | 17inch | Display the picture as 17 inch screen (5 : 4). |
| | 19inch ^{*6} | Display the picture as 19 inch screen (5 : 4). |
| | 19.5inch | Display the picture as 19.5 inch screen (16 : 9). |
| | 21.5inch | Display the picture as 21.5 inch screen (16 : 9). |
| | 23inch | Display the picture as 23 inch screen (16 : 9). |
| | 23.6inch ^{*6} | Display the picture as 23.6 inch screen (16 : 9). |
| | 23.8inch ^{*6} | Display the picture as 23.8 inch screen (16 : 9). |
| | 24inch ^{*6} | Display the picture as 24 inch screen (16 : 9). |

^{*3} See the table below for the functional interaction of Video Mode Adjust, Overdrive and Direct Drive Mode.

^{*4} Available only with 16:10, 5:4 and 4:3 resolutions.


^{*5} Available only at resolutions less than 1920 × 1080.

^{*6} Available for G-MASTER GB2770HSU / G-MASTER G2770HSU only.

| Vertical Frequency | Video Mode Adjust | Overdrive | Direct Drive Mode |
|--------------------|---------------------------|------------------|-------------------|
| 75Hz or less | Full / Aspect | Adjustable | On |
| | | Off (grayed out) | Off |
| | Dot by dot / Picture size | Adjustable | On |
| | | Off (grayed out) | Off |
| 120Hz or more | Full / Aspect | Adjustable | On (grayed out) |
| | Dot by dot / Picture size | Off (grayed out) | Off (grayed out) |



Language

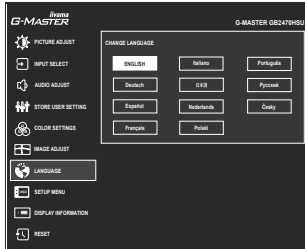

| Adjustment Item | | Option | | | |
|-----------------|----------|----------|------------|------------|--|
| Language | English | English | Nederlands | Dutch | |
| | Deutsch | German | Polski | Polish | |
| | Español | Spanish | Português | Portuguese | |
| | Français | French | Русский | Russian | |
| | Italiano | Italian | Česky | Czech | |
| | 日本語 | Japanese | | | |

Setup Menu

| Adjustment Item | Problem / Option | Button to Press |
|-------------------------|---|-----------------|
| OSD Horizontal Position | OSD is too left OSD is too right | |
| OSD Vertical Position | OSD is too low OSD is too high | |
| OSD Time | You can set the OSD display duration time between 5 and 30 seconds. | |
| Opening Logo | On G-MASTER Logo is displayed when the monitor is turned on. | |
| | Off G-MASTER Logo is not displayed when the monitor is turned on. | |
| AMD FreeSync Premium * | On Enable the FreeSync function. | |
| | Off The FreeSync function is turned off. | |
| LED | On The Power Indicator is turned On. | |
| | Off The Power Indicator is turned Off. | |

NOTE Turn Off the Power Indicator when you are bothered by the light.

* The availability depends on which item is activated. See the Function Correlation Matrix below for more details.


■ Function Correlation Matrix

| <div style="display: flex; align-items: center; justify-content: center;"> <div style="width: 20px; height: 20px; background: linear-gradient(to top right, transparent 49%, #000 49% 51%, #fff 51% 52%, #000 52% 100%);"></div> <div style="margin-left: 10px;">Active item</div> </div> | Picture Adjust | | | | Image Adjust | | |
|---|------------------|-----|--------------------------|-----|---|-------------------------|----------------------|
| | Adv. Contrast | Eco | Blue Light Reducer | MBR | i-Style Color | Direct Drive Mode | Video Mode Adjust |
| | | | | | Standard Sport Game FPS Game Strategy Game Text | Off | |
| Selected Item | | | | | | | |
| AMD FreeSync Premium | — | ✓ | ✓ | — | — | — | — |

✓ : Available
— : Not available



Display Information

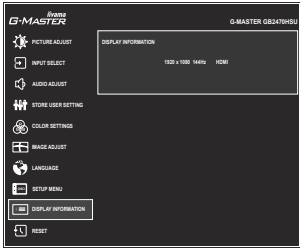


Displays information regarding the current input signal coming from the graphic card in your computer.

NOTE See your graphic card user guide for more information about changing the resolution and refresh.



Reset

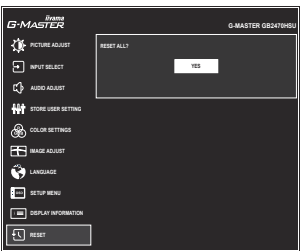

| Adjustment Item | Option |
|-----------------|----------------------------------|
| Yes | Factory-preset data is restored. |

- **Lock Mode**

- <OSD Menu>

Hold the MENU button and turn on the monitor when the monitor is power-off, it will lock/unlock the OSD Lock function.

- <Power Switch / OSD Menu>

Pressing and holding the MENU button for 10 seconds when Menu is not displayed, will lock/unlock the Power/OSD Lock function.


STANDBY FEATURE

The standby feature of this product complies with power saving requirement of VESA DPMS. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

To use the feature, the monitor needs to be connected to a VESA DPMS compliant computer. There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

■ Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

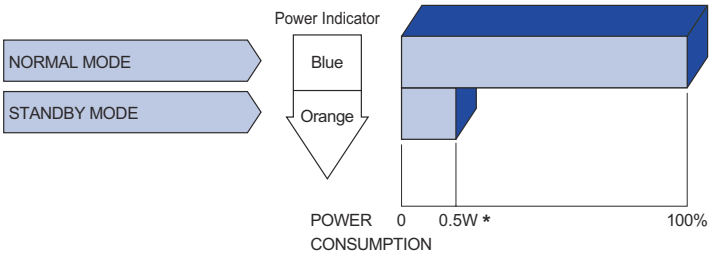

* USB peripheral and audio equipment are not connected.

NOTE Even when using the standby mode, the monitor consumes electricity. Turn off the Power Switch whenever the monitor is not in use, during the night and weekends, to avoid unnecessary power consumption.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

| Problem | Check |
|--|---|
| ① The picture does not appear. (Power indicator does not light up.) (Power indicator is blue.) (Power indicator is orange.) | <input type="checkbox"/> The Power Cable is firmly seated in the socket. <input type="checkbox"/> The Power Switch is turned ON. <input type="checkbox"/> The AC socket is live. Please check with another piece of equipment. <input type="checkbox"/> If the blank screen saver is in active mode, touch the keyboard or the mouse. <input type="checkbox"/> Increase the Contrast and/or Brightness. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor. <input type="checkbox"/> If the monitor is in standby mode, touch the keyboard or the mouse. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor. |
| ② The screen is not synchronized. | <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor. |
| ③ The screen position is not in the center. | <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor. |
| ④ The screen is too bright or too dark. | <input type="checkbox"/> The video output level of the computer is within the specification of the monitor. |
| ⑤ The screen is shaking. | <input type="checkbox"/> The power voltage is within the specification of the monitor. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor. |
| ⑥ No sound. | <input type="checkbox"/> The audio equipment (computer etc.) is ON. <input type="checkbox"/> The Volume is turned up. <input type="checkbox"/> The Mute is OFF. <input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor. |
| ⑦ The sound is too loud or too quiet. | <input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor. |

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor.
Please visit our web site: www.iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : G-MASTER GB2470HSU

| | | |
|------------------------------|------------------|---|
| Size Category | | 24" |
| LCD Panel | Panel technology | Fast IPS |
| | Size | Diagonal: 23.8" (60.5cm) |
| | Pixel pitch | 0.275mm H × 0.275mm V |
| | Brightness | 250cd/m ² (Typical) |
| | Contrast ratio | 1100 : 1 (Typical), Advanced Contrast Function Available |
| | Viewable angle | Right / Left : 89 degrees each, Up / Down: 89 degrees each (Typical) |
| | MPRT | 0.8ms |
| Display Colors | | Approx. 16.7M |
| Sync Frequency | | HDMI: Horizontal: 15.0-225.0kHz, Vertical: 48-144Hz DisplayPort: Horizontal: 15.0-225.0kHz, Vertical: 48-165Hz |
| Native Resolution | | 1920 × 1080, 2.1 MegaPixels |
| Supported max. resolution | | HDMI: 1920 × 1080, 144Hz DisplayPort: 1920 × 1080, 165Hz |
| Input Connector | | HDMI × 1, DisplayPort × 1 |
| Plug & Play | | VESA DDC2B™ |
| Input Video Signal | | HDMI, DisplayPort |
| USB Standard | | USB2.0 (DC5V, 500mA) |
| Number of USB Ports | | 1 Upstream : Series B |
| Connector shape | | 2 Downstream : Series A |
| Headphone Connector | | ø 3.5mm mini jack (Stereo) |
| Speakers | | 2W × 2 (Stereo speakers) |
| Maximum Screen Size | | 527.0mm W × 296.5mm H / 20.7" W × 11.7" H |
| Power Source | | 100-240VAC, 50/60Hz, 1.5A |
| Power Consumption* | | 20W typical, Standby mode: 0.5W maximum |
| Dimensions / Net Weight | | 539.5 × 395.0 - 525.0 × 256.0mm / 21.2 × 15.6 - 20.7 × 10.1" (W×H×D) 4.4kg / 9.7lbs |
| Angle | | Tilt: Upward: 18 degrees, Downward: 3 degrees Rotation: Clockwise / Counterclockwise: 90 degrees each |
| Environmental Considerations | | Operating: Temperature 5 to 35°C / 41 to 95°F |
| | | Humidity 10 to 80% (No condensation) |
| | | Storage: Temperature -20 to 60°C / -4 to 140°F |
| | | Humidity 5 to 85% (No condensation) |
| Approvals | | CE, TÜV-Bauart, VCCI, PSE, EAC |

NOTE

* USB peripheral and audio equipment are not connected.

SPECIFICATIONS : G-MASTER G2470HSU

ENGLISH

| | | |
|------------------------------|------------------|---|
| Size Category | | 24" |
| LCD Panel | Panel technology | Fast IPS |
| | Size | Diagonal: 23.8" (60.5cm) |
| | Pixel pitch | 0.275mm H × 0.275mm V |
| | Brightness | 250cd/m ² (Typical) |
| | Contrast ratio | 1100 : 1 (Typical), Advanced Contrast Function Available |
| | Viewable angle | Right / Left : 89 degrees each, Up / Down: 89 degrees each (Typical) |
| | MPRT | 0.8ms |
| Display Colors | | Approx. 16.7M |
| Sync Frequency | | HDMI: Horizontal: 15.0-225.0kHz, Vertical: 48-144Hz DisplayPort: Horizontal: 15.0-225.0kHz, Vertical: 48-165Hz |
| Native Resolution | | 1920 × 1080, 2.1 MegaPixels |
| Supported max. resolution | | HDMI: 1920 × 1080, 144Hz DisplayPort: 1920 × 1080, 165Hz |
| Input Connector | | HDMI × 1, DisplayPort × 1 |
| Plug & Play | | VESA DDC2B™ |
| Input Video Signal | | HDMI, DisplayPort |
| USB Standard | | USB2.0 (DC5V, 500mA) |
| Number of USB Ports | | 1 Upstream : Series B |
| Connector shape | | 2 Downstream : Series A |
| Headphone Connector | | ø 3.5mm mini jack (Stereo) |
| Speakers | | 2W × 2 (Stereo speakers) |
| Maximum Screen Size | | 527.0mm W × 296.5mm H / 20.7" W × 11.7" H |
| Power Source | | 100-240VAC, 50/60Hz, 1.5A |
| Power Consumption* | | 20W typical, Standby mode: 0.5W maximum |
| Dimensions / Net Weight | | 539.5 × 415.0 × 187.5mm / 21.2 × 16.3 × 7.4" (W×H×D) 3.2kg / 7.1lbs |
| Tilt Angle | | Upward: 21.5 degrees Downward: 3.5 degrees |
| Environmental Considerations | | Operating: Temperature 5 to 35°C / 41 to 95°F Humidity 10 to 80% (No condensation) |
| | | Storage: Temperature -20 to 60°C / -4 to 140°F Humidity 5 to 85% (No condensation) |
| Approvals | | CE, TÜV-Bauart, VCCI, PSE, EAC |

NOTE * USB peripheral and audio equipment are not connected.

SPECIFICATIONS : G-MASTER GB2770HSU

| | | |
|------------------------------|------------------|--|
| Size Category | | 27" |
| LCD Panel | Panel technology | Fast IPS |
| | Size | Diagonal: 27.0" (68.6cm) |
| | Pixel pitch | 0.311mm H × 0.311mm V |
| | Brightness | 250cd/m ² (Typical) |
| | Contrast ratio | 1100 : 1 (Typical), Advanced Contrast Function Available |
| | Viewable angle | Right / Left : 89 degrees each, Up / Down: 89 degrees each (Typical) |
| | MPRT | 0.8ms |
| Display Colors | | Approx. 16.7M |
| Sync Frequency | | HDMI: Horizontal: 15.0-225.0kHz, Vertical: 48-144Hz DisplayPort: Horizontal: 15.0-225.0kHz, Vertical: 48-165Hz |
| Native Resolution | | 1920 × 1080, 2.1 MegaPixels |
| Supported max. resolution | | HDMI: 1920 × 1080, 144Hz DisplayPort: 1920 × 1080, 165Hz |
| Input Connector | | HDMI × 1, DisplayPort × 1 |
| Plug & Play | | VESA DDC2B™ |
| Input Video Signal | | HDMI, DisplayPort |
| USB Standard | | USB2.0 (DC5V, 500mA) |
| Number of USB Ports | | 1 Upstream : Series B |
| Connector shape | | 2 Downstream : Series A |
| Headphone Connector | | ø 3.5mm mini jack (Stereo) |
| Speakers | | 2W × 2 (Stereo speakers) |
| Maximum Screen Size | | 598.0mm W × 336.5mm H / 23.5" W × 13.2" H |
| Power Source | | 100-240VAC, 50/60Hz, 1.5A |
| Power Consumption* | | 22W typical, Standby mode: 0.5W maximum |
| Dimensions / Net Weight | | 612.5 × 416.0 - 546.0 × 256.0mm / 24.1 × 16.4 - 21.5 × 10.1" (W×H×D) 5.2kg / 11.5lbs |
| Angle | | Tilt: Upward: 18 degrees, Downward: 3 degrees Rotation: Clockwise / Counterclockwise: 90 degrees each |
| Environmental Considerations | | Operating: Temperature 5 to 35°C / 41 to 95°F Humidity 10 to 80% (No condensation) Storage: Temperature -20 to 60°C / -4 to 140°F Humidity 5 to 85% (No condensation) |
| Approvals | | CE, TÜV-Bauart, VCCI, PSE, EAC |


NOTE * USB peripheral and audio equipment are not connected.

SPECIFICATIONS : G-MASTER G2770HSU


| | | |
|------------------------------|------------------|---|
| Size Category | | 27" |
| LCD Panel | Panel technology | Fast IPS |
| | Size | Diagonal: 27.0" (68.6cm) |
| | Pixel pitch | 0.311mm H × 0.311mm V |
| | Brightness | 250cd/m ² (Typical) |
| | Contrast ratio | 1100 : 1 (Typical), Advanced Contrast Function Available |
| | Viewable angle | Right / Left : 89 degrees each, Up / Down: 89 degrees each (Typical) |
| | MPRT | 0.8ms |
| Display Colors | | Approx. 16.7M |
| Sync Frequency | | HDMI: Horizontal: 15.0-225.0kHz, Vertical: 48-144Hz DisplayPort: Horizontal: 15.0-225.0kHz, Vertical: 48-165Hz |
| Native Resolution | | 1920 × 1080, 2.1 MegaPixels |
| Supported max. resolution | | HDMI: 1920 × 1080, 144Hz DisplayPort: 1920 × 1080, 165Hz |
| Input Connector | | HDMI × 1, DisplayPort × 1 |
| Plug & Play | | VESA DDC2B™ |
| Input Video Signal | | HDMI, DisplayPort |
| USB Standard | | USB2.0 (DC5V, 500mA) |
| Number of USB Ports | | 1 Upstream : Series B |
| Connector shape | | 2 Downstream : Series A |
| Headphone Connector | | ø 3.5mm mini jack (Stereo) |
| Speakers | | 2W × 2 (Stereo speakers) |
| Maximum Screen Size | | 598.0mm W × 336.5mm H / 23.5" W × 13.2" H |
| Power Source | | 100-240VAC, 50/60Hz, 1.5A |
| Power Consumption* | | 22W typical, Standby mode: 0.5W maximum |
| Dimensions / Net Weight | | 612.5 × 435.5 × 187.5mm / 24.1 × 17.1 × 7.4" (W×H×D) 4.0kg / 8.8lbs |
| Tilt Angle | | Upward: 21.5 degrees Downward: 3.5 degrees |
| Environmental Considerations | | Operating: Temperature 5 to 35°C / 41 to 95°F |
| | | Humidity 10 to 80% (No condensation) |
| | | Storage: Temperature -20 to 60°C / -4 to 140°F |
| | | Humidity 5 to 85% (No condensation) |
| Approvals | | CE, TÜV-Bauart, VCCI, PSE, EAC |

NOTE * USB peripheral and audio equipment are not connected.


DIMENSIONS : G-MASTER GB2470HSU

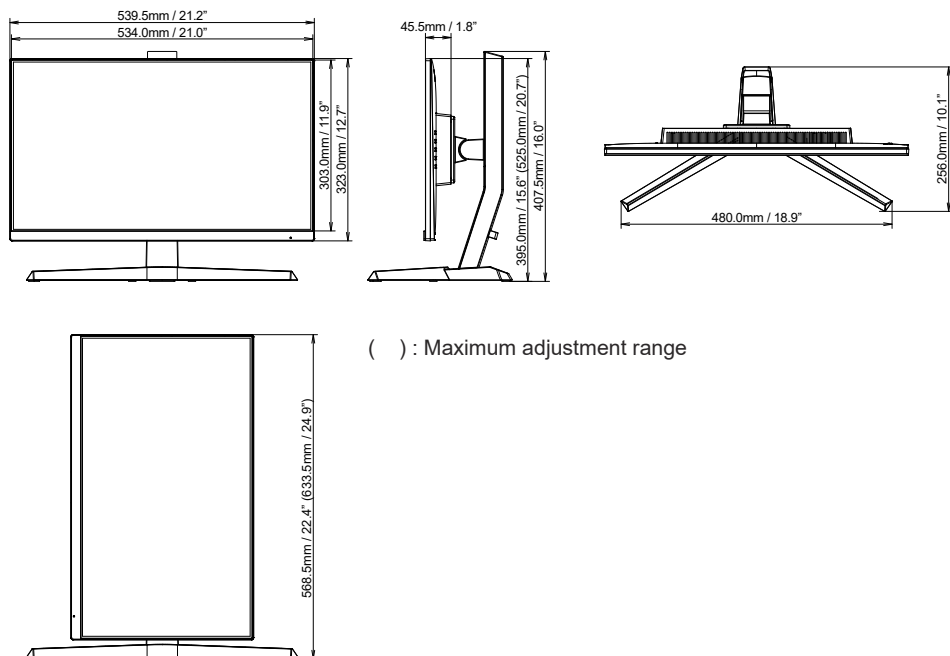


DIMENSIONS : G-MASTER G2470HSU

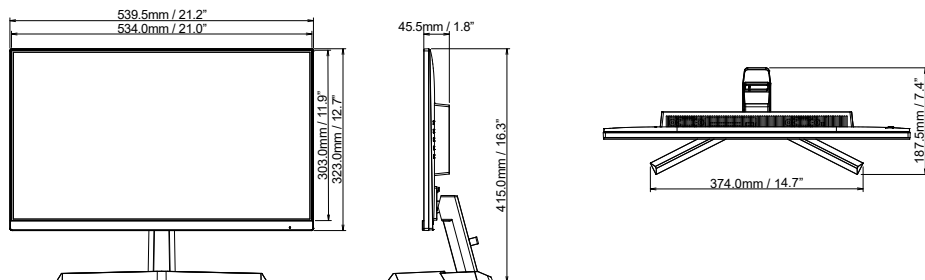

DIMENSIONS : G-MASTER GB2770HSU

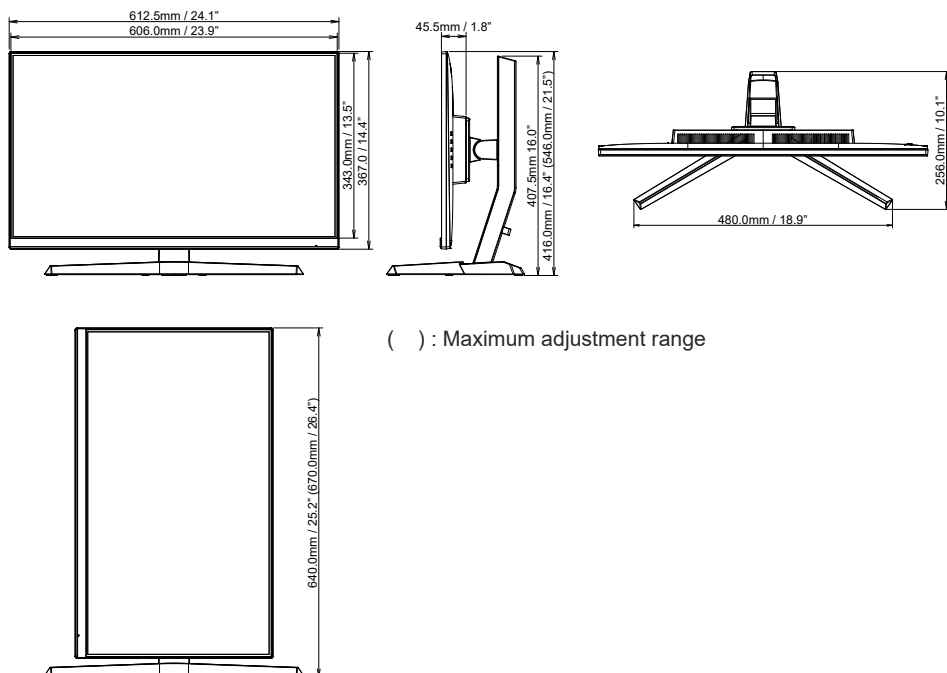

DIMENSIONS : G-MASTER G2770HSU

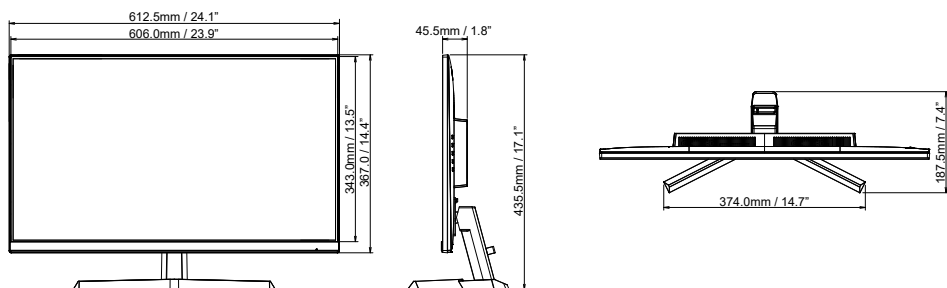

COMPLIANT TIMING

| Video Mode | Horizontal Frequency | Vertical Frequency | Dot Clock |
|-------------|----------------------|--------------------|------------|
| 800 × 600 | 37.879kHz | 60.317Hz | 40.000MHz |
| | 46.875kHz | 75.000Hz | 49.500MHz |
| 1024 × 768 | 48.363kHz | 60.004Hz | 65.000MHz |
| | 60.023kHz | 75.029Hz | 78.750MHz |
| 1280 × 1024 | 63.981kHz | 60.020Hz | 108.000MHz |
| | 79.976kHz | 75.025Hz | 135.000MHz |
| 1680 × 1050 | 65.290kHz | 60.000Hz | 146.250MHz |
| 1920 × 1080 | 67.500kHz | 60.000Hz | 148.500MHz |
| | 137.143kHz | 119.880Hz | 247.286MHz |
| | 166.442kHz | 144.000Hz | 332.880MHz |
| | 192.692kHz | 165.000Hz | 385.380MHz |

*

NOTE * For DisplayPort input only.