

## OWNER'S MANUAL LED LCD Monitor (LED Monitor\*)

\*LG LED Monitors are LCD Monitors with LED Backlighting.

Please read this manual carefully before operating your set and retain it for future reference.

## LED LCD MONITOR MODEL

 20MK4 series
 (20MK400H,20MK410H,20MK420H,20MK430H)
 (22MK4 series)
 (22MK400H,22MK420H,22MK430H)
 (24MK4 series)
 (24MK400H,24MK430H)
 (27MK4 series)
 (27MK400H,27MK430H)
 (27MK4 series)
 (27MK400H,27MK430H)
 (27MK40H,27MK430H)
 (27MK

## **CONTENTS**

## LICENSE ----- 3

## ASSEMBLING AND PREPARING - 4

- Product Components 4
- Supported Drivers and Software 5
- Component and Button Description 6
How to Use the Joystick Button
Input Connector
- Moving and Lifting the Monitor 8
- Setting up the Monitor set 9
Attaching the Stand Base
Mounting on a table
Mounting on a wall

#### USING THE MONITOR SET----- 14

- Connecting to a PC 14
D-SUB connection
HDMI connection
- Connecting to AV Devices15
HDMI connection
- Connecting Peripherals15
Connecting Headphones

## CUSTOMIZING SETTINGS ----- 16

## TROUBLESHOOTING ----- 21

SPECIFICATIONS		22
----------------	--	----

- Preset Modes (Resolution) ------ 29

## LICENSE

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

The following content is only applied to the monitor which is sold in Europe market and which needs to meet the ErP Directive:


\* This monitor is set to be turned off automatically in 4 hours after you turned on display if there is no adjustment to display.

\* To make this setting be disabled, change the option to 'Off' in OSD menu of "Automatic Standby".

## ASSEMBLING AND PREPARING

## Product Components

Please check whether all the components are included in the box before using the product. If there are missing components, contact the retail store where you purchased the product. Note that the product and components may look different from those shown here.

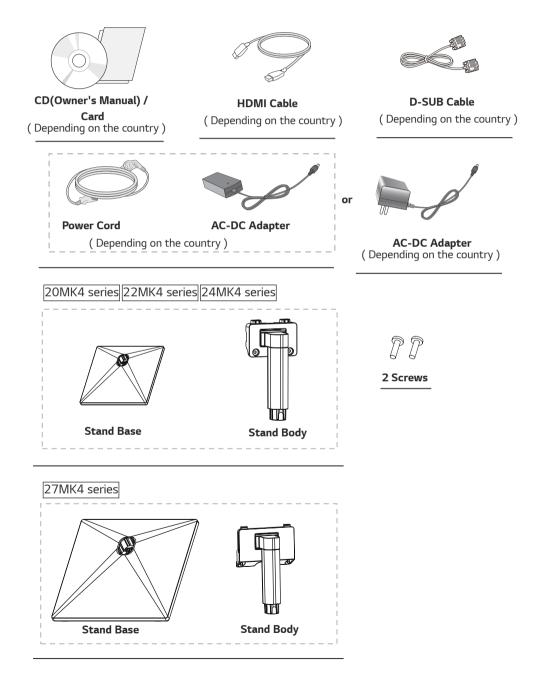

## 

- Always use genuine components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of counterfeit components.
- It is recommend that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.

## 


- Note that the components may look different from those shown here.
- Without prior notice, all information and specifications in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or online shopping site or contact the retail store where you purchased the product.

#### **Supported Drivers and Software**

You can download and install the latest version from the LGE website (www.lg.com).

Drivers and Software	Installation Priority	20MK4 series 22MK4 series 24MK4 series 27MK4 series
Monitor Driver	Recommended	0
OnScreen Control	Recommended	0

## **Component and Button Description**

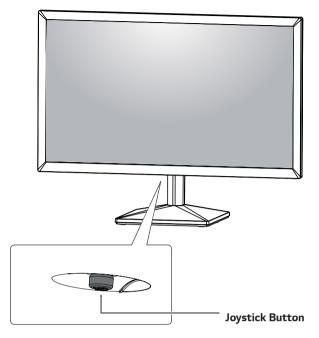

## How to Use the Joystick Button


You can easily control the functions of the monitor by pressing the joystick button or moving it left/right with your finger.

#### **Basic Functions**

- IȚ	ළ	Power on	Press the joystick button once with your finger to turn on the monitor.
		Power off	Press and hold the joystick button once with your finger to turn off the monitor.
	◀/►	Volume Control	You can control the volume by moving the joystick button left/right. (for HDMI only)

• The joystick button is located at the bottom of the monitor.


## Input Connector

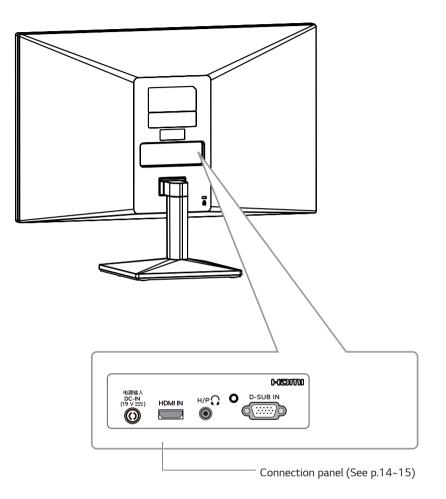

#### Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation regardless of its shape or size.

- It is advisable to place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all cables.
- Hold the top and bottom of the monitor frame firmly. Do not hold the panel itself.

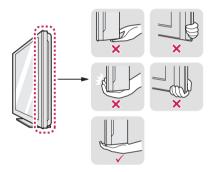

• When holding the monitor, the screen should face away from you to prevent it being scratched.




- When moving the monitor, avoid any strong shock or vibrations to the product.
- When moving the monitor, keep it upright, never turn the monitor on its side or tilt it sideways.



• As far as possible, avoid touching the monitor screen. This may result in damage to the screen or some of the pixels used to create images.



 If you use the monitor panel without the stand base, its joystick button may cause the monitor to become unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick button to malfunction.

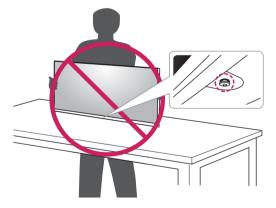

ENGLISH

## Setting up the Monitor set


## Attaching the Stand Base

20MK4 series 22MK4 series 24MK4 series 1



## 

• To protect the screen from scratches, cover the surface with a soft cloth.

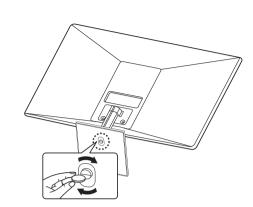


#### 27MK4 series

1

2

4

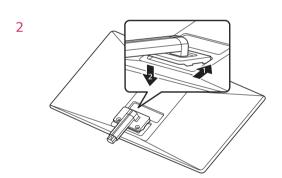





## <u>Λ</u> CAUTION


• To protect the screen from scratches, cover the surface with a soft cloth.

3

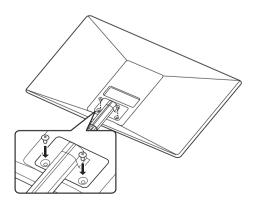

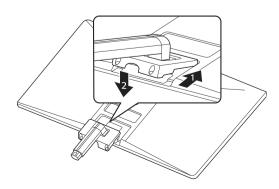


screw torque :10~12kgf

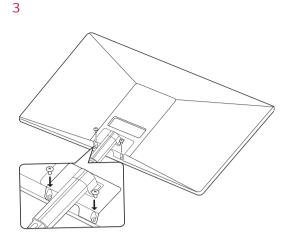

screw torque :10~12kgf

#### 4

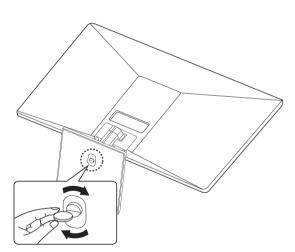



 To avoid injury to the fingers and foot when Assembly Stand Body and Base, should hold Base when assembly stand body and base.

## 

- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not carry the monitor upside down by just holding the stand base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.

## 

• You can disassemble the stand in the reverse order of the assembly.


## Mounting on a table

1 Lift and tilt the Monitor set into its upright position on a table.


Leave a 100 mm (minimum) space from the wall for proper ventilation.



2 Connect the AC-DC Adapter and Power Cord to a wall outlet.

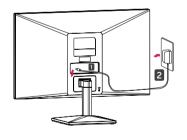

or

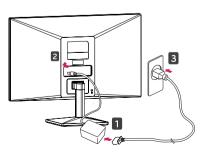


3 Press the joystick button on the bottom of the monitor to turn on the monitor.

## 


• Unplug the power cord prior to moving or installing the monitor. There is risk of electric shock.

## 


When you adjust the angle, do not hold the bottom of the Monitor set frame as shown on the following illustration, as may injure your fingers.

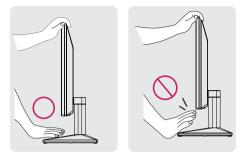

 Do not touch or press the screen when adjusting the angle of the monitor.




Do not hold this set like below picture.Monitor screen can detach from stand base and injure your body.

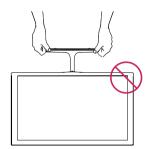




The angle of the screen can be adjusted forward or backward from  $-5^{\circ}$  to  $20^{\circ}$  for a comfortable viewing experience.

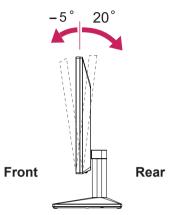

#### Using the Kensington security system

The Kensington security system connector is located at the back of the Monitor set. For more information of installation and using, refer to the manual supplied with the Kensington security system or visit *http://www.kensington.com*.

Connect the Kensington security system cable between the Monitor set and a table.

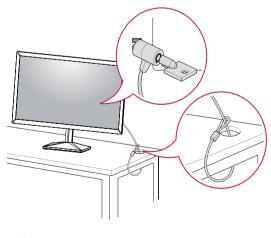



• The Kensington security system is optional. You can obtain it from most electronics stores.


ENGLISH

• Wall Mount (A x B)

#### Mounting on a wall

For proper ventilation, allow a clearance of 100 mm on each side and from the wall. Detailed

instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.

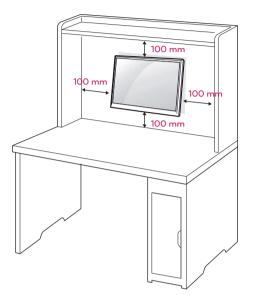

If you intend to mount the Monitor set to a wall, attach Wall mounting interface (optional parts) to the back of the set.


When you install the Monitor set using a wall mounting interface (optional parts), attach it carefully so it will not drop.

- 1 If you use screw longer than standard, the monitor might be damaged internally.
- 2 If you use improper screw, the product might be damaged and drop from mounted position.

In this case, LG Electronics is not responsible for it.


Model	20MK4 series 22MK4 series
Wall Mount (A x B)	75 x 75
Standard screw	M4
Number of screws	4

Model	27MK4 series
Wall Mount (A x B)	100 x 100
Standard screw	M4
Number of screws	4

 

## 

- Disconnect the power cord first, and then move or install the Monitor set. Otherwise electric shock may occur.
- If you install the Monitor set on a ceiling or slanted wall, it may fall and result in severe injury.
- Use only an authorized LG wall mount and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the Monitor set and void your warranty.
- Use only screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.
- Screw length from outer surface of back cover should be under 8mm.

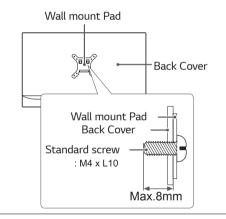

- Use the screws that are listed on the VESA standard screw specifications.
- The wall mount kit will include an installation manual and necessary parts.
- The wall mount bracket is optional. You can obtain additional accessories from your local dealer.
- The length of screws may differ depending on the wall mount. Be sure to use the proper length.
- For more information, refer to the instructions supplied with the wall mount.


## **USING THE MONITOR SET**

### Connecting to a PC

 Your Monitor set supports Plug & Play\*.
 \*Plug & Play: A PC recognizes a connected device that users connect to a PC and turn on, without device configuration or user intervention.


### **D-SUB connection**

Transmits analog video from your PC to the Monitor set. Connect the PC and the Monitor set with the supplied D-sub 15 pin signal cable as shown in the following illustrations.

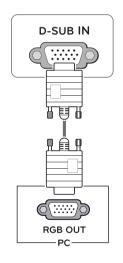

## 

 • When using a D-Sub signal input cable connector for Macintosh




#### • Mac adapter

For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-SUB VGA connector on the supplied cable to a 15 pin 2 row connector.

## HDMI connection

Transmits the digital video and audio signals from your PC to the Monitor set. Connect the PC and the Monitor set with the HDMI cable as shown in the following illustrations.

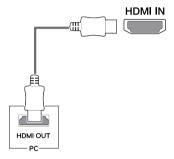

## 


- If you use HDMI PC, it can cause compatibility problem.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
  - High-Speed HDMI<sup>®</sup>/<sup>™</sup> Cable
  - High-Speed  $\mathrm{HDMI}^{\mathrm{e}}/^{\mathrm{TM}}$  Cable with Ethernet

- When you want to use two PC in our Monitor, please connect the signal cable(D-SUB/DVI-D/ HDMI) respectively in Monitor set.
- If you turn the Monitor set on while it is cold, the screen may flicker. This is normal.
- Some red, green, or blue spots may appear on the screen. This is normal.

## **Connecting to AV Devices**

#### HDMI connection

Transmits the digital video and audio signals from your AV devices to the monitor. Connect your AV device to the monitor with the HDMI cable as illustrated below.

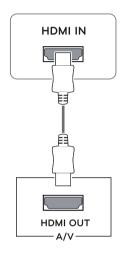


## 

- If you use HDMI PC, it can cause compatibility problem.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
- High-Speed HDMI<sup>®</sup>/<sup>™</sup> Cable
- High-Speed  $\mathrm{HDMI}^{^{\! \mathrm{o}}\!\!/^{\mathrm{TM}}}$  Cable with Ethernet

## **Connecting Peripherals**

## **Connecting Headphones**

 Connect peripherals to the monitor via the headphones port. Connect as illustrated.



## 

- Peripheral devices are sold separately.
- If you use angled headphones, it may cause a problem with connecting another external device to the monitor. Therefore, it is recommended to use straight headphones.



Angle Type

Straight Type

• Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.

## **CUSTOMIZING SETTINGS**


## Activating the Main Menu

- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down  $(\blacktriangle/ \nabla)$  and left/right  $(\blacktriangleleft/ \triangleright)$  to set the options.
- 3 Press the joystick button once more to close the main menu.



Button	Menu Status		Description
	Main menu disabled		Enables the main menu.
Main menu enabled		menu enabled	Close the main menu. (Long press the button to turn off the monitor)
		Main menu disabled	Adjusts the monitor volume level. (for HDMI only)
		Main menu enabled	Enters the input features.
		Main menu disabled	Adjusts the monitor volume level. (for HDMI only)
		Main menu enabled	Enters the Settings feature.
		Main menu disabled	Displays the information on the current input.
		Main menu enabled	Turns off the monitor.
	•	Main menu disabled	Displays the information on the current input.
		Main menu enabled	Enters the picture mode feature. (for HDMI only)

### Main Menu Features

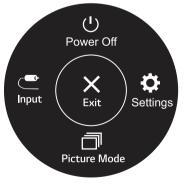

Main Menu	Description	
Settings	Configures the screen settings.	
Picture Mode	Select picture mode to achieve the best display effect.	
Input	Sets input mode.	
Power Off	ff Turns off the monitor.	
Exit	Exits the main menu.	

(for HDMI only)

ENGLISH

## **Customizing settings**

Settings > Quick Settings	Description		
Brightness			
Contrast	Adjusts the contrast and brightness of the screen.		
Volume	Adjusts the volume.(for HDMI only)		
	<b>NOTE</b>		
	<ul> <li>You can adjust Mute/ Unmute by moving the joystick button to ▼ in the Volume menu.</li> </ul>		

Settings > Input		Description		
Input List	Selects the in	put mode.		
Aspect Ratio	Adjusts the a	spect ratio of the screen.		
	Full Wide	Displays the video in wide-screen, regardless of the video signal input.		
	Original	Original Displays video according to the aspect ratio of the video signal input.		
	NO			
		4 series         24MK4 series         27MK4 series         The options may disabled at the recom-           I resolution (1920 x 1080).         1080		

## **Customizing settings**

Settings > Picture		Description		
Picture Mode	Custom	Allows the user to	adjust each element. The color mode of the main menu can be adjusted.	
	Reader	Optimizes the scre	en for viewing documents. You can brighten the screen in the OSD menu.	
	Photo	Optimizes the scre	en to view photos.	
	Cinema	Optimizes the scre	en to improve the visual effects of a video.	
	Color Weak- ness		sers who cannot distinguish between red and green. It enables users with color distinguish between the two colors.	
	Game	Optimizes the scre	en for gameplay.	
Picture Ad-	Brightness	Adjusts the contra	st and brightness of the screen.	
just	Contrast			
	Sharpness	Adjusts the sharpness of the screen.		
	SUPER RESOLUTION+	High	Optimized picture quality is displayed when a user wants crystal clear images. It is effective forhigh quality video or game.	
		Middle	The optimized picture quality is displayed when a user wants images between low and high modes for comfortable viewing. It is effective for UCC or SD video.	
		Low	The optimized picture quality is displayed when a user wants smooth and natural images. It is effective for slow -moving pictures or still images.	
		Off	Select this option for everyday viewing. SUPER RESOLUTION+ is turned off in this mode.	
	Black Level		el (for HDMI only). erence for a video signal, this is the darkest color the monitor can display.	
		High	Keeps the current contrast ratio of the screen.	
		Low	Lowers the black levels and raises the white levels from the current contrast ratio of the screen.	
	DFC	On	Adjusts the brightness automatically according to the screen.	
		Off	Disables the DFC feature.	



- This is subsidiary for color weakness user. Therefore if you feel uncomfortable with the screen, please turn off this function.
- This function can't distinguish some colors in some images.

Game Adjust	Response Time	Sets a response time for displayed pictures based on the speed of the screen. For a normal environment, it is recommended that you use <b>Fast</b> . For a fast-moving picture, it is recommended that you use <b>Faster</b> . Once <b>Faster Mode</b> is selected, <b>Motion Blur</b> may occur depending on the content.			
		Faster	Sets the response time to faster.		
		Fast	Sets the response time to fast.		
		Normal	Sets the response time to normal.		
		Off Does not use the response time improvement feature.			
	FreeSync 22MK4 series 24MK4 series 27MK4 series	<ul> <li>Provides seamless and natural images by synchronizing the vertical frequency of the input signal with that of the output signal.</li> <li>CAUTION</li> <li>Supported Interface: HDMI.</li> <li>Supported Graphic Card : A graphic card that supports AMD's FreeSync is necessary.</li> <li>Supported Version : Make sure to update the graphic card to the latest driver.</li> <li>For more information and requirement, refer to AMD website at http://www.amd.com/ FreeSync</li> </ul>			
		On	FreeSync function on.		
		Off	FreeSync function off.		
	Black Stabilizer	Increasing the Blac (You can easily dist Reducing the Black			
	<ul> <li>Cross Hair</li> <li>Cross Hair provides a mark on the center of the screen for First Person Shooted Users can select the cross hair that fits their gaming environment among four hairs.</li> <li>When the monitor is off or enters energy saving mode, the Cross Hair fea automatically turned off.</li> </ul>		e <b>cross hair</b> that fits their gaming environment among four different <b>cross</b> nitor is off or enters energy saving mode, the Cross Hair feature is		
Color Adjust	Gamma	Mode 1, Mode 2, Mode 3	The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.		
		Mode 4	If you do not need to adjust the gamma settings, select Mode 4.		
	Color Temp	Selects the factory default picture color. Warm: Sets the screen color to a reddish tone. Medium: Sets the screen color between a red and blue tone. Cool: Sets the screen color to a bluish tone. Custom: The user can adjust it to red, green or blue by customization.			
L	Red/Green/ Blue	You can customize	the picture color using Red, Green, and Blue colors.		
Configuration	Horizontal	To move image left	and right.		
Adjust (D-SUB only) Vertical To move image up and down.					
(D-SUB only)	vertical	To move image up	and down.		
(D-SUB only)	Clock	To minimize any ve size will also chang	rtical bars or stripes visible on the screen background.The horizontal screen e.		
(D-SUB only)	Clock Phase	To minimize any ve size will also chang To adjust the focus or sharpen the ima	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear ge of characters.		
(D-SUB only) Resolution (D-SUB only)	Clock Phase	To minimize any ve size will also chang To adjust the focus or sharpen the ima desired resolution.T	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear		
Resolution	Clock Phase User can set the to the following( NOTE The function is	To minimize any ve size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only).	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear ge of characters.		
Resolution	Clock Phase User can set the to the following( <b>NOTE</b> The function is the PC output	To minimize any ve size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear ge of characters. his option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that		
Resolution	Clock Phase User can set the to the following( <b>NOTE</b> The function is the PC output 1024x768, 1280	To minimize any ve size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. 0x768, 1360x768,	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear ge of characters. his option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that		
Resolution	Clock Phase User can set the to the following( NOTE The function is the PC output 1024x768, 128 1280x960, 160	To minimize any ve size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. 0x768, 1360x768, 0x900,Off 22MK4	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear ge of characters. nis option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that 1366x768,Off		
Resolution	Clock Phase User can set the to the following( NOTE The function is the PC output 1024x768, 1280 1280x960, 1600 1440x900, 1600	To minimize any ve size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. 0x768, 1360x768, 0x900,Off 22MK4	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear ge of characters. nis option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that 1366x768,Off series 24MK4 series 27MK4 series series 24MK4 series 27MK4 series		
Resolution (D-SUB only)	Clock Phase User can set the to the following( NOTE The function is the PC output 1024x768, 1280 1280x960, 1600 1440x900, 1600	To minimize any ve size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. 0x768, 1360x768, 0x900,Off 22MK4	rtical bars or stripes visible on the screen background.The horizontal screen e. of the display. This item allows you to remove any horizontal noise and clear ge of characters. nis option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that 1366x768,Off series 24MK4 series 27MK4 series series 24MK4 series 27MK4 series		

#### **Customizing settings**

Settings > General	Description		
Language	To choose the language in which the control names are displayed.		
SMART ENERGY	High	Saves energy using the high-efficiency SMART ENERGY SAVING feature.	
SAVING	Low	Saves energy using the low-efficiency SMART ENERGY SAVING feature.	
	Off	Disables the SMART ENERGY SAVING feature.	
Automatic Standby	The monitor will a	utomatically switch to standby mode after a certain period.	
OSD Lock	Prevents incorrect key input.		
	On	Key input is disabled.	
	NOTE     All function except for the OSD Lock mode, brightness, Contrast, Input, Information and V     ume are disabled.		
	Off Key input is enabled.		
Information	The display information will be shown the Model, Serial Number, Total Power On Time, Resolution.		
Reset	Do you want to reset your settings?		
	No	Cancel the select.	
	Yes	Returns to the default settings.	



#### Saving Data depends on the Panel. So, those values should be different from each panel and panel vendor. If option of SMART ENERGY SAVING is High or Low, monitor luminance become higher or lower depend on source.

## TROUBLESHOOTING

#### Check the following before calling for service.

No image appears		
Is the power cord of the display connected?	• Check and see if the power cord is connected properly to the power outlet.	
Do you see an "Out of Range" message on the screen?	• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.	
Do you see a "NO SIGNAL" message on the screen or black screen?	<ul> <li>After the monitor is on "NO SIGNAL", the monitor goes to DPM mode.</li> <li>This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it.</li> <li>Check PC status.</li> </ul>	

Can't you control some functions in OSD?		
Can't you select some menu in OSD?	• You can unlock the OSD controls at any time by entering the OSD lock menu and changing items to off.	

## 

- Check **Control Panel** ► **Display** ► **Settings** and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
- If the recommended resolution (optimal resolution) is not selected, letters may be blurred and the screen may be dimmed, truncated or biased. Make sure to select the recommend resolution.
- The setting method can differ by computer and O/S (Operation System), and resolution mentioned above may
  not be supported by the video card performance. In this case, please ask to the computer or the video card
  manufacturer.
- Keep proper posture when using the monitor, otherwise the screen may not be optimized.

Display image is incorrect		
The screen color is mono or abnormal.	Check if the signal cable is properly connected and use a screwdriver to fasten if	
	necessary.	
	<ul> <li>Make sure the video card is properly inserted in the slot.</li> </ul>	
	• Set the color setting higher than 24 bits (true color) at <b>Control Panel </b> Settings.	
The screen blinks.	Check if the screen is set to interlace mode and if yes, change it to the recommend	
	resolution.	

Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?		
Have you installed the display driver? • Be sure to install the display driver from our web site: http://www.lg.com		
Make sure to check if the video card supports Plug&Play function.		

The screen is flickering.		
Did you select the recommended resolution?	• 22MK4 series 24MK4 series 27MK4 series If the selected resolution is HDMI <b>1080i</b> 60/50 Hz, the screen may be flickering. Change the resolution to the recommended resolution <b>1080P</b> .	

## **SPECIFICATIONS**

#### 20MK4 series

22

2010114 301103		
LCD Screen	Туре	TFT (Thin Film Transistor) LCD(Liquid Crystal Display) Screen
Resolution	Maximum Resolution	1366 x 768 @ 60Hz (HDMI)
		1366 x 768 @ 60Hz (D-sub)
	Recommended Resolution	1366 x 768 @ 60Hz
Video Signal	Horizontal Frequency	30 kHz to 61 kHz
	Vertical Frequency	HDMI -PC: 56 Hz to 75 Hz -AV: 50 Hz to 61 Hz D-SUB: 56 Hz to 75 Hz
	Synchronization	Separate Sync, Digital.
Input Connector	HDMI IN, D-SUB IN, H/P OU	Ť
Power Input	19 V 0.8 A	
Power Consumption	On Mode : 13 W Typ. ( Out Sleep Mode $\leq$ 0.3 W Off Mode $\leq$ 0.3 W	going condition ) *
AC/DC adaptor	Off Mode ≤ 0.3 W         Type ADS-18SG-19-3 19016G, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-18FSG-19 19016GPG, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-18FSG-19 19016GPG, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-18FSG-19 19016GPCU, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-18FSG-19 19016GPCU, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FF-19 19016GPB, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FF-19 19016EPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FF-19 19016EPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FF-19 19016EPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FF-19 19016EPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FF-19 19016EPB-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FSF-19 19016EPB-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FSF-19 19016EPB-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FSF-19 19016EPB-1, manufactured by SHENZHEN HONOR ELECTRONIC         or Type ADS-25FSF-19 19016EPG-3         or Type ADS-25FSF-19 19016EPG-4         or Type ADS-25FSF-19 19016EPG-5         or Type ADS-25FSF-19 19016EPG-6         or Type ADS-25FSF-19 19016EPG-7         or Type LCAP36-A, manufactured by LIEN CHANG ELECTRONIC ENTERPRISE         or Type LCAP36-F, manu	
Environmental conditions	Operating Temperature Operating Humidity	0 °C to 40 °C Less than 80%
	Storage Temperature Storage Humidity	-20 °C to 60 °C Less than 85 %
Dimension	Monitor Size (Width x Heig	ht x Depth)
	With Stand	463.8 mm x 366.5 mm x 181.9 mm
	Without Stand	463.8 mm x 276.4 mm x 38.4 mm
Weight (Without	With Stand	2.3 Kg
Packaging)	Without Stand	2.0 Kg
Tilt Range	-5° to 20°	

Product specifications shown above may be changed without prior notice due to upgrade of product functions. \* The power consumption level can be different by operating condition and monitor setting. \* The On mode power consumption is measured with LGE test standard(Full White pattern , Maximum resolution).

## SPECIFICATIONS

#### 22MK4 series

LCD Screen	Туре	TFT (Thin Film Transistor) LCD(Liquid Crystal Display) Screen
Resolution	Maximum Resolution	1920 x 1080 @ 75 Hz (HDMI)
		1920 x 1080 @ 60 Hz (D-sub)
	Recommended Resolution	1920 × 1080 @ 60 Hz
Video Signal	Horizontal Frequency	HDMI : 30 kHz to 85 kHz D-SUB: 30 kHz to 83 kHz
	Vertical Frequency	HDMI -PC: 56 Hz to 75 Hz -AV: 50 Hz to 61 Hz D-SUB: 56 Hz to 75 Hz
	Synchronization	Separate Sync, Digital.
Input Connector	HDMI IN, D-SUB IN, H/P OU	T
Power Input	22MK430H:19 V 1.3 A Or 19 V 0.8 A 22MK400H: 19 V 0.8 A	
Power Consumption	On Mode : 19.7 W Typ. ( Outgoing condition ) * Sleep Mode $\leq$ 0.3 W Off Mode $\leq$ 0.3 W	
AC/DC adaptor		

	Type ADS-18SG-19-3 19016G, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-18FSG-19 19016GPG, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-18FSG-19 19016GPU, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-18FSG-19 19016GPCU, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-18FSG-19 19016GPB, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FA-19-3 19016E, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FF-19 19016EPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FF-19 19016EPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FF-19 19016EPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FF-19 19016EPB-1, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FF-19 19016EPG-1, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FF-19 19016EPG, manufactured by SHENZHEN HONOR ELECTRONIC or Type ADS-25FF-19 19016EPG, manufactured by SHENZHEN HONOR ELECTRONIC or Type LCAP42, manufactured by LIEN CHANG ELECTRONIC ENTERPRISE or Type LCAP36-A, manufactured by LIEN CHANG ELECTRONIC ENTERPRISE or Type LCAP36-I, manufactured by LIEN CHANG ELECTRONIC ENTERPRISE or Type LCAP36-I, manufactured by LIEN CHANG ELECTRONIC ENTERPRISE or Type DA-16C19, manufactured by Asian Power Devices Inc. or Type WA-16D19FG, manufactured by Asian Power Devices Inc. or Type WA-16E19FA, manufactured by Asian Power Devices Inc.		
Environmental conditions	Operating Temperature Operating Humidity	0 °C to 40 °C Less than 80%	
	Storage Temperature Storage Humidity	-20 °C to 60 °C Less than 85 %	
Dimension	Monitor Size (Width x Height x Depth)		
	With Stand	509.6 mm x 395.8 mm x 181.9 mm	
	Without Stand	509.6 mm x 305.7 mm x 38.5 mm	
Weight (Without Packaging)	With Stand	22MK430H: 2.8 kg 22MK400H: 2.4 kg	
	Without Stand	22MK430H: 2.5 kg 22MK400H: 2.1 kg	

Product specifications shown above may be changed without prior notice due to upgrade of product functions. \* The power consumption level can be different by operating condition and monitor setting.

\* The On mode power consumption is measured with LGE test standard(Full White pattern , Maximum resolution).

## SPECIFICATIONS

#### 24MK4 series

LCD Screen	Туре	TFT (Thin Film Transistor) LCD(Liquid Crystal Display) Screen
Resolution	Maximum Resolution	1920 x 1080 @ 75 Hz (HDMI)
		1920 x 1080 @ 60 Hz (D-sub)
	Recommended Resolution	1920 × 1080 @ 60 Hz
Video Signal	Horizontal Frequency	HDMI : 30 kHz to 85 kHz D-SUB: 30 kHz to 83 kHz
	Vertical Frequency	HDMI -PC: 56 Hz to 75 Hz -AV: 50 Hz to 61 Hz D-SUB: 56 Hz to 75 Hz
	Synchronization	Separate Sync, Digital.
Input Connector	HDMI IN, D-SUB IN, H/P OU	Т
Power Input	19 V1.3 A	
Power Consumption	On Mode : 26 W Typ. ( Out Sleep Mode $\leq$ 0.3 W Off Mode $\leq$ 0.3 W	going condition ) *
AC/DC adaptor		
Environmental	Operating Temperature	0 °C to 40 °C

Dimension	Monitor Size (Width x Height x Depth)	
	With Stand	555 mm x 421 mm x 181.9 mm
	Without Stand	555 mm x 330.9 mm x 38.4 mm
Weight (Without Packaging)	With Stand	24MK430H: 3.1 kg 24MK400H: 2.8 kg
	Without Stand	24MK430H: 2.8 kg 24MK400H: 2.5 kg

Product specifications shown above may be changed without prior notice due to upgrade of product functions. \* The power consumption level can be different by operating condition and monitor setting.

\* The On mode power consumption is measured with LGE test standard(Full White pattern , Maximum resolution).

# ENGLISH

## SPECIFICATIONS

## 27MK4 series

LCD Screen	Туре	TFT (Thin Film Transistor) LCD(Liquid Crystal Display) Screen		
Resolution	Maximum Resolution	1920 x 1080 @ 75 Hz (HDMI)		
		1920 x 1080 @ 60 Hz (D-sub)		
	Recommended Resolution	1920 × 1080 @ 60 Hz		
Video Signal	Horizontal Frequency	HDMI : 30 kHz to 85 kHz D-SUB: 30 kHz to 83 kHz		
	Vertical Frequency	HDMI -PC: 56 Hz to 75 Hz -AV: 50 Hz to 61 Hz D-SUB: 56 Hz to 75 Hz		
	Synchronization	Separate Sync, Digital.		
Input Connector	HDMI IN, D-SUB IN, H/P OU	Т		
Power Input	19 V 1.3 A			
Power Consumption	On Mode : 18.6 W Typ. (ENERGY STAR <sup>®</sup> standard)* 25.2 W Typ. (Outgoing condition)** Sleep Mode ≤ 0.3 W Off Mode ≤ 0.3 W			
AC/DC adaptor				
Environmental conditions	Operating Temperature Operating Humidity Storage Temperature	0 °C to 40 °C Less than 80% -20 °C to 60 °C		
	Storage Humidity	Less than 85 %		

Dimension	Monitor Size (Width x Height x Depth)		
	With Stand	625.6 mm x 468.7 mm x 204.1 mm	
	Without Stand	625.6 mm x 375.2 mm x 44 mm	
Weight (Without Packaging)	With Stand	27MK400H: 4.6 kg 27MK430H: 4.0 kg	
	Without Stand	27MK400H: 4.2 kg 27MK430H: 3.6 kg	

The specifications are subject to change without notice.

\* The power consumption level can be different by operating condition and monitor setting.

\* The On mode power consumption is measured with ENERGY STAR® test standard.

\*\* The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

## Preset Modes (Resolution)

## **D-SUB / HDMI PC Timing**

20MK4 series

Display Modes (Resolution)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Polarity(H/V)	
720 x 400	31.468	70.08	-/+	
640 x 480	31.469	59.94	-/-	
640 x 480	37.5	75	-/-	
800 x 600	37.879	60.317	+/+	
800 x 600	46.875	75	+/+	
1024 x 768	48.363	60	-/-	
1366 x 768	47.712	59.79	+/+	Recommend Mode

## D-SUB PC Timing 22MK4 series 24MK4 series 27MK4 series

Display Modes (Resolution)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Polarity(H/V)		
720 x 400	31.468	70.08	-/+		
640 x 480	31.469	59.94	-/-		
640 x 480	37.5	75	-/-		
800 x 600	37.879	60.317	+/+		
800 x 600	46.875	75	+/+		
1024 x 768	48.363	60	-/-		
1024 x 768	60.023	75.029	+/+		
1152 x 864	67.500	75	+/+		
1280 x 1024	63.981	60.023	+/+		
1280 x 1024	79.976	75.035	+/+		
1680 x 1050	65.290	59.954	-/+		
1920 x 1080	67.500	60	+/+	Recommend Mode	

HDMI PC Timing 22MK4 series 24MK4 series 27MK4 series

Display Modes (Resolution)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Polarity(H/V)
720 x 400	31.468	70.08	-/+
640 x 480	31.469	59.94	-/-
640 x 480	37.5	75	-/-
800 x 600	37.879	60.317	+/+
800 x 600	46.875	75	+/+
1024 x 768	48.363	60	-/-
1024 x 768	60.023	75.029	+/+
1152 x 864	67.500	75	+/+

1280 x 1024	63.981	60.023	+/+	
1280 x 1024	79.976	75.035	+/+	
1680 x 1050	65.290	59.954	-/+	
1920 x 1080	67.500	60	+/+	Recommend Mode
1920 x 1080	83.89	74.97	+/+	

## **HDMI AV Timing**

20MK4 series

Factory support mode (Preset Mode)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	HDMI
480P	31.50	60	0
576P	31.25	50	0
720P	37.50	50	0
720P	45.00	60	O Recommend Mode

## 22MK4 series 24MK4 series 27MK4 series

Factory support mode (Preset Mode)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	HDMI
480P	31.50	60	0
576P	31.25	50	0
720P	37.50	50	0
720P	45.00	60	0
1080P	56.25	50	0
1080P	67.50	60	O Recommend Mode



Make sure to read the Safety Precautions before using the product. The model and serial number of the product are located on the back and on one side of the product.

Record them below in case you ever need service.

MODEL

SERIAL

(for 27MK4 series)

ENERGY STAR is a set of power-saving guidelines issued by the U.S.Environmental Protection Agency(EPA).



As an ENERGY STAR Partner LGE U.S. A.,Inc. has determined that this product meets the ENERGY STAR guidelines for ENERGY FILE energy efficiency.

Refer to ENERGY STAR.gov for more information on the ENERGY STAR program.