



LCD Monitor

ENGLISH

ProLite XUB2792QSU ProLite XU2792QSU

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.





Dear user, we congratulate you on the purchase of your iiyama LCD.

please check the iiyama website. For details on warranty and locally used pixel policies that apply directly after installation of your product

To report a fault, please contact your local support centre found at https://iiyama.com

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

model number *

- purchase receipt and serial number *
- name and address for collection
- telephone/fax number, for availability during the day
- convenient collection date (date, time)
- short description of the defect

* see the identification plate on the back of the case.


Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

їуата



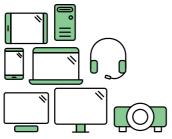

Say hello to a more sustainable product

IT products are associated with a wide range of sustainability risks throughout their life cycle. Human rights violations are common in the factories. Harmful substances are used both in products and their manufacture. Products can often have a short lifespan because of poor ergonomics, low quality and when they are not able to be repaired or upgraded.

This product is a better choice. It meets all the criteria in TCO Certified, the world's most comprehensive sustainability certification for IT products. Thank you for making a responsible product choice, that help drive progress towards a more sustainable future!

Criteria in TCO Certified have a life-cycle perspective and balance environmental and social responsibility. Conformity is verified by independent and approved verifiers that specialize in IT products, social responsibility or other sustainability issues. Verification is done both before and after the certificate is issued, covering the entire validity period. The process also includes ensuring that corrective actions are implemented in all cases of factory non-conformities. And last but not least, to make sure that the certification and independent verification is accurate, both TCO Certified and the verifiers are reviewed regularly.

Want to know more?

Read information about TCO Certified, full criteria documents, news and updates at **tcocertified.com.** On the website you'll also find our Product Finder, which presents a complete, searchable listing of certified products.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL2792Q

We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: https://iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- Eprel registration number XUB2792QSU-B5 : 1335492, XUB2792QSU-W5 : 1335846 XU2792QSU-B1 D : 1252844

<XUB2792QSU-B5 / XUB2792QSU-W5 / XU2792QSU-B1 D>

- As an ENERGY STAR[®] Partner, iiyama has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.
- This product qualifies for ENERGY STAR[®] in the "factory default" setting and this is the setting in which power saving will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR[®] rating.

ENGLISH

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD MONITORS	3
CUSTOMER SERVICE	3
CLEANING	3
BEFORE YOU OPERATE THE MONITOR	4
FEATURES	4
CHECKING THE CONTENTS OF THE PACKAGE	4
USING ARM OR STAND	5
FITTING AND REMOVAL OF STAND : ProLite XUB2792QSU .	7
FITTING AND REMOVAL OF STAND : ProLite XU2792QSU	8
CONTROLS AND CONNECTORS : ProLite XUB2792QSU	9
CONTROLS AND CONNECTORS : ProLite XU2792QSU	10
CONNECTING YOUR MONITOR : ProLite XUB2792QSU	11
CONNECTING YOUR MONITOR : ProLite XU2792QSU	12
DISCONNECTING YOUR MONITOR	13
COMPUTER SETTING	13
ADJUSTING THE HEIGHT AND THE VIEWING ANGLE :	
ProLite XUB2792QSU	13
ADJUSTING THE VIEWING ANGLE : ProLite XU2792QSU	14
OPERATING THE MONITOR	15
ADJUSTMENT MENU CONTENTS	16
STANDBY FEATURE	24
TROUBLE SHOOTING	25
RECYCLING INFORMATION	26
APPENDIX	27
SPECIFICATIONS : ProLite XUB2792QSU	27
SPECIFICATIONS : ProLite XU2792QSU	28
DIMENSIONS : ProLite XUB2792QSU	29
DIMENSIONS : ProLite XU2792QSU	29
COMPLIANT TIMING	30

ENGLISH

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls.

When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height. (Just for height adjustable model.)

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

REMARK FOR WALL MOUNTING

This product is not designed for digital signage (electronic signboard) applications such as wall mounting.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

ENGLISH

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- **NOTE** When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

NOTE If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

- **WARNING** If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.
- **CAUTION** For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Spray-type cleaner
Benzine	Wax
Abrasive cleaner	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.
- **CABINET** Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.
- **LCD** Periodic cleaning with a soft dry cloth is recommended.
- SCREEN Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- Supports Resolutions up to 2560 × 1440
- High Contrast 1000:1 (Typical), Adv. Contrast Function Available / Brightness 350cd/m² (Typical)
- ◆ Supports AMD Radeon FreeSync™ Technology
- Quick Response Time 5ms (Gray to Gray)
- Blue Light Reducer
- Digital Character Smoothing
- 2 × 2W Stereo Speakers
- Standby Feature
- VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- Power Cable*¹
- USB Cable
- Cable Holder*²
- Quick Start Guide
- HDMI Cable
- Stand-Base with a screw
- Screwdriver*³

- DisplayPort Cable
- Stand-Neck
- Safety Guide

- CAUTION
 - *1 The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/ 250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama. An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.
 - *2 Accessory for ProLite XU2792QSU
 - *3 Accessory for ProLite XUB2792QSU


USING ARM OR STAND

- **CAUTION** Before installation, make sure the display arm or desk arm stand is strong enough to hold the necessary weight of the monitor and the mount.
 - Panel angle adjustment range : 23° upward and 5° downward



< DISPLAY ARM OR DESK ARM STAND >


CAUTION When you use with the display arm or desk arm stand, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) which "L" length is 7mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

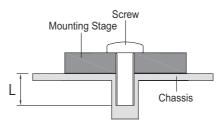

< ROTATING THE MONITOR >

ProLite XUB2792QSU

The monitor is designed to be compatible with both landscape and portrait modes. Video card for portrait display will be required for rotating the image on the screen.

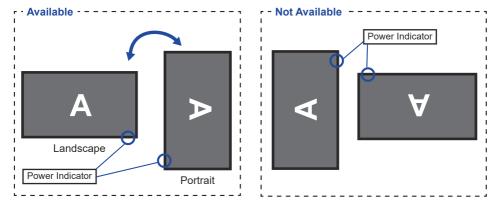


With Stand:

- **NOTE** Adjust the monitor's height before panel rotation.
 - Attempting to rotate the panel forcibly without adjusting the stand height may cause damage to the panel or the stand.

ProLite XU2792QSU

The monitor is designed to be compatible only with the landscape mode.

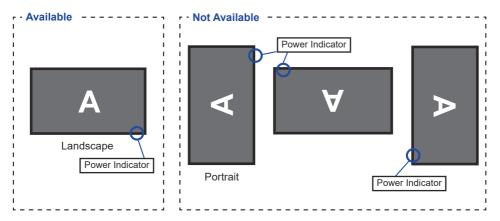


FITTING AND REMOVAL OF STAND : ProLite XUB2792QSU

CAUTION


- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Install the Stand-Neck to the monitor and then tighten the 'thumb screw' with the provided screwdriver to secure them.

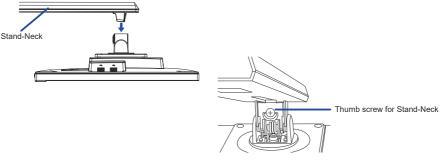

③ Install the Stand-Base to the Stand-Neck and then tighten the 'thumb screw' to secure them.

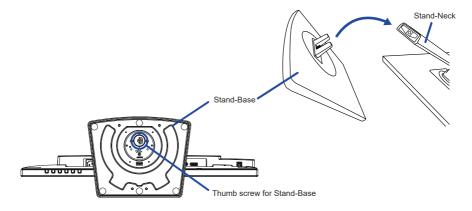

<Removal>

- Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- (2) Loosen the 'thumb screw' to remove the Stand-Base from the Stand-Neck.
- ③ Loosen the 'thumb screw' with the provided screwdriver to remove the Stand-Neck from the monitor.

 
FITTING AND REMOVAL OF STAND : ProLite XU2792QSU


CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>


- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Hold the monitor and install the Stand-Neck to the monitor. Secure it with the screw provided.
- ③ Install the Stand-Base to the Stand-Neck.
- ④ Tighten the 'thumb screw' to secure the Stand-Base to the monitor.
- 5 Place the Cable Holder.




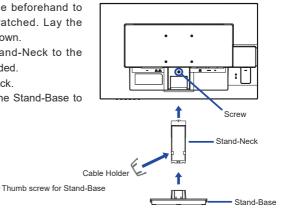


<Removal>

  
- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Loosen the 'thumb screw' to remove the Stand-Base from the monitor.
- ③ Loosen the screw to remove the Stand-Neck.
- ④ Pull the hook of the Cable Holder outside and remove it.





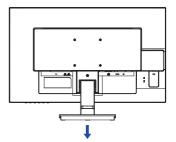

CONTROLS AND CONNECTORS : ProLite XUB2792QSU

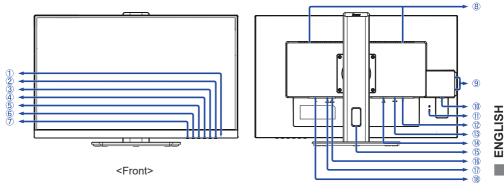

<Back>

① Power Indicator

 NOTE
 Blue:
 Normal operation


 Orange:
 Standby mode

- ② Power Switch (也)
- ③ Menu / Select Button (ENTER)
- ④ Up / Volume Button (► / </br>
- ⑤ Down / ECO Mode Button (◀ / Ø)
- 6 Exit Button (EXIT)
- ⑦ Input Select Button (INPUT)
- ⑧ Speakers
- ⑨ USB Downstream Connectors (⊶♣ 5V, 900mA)
- 1 USB Upstream Connector (
- 1 Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

- 12 DisplayPort Connector (DP)
- 13 HDMI Connector (HDMI)
- (14) DVI-D Connector (DVI-D)
- (15) Cable Hole
- 16 Headphone Connector (LINE OUT)
- 1 Audio Connector (LINE IN)
- (18) AC Connector (\sim : Alternating current)

CONTROLS AND CONNECTORS : ProLite XU2792QSU

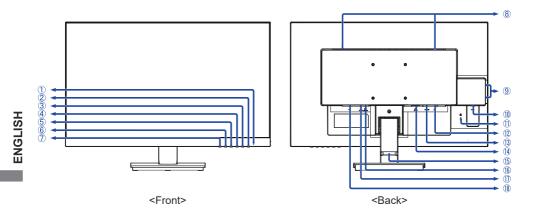

- Power Indicator
 NOTE Blue: Normal operation
 Orange: Standby mode
- ② Power Switch ())
- ③ Menu / Select Button (ENTER)
- ④ Up / Volume Button (► / 📢)
- ⑤ Down / ECO Mode Button (◀ / Ø)
- 6 Exit Button (EXIT)
- Input Select Button (INPUT)
- ⑧ Speakers
- ⑨ USB Downstream Connectors (⊶⇔ 5V, 900mA)
- 1 USB Upstream Connector (
- (1) Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.


- 1 DisplayPort Connector (DP)
- 1 HDMI Connector (HDMI)
- (1) DVI-D Connector (DVI-D)
- (15) Cable Holder
- 16 Headphone Connector (LINE OUT)
- 1 Audio Connector (LINE IN)
- (18) AC Connector (\sim : Alternating current)

CONNECTING YOUR MONITOR : ProLite XUB2792QSU

- 1 Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the monitor to the audio equipment with the audio cable for computer when using the audio features.
- ④ Connect the computer to the monitor with the USB Cable.
- (5) Connect the Power Cable to the monitor first and then to the power source.
- 6 Turn on your monitor and computer.

NOTE Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).


- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- Make sure you tighten the finger screws at each end of the signal cable.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

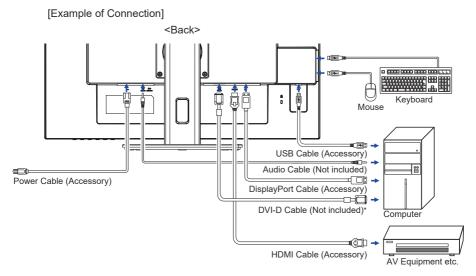

* DVI dual-link cable is not supplied with the monitor. If you use low quality DVI dual-link cable, it may cause a result of electro-magnetic interference. Please contact the iiyama Support Centre in your country if you wish to connect the monitor via the DVI input.

[Collect Cables]

 
Put the cables through the Cable Hole to bundle them.



CONNECTING YOUR MONITOR : ProLite XU2792QSU

- 1 Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the monitor to the audio equipment with the audio cable for computer when using the audio features.
- ④ Connect the computer to the monitor with the USB Cable.
- (5) Connect the Power Cable to the monitor first and then to the power source.
- 6 Turn on your monitor and computer.
- NOTE Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
 - The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
 - Make sure you tighten the finger screws at each end of the signal cable.
 - The Class I pluggable equipment Type A must be connected to protective earth.
 - The socket-outlet shall be installed near the equipment and shall be easily accessible.
 - Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.


[Example of Connection]

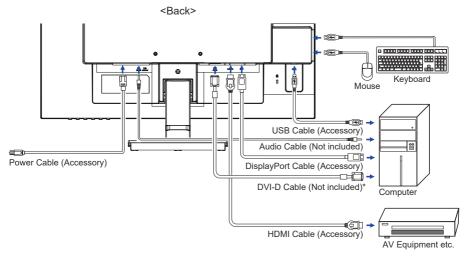

* DVI dual-link cable is not supplied with the monitor. If you use low quality DVI dual-link cable, it may cause a result of electro-magnetic interference. Please contact the iiyama Support Centre in your country if you wish to connect the monitor via the DVI input.

[Collect Cables]

 Put the cables through the Cable Holder to bundle them.



DISCONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off.
- ② Disconnect the power source first and then the Power Cable from the monitor.
- 3 Disconnect the audio cable from the computer and the monitor.
- 4 Disconnect the USB cable from the computer and the monitor.
- (5) Disconnect the signal cable from the computer and the monitor.

 
COMPUTER SETTING


Signal Timing

Change to the desired signal timing listed on page 30: COMPLIANT TIMING.

ADJUSTING THE HEIGHT AND THE VIEWING ANGLE : ProLite XUB2792QSU

- For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 150mm, angle up to 45° right and left, 23° upward and 5° downward.
- NOTE Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the height or the angle.
 - Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.



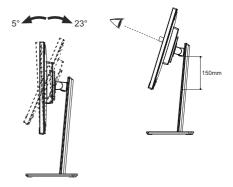




BEFORE YOU OPERATE THE MONITOR 13

ADJUSTING THE VIEWING ANGLE : ProLite XU2792QSU


- For optimal viewing it is recommended to look at the full face of the monitor.
- Hold the stand so that the monitor does not topple when you change the monitor's angle.
- You are able to adjust the monitor's angle up to 22° upward, 5° downward.
- In order to ensure a healthy and relaxed body position when using the monitor at visual display workstations, it is recommended that the adjusted tilt angle should not exceed 10 degrees. Adjust the monitor's angle to your own preference.
- NOTE
 - Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the angle.

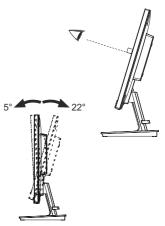

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 30. You are also able to adjust the picture by following the button operation shown below.

  Press the ENTER Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the ◀ / ▶ Buttons.



- ② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the ENTER Button. Then, use the ◀ / ▶ Buttons to highlight the desired adjustment icon.
- ③ Press the ENTER Button again. Use the ◀ / ► Buttons to make the appropriate adjustment or setting.
- ④ Press the EXIT Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for OSD vertical position, select "OSD" of Menu item and then press the ENTER Button. Then, select "OSD Vertical Position" by using the ◀ / ▶ Buttons. An adjustment page appears after you press the ENTER Button.

Then, use the \triangleleft / \blacktriangleright Buttons to change the OSD vertical position settings. The OSD vertical position should be changing accordingly while you are doing this.



Press the EXIT Button lastly and all changes are saved in the memory.

NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Time has passed. Also, press the EXIT button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- All adjustments have only one setting which applies to all signal timings.

ADJUSTMENT MENU CONTENTS

ÎÎVAMA ∰ PICTURE AO

٥

Picture Adjust *1

् स् च		NE LIGHT REDUCER OFF N CONTRAST ON OFF	
Adjustment Item	Problem	n / Option	Button to Press
Brightness * ^{2,3,4}	Too dark Too bright		
Contrast *3	Too dark Too bright Too dull Too intense		
	Off	Normal	
ECO * ³ Direct	Mode 1 Brightness of back-light is reduced.		k-light is reduced.
	Mode 2	Brightness of bac	k-light is reduced more than Mode1.
	Mode 3	k-light is reduced more than Mode2.	
	Off	off Typical	
Blue Light Reducer	Mode 1 Blue light is reduced.		ced.
Dide Light Reducer	Mode 2 Blue light is reduced more than Mode1.		
	Mode 3	Blue light is reduced more than Mode2.	
A du Contract *4	On Increased Contrast Ratio		ist Ratio
Adv. Contrast *4	Off Typical Contrast Ratio		
Overdrive	Off / 1 / 2 / 3 It will improve the gray level response time of the LCD panel. A higher level results in a faster response time.		

*¹ Picture Adjust is disabled when i-Style Color is activated.

*2 Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

*³ Brightness, Contrast and ECO adjustments are disabled when Adv. Contrast is activated.

*⁴ Brightness and Adv. Contrast adjustment are disabled when ECO is activated.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

 \bullet ECO : Press the ${\ensuremath{ /\!\! D}}$ Button when the Menu is not displayed.

Color Settings		Problem DBEPTOSOU TRANSDARE TRANS REAL REAL REAL REAL REAL REAL REAL REAL
Adjustment Item	Problei	m / Option Button to Press
	9300K	Cool color
Color Temperature *1	7500K	Normal color
	6500K	Warm color
	Red	Teo waak
User Preset *1	Green	Too weak I Too strong
	Blue	
	Off	Return to a state set by color adjustment except i-Style Color.
	Standard	For general windows environment and monitor default setting.
i-Style Color *2 Direct	Game	For PC game environment.
	Cinema	For movie and video environment.
	Scenery	For displaying outdoor scenery images
	Text	For text editing and viewing in a word processing environment.

*¹ Color Temperature and User Preset settings are disabled when i-Style Color or Blue Light Reducer is activated.

*² i-Style Color adjustment is disabled when Blue Light Reducer is activated.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• i-Style Color : Press the EXIT Button when the Menu is not displayed.

🕂 OSD iivama ProLite XUE ON SCREEN DISPLAY SETTINGS COLOR SETTINGS OSD HORIZONTAL POSITION Пh 050 VERTICAL PO ∎► 😵 LANGUAGE OSD ROTATE RECALL C OSD TIME ∢⊏ NPUT SELECT ¢} ≈∞

Adjustment Item	Problem / Option	Button to Press
OSD Horizontal Position	OSD is too left OSD is too right	d ↓
OSD Vertical Position	OSD is too low OSD is too high	
OSD Rotate *	Rotate the OSD. 0° (Normal) / +90° (Rotate right)	◆ ◆
OSD Time	You can set the OSD display duration time 5 and 30 seconds.	between

* Only available for **ProLite XUB2792QSU**.

Eanguage	Norma Image: Accurate Accurate Image: Accurate Accurate Image: Accurate	Profes XUESTROOM		
Adjustment Item		Opt	ion	
	English	English	Español	Spanish
	Français	French	Nederlands	Dutch
Language	Deutsch	German	Český	Czech
	Italiano	Italian	Русский	Russian
	Polski	Polish	日本語	Japanese

	PecLe XUESTOOR
Adjustment Item	Option
Recall	Factory-preset data is restored.

Biscellaneous	If yearna wtcluxetcut If the Autor wtcluxetcut If the Autor If the Autor If the Autor <	24.00.007	
Adjustment Item	Problem /	Option	Button to Press
Sharp and Soft	 1 2 3 4 5 6 You can change the picture quality from 1 to 6 (sharp to soft). Press the ▶ Button to change the picture quality in numerical order. Press the ◀ Button to change the picture quality in reverse numerical order. 		ture quality in to change the
Video Mode Adjust	Full	Full screen display	
	Aspect *1 Expansion display of Aspect		Aspect
Opening Logo	On	iiyama Logo is display turned on.	ed when the monitor is
	Off	iiyama Logo is not dis is turned on.	played when the monitor
FreeSync *2	On	Enable the FreeSync	function.
	Off	FreeSync function is t	urned Off.
	Auto	Automatically select c	olor scale signal.
RGB Range	Full	For full-range color scale signal	
	Limited	For limited color scale	signal
Display Information	Displays information regarding the current input signal comir from the graphics card in your computer. NOTE See your graphics card user guide for more information about changing the resolution and refresh.		ter. guide for more information

*¹ Option is unavailable with 16:9 resolution.
 *² Only HDMI/DisplayPort input.

ENGLISH

Input Select	If years a sort If returns a sort If returns a sort If a construction If a construction	₩YT SUBCE 	Paulus XUE775000 MARINE MARINE MARINE MARINE
Adjustment Item	Option		
	Auto Search for an available input source and select automatically.		
Input Source	Manual	DVI	Select the Digital (DVI) input.
		HDMI	Select the Digital (HDMI) input.
		DisplayPort	Select the Digital (DisplayPort) input.
NOTE If "Auto" is selected, only one source available is selected automatically. Signal switching is not possible if the computer to which the signal you want to select is connected is in standby mode. Input source is fixed and it will not be detected automatically when you select DVI, HDMI or DisplayPort manually.			

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• Input Select : Press the INPUT Button when the Menu is not displayed.

Audio Settings iivama PICTURE ADJUS VOLUME COLOR SETTINGS \$ r1 🛨 oso 🚱 LANGUAG LINE-IN ALDIO SETTINGS Adjustment Item Problem / Option Button to Press Too soft Volume Direct Too loud On Turn off the sound temporarily. Mute Audio Off Return the sound volume to the previous level. NOTE Press the ℂ (►) Button to display the volume adjustment bar and switch On and Off the Mute function by pressing the \triangleleft / \triangleright Buttons. HDMI Select the HDMI input. DP Audio Input * Select the DisplayPort input. Line-In Select the Line-In input.

* Suitable for HDMI/DisplayPort input only.

Direct

You can skip the Menu items and directly display an adjustment scale by using the following button operations.

• Volume : Press the C Button when the Menu is not displayed.

ENGLISH

Lock Mode

<OSD Menu>

The OSD can be locked to avoid an accidental setting change.

- 1. Make sure the monitor is turned ON.
- The OSD lock will be activated by pressing the front ENTER Button for about 10 seconds. If you try to access the OSD by pressing any of the buttons, a message "OSD Locked" will appear on the screen.
- 3. The OSD lock will be deactivated by pressing the front ENTER Button again for about 10 seconds.

<Power Switch>

The Power Switch can be locked to avoid an accidental power operation.

- 1. Make sure the monitor is turned ON.
- The Power Switch lock will be activated by pressing the front ◀ Button for about 10 seconds. If you try to turn off the monitor by pressing the Power Switch, a message "Power Button Locked" will appear on the screen.
- 3. The Power Switch lock will be deactivated by pressing the front ◀ Button again for about 10 seconds.


STANDBY FEATURE

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

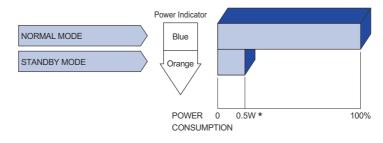

* When the USB devices are not connected.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem	Check
 The picture does not appear. 	
(Power indicator does not light up.)	 □ The Power Cable is firmly seated in the socket. □ The Power Switch is turned ON. □ The AC socket is live. Please check with another piece of equipment.
(Power indicator is blue.)	 If the blank screen saver is in active mode, touch the keyboard or the mouse. Increase the Contrast and/or Brightness. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
(Power indicator is orange.)	 □ If the monitor is in standby mode, touch the keyboard or the mouse. □ The computer is ON. □ The Signal Cable is properly connected. □ The signal timing of the computer is within the specification of the monitor.
② The screen is not synchronized.	□ The Signal Cable is properly connected. □ The signal timing of the computer is within the specification of the monitor.
③ The screen position is not in the center.	☐ The signal timing of the computer is within the specification of the monitor.
④ The screen is too bright or too dark.	The video output level of the computer is within the specification of the monitor.

Problem	Check
⑤ The screen is shaking.	 □ The power voltage is within the specification of the monitor. □ The signal timing of the computer is within the specification of the monitor.
6 No sound.	 The audio equipment (computer etc.) is ON. The audio cable is properly connected. The Volume is turned up. The Mute is OFF. The audio output level of the audio equipment is within the specification of the monitor.
⑦ The sound is too loud or too quiet.	□ The audio output level of the audio equipment is within the specification of the monitor.
⑧ A strange noise is heard.	□ The audio cable is properly connected.

....

. .

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor. Please visit our web site: https://iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite XUB2792QSU

Size Cate	egory	27"		
	Panel technology	IPS (In-Plane-Switching)		
Size Pixel pitch		Diagonal: 27" (68.5cm)		
		0.233mm H × 0.233mm V		
LCD Panel	Brightness	350cd/m ² (Typical), 255cd/m ² (Default / Energy Saving)		
Paner	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available		
	Viewable angle	Right / Left: 89 degrees each, Up / Down: 89 degrees each (Typical)		
	Response time	5ms (Gray to Gray)		
Display 0	Colors	Approx. 16.7 Million		
Sync Fre	quency	DVI: Horizontal: 30.0-89.0kHz, Vertical: 55-75Hz HDMI(FreeSync: Off): Horizontal: 30.0-120.0kHz, Vertical: 55-75Hz HDMI(FreeSync: On): Horizontal: 30.0-120.0kHz, Vertical: 48-75Hz DisplayPort(FreeSync: Off): Horizontal: 30.0-120.0kHz, Vertical: 48-75Hz DisplayPort(FreeSync: On): Horizontal: 120.0kHz, Vertical: 48-75Hz		
Native R	esolution	2560 × 1440, 3.7 MegaPixels		
Support max. resolution		DVI: 2560 × 1440 60Hz HDMI(FreeSync: Off): 2560 × 1440 75Hz HDMI(FreeSync: On): 2560 × 1440 75Hz DisplayPort(FreeSync: Off): 2560 × 1440 75Hz DisplayPort(FreeSync: On): 2560 × 1440 75Hz		
Input Co	nnector	DVI-D, HDMI, DisplayPort		
Input Video Signal		DVI (Digital Visual Interface Standard Rev.1.0) compliance HDMI, DisplayPort		
USB Standard		USB3.0 (DC5V, 900mA)		
Number of USB Ports Connector shape		1 Upstream : Series B 2 Downstream : Series A		
Input Aud	dio Connector	ø 3.5mm mini jack (Stereo)		
Input Aud	dio Signal	1.0Vrms maximum		
Headpho	ne Connector	ø 3.5mm mini jack (Stereo)		
Speakers	6	2W × 2 (Stereo speakers)		
Maximun	n Screen Size	596.7mm W × 335.7mm H / 23.5" W × 13.2" H		
Power So	ource	100-240VAC, 50/60Hz, 1.5A		
Power Consumption*		21W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum		
Dimensions / Net Weight		613.5 × 394.5 - 544.5 × 209.5mm / 24.2 × 15.5 - 21.4 × 8.2" (W×H×D) 6.8kg / 15.0lbs		
Angle	Angle Tilt: Upward: 23 degrees Downward: 5 degrees Swivel: Left/Right: 45 degrees each Rotation: Clockwise: 90 degrees			
Environm Consider		Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 80% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 10 to 90% (No condensation)		
Approval	S	TCO Certified, CE, UKCA, TÜV-GS, EAC		

ENGLISH

APPENDIX 27




NOTE * When the USB devices are not connected.

SPECIFICATIONS : ProLite XU2792QSU

Size Category		27"		
LCD Panel	Panel technology	IPS (In-Plane-Switching)		
	Size	Diagonal: 27" (68.5cm)		
	Pixel pitch	0.233mm H × 0.233mm V		
	Brightness	350cd/m ² (Typical), 255cd/m ² (Default / Energy Saving)		
	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available		
	Viewable angle	Right / Left: 89 degrees each, Up / Down: 89 degrees each (Typical)		
	Response time	5ms (Gray to Gray)		
Display Colors		Approx. 16.7 Million		
Sync Frequency		DVI: Horizontal: 30.0-89.0kHz, Vertical: 55-75Hz HDMI(FreeSync: Off): Horizontal: 30.0-120.0kHz, Vertical: 55-76Hz HDMI(FreeSync: On): Horizontal: 30.0-120.0kHz, Vertical: 48-75Hz DisplayPort(FreeSync: Off): Horizontal: 30.0-120.0kHz, Vertical: 48-75Hz DisplayPort(FreeSync: On): Horizontal: 120.0kHz, Vertical: 48-75Hz		
Native Resolution		2560 × 1440, 3.7 MegaPixels		
Support max. resolution		DVI: 2560 × 1440 60Hz HDMI(FreeSync: Off): 2560 × 1440 75Hz HDMI(FreeSync: On): 2560 × 1440 75Hz DisplayPort(FreeSync: Off): 2560 × 1440 75Hz DisplayPort(FreeSync: On): 2560 × 1440 75Hz		
Input Connector		DVI-D, HDMI, DisplayPort		
Input Video Signal		DVI (Digital Visual Interface Standard Rev.1.0) compliance HDMI, DisplayPort		
USB Standard		USB3.0 (DC5V, 900mA)		
Number of USB Ports Connector shape		1 Upstream : Series B 2 Downstream : Series A		
Input Audio Connector		ø 3.5mm mini jack (Stereo)		
Input Audio Signal		1.0Vrms maximum		
Headphone Connector		ø 3.5mm mini jack (Stereo)		
Speakers		2W × 2 (Stereo speakers)		
Maximum Screen Size		596.7mm W × 335.7mm H / 23.5" W × 13.2" H		
Power Source		100-240VAC, 50/60Hz, 1.5A		
Power Consumption*		21W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum		
Dimensions / Net Weight		613.5 × 441.0 × 197.0mm / 24.2 × 17.4 × 7.8" (W×H×D) 5.2kg / 11.5lbs		
Tilt Angle		Upward: 22 degrees Downward: 5 degrees		
Environmental Considerations		Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 80% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 10 to 90% (No condensation)		
Approval	S	TCO Certified, CE, UKCA, TÜV-GS, EAC		

NOTE * When the USB devices are not connected.


DIMENSIONS : ProLite XUB2792QSU

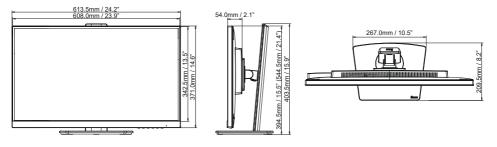


(): Maximum adjustment range



 DIMENSIONS : ProLite XU2792QSU

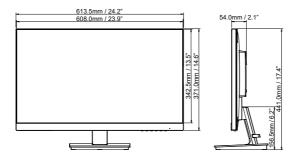



COMPLIANT TIMING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock
640 × 480	31.469kHz	59.940Hz	25.175MHz
900 × 600	37.879kHz	60.317Hz	40.000MHz
800 × 600	46.875kHz	75.000Hz	49.500MHz
1024 × 768	48.363kHz	60.004Hz	65.000MHz
1024 * 700	60.023kHz	75.029Hz	78.750MHz
1280 × 1024	63.981kHz	60.020Hz	108.000MHz
1200 * 1024	79.976kHz	75.025Hz	135.000MHz
1600 × 1200	75.000kHz	60.000Hz	162.000MHz
1680 × 1050	65.290kHz	60.000Hz	146.250MHz
1000 × 1000	82.306kHz	75.000Hz	187.000MHz
1920 × 1080	66.590kHz	59.930Hz	138.500MHz
2560 × 1440	88.787kHz	59.951Hz	241.500MHz
2000 × 1440	111.788kHz	74.925Hz	295.121MHz





NOTE *¹ DVI : Use the DVI-D dual-link signal cable.

*² HDMI/DisplayPort input only.