

OWNER'S MANUAL LED LCD MONITOR (LED Monitor*)

* LG LED Monitor applies LCD screen with LED backlights.

This product is a computer monitor and not for television purpose.

Please read this manual carefully before operating your set and retain it for future reference.

22MP400	22MP41W	22MP410P
24MP400	27MP40W	22MP400P
27MP400	27MP41D	24MP400P
24MP40B	24MP40A	27MP400P
24MP44B	27MP40A	
22MP410	22BP410	

www.lg.com

TABLE OF CONTENTS

LICENSE	2
ASSEMBLING AND PREPARING	3
USING THE MONITOR	8
USER SETTINGS	9
TROUBLESHOOTING	18
PRODUCT SPECIFICATION	10

LICENSE

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

ASSEMBLING AND PREPARING

! CAUTION

- Always use genuine LG components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of unauthorized components.
- It is recommended that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.
- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this
 way will not be covered by the product warranty.
- Do not carry the monitor upside down by just holding the base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen
 may cause damage to it.

NOTE


- The components may look different from those illustrated here.
- Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or an online shopping site, or contact the retailer from which you purchased the product.
- The power cord provided may differ depending upon the region.

Supported Drivers and Software

You can download and install the latest version from the LGE website (www.lq.com).

Drivers and Software	Installation Priority
Monitor Driver	Recommended
OnScreen Control	Recommended


Product and Button Description

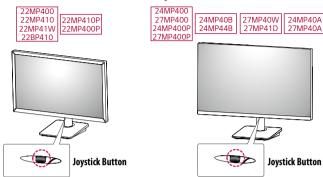

How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right/up/down with your finger.

 Basic Functions






• The joystick button is located at the bottom of the monitor.

Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation, regardless of its shape or size.

 
- Place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all other cables.
- Hold the bottom and side of the monitor frame firmly. Do not hold the panel itself.
- When holding the monitor, the screen should face away from you to prevent it from being scratched.
- When transporting the monitor, do not expose the monitor to shock or excessive vibration.
- When moving the monitor, keep it upright and never turn the monitor on its side or tilt it sideways.





! CAUTION

 
- Avoid touching the monitor screen as much as possible.
 - This may result in damage to the screen or some of the pixels used to create images.



If you use the monitor panel without the stand base, its joystick button may cause the monitor to become
unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick
button to malfunction

Installing on a Table

 Lift the monitor and place it on the table in an upright position. Place the monitor at least 100 mm away from the wall to ensure sufficient ventilation.

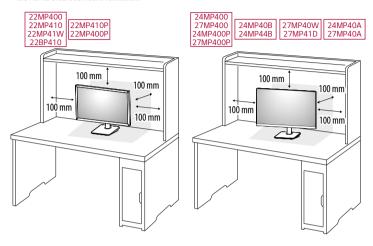




- Unplug the power cord before moving or installing the monitor. There is risk of electric shock.
- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

Adjusting the Angle

- 1 Place the monitor mounted on the stand base in an upright position.
- Adjust the angle of the screen.

 The angle of the screen can be adjusted forward or backward from -5° to 15° for a comfortable viewing experience.



A WARNING

- To avoid injury to the fingers when adjusting the screen, do not hold the lower part of the monitor's frame as illustrated below.
- Be careful not to touch or press the screen area when adjusting the angle of the monitor.






Using the Kensington Lock

The Kensington security system connector is located at the back of the Monitor set.

For more information on installation and usage, refer to the Kensington lock owner's manual or visit the website at http://www.kensington.com.

Connect the monitor to a table using the Kensington security system cable.

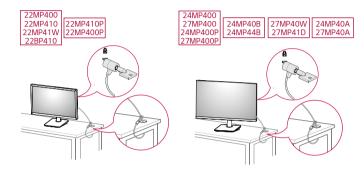



• The Kensington security system is optional. You can obtain optional accessories from most electronics stores.

Installing the Wall Mount Plate


This monitor meets the specifications for the wall mount plate or other compatible devices.

NOTE

- The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation guide.
- Be careful not to apply too much force while mounting the wall mount plate as it may cause damage to the screen.
- Remove the stand before installing the monitor on a wall mount by performing the stand attachment in reverse.

Installing on the Wall

Install the monitor at least 100 mm away from the wall and leave about 100 mm of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Alternatively, please refer to the manual for how to install and set up a tilting wall mounting bracket.

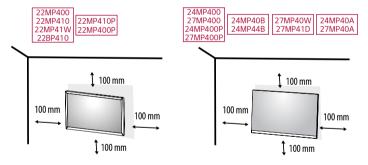

To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor. Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.


Wall Mount (mm)	75 x 75
Standard screw	M4 x L10
Number of screws	4
Wall Mount Plate (Optional)	LSW 149

NOTE

- A non-VESA standard screw may damage the product and cause the monitor to fall. LG Electronics is not liable for any accidents relating to the use of non-standard screws.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. You can obtain optional accessories from your local dealer.
- The length of the screw may differ for each wall mounting bracket. If you use screws longer than the standard length, it may damage the inside of the product.
- For more information, please refer to the user manual for the wall mounting bracket.

! CAUTION

- Unplug the power cord before moving or installing the monitor to avoid electric shock.
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead
 to injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this
 way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to VESA standards. Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.
- When measured from the back of the monitor, the length of each installed screw must be 8 mm or less.

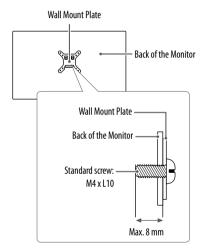

USING THE MONITOR

• Illustrations in this manual may differ from the actual product.



- Do not press the screen for a prolonged time. This may cause image distortion.
- Do not display a still image on the screen for a prolonged time. This may cause image retention. Use a PC screensaver if possible.
- When connecting the power cord to the outlet, use a grounded (3-hole) power strip or a grounded power outlet
- The monitor may flicker when turned on in an area where the temperature is low. This is normal.
- Sometimes red, green, or blue spots may appear on the screen. This is normal.

Connecting to a PC

- This monitor supports the *Plug and Play feature.
- * Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

D-SUB connection

Transmits analog video from your PC to the Monitor set.



- When using a D-Sub signal input cable connector for Macintosh
- Mac adapter

For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-SUB VGA connector on the supplied cable to a 15 pin 2 row connector.

HDMI Connection

Transmits digital video and audio signals from your PC to the monitor.

!\ CAUTION

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- · Recommended HDMI cable types
- High-Speed HDMI°/™ cable
- High-Speed HDMI°/™ cable with Ethernet

۶

USER SETTINGS



• Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.


Activating the Main Menu




- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down and left/right to set the options.
- 3 Press the joystick button once more to exit the main menu.

Button	Menu Status		Description
	Main me	nu disabled	Enables the main menu.
	Main menu enabled		Exits the main menu. (Holding down the button more than 3 seconds to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.)
	■	■ Main menu enabled Enters the Input features.	
	► Main menu enabled Enters the Settings feature.		Enters the Settings feature.
<u> </u>	Main menu disabled Displays the information on the current input.		Displays the information on the current input.
		Main menu enabled	Turns off the monitor.
	V		Displays the information on the current input.
V			Enters the Picture Mode feature. (for HDMI only)

Main Menu Features

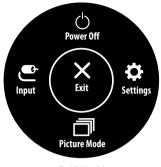

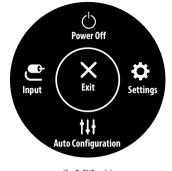

(for HDMI only)

(for D-SUB only)

Main Menu	Description	
Input	Sets input mode.	
Power Off	Turns off the monitor.	
Settings	Configures the screen settings.	
Picture Mode	Sets the picture mode.	
Exit	Exits the main menu.	
Auto Configuration	Operate the Auto configuration for optimal display in D-SUB.	

Menu Settings

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Settings**.
- 2 Move the joystick up/down and left/right to set the options.
- To return to the upper menu or set other menu items, move the joystick to ◀or pressing (倘) it.
- 4 If you want to exit the OSD menu, move the joystick to ◀until you exit.



Customizing settings

Quick Settings

Settings > Quick Settings	Description		
Brightness	N. J.		
Contrast	Adjusts the color contrast and brightness of the screen.		
Auto Confinuestion	No Cancel the select.		
Auto Configuration	Yes	Operate the Auto configuration for optimal display in D-SUB.	

Input

Settings > Input	Description		
Input List	Selects the input mode.		
	Adjusts the aspect ratio of the screen. Full Wide Displays the video in wide-screen, regardless of the video signal input. Original Displays video according to the aspect ratio of the video signal input. NOTE The options may disabled at the recommended resolution (1920 x 1080).		
Aspect Ratio			

Picture

Settings > Picture	Description		
	Custom	Allows the user to adjust each element. The color mode of the main menu can be adjusted.	
	Reader	Optimizes the screen for viewing documents. You can brighten the screen in the OSD menu.	
	Photo	Optimizes the screen to view photos.	
Picture Mode	Cinema	Optimizes the screen to improve the visual effects of a video.	
	Color Weakness	This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors.	
Game Optimizes the screen for gameplay.		Optimizes the screen for gameplay.	

NOTE

- If the **Picture Mode** is changed, the screen may flicker or the resolution of your PC screen may be affected.
- This is subsidiary for color weakness user. Therefore if you feel uncomfortable with the screen, please turn off this function.
- This function can't distinguish some colors in some images.

Settings > Picture	Description		
	Brightness	Adjusts the brightness of the screen.	
	Contrast	Adjusts the contrast of the screen.	
	Sharpness	Adjusts the sharpness of the screen.	
	SUPER RESOLUTION+	High	Optimized picture quality is displayed when a user wants crystal clear images. It is effective for high quality video or game.
		Middle	The optimized picture quality is displayed when a user wants images between low and high modes for comfortable viewing. It is effective for UCC or SD video.
		Low	The optimized picture quality is displayed when a user wants smooth and natural images. It is effective for slow-moving pictures or still images.
Picture Adjust		Off	Select this option for everyday viewing. SUPER RESOLUTION+ is turned off in this mode.
		NOTE	
		Because this is a function to increase the sharpness of low resolution pictures, it is not recommended to use the function for normal text or for desktop icons. Doing so may result in unnecessarily high sharpness.	
		Sets the offset level (for HDMl only). • Offset: as a reference for a video signal, this is the darkest color the monitor can display.	
	Black Level	High	Keeps the current contrast ratio of the screen.
		Low	Lowers the black levels and raises the white levels from the current contrast ratio of the screen.
	DEC.	On	Adjusts the brightness automatically according to the screen.
	DFC	Off	Disables the DFC feature.

	Response Time	Sets a response time for displayed pictures based on the speed of the screen. For a normal environment, it is recommended that you use Fast . For a fast-moving picture, it is recommended that you use Faster . Once Faster Mode is selected, Motion Blur may occur depending on the content.		
		Faster	Sets the response time to faster .	
		Fast	Sets the response time to fast .	
		Normal	Sets the response time to normal .	
		Off	Does not use the response time improvement feature.	
Game Adjust	FreeSync (Except 22BP410)	Provides seamless and natural images by synchronizing the vertical frequency of the input signal with that of the output signal. CAUTION Supported Interface: HDMI Supported Graphic Card: A graphic card that supports AMD's FreeSync is necessary. Supported Version: Make sure to update the graphic card to the latest driver. For more information and requirement, refer to AMD website at http://www.amd.com/FreeSync.		
		On	FreeSync function on.	
		Off	FreeSync function off.	
	Black Stabilizer	You can control the black contrast to have better visibility in dark scenes. Increasing the Black Stabilizer value brightens the low gray level area on the screen. (You can easily distinguish objects on dark game screens.) Reducing the Black Stabilizer value darkens the low gray level area and increases the dynamic contrast on the screen.		
	Crosshair	Crosshair provides a mark on the center of the screen for First Person Shooter (FPS) games. Users can select the Crosshair that fits their gam environment among four different Crosshairs.		

Color Adjust	Gamma	Mode 1, Mode 2, Mode 3	The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.	
		Mode 4	If you do not need to adjust the gamma settings, select Mode 4.	
	Color Temp	Selects the factory default picture color. Custom: The user can adjust it to red, green or blue by customization. Warm: Sets the screen color to a reddish tone. Medium: Sets the screen color between a red and blue tone. Cool: Sets the screen color to a bluish tone.		
	Red			
	Green	You can customize the pictur	e color using Red, Green, and Blue colors.	
	Blue			
	Horizontal	To move image left and right.		
Configuration Adjust	Vertical	To move image up and down.		
(D-SUB only)	Clock	To minimize any vertical bars	or stripes visible on the screen background.The horizontal screen size will also change.	
	Phase	To adjust the focus of the dis	play. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.	
	User can set the desired resolution. This option is enabled only when the screen resolution on your computer is set to the following (D-SUB only).			
Resolution	 NOTE The function is enabled only when the screen resolution on your computer is set to the following, except that the PC output wrong resolution. 			
(D-SUB only)	1024x768, 1280x768, 1360x768, 1366x768,0ff			
	1280x960, 1600x900,0ff			
	1440x900, 1600x900,0ff			
Picture Reset	Do you want to reset your	No	Cancel the select.	
r icture neset	settings?	Yes	Returns to the default settings.	

General

Settings > General	Description			
Language	To choose the language in which the control names are displayed.			
	High	Enables SMART ENERG	Y SAVING you can save energy with this energy- high efficient.	
SMART ENERGY SAVING	Low	Enables SMART ENERG	Y SAVING you can save energy with this energy- low efficient.	
SMART ENERGY SAVING	Off Disables SMART ENERGY SAVING .			
	* SMART ENERGY SAVING : Conserve energy by using luminance compensation algorithm.			
Automatic Standby	Feature that automatically turns off the monitor when there is no movement on the screen for a period of time. You can set a timer for the auto-off function. (8H, 6H, 4H and Off)			
	Prevents incorrect key input.			
	0n	Key input is disabled.		
OSD Lock	₽ NOTE			
	All features are disabled except Brightness, Contrast in Quick Settings, Input, OSD Lock and Information in General.			
	Off	Key input is enabled.		
Information	The display information will be shown the Model, Total Power On Time, Serial Number, Resolution.			
Donat	Do you want to reset your	No	Cancel the select.	
Reset	settings?	Yes	Returns to the default settings.	



- $\bullet\,$ The value of energy saving data may differ depending on panel and panel suppliers.
- If you select the option of **SMART ENERGY SAVING** is **High** or **Low**, monitor luminance become lower or higher depend on source.

TROUBLESHOOTING

Check the following before calling for service.

No image appears		
Is the power cord of the display connected?	Check and see if the power cord is connected properly to the power outlet.	
Do you see an "Out of Range" message on the screen?	This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.	
Do you see a "NO SIGNAL" message on the screen?	After the monitor is on "NO SIGNAL", the monitor goes to DPM mode.	
	• This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it.	
Can 't you control some functions in OSD?		
Can't you select some menu in OSD?	You can unlock the OSD controls at any time by entering the OSD lock menu and changing items to off.	

! CAUTION

- Check Control Panel ► Display ► Settings and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
- If the recommended resolution (optimal resolution) is not selected, letters may be blurred and the screen may be dimmed, truncated or biased. Make sure to select the recommend resolution.
- The setting method can differ by computer and 0/S (Operation System), and resolution mentioned above may not be supported by the video card performance. In this case, please ask to the computer or the video card manufacturer.

Display image is incorrect			
The screen color is mono or abnormal.	Check if the signal cable is properly connected and use a screwdriver to fasten if necessary.		
	Make sure the video card is properly inserted in the slot.		
	• Set the color setting higher than 24 bits (true color) at Control Panel ► Settings .		
The screen blinks.	Check if the screen is set to interlace mode and if yes, change it to the recommend resolution.		
Do you see an "Unrecognized monitor, Plug&Play (Vi	SA DDC) monitor found" message?		
Have you installed the display driver?	Be sure to install the display driver from our web site: http://www.lg.com.		
	Make sure to check if the video card supports Plug&Play function.		
The screen is flickering.			
Did you select the recommended resolution?	• If the selected resolution is HDMI 1080i 60/50 Hz, the screen may be flickering. Change the resolution to the recommended resolution 1080P.		

22MP400 22MP400P

Color Depth	8-bit color is supported.			
Resolution	Max Resolution	1920 x 1080 @ 75 Hz (HDMI) 1920 x 1080 @ 60 Hz (D-Sub)		
	Recommended Resolution	1920 x 1080 @ 60 Hz		
	Power Rating	19 V 1.3 A		
Power Sources	Power Consumption	On mode: 18 W Typ. (Typical)* Sleep Mode (Standby Mode) \leq 0.3 W** Off Mode \leq 0.3 W		
AC/DC adaptor	Output: 19 V = 1.3 A			
	Operating Conditions	Temperature	0 °C to 40 °C	
Environmental Conditions		Humidity	Less than 80 %	
Environmental Conditions	Storing Conditions	Temperature	-20 °C to 60 °C	
		Humidity	Less than 85 %	
	Monitor Size (Width x Height x Depth)			
Dimensions	With Stand	509.6 x 393.2 x 190.0 (mm)		
	Without Stand	509.6 x 304.6 x 58.0 (mm)		
Weight (Without Packaging)	With Stand	2.4 kg		
	Without Stand	2.1 kg		

The specifications are subject to change without notice.

The ~ symbol means alternating current, and the ==== symbol means direct current.

^{*} The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

^{**} The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

^{***} This monitor does not support sound output.

22MP410 22MP41W 22MP410P

Color Depth	8-bit color is supported.	8-bit color is supported.			
Resolution	Max Resolution	1920 x 1080 @ 75 Hz (HDMI) 1920 x 1080 @ 60 Hz (D-Sub)			
	Recommended Resolution	1920 x 1080 @ 60 Hz	1920 x 1080 @ 60 Hz		
	Power Rating	19 V 1.3 A			
Power Sources	Power Consumption	On mode: 19 W Typ. (Typical)* Sleep Mode (Standby Mode) \leq 0.3 W** Off Mode \leq 0.3 W	Sleep Mode (Standby Mode) ≤ 0.3 W**		
AC/DC adaptor	Output: 19 V = 1.3 A				
	Operating Conditions	Temperature	0 °C to 40 °C		
Environmental Conditions		Humidity	Less than 80 %		
Environmental Conditions	Storing Conditions	Temperature	-20 °C to 60 °C		
	Storing Conditions	Humidity	Less than 85 %		
	Monitor Size (Width x Height x Depth)				
Dimensions	With Stand	511.6 x 383.5 x 190.0 (mm)			
	Without Stand	511.6 x 295 x 40.2 (mm)	·		
Weight (Without Packaging)	With Stand	2.6 kg			
	Without Stand	2.2 kg	2.2 kg		

The specifications are subject to change without notice.

The \sim symbol means alternating current, and the == symbol means direct current.

st The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

^{**} The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

^{***} This monitor does not support sound output.

22BP410

Color Depth	8-bit color is supported.	_		
Resolution	Max Resolution	1920 x 1080 @ 75 Hz (HDMI) 1920 x 1080 @ 60 Hz (D-Sub)		
	Recommended Resolution	1920 x 1080 @ 60 Hz		
	Power Rating	19 V 1.3 A		
Power Sources	Power Consumption	On mode: 12.5 W Typ. (ENERGY STAR* standard)* Sleep Mode (Standby Mode) \leq 0.3 W** Off Mode \leq 0.3 W		
AC/DC adaptor	Output: 19 V = 1.3 A			
	Operating Conditions	Temperature	0 °C to 40 °C	
Environmental Conditions		Humidity	Less than 80 %	
Chvironmental Conditions	Storing Conditions	Temperature	-20 °C to 60 °C	
		Humidity	Less than 85 %	
	Monitor Size (Width x Height x Depth)			
Dimensions	With Stand	511.6 x 383.5 x 190.0 (mm)		
	Without Stand	511.6 x 295 x 40.2 (mm)		
Woight (Without Packaging)	With Stand	2.6 kg		
Weight (Without Packaging)	Without Stand	2.2 kg		

The specifications are subject to change without notice.

The ~ symbol means alternating current, and the ____ symbol means direct current.

^{*} The On mode power consumption is measured with ENERGY STAR* test standard.

^{**} The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

^{***} This monitor does not support sound output.

24MP400 | 24MP40B | 24MP44B | 24MP40A | 24MP400P

Color Depth	8-bit color is supported.	8-bit color is supported.			
Resolution	Max Resolution	1920 x 1080 @ 75 Hz (HDMI) 1920 x 1080 @ 60 Hz (D-Sub)			
	Recommended Resolution	1920 x 1080 @ 60 Hz	1920 x 1080 @ 60 Hz		
	Power Rating	19 V = 1.3 A			
Power Sources	Power Consumption	On mode: 19 W Typ. (Typical)* Sleep Mode (Standby Mode) \leq 0.3 W** Off Mode \leq 0.3 W			
AC/DC adaptor	Output: 19 V = 1.3 A				
	Operating Conditions	Temperature	0 °C to 40 °C		
Environmental Conditions		Humidity	Less than 80 %		
Environmental Conditions	Charina Candihiana	Temperature	-20 °C to 60 °C		
	Storing Conditions	Humidity	Less than 85 %		
	Monitor Size (Width x Height x Depth)				
Dimensions	With Stand	539.9 x 414.4 x 190.0 (mm)			
	Without Stand	539.9 x 321.4 x 56.2 (mm)			
Woight (Without Darkaging)	With Stand	2.6 kg			
Weight (Without Packaging)	Without Stand	2.3 kg			

The specifications are subject to change without notice.

The ~ symbol means alternating current, and the ____ symbol means direct current.

st The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

^{**} The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

^{***} This monitor does not support sound output.

27MP400 | 27MP40W | 27MP41D | 27MP40A | 27MP400P

Color Depth	8-bit color is supported.			
Resolution	Max Resolution	1920 x 1080 @ 75 Hz (HDMI) 1920 x 1080 @ 60 Hz (D-Sub)		
	Recommended Resolution	1920 x 1080 @ 60 Hz		
	Power Rating	19 V 1.3 A		
Power Sources	Fower Consumption On mode: 22W Typ. (Typical)* Sleep Mode (Standby Mode) $\leq 0.3 \text{W}^{**}$ Off Mode $\leq 0.3 \text{W}$			
AC/DC adaptor	Output: 19 V = 1.3 A			
	Operating Conditions	Temperature	0 °C to 40 °C	
Environmental Conditions		Humidity	Less than 80 %	
Environmental Conditions	Storing Conditions	Temperature	-20 °C to 60 °C	
		Humidity	Less than 85 %	
	Monitor Size (Width x Height x Depth)			
Dimensions	With Stand	612.0 x 454.9 x 190.0 (mm)		
	Without Stand	612.0 x 362.5 x 56.2 (mm)		
Weight (Without Packaging)	With Stand	3.4 kg		
	Without Stand	3.1 kg		

The specifications are subject to change without notice.

The \sim symbol means alternating current, and the === symbol means direct current.

^{*} The On mode power consumption is measured with LGE test standard (Full White pattern, Maximum resolution).

^{**} The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

^{***} This monitor does not support sound output.

Factory Support Mode (Preset Mode, PC)

D-SUB

Preset Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (H/V)	Remarks
720 x 400	31.468	70.08	-/+	
640 x 480	31.469	59.94	-/-	
640 x 480	37.5	75	-/-	
800 x 600	37.879	60.317	+/+	
800 x 600	46.875	75	+/+	
1024 x 768	48.363	60	-/-	
1024 x 768	60.023	75.029	+/+	
1152 x 864	67.500	75	+/+	
1280 x 1024	63.981	60.023	+/+	
1280 x 1024	79.976	75.035	+/+	
1680 x 1050	65.290	59.954	-/+	
1920 x 1080	67.500	60	+/+	Recommend Mode

HDMI

Preset Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (H/V)	Remarks
720 x 400	31.468	70.08	-/+	
640 x 480	31.469	59.94	-/-	
640 x 480	37.5	75	-/-	
800 x 600	37.879	60.317	+/+	
800 x 600	46.875	75	+/+	
1024 x 768	48.363	60	-/-	
1024 x 768	60.023	75.029	+/+	
1152 x 864	67.500	75	+/+	
1280 x 1024	63.981	60.023	+/+	
1280 x 1024	79.976	75.035	+/+	
1680 x 1050	65.290	59.954	-/+	
1920 x 1080	67.500	60	+/+	Recommend Mode
1920 x 1080	83.89	74.97	+/+	

HDMI Timing (Video)

Factory support mode (Preset Mode)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	НДМІ
480P	31.50	60	0
576P	31.25	50	0
720P	37.50	50	0
720P	45.00	60	0
1080P	56.25	50	0
10000	(7.50	(0	0
1080P	67.50	60	Recommend Mode



The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

Model	
Serial No.	

(for 22BP410 only)



This Product qualifies for ENERGY STAR®

Changing the factory default configuration and settings or enabling certain optional features and functionalities may increase energy consumption beyond the limits required for ENERGY STAR® certification.

Refer to ENERGYSTAR.gov for more information on the ENERGY STAR $^{\scriptsize @}$ program.