# Dell Display Manager User's Guide

#### Overview

Dell Display Manager is a Windows application used to manage a monitor or a group of monitors. It allows manual adjustment of the displayed image, assignment of automatic settings, energy management, image rotation and other features on select Dell models. Once installed, Dell Display Manager will run each time the system starts and will place its icon in the notification tray. Information about monitors connected to the system is always available when hovering over the notification tray icon.



**NOTE:** Dell Display Manager needs to use DDC/CI channel to communicate with your monitor. Please make sure DDC/CI is enabled in the menu as below.

Dell F2318H / F2318HN /	E2318HX / E2318HR	Energy Use	
Rightness / Contrast	DDC/CI	🖌 Enable	
🤣 Auto Adjust			
Input Source			
6 Color			
🖵 Display			
Frieigy			
🛅 Menu			
🚖 Personalize			
Hit Others			
C Resolution: 1280x1024_bt	JHz	Maximu	m: 1920x1088. 60Hz



# Using the Quick Settings Dialog

Clicking Dell Display Manager's notification tray icon opens the **Quick Settings** dialog box. When more than one supported Dell model is connected to the system, a specific target monitor can be selected using the menu provided. The **Quick Settings** dialog box allows convenient adjustment of the monitor's Brightness and Contrast levels, Preset Modes can be manually selected or set to Auto Mode, and the screen resolution can be changed.

Display:	Dell E2318H/HN/HX/HR	
Resolution:	1920×1080	Change
O Auto Mode		Configure
Manual Mode	Sta	ndard v
Brightness:		75%
Contrast:		75%

The **Quick Settings** dialog box also provides access to Dell Display Manager's advanced user interface which is used to adjust Basic functions, configure Auto Mode and access other features.

### **Setting Basic Display Functions**

A Preset Mode for the selected monitor can be manually applied using the menu on the **Basic** tab. Alternatively, Auto Mode can be enabled. Auto Mode causes your preferred Preset Mode to be applied automatically when specific applications are active. An onscreen message momentarily displays the current Preset Mode whenever it changes.

The selected monitor's Brightness and Contrast can also be directly adjusted from the **Basic** tab.

Display	Manager		Dell E2	; 318H0HN/HXHR
Basic	Auto Mode	Input Manager	Options	0
Resolution:	1920x 1080			Change
Auto Mode Use preset mod	le assignments for active ap	plations		Configure
O Manual Mode Choose a prese	t mode:		Standard	
Brightness:		75%		
Contrast:		75%		

### **Assigning Preset Modes to Applications**

The **Auto Mode** tab allows you to associate a specific Preset Mode with a specific application, and apply it automatically. When Auto Mode is enabled, Dell Display Manager will automatically switch to the corresponding Preset Mode whenever the associated application is activated. The Preset Mode assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to the next.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu or elsewhere, and drop it onto the current list.

**NOTE:** Preset Mode assignments targeting batch files, scripts, and loaders, as well as non-executable files such as zip archives or packed files, are not supported and will be ineffective.

Basc	Auto Mode	Input Manager	Optons	
ssign a preset mod	e to a specific application.	To add an application, drag	it to the list:	
Application		Preset Mode		^
(Default for d	esktop apps)	Standard	~	
(Default for fi	(Iscreen games)	Standard	~	
💽 (Default for u	niversal Windows apps)	Multimedia	~	
C Internet Expl	orer	Multimedia	~	
C Internet expe				

### **Managing Multiple Video Inputs**

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell monitor. It makes it very easy to switch between inputs while you work with multiple computers.

All video input ports available to your monitor are listed. You can give each input a name as you like. Please save your changes after editing.

You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.

Bars.	Auto Node	Input Hanaya	Optons
Input parts	Tops of mannes		
(every) ARV	Anti-		
DP	on 12		
			Same
avorite lopur shorto.	tkey:		4
CH + //F + 1	011 wen20	~	Change active logation
to the shortest	k		
rH + //r + ?	FGA wind	<u>v</u> :	>> J* wer(U)
Elisplay M	*GA withs		Dol 233 8-141
Display M	FGA wind	ign.f.Hanager	
Display M Detr Detr	KCA who lantauer Arra Note Arra Note		Dol 233 8-141
)	KIA who lantager Arto Note		Dol 233 8-141
Display M Detr Detr	KGA wind lantauter Arra Mode argutinante:		Dol 233 8-141
TH + AF + 7 Display M Two Dec Spot.cont: VL4	artager Arm Note Sipul nance Arta		Dol 233 8-141
Display M Display M Detr Detr	KGA wind Anna Mode Anna Mode Anna Anna Anna		Dol 233 %-NJ Rotons

You can use the dropdown list to switch to any input source.

lask	Auto Mode	Stout Manager	1	Options	
		arpes renega		opeons	
input port:	Input neme:				
VGA (Actrve)	win8				
eφ	Vinu0				
				-Brote	
Percente impact alter tra	itkey:				
Cbl + Alt + c	32 SE + win10.			Change active in	put.
input switch shortcut	koy:		×	VGA win8	
Ctrl + 4t + 2	>> NGA - weth	~ <	0	DP - win10	
	s. 1				
Display M					18-NoHa
Display M Basic	lanager Auto Modu	Input Manager		Dell E23 Optons	18-NoHA
)		Snput Manager			18-N-H
Bass	Auto Modu	änput Manager			18-N/HA
Basic Inputport	Auto Mode Input name:	ärput Manager			18-NAG
Buerc Inputport VBA (Active)	Auto Mode Diput nome: ven8	änput Manager			18-N/H
Busic Input port VB4 (Active) HDH1	Auto Mode Diput name: ven8 ven10	Sigurt Manager		Optons	1 8I-N./HZ
Buerc Inputport VBA (Active)	Auto Mode Diput nome: ven8	änput Manager		Optons	18-10
Buerc Inputport VBA (Active)	Auto Mode Diput name: ven8 ven10	Brput Manager		Optons	

**NOTE:** DDM communicates with your monitor even when the monitor is displaying video from another computer. You can install DDM on the PC you frequently use and control input switching from it. You may also install DDM on other PCs connected to the monitor.

## **Applying Energy Conservation Features**

On supported Dell models, the **Options** tab will be available to provide PowerNap energy conservation options. When the screensaver activates, the monitor's Brightness can automatically be set to minimum level or the monitor can be put to sleep in order to save additional power.


Display Manager		Dell E2	2319HJHN/HX	
Basic	Auto Mode	Input Manager	Options	
PowerNap optio	ris:			Configur
Reduce brig	htness when screensaver a	activates		
O Put the dep	lay to sleep when screensa	ever activates		

### Troubleshooting

If DDM cannot work with your monitor, DDM will show below icon in your notification tray.



Click on the icon, DDM shows a more detailed error message.

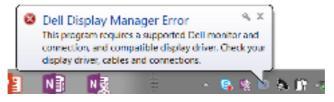

Please note that DDM only works with Dell branded monitors. If you are using monitors from other manufacturers, DDM doesn't support them.

If DDM is unable to detect and/or communicate with a supported Dell monitor, please take below actions to troubleshoot:

- **1.** Make sure the video cable is properly connected to your monitor and your PC, especially the connectors should be firmly inserted into position.
- 2. Check the monitor OSD to ensure DDC/CI is enabled.
- **3.** Make sure you have the correct and latest display driver from the graphics vendor (Intel, AMD, NVidia, etc.). Display driver is often the cause of DDM failure.
- **4.** Remove any docking stations or cable extenders or converters between the monitor and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/CI properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your system.

DDM may not work with below monitors:

- Dell monitor models earlier than year 2013 and D-series of Dell monitors. You can refer to Dell Product Support websites for more information
- Gaming monitors using Nvidia-based G-sync technology
- Virtual and wireless displays do not support DDC/CI
- Some early models of DP 1.2 monitors, it may be necessary to disable MST/DP 1.2 using the monitor OSD

If your PC is connected to the Internet, you will be prompted with a message when a newer version of DDM application is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon while pressing and holding 'shift' key.

