Dell SE2219H/SE2219HX

Dell Display Manager User's Guide



Monitor Model: SE2219H/SE2219HX Regulatory model: SE2219Hf NOTE : A NOTE indicates important information that helps you make better use of your product.

© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2018 - 09

Rev. A01

Contents

Overview	4
Using the Quick Settings Dialog	5
Setting Basic Display Functions	6
Assigning Preset Modes to Applications	7
Organizing Windows with Easy Arrange	8
Managing Multiple Video Inputs	10
Restoring Application Positions	12
Applying Energy Conservation Features	14
Troubleshooting	15

(DELL

Overview

Dell Display Manager is a Microsoft Windows application used to manage a monitor or a group of monitors. It enables manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on selected Dell monitors. After installation, Dell Display Manager runs each time the system starts and places its icon in the notification tray. Information about monitors connected to the system is available when hovering over the notification tray icon.



NOTE: Dell Display Manager uses DDC/CI channel to communicate with your monitor. Ensure that DDC/CI is enabled in the menu as below.



Using the Quick Settings Dialog

Click the Dell Display Manager's notification tray icon to open the **Quick Settings** dialog box. When more than one supported Dell model is connected to the computer, a specific target monitor can be selected using the menu. The **Quick Settings** dialog box enables convenient adjustment of the monitor's brightness and contrast levels. You can select **Manual Mode** or **Auto Mode**, and the screen resolution can be changed.

Display 1	x Manager
Display:	Dell SE2219H 👻
Resolution:	1920×1080 Charge
Auto Node	Configure
Manual Mode	Standard 👻
Brightnessi	
Contrasti	
×	
	Open Dell Display Manager

SE2219H/SE2219HX

The **Guick Settings** dialog box also provides access to Dell Display Manager's advanced user interface that is used to adjust basic functions, configure auto mode and access other features.



5

Setting Basic Display Functions

You can select **Manual Mode** that enables you to manually select a preset mode or select **Auto Mode** that applies a preset mode based on the active application. An on-screen message displays the current preset mode whenever it changes. The selected monitor's **Brightness** and **Contrast** can also be directly adjusted from the **Basic** tab.

Book.	As & Mode	bite Anange	and Parager	Concers.	
Testution	1520×10	80			Owner
Auto Mode Use preset		for active applications			Configure
Choose a p	seset mode:		20	nderd	•
Sightras:	31.7	0	79%		
		-	75%		

SE2219H/SE2219HX

NOTE: When multiple Dell monitors are connected, select "Enable display matrix control" to apply brightness, contrast and color presets controls to all monitors.

Book.	Auto Node Sosy Arrange	Input Planager	Opera	
Resolution:	1520×1080			Change
 Auto Mode Use preseto 	note assignments for active applications			Configure
Precipi Ned Choose a pr		25	nderd	•
Srightness:		28 ÷		
Contracts		79%		
W muchle desi	by matrix control			

| Setting Basic Display Functions

પ્ર

6

Assigning Preset Modes to Applications

The **Auto Mode** tab allows you to associate a specific **Preset Mode** with a specific application, and apply it automatically. When **Auto Mode** is enabled, Dell Display Manager automatically switches to the corresponding **Preset Mode** whenever the associated application is activated. The **Preset Mode** assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to another.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu or elsewhere, and drop it onto the current list.

NOTE: Preset Modeassignments for batch files scripts, loaders, and non-executable files such as zip archives or packed files, are not supported.

You can also configure the Game preset mode to be used whenever a Direct3D application runs in full-screen mode. To prevent an application from using mode, assign a different preset mode to it.

Basic asign a prese	Auto Node	Easy Arrange	Input Manager	Options to the lat:	
Application			et Node		
Dates	t for desires apps)	Sta	nderd		
Defeut	t for fulscreen Direct	00) Ga	ve		
C Soogle	Chrome	Vite	erro	*	
🖉 Interne	t Explorer	Cu	mote	5 7	
El Paint		Cor	nfortileu		



Organizing Windows with Easy Arrange

Easy Arrange helps you to effectively organize your application windows on the desktop. You first choose a pre-defined layout pattern which suits your work, then you just need to drag the application windows into the defined zones. Press ">" or use Page Up/Page Down key to find more layouts. To create a custom layout, arrange the open windows and then click **Save**.

R MA	As to Mode	Scop Arrange	Trans Processor	Cytors.	
		lear layout, for this me	nita. Opennindever	chapped into each power	the second
celtion and re	alse autometically:				
		_			
×		_			
		_	_		
_	Contraction of the	_		100000	

SE2219H/SE2219HX

For Windows 10, you can apply different window layouts for each of the virtual desktops.

If you often use Windows snap feature, select the "**Hold down the SHIFT key** to enable zone positioning". This gives Windows snap priority over **Easy Arrange**. You will then need to press the Shift key to use **Easy Arrange** positioning.



SE2219H/SE2219HX

If you are using multiple monitors in an array or matrix, **Easy Arrange** layout can be applied across to all the monitors as one desktop. Select "**Span multiple monitors**" to enable this feature. You need to align your monitors properly to use it effectively.



SE2219H/SE2219HX

DELI

Managing Multiple Video Inputs

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell monitor. It makes it easy to switch between inputs while you work with multiple computers.

All video input ports available to your monitor are listed. You can give each input a name as you like. Save your changes after editing.

You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.

Jarc	Auto Mode	Cary Amanga	incut Hanager	Options	
input pert:	Input	TATA:			
VSA	grains.	ta elit)			
HOM: (AURVA)	Olek	to edit!			
evante input de	orta.tkey:			Sne	
Vane	- 32	VSA	-	charge active opais	
rput avitch shor					
vone .	32.0	HEME:	+ <0>	VEA	



You can use the dropdown list to switch to any available input source.

Uncic	Auro Pode Letty Artiang	 Top d Nation 	Cpecre
trac tuar	Input neme:		
64 C	(Clocito edit)		
CHI Mohro	Side to ed ()		
			Sinc
solide legal shorts	of laye		
11 M 11	1- WGA	-	Dange only should be
put switch enorteut	tan:		
21 - 46 + 2	A1 (628)	18 COM	MAG


SE2219H/SE2219HX

NOTE: DDM communicates with your monitor even when the monitor is displaying video from another computer. You can install DDM on the computer you frequently use and control input switching from it. You may also install DDM on other computers connected to the monitor.


ઝ્ટા

Restoring Application Positions

DDM can help you restore application windows into their positions when you reconnect your computer to the monitor(s). You can quickly access this feature by right-clicking on DDM icon in the notification tray.

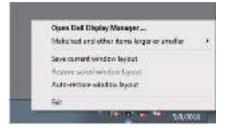

If you choose "**Auto-restore window layout**", your application windows' positions are tracked and remembered by DDM. DDM automatically puts the application windows into their original positions when you reconnect your PC to your monitor(s).

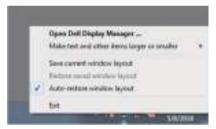

If you want to go back to a favorite layout after you have moved the application windows around, you can first "**Save current window layout**" and later "**Restore saved window layout**".



D64

You may use monitors with different models or resolutions in your daily routine, and you may apply different window layouts on them. DDM is able to know the monitor you have reconnected and restore application positions accordingly.


In case you need to replace a monitor in a monitor matrix configuration, you can save the window layout before replacement and restore the layout after a new monitor is installed.





Applying Energy Conservation Features


On supported Dell models, an **Options** tab is available that provides PowerNap energy conservation options. You can choose to set the monitor's brightness to the minimum level, or to put the monitor to sleep when the screensaver is activated.

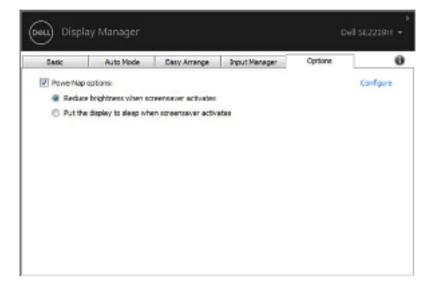



Troubleshooting

 If DDM does not work with your monitor, DDM will show below icon in your notification tray.



Click on the icon, DDM shows a more detailed error message.



Please note that DDM only works with Dell branded monitors. If you are using monitors from other manufacturers, DDM does not support them.

If DDM is unable to detect and/or communicate with a supported Dell monitor, please take below actions to troubleshoot:

- **1.** Make sure the video cable is properly connected between your monitor and your computer. Ensure the connectors are firmly inserted into position.
- 2. Check the monitor OSD to ensure DDC/CI is enabled.
- **3.** Make sure you have the right graphics card driver from the vendor (Intel, AMD, NVIDIA, etc.). Graphics driver is often the cause of DDM failure.
- **4.** Remove any docking stations, cable extenders, and converters between the monitor and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/CI properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your computer.

Dell

DDM may not work with below monitors:

- Dell monitor models that shipped earlier than 2013 and D-series of Dell
 monitors. For more information see www.dell.com/support/monitors.
- Gaming monitors using Nvidia-based G-sync technology
- · Virtual and wireless displays do not support DDC/CI
- Some early models of DP 1.2 monitors, it may be necessary to disable MST/DP 1.2 using the monitor OSD

If your computer is connected to the Internet, you will be prompted to upgrade to a new version of DDM when it is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon while pressing and holding 'shift' key.

	Open Dell Display Manager Make text and other items larger or smaller	,
	Refresh	
	Sage monitor asset report	
	Save giagnostic report	
	Save current window layout	
	Bertore saved window layout Auto-rentore window layout	
	Auto-load at startup	
÷	Ogscreen notifications	
	Check for new version	
	Ent	

