

# OWNER'S MANUAL LED LCD Monitor (LED Monitor\*)

\*LG LED Monitors are LCD Monitors with LED Backlighting.

Please read this manual carefully before operating your set and retain it for future reference.

#### LED LCD MONITOR MODEL

22MN430M 24ML44B

## **CONTENTS**

2

## LICENSE ----- 3

#### ASSEMBLING AND PREPARING - 4

- Supported Drivers and Software 4
- Component and Button Description 5
How to Use the Joystick Button
- Moving and Lifting the Monitor 6
Mounting on a table
Mounting on a wall

#### USING THE MONITOR SET----- 10

-	Connecting to a PC 10
	D-SUB connection
	HDMI connection
-	Connecting to AV Devices11
	HDMI connection
-	Connecting Peripherals11
	Connecting Headphones

#### CUSTOMIZING SETTINGS ----- 12

TROUBLESHOOTING	17
-----------------	----

### SPECIFICATIONS ------ 18

- Preset Modes	(Resolution)	) 20
----------------	--------------	------

## LICENSE

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

The following content is only applied to the monitor which is sold in Europe market and which needs to meet the ErP Directive:

\* This monitor is set to be turned off automatically in 4 hours after you turned on display if there is no adjustment to display.

\* To make this setting be disabled, change the option to 'Off' in OSD menu of "Automatic Standby".

## ASSEMBLING AND PREPARING

## 

- Always use genuine components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of counterfeit components.
- It is recommend that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.
- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Do not carry the monitor upside down by just holding the base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen
  may cause damage to it.
- For wave pattern on appearance, unlike the general method of coating, it's applied to added glittering material in raw material. With no peeled-off appearance, it has good durability. Please use it with confidence because there is no problem in using the product at all.

## 


- Note that the components may look different from those shown here.
- Without prior notice, all information and specifications in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or online shopping site or contact the retail store where you purchased the product.
- The power cord provided may differ depending upon the region.

#### Supported Drivers and Software

You can download and install the latest version from the LGE website (www.lg.com).

Drivers and Software	Installation Priority
Monitor Driver	Recommended
OnScreen Control	Recommended

#### **Component and Button Description**

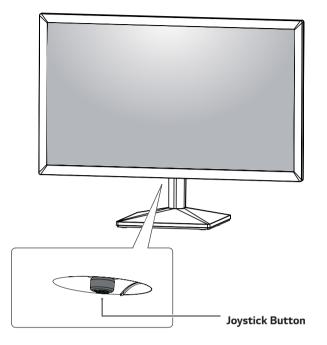

#### How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right with your finger.

#### **Basic Functions**


	ළ	Power on	Press the joystick button once with your finger to turn on the monitor.
		Power off	Press and hold the joystick button once with your finger to turn off the monitor.
	◀/►	Volume Control	You can control the volume by moving the joystick button left/right. (for HDMI only)

NOTEThe joystick button is located at the bottom of the monitor.

#### Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation regardless of its shape or size.

- It is advisable to place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all cables.
- Hold the top and bottom of the monitor frame firmly. Do not hold the panel itself.

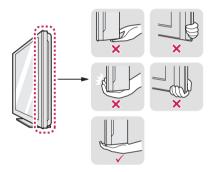

• When holding the monitor, the screen should face away from you to prevent it being scratched.




- When moving the monitor, avoid any strong shock or vibrations to the product.
- When moving the monitor, keep it upright, never turn the monitor on its side or tilt it sideways.



 As far as possible, avoid touching the monitor screen. This may result in damage to the screen or some of the pixels used to create images.



 If you use the monitor panel without the stand base, its joystick button may cause the monitor to become unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick button to malfunction.

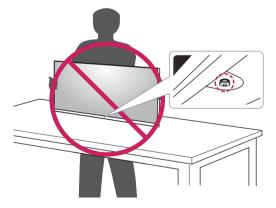

#### Mounting on a table

• Lift and tilt the Monitor set into its upright position on a table.

Leave a 100 mm (minimum) space from the wall for proper ventilation.




## 


- Unplug the power cord prior to moving or installing the monitor. There is risk of electric shock.
- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

#### 


When you adjust the angle, do not hold the bottom of the Monitor set frame as shown on the following illustration, as may injure your fingers.

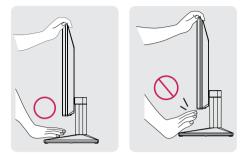

 Do not touch or press the screen when adjusting the angle of the monitor.




Do not hold this set like below picture.Monitor screen can detach from stand base and injure your body.

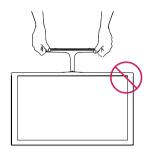




The angle of the screen can be adjusted forward or backward from  $-5^{\circ}$  to  $20^{\circ}$  for a comfortable viewing experience.

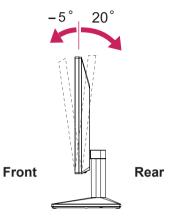

#### Using the Kensington security system

The Kensington security system connector is located at the back of the Monitor set. For more information of installation and using, refer to the manual supplied with the Kensington security system or visit *http://www.kensington.com*.

Connect the Kensington security system cable between the Monitor set and a table.

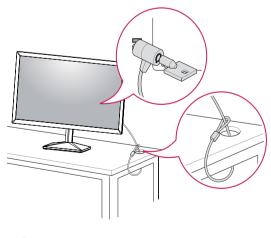



• The Kensington security system is optional. You can obtain it from most electronics stores.


ENGLISH

Wall Mount (A x B)

#### Mounting on a wall

For proper ventilation, allow a clearance of 100 mm on each side and from the wall. Detailed

instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.

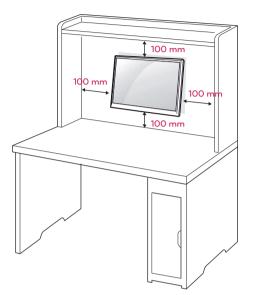


If you intend to mount the Monitor set to a wall, attach Wall mounting interface (optional parts) to the back of the set.

When you install the Monitor set using a wall mounting interface (optional parts), attach it carefully so it will not drop.

- 1 If you use screw longer than standard, the monitor might be damaged internally.
- 2 If you use improper screw, the product might be damaged and drop from mounted position.


In this case, LG Electronics is not responsible for it.

Wall Mount (A x B)	75 x 75
Standard screw	M4
Number of screws	4

 

#### 

- Disconnect the power cord first, and then move or install the Monitor set. Otherwise electric shock may occur.
- If you install the Monitor set on a ceiling or slanted wall, it may fall and result in severe injury.
- Use only an authorized LG wall mount and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the Monitor set and void your warranty.
- Use only screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.
- Screw length from outer surface of back cover should be under 8mm.

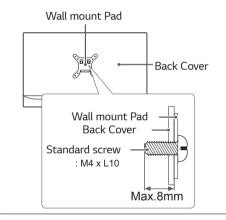

- Use the screws that are listed on the VESA standard screw specifications.
- The wall mount kit will include an installation manual and necessary parts.
- The wall mount bracket is optional. You can obtain additional accessories from your local dealer.
- The length of screws may differ depending on the wall mount. Be sure to use the proper length.
- For more information, refer to the instructions supplied with the wall mount.

## **USING THE MONITOR SET**

#### Connecting to a PC

 
 Your Monitor set supports Plug & Play\*.
 \*Plug & Play: A PC recognizes a connected device that users connect to a PC and turn on, without device configuration or user intervention.

#### **D-SUB connection**

Transmits analog video from your PC to the Monitor set.

#### ΝΟΤΕ

• When using a D-Sub signal input cable connector for Macintosh



#### Mac adapter

For Apple Macintosh use, a separate plug adapter is needed to change the 15 pin high density (3 row) D-SUB VGA connector on the supplied cable to a 15 pin 2 row connector.

#### HDMI connection

Transmits the digital video and audio signals from your PC to the Monitor set.

### 

- If you use HDMI PC, it can cause compatibility problem.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
  - High-Speed HDMI<sup>®</sup>/<sup>™</sup> Cable
  - High-Speed HDMI<sup>®</sup>/<sup>™</sup> Cable with Ethernet

- When you want to use two PC in our Monitor, please connect the signal cable(D-SUB/HDMI) respectively in Monitor set.
- If you turn the Monitor set on while it is cold, the screen may flicker. This is normal.
- Some red, green, or blue spots may appear on the screen. This is normal.

#### **Connecting to AV Devices**

#### **HDMI connection**

Transmits the digital video and audio signals from your AV devices to the monitor.

### 

- If you use HDMI PC, it can cause compatibility problem.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
- High-Speed HDMI<sup>®</sup>/<sup>™</sup> Cable
- High-Speed  ${\rm HDMI}^{{^{\circ}}\!\!/^{\rm TM}}$  Cable with Ethernet

#### **Connecting Peripherals**

#### **Connecting Headphones**

Connect peripherals to the monitor via the headphones port. Connect as illustrated.



- Peripheral devices are sold separately.
- If you use angled headphones, it may cause a problem with connecting another external device to the monitor. Therefore, it is recommended to use straight headphones.





Angle Type

Straight Type

 Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.

## **CUSTOMIZING SETTINGS**


#### Activating the Main Menu

- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down  $(\blacktriangle/ \nabla)$  and left/right  $(\checkmark/ \triangleright)$  to set the options.
- 3 Press the joystick button once more to close the main menu.



Button	Menu Status		Description
	Main menu disabled		Enables the main menu.
	Main menu enabled		Close the main menu. (Long press the button to turn off the monitor)
	•	Main menu disabled	Adjusts the monitor volume level. (for HDMI only)
		Main menu enabled	Enters the input features.
		Main menu disabled	Adjusts the monitor volume level. (for HDMI only)
		Main menu enabled	Enters the Settings feature.
		Main menu disabled	Displays the information on the current input.
		Main menu enabled	Turns off the monitor.
	_	Main menu disabled	Displays the information on the current input.
	•	Main menu enabled	Enters the picture mode feature. (for HDMI only)

#### Main Menu Features

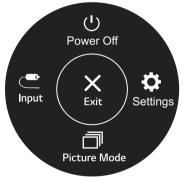

Main Menu	Description	
Settings	Configures the screen settings.	
Picture Mode         Select picture mode to achieve the best display fect.		
Input	Sets input mode.	
Power Off Turns off the monitor.		
Exit	Exits the main menu.	

(for HDMI only)

ENGLISH

### **Customizing settings**

Settings > Quick Settings	Description		
Brightness			
Contrast	Adjusts the contrast and brightness of the screen.		
Volume	Adjusts the volume.(for HDMI only)		
	<b>NOTE</b>		
	<ul> <li>You can adjust Mute/ Unmute by moving the joystick button to ▼ in the Volume menu.</li> </ul>		

Settings > Input	Description		
Input List	Selects the inp	Selects the input mode.	
Aspect Ratio	Adjusts the aspect ratio of the screen.		
	Full Wide         Displays the video in wide-screen, regardless of the video signal input.		
	<b>Original</b> Displays video according to the aspect ratio of the video signal input.		
	<ul> <li>• The options may disabled at the recommended resolution (1920 x 1080).</li> </ul>		

#### **Customizing settings**

Settings > Picture		Description		
Picture Mode	Custom	Allows the user to adjust each element. The color mode of the main menu can be adjusted.		
	Reader	Optimizes the screen for viewing documents. You can brighten the screen in the OSD menu.		
	Photo	Optimizes the screen to view photos.		
	Cinema	Optimizes the screen to improve the visual effects of a video.		
	Color Weak- ness	This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors.		
	Game	Optimizes the screen for gameplay.		
Picture Ad-	Brightness	Adjusts the contra	Adjusts the contrast and brightness of the screen.	
just	Contrast			
	Sharpness	Adjusts the sharpness of the screen.		
	SUPER RESOLUTION+	High	Optimized picture quality is displayed when a user wants crystal clear images. It is effective forhigh quality video or game.	
		Middle	The optimized picture quality is displayed when a user wants images between low and high modes for comfortable viewing. It is effective for UCC or SD video.	
		Low	The optimized picture quality is displayed when a user wants smooth and natural images. It is effective for slow -moving pictures or still images.	
		Off	Select this option for everyday viewing. SUPER RESOLUTION+ is turned off in this mode.	
	Black Level		el (for HDMI only). erence for a video signal, this is the darkest color the monitor can display.	
		High	Keeps the current contrast ratio of the screen.	
		Low	Lowers the black levels and raises the white levels from the current contrast ratio of the screen.	
	DFC	On	Adjusts the brightness automatically according to the screen.	
		Off	Disables the DFC feature.	



- This is subsidiary for color weakness user. Therefore if you feel uncomfortable with the screen, please turn off this function.
- This function can't distinguish some colors in some images.

Game Adjust	Response Time	Sets a response tir	ne for displayed pictures based on the speed of the screen.			
,	Response fille	For a normal environment, it is recommended that you use <b>Fast</b> .				
			picture, it is recommended that you use <b>Faster</b> . nay cause image sticking.			
		Faster	Sets the response time to faster.			
		Fast	Sets the response time to fast.			
		Normal	Sets the response time to normal.			
		Off	Does not use the response time improvement feature.			
	FreeSync	Provides seamless and natural images by synchronizing the vertical frequency of the input signal with that of the output signal.				
			ON			
		Supported Int				
		<ul> <li>Supported Graphic Card : A graphic card that supports AMD's FreeSync is necessary.</li> <li>Supported Version : Make sure to update the graphic card to the latest driver.</li> <li>For more information and requirement, refer to AMD website at http://www.amd.com/ FreeSync</li> </ul>				
		On	FreeSync function on.			
		Off	FreeSync function off.			
	Black Stabilizer	Increasing the Blac (You can easily dis Reducing the Black				
-	Cross Hair		s a mark on the center of the screen for First Person Shooter(FPS) games.			
		e <b>cross hair</b> that fits their gaming environment among four different <b>cross</b> nitor is off or enters energy saving mode, the Cross Hair feature is turned <b>off</b> .				
Color Adjust	Gamma	Mode 1, Mode 2, Mode 3	The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.			
		Mode 4	If you do not need to adjust the gamma settings, select Mode 4.			
	Color Temp	Selects the factory default picture color: Warm: Sets the screen color to a reddish tone. Medium: Sets the screen color between a red and blue tone. Cool: Sets the screen color to a bluish tone. Custom: The user can adjust it to red, green or blue by customization.				
-	Red/Green/ Blue	You can customize the picture color using Red, Green, and Blue colors.				
5	Horizontal	To move image left	and right.			
Adjust (D-SUB only)	Vertical	To move image up	and down.			
(B 500 only)	Clock	To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.				
			5			
	Phase	size will also chang	e. s of the display. This item allows you to remove any horizontal noise and clear			
Resolution (D-SUB only)		size will also chang To adjust the focus or sharpen the ima desired resolution.T	e. s of the display. This item allows you to remove any horizontal noise and clear			
	User can set the to the following(	size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only).	e. s of the display. This item allows you to remove any horizontal noise and clear ge of characters.			
	User can set the to the following( <b>NOTE</b> The function is the PC output	size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when	e. s of the display. This item allows you to remove any horizontal noise and clear ge of characters. his option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that			
	User can set the to the following( <b>NOTE</b> The function is the PC output	size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. Dx768, 1360x768,	e. s of the display. This item allows you to remove any horizontal noise and clear ge of characters. his option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that			
	User can set the to the following( <b>NOTE</b> The function is the PC output 1024x768, 1280	size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. 0x768, 1360x768, 0x900,Off	e. s of the display. This item allows you to remove any horizontal noise and clear ge of characters. his option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that			
	User can set the to the following( <b>NOTE</b> The function is the PC output 1024x768, 1280 1280x960, 1600 1440x900, 1600	size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. 0x768, 1360x768, 0x900,Off	e			
(D-SUB only)	User can set the to the following( <b>NOTE</b> The function is the PC output 1024x768, 1280 1280x960, 1600 1440x900, 1600	size will also chang To adjust the focus or sharpen the ima desired resolution.T D-SUB only). enabled only when wrong resolution. Dx768, 1360x768, Dx900,Off Dx900,Off	e. s of the display. This item allows you to remove any horizontal noise and clear ge of characters. his option is enabled only when the screen resolution on your computer is set the screen resolution on your computer is set to the following, except that 1366x768,Off			

#### **Customizing settings**

Settings > General	Description			
Language	To choose the language in which the control names are displayed.			
SMART ENERGY	High	Saves energy using the high-efficiency SMART ENERGY SAVING feature.		
SAVING	Low	Saves energy using the low-efficiency SMART ENERGY SAVING feature.		
	Off	Disables the SMART ENERGY SAVING feature.		
Automatic Standby	The monitor will a	utomatically switch to standby mode after a certain period.		
OSD Lock	Prevents incorrect key input.			
	On	Key input is disabled.		
	<ul> <li>NOTE</li> <li>All function except for the OSD Lock mode, brightness, Contrast, Input, Information and Volume are disabled.</li> </ul>			
	Key input is enabled.			
Information	The display information will be shown the Model, Serial Number, Total Power On Time, Resolution.			
Reset	Do you want to reset your settings?			
	No	Cancel the select.		
	Returns to the default settings.			



## Saving Data depends on the Panel. So, those values should be different from each panel and panel vendor. If you select the option of SMART ENERGY SAVING is High or Low, monitor luminance become lower or higher depend on source.

## TROUBLESHOOTING

#### Check the following before calling for service.

No image appears	
Is the power cord of the display connected?	Check and see if the power cord is connected properly to the power outlet.
Do you see an "Out of Range" message on the screen?	• This message appears when the signal from the PC (video card) is out of horizontal or vertical frequency range of the display. See the 'Specifications' section of this manual and configure your display again.
Do you see a "NO SIGNAL" message on the screen or black screen?	<ul> <li>After the monitor is on "NO SIGNAL", the monitor goes to DPM mode.</li> <li>This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it.</li> <li>Check PC status.</li> </ul>

Can't you control some functions in OSD?				
Can't you select some menu in OSD?	• You can unlock the OSD controls at any time by entering the OSD lock menu and changing items to off.			

- Check **Control Panel** ► **Display** ► **Settings** and see if the frequency or the resolution were changed. If yes, readjust the video card to the recommend resolution.
- If the recommended resolution (optimal resolution) is not selected, letters may be blurred and the screen may be dimmed, truncated or biased. Make sure to select the recommend resolution.
- The setting method can differ by computer and O/S (Operation System), and resolution mentioned above may
  not be supported by the video card performance. In this case, please ask to the computer or the video card
  manufacturer.
- Keep proper posture when using the monitor, otherwise the screen may not be optimized.

Display image is incorrect		
The screen color is mono or abnormal.	Check if the signal cable is properly connected and use a screwdriver to fasten if	
	necessary.	
	<ul> <li>Make sure the video card is properly inserted in the slot.</li> </ul>	
	• Set the color setting higher than 24 bits (true color) at <b>Control Panel ► Settings</b> .	
The screen blinks.	Check if the screen is set to interlace mode and if yes, change it to the recommend	
	resolution.	

Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message?					
Have you installed the display driver?	• Be sure to install the display driver from our web site: http://www.lg.com.				
Make sure to check if the video card supports Plug&Play function.					

The screen is flickering.	
Did you select the recommended	• If the selected resolution is HDMI <b>1080i</b> 60/50 Hz, the screen may be
resolution?	flickering. Change the resolution to the recommended resolution <b>1080P</b> .

## SPECIFICATIONS

#### 22MN430M

LCD Screen	Туре	TFT (Thin Film Transistor) LCD(Liquid Crystal Display) Screen			
Resolution	Maximum Resolution	1920 x 1080 @ 75 Hz (HDMI)			
		1920 x 1080 @ 60 Hz (D-sub)			
	Recommended Resolution	1920 × 1080 @ 60 Hz			
Power Input	19 V1.3 A				
Power Consumption	On Mode : 22 W Typ. ( Outgoing condition ) * Sleep Mode $\leq$ 0.3 W ** Off Mode $\leq$ 0.3 W				
AC/DC adaptor	or Type ADS-40FSG-19 190 or Type ADS-25FSF-19 190 or Type LCAP21, manufactu or Type LCAP26-A, manufactu or Type LCAP26-B, manufacto or Type LCAP26-B, manufacto or Type UCAP26-B, manufacto or Type WA-24C19FS, manu or Type WA-24C19FK, manu or Type WA-24C19FB, manu or Type WA-24C19FB, manu or Type WA-24C19FN, manu or Type WA-24C19FN, manufacto or Type WA-24C19FN, manufacto or Type WA-24C19FN, manufacto or Type WA-24C19FN, manufacto	25G, manufactured by SHENZHEN HONOR ELECTRONIC 025GPG-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPI-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPB-2, manufactured by SHENZHEN HONOR ELECTRONIC 025GPB-2, manufactured by SHENZHEN HONOR ELECTRONIC 025EPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC 025EPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC 025EPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC 025EPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC 025EPG-1, manufactured by SHENZHEN HONOR ELECTRONIC 025EPB-1, manufactured by SHENZHEN HONOR ELECTRONIC ENTERPRISE 025EPB-1, manufactured by Asian Power Devices Inc. 025EPB-1, manuf			
Environmental conditions	Operating Temperature Operating Humidity	0 °C to 40 °C Less than 80%			
	Storage Temperature Storage Humidity	-20 °C to 60 °C Less than 85 %			
Dimension	Monitor Size (Width x Height x Depth)				
	With Stand	509.6 mm x 395.8 mm x 181.9 mm			
	Without Stand	509.6 mm x 305.7 mm x 38.5 mm			
Weight (Without	With Stand	2.8 Кд			
Packaging)	Without Stand	2.5 Kg			

Product specifications shown above may be changed without prior notice due to upgrade of product functions.

\* The power consumption level can be different by operating condition and monitor setting.

\* The On mode power consumption is measured with LGE test standard(Full White pattern , Maximum resolution).

\*\* The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

## SPECIFICATIONS

24ML44B

LCD Screen	Туре	TFT (Thin Film Transistor) LCD(Liquid Crystal Display) Screen			
Resolution	Maximum Resolution	1920 x 1080 @ 75 Hz (HDMI)			
		1920 x 1080 @ 60 Hz (D-sub)			
	Recommended Resolution	1920 × 1080 @ 60 Hz			
Power Input	19 V1.3 A				
Power Consumption	On Mode : 26 W Typ. ( Outgoing condition ) * Sleep Mode $\leq$ 0.3 W ** Off Mode $\leq$ 0.3 W				
AC/DC adaptor	or Type ADS-40FSG-19 190 or Type ADS-25FSG-19 190 or Type LCAP21, manufactu or Type LCAP26-A, manufactu or Type LCAP26-E, manufactu or Type LCAP26-B, manufactu or Type LCAP26-B, manufactu or Type LCAP26-B, manufactu or Type WA-24C19FS, man or Type WA-24C19FK, man or Type WA-24C19FK, man or Type WA-24C19FK, man or Type WA-24C19FK, man	25G, manufactured by SHENZHEN HONOR ELECTRONIC 025GPG-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPI-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPCU-1, manufactured by SHENZHEN HONOR ELECTRONIC 025GPB-2, manufactured by SHENZHEN HONOR ELECTRONIC 025GPCU-1L, manufactured by SHENZHEN HONOR ELECTRONIC 025EPCU-1L, manufactured by LIEN CHANG ELECTRONIC ENTERPRISE 025EPCU-1L, MANG ELECTRONIC E			
Environmental conditions	Operating Temperature Operating Humidity	0 °C to 40 °C Less than 80%			
	Storage Temperature Storage Humidity	-20 °C to 60 °C Less than 85 %			
Dimension	Monitor Size (Width x Height x Depth)				
	With Stand         555 mm x 421 mm x 181.9 mm				
	Without Stand	555 mm x 330.9 mm x 38.4 mm			
Weight (Without	With Stand	3.1 kg			
Packaging)	Without Stand	2.8 kg			
	1	-			

Product specifications shown above may be changed without prior notice due to upgrade of product functions. \* The power consumption level can be different by operating condition and monitor setting.

\* The On mode power consumption is measured with LGE test standard(Full White pattern , Maximum resolution).

\*\* The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

### Preset Modes (Resolution)

### **D-sub PC Timing**

Display Modes (Resolution)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Polarity(H/V)	
720 x 400	31.468	70.08	-/+	
640 x 480	31.469	59.94	-/-	
640 x 480	37.5	75	-/-	
800 x 600	37.879	60.317	+/+	
800 x 600	46.875	75	+/+	
1024 x 768	48.363	60	-/-	
1024 x 768	60.023	75.029	+/+	
1152 x 864	67.500	75	+/+	
1280 x 1024	63.981	60.023	+/+	
1280 x 1024	79.976	75.035	+/+	
1680 x 1050	65.290	59.954	-/+	
1920 x 1080	67.500	60	+/+	Recommend Mode

## HDMI PC Timing

Display Modes (Resolution)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Polarity(H/V)	
720 x 400	31.468	70.08	-/+	
640 x 480	31.469	59.94	-/-	
640 x 480	37.5	75	-/-	
800 x 600	37.879	60.317	+/+	
800 x 600	46.875	75	+/+	
1024 x 768	48.363	60	-/-	
1024 x 768	60.023	75.029	+/+	
1152 x 864	67.500	75	+/+	
1280 x 1024	63.981	60.023	+/+	
1280 x 1024	79.976	75.035	+/+	
1680 x 1050	65.290	59.954	-/+	
1920 x 1080	67.500	60	+/+	Recommend Mode
1920 x 1080	83.89	74.97	+/+	

### HDMI AV Timing

Factory support mode (Preset Mode)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	HDMI
480P	31.50	60	0
576P	31.25	50	0
720P	37.50	50	0
720P	45.00	60	0
1080P	56.25	50	0
1080P	67.50	60	O Recommend Mode



The model and serial number of the SET is located on the back and one side of the SET. Record it below should you ever need service.

MODEL

SERIAL