
Dell 34 Monitor - U3421WE

Dell Display Manager User's Guide



Model: U3421WE Regulatory model: U3421WEb

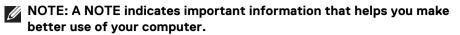

- △ CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
- MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2020 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2020 - 10

Rev. A00

Contents

Overview
Using the Quick Settings Dialog 5
Setting Basic Display Functions 6
Assigning Preset Modes to Applications
Organizing Windows with Easy Arrange 8
Managing Multiple Video Inputs
Restoring Application Positions
Attach DDM to active window (only Windows 10)
Applying Energy Conservation Features
Other Shortcut Keys
Troubleshooting 18

(Dell

Overview

Dell Display Manager (DDM) is a Microsoft Windows application used to manage a monitor or a group of monitors. It allows manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on select Dell monitors. Once installed, Dell Display Manager runs each time the system starts and places its icon in the notification tray. Information about monitors connected to the system is available when hovering over the notification-tray icon.



Alternatively, you may launch DDM by right-clicking on the desktop background to select Dell Display Manager from the desktop menu.

NOTE: Dell Display Manager uses DDC/CI channel to communicate with your monitor. Ensure DDC/CI is enabled in the menu as below.

() interverse		
41	1.14,000	
45.26		
ų ж.e	329-52 (climit))	
THE PROPERTY		
2 .00		
Or Here	rived tiller-	
E ven		
Section of the		



Using the Quick Settings Dialog

Clicking Dell Display Manager's notification tray icon opens the **Quick Settings** dialog box. When more than one supported Dell monitors are connected to the computer, a specific target monitor can be selected using the menu. The **Quick Settings** dialog box enables you to easily adjust the brightness, contrast, resolution, window layout, and so on. You can select **Manual Mode** or **Auto Mode**, and the screen resolution can be changed.

(in) norm	y Mill way of	1
Survey.	IN LIKENS	
100000	1010-00	C Mange
To Ante Balle		inter
Denserv	Finite.	×
1 stilles		
Level.		123
8		
	and the high strength	

The **Quick Settings** dialog box also provides access to Dell Display Manager's advanced user interface that is used to adjust basic functions, configure auto mode and access other features.



~		
Feature	Function	Description
Quick DDM Access	Quick key to call up DDM UI	Ctrl+Shift+D
Access		 Use Page Up/Page Down key or click on ">" to flip through all Easy Arrange layouts.
	Control individual	 From dropdown box to select monitor, selected monitor has Dell logo shown.
	monitor in	• Perform monitor self-test feature check.
	multiple monitor setup	 Move DDM UI to the monitor to be controlled.
		 Press Ctrl+Shift+D to bring up the miniUl under the mouse pointer.

Setting Basic Display Functions

Select **Manual Mode** that enables you to manually select a preset mode or select **Auto Mode** that applies a preset mode based on the active application. An onscreen message displays the current preset mode whenever it changes. The selected monitor's **Brightness** and **Contrast** can also be directly adjusted from the **Basic** tab.

Seale	44484	Sugaran	hen Menape	Colum	
Necolators	34420-344	u			change
Onester					Calibra
	note assignments for	nective application	0		
(f) Neural Pad Detects in	contander .			Conden	×
Pright two	1.1 - 1		190.		
Cardenals			0.05		
		1.10.11			



DELL

NOTE: When multiple Dell monitors are connected, select "Enable display matrix control" to apply brightness, contrast and color presets controls to all monitors.



Assigning Preset Modes to Applications

The **Auto Mode** tab allows you to associate a specific **Preset Mode** with a specific application, and apply it automatically. When **Auto Mode** is enabled, Dell Display Manager automatically switches to the corresponding **Preset Mode** whenever the associated application is activated. The **Preset Mode** assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to another.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu or elsewhere, and drop it onto the current list.

NOTE: Preset Mode assignments for batch files, scripts, loaders, and non-executable files such as zip archives or packed files, are not supported.

DEL

7

You can also configure the Game preset mode to be used whenever a Direct3D application runs in full-screen mode. To prevent an application from using mode, assign a different preset mode to it.

Here:	did alfords	here is any	Inged Nacager	12 day as	
Askpopts:	Instellar societars	isaton Talatta	n ogikeler, dogiki	lotte biz	
Apple altern		1-	e Made		
te'ni	far session app)	25	ndard	~	
aw'nut	for full over tarectals	30	*	~	
T persus	for universal windows	sppt PN	2	~	
🛃 «dabe/	Crobat Reader DC	50	ectard	~	
M Adde F	hereaftep 234	in the	,	~	-

Organizing Windows with Easy Arrange

Easy Arrange helps you to effectively organize your application windows on the desktop. You first choose a pre-defined layout pattern which suits your work, then you just need to drag the application windows into the defined zones. Press ">" or use Page Up/Page Down key to find more layouts.


To create a custom layout, right-click on the thumbnail with a tiny triangle at the bottom right corner, arrange the numbers of rows and columns in the open window, and then click **OK** to set up your preferred arrangement.

(and Displ	ay Manager				ILEXSIME
line.	navn b	Neglineg	For Parager	Diplace.	0
Select a prede position writer	fined or output who was surprisedably	ow layout for this sec	onitor. Open wheteve	dragged into each cone	-st
×					
_			_		>
	ctar layout, arrange annare di terchers	yar unders and t	nendox asse		
	to 20They to an	able some positioning			


DELI

For Windows 10, you can apply different window layouts for each of the virtual desktops.

If you often use Windows snap feature, you can select "**Hold down the SHIFT key to enable zone positioning**". This gives Windows snap priority over **Easy Arrange**. You will then need to press the Shift key to use **Easy Arrange** positioning.

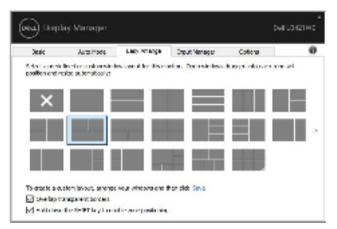

If you are using multiple monitors in an array or matrix, **Easy Arrange** layout can be applied across to all the monitors as one desktop. Select "**Span multiple monitors**" to enable this feature. You need to align your monitors properly to make it effective.

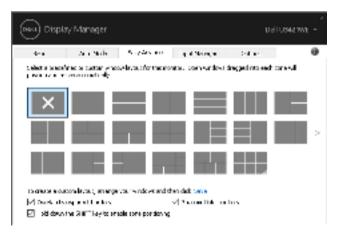

DELI

There are other advanced ways for the usage of **Easy Arrange**. Refer to table below.

Feature	Function	Description
Enhanced Easy Arrange	Custom layouts	 Save and name 5 customized Easy Arrange patterns.
		 Configure x*y patterns.
	5 MRU (most- recently-	 Press Ctrl+Shift+Home to cycle among the last 5 MRU layouts.
	used) layouts	
	On the fly partition resizing	 Hold down Ctrl while resizing current Easy Arrange layout to adjust the size and numbers of cells in a layout.
		 Newly formed Easy Arrange pattern is saved into the Easy Arrange icon position.
		 Hold down Ctrl while clicking on a modified layout icon to restore it to default layout.
	Easy Arrange layouts for portrait mode	Portrait mode Easy Arrange icons are presented when monitor is rotated.

NOTE: Some application requires a minimum effective resolution for its window. The application may not fit in an Easy Arrange zone if the zone is smaller than the required window size.

Managing Multiple Video Inputs

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell monitor. This makes it very easy to switch between inputs while working with multiple computers.

All video input ports available to your monitor are listed. You can give each input a name as you like. Please save your changes after editing.

You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.



			College.
Topological a	from the second	197. governing	the second s
USUAC:	2	0.201	8,23-0
OF Statives	Menuar	(B) 2531	C) 199 C
H046.	42	C) 281	(i) 28 c
HTME?	202	Q.200	19 and
T7/80 w			2.000
And the second second	N HONEL PCI	~	Comparative and a

You can use the dropdown list to switch to any input source.

Institution Equilation Extension UNA-C VK (VED) (REDA-C PA(A) All connect (REDA-C (REDA-C PA(A) (REDA-C (REDA-C (REDA-C	View View View Bisso Disso 2000 with Alement Bisso Disso Disso 4000 with Alement Bisso Disso Disso 4000 with Alement Bisso Disso Disso 4000 with Alement Disso Bisso Disso			Arabah Paydan	Red 1
Count Count Count With law! Alement Status Classe With law! Alement Status Classe With law! Alement Status Status With law! Alement Status Status With law! Alement Status Status	Alement State State	201 mod result and a		Ingel series	in trail
esen act Onen Suber 1992 Act Onen Suber 1992 Physician Sub	-540 XCI Cited State:	⊖usou ⊛uso-c		78	144
PER AL CHER BURGE		Susan Casar		Alexandre	24 (4. lev?)
P P/MP mains		Cuer Suec		201	1991
	P 8/99 mains . Collination . On the	CHERT BEIERS C		43	CM12
		Sava	· · ·	EL	_
	nvorie input snortzut keyt 21 + Alt + Hum 1 1 1> seekt -see	 Change active insut. 			
na few fal shart at says (188-5 - 168	national default of seys HSR-C ISR	163-2-63		6 100 C	a fearble faither

NOTE: DDM communicates with your monitor even when the monitor is displaying video from another computer. You can install DDM on the PC you frequently use and control input switching from it. You may also install DDM on other PCs connected to the monitor.

Click the **PIP/PBP mode** selection button to set the preferred configuration. The available modes are **Off**, **PIP Small**, **PIP Large**, and **PBP**.

decc.	Asta Picce	hacy drawing	heat Review	tip hars.	
Inputports	Diputo	10.00	USD upstream p	ourt:	
USE C	NJ		381883	OPEC	
DF (Activa)	(mm)	nr.	第1021	Cussic	
IENE:	801		CUERT	802-C	
HEALS.	PC2		Cluster	®uzo-c	
		π.		1.ur	
hann de a poi s Rece		OSIC ME	~	Charge active op of a	
Input witch ste	staat keye				
New	0.0	E-Maryana -	~ 100	DMC1-PC1	

You can select video inputs for your main window and sub window. Please save your change after your selection.

You can define a shortcut key to quickly swap the video inputs between main window and sub window.

Click **Video swap** button or use the defined **Video swap shortcut key** to swap the video inputs between main window and sub window.

uppl/mem Adaptimespit Clock add Clock @task: Clock add Plant @task: Clock add Oliver Clock add Clock add Oliver @task: Clock add Oliver @task:	LOW 7 Clastic stift Clastic Agrounds P* (Thin is Hot) Mill Clastic Clostic stift PKMC1 (Lastic stift) Oliversit Glover is PKMC2 (Thin is Hot) Oliversit Glover is PKMC3 (Thin is Hot) Oliversit Glover is PKMC4 (Thin is Hot) Oliversit Glover is PKMC5 (Thin is Hot) Oliversit Glover is PKMC4 Statistic stift Oliversit Statistic stift PKMC5 Statistic stift Statistic stift Statistic stift	Letc A	ro Hota 🛛 🔾	aty America	FOUTHWARK .	Optione	- 2
Clinik-40 Ruzzi Cozić (donik-40 Oran Gravin Clinik-celo Oran Grazić 6 Romanit. Soci	P* (Thin K-H) (R123) C 002 C RMC1 (Laste add) C 1001 (R100 c RM2 (Thin K-H) (R123) C 002 C RM2 (Thin K-H) (R123) (C 002 C RM2 (Thin K-H) (R123) (C 002 C RM2 (Thin K-H) (D 001 H) (R100 H) RM2 (Thin K-H) (D 001 H) (D 001 H) RM2 (Thin K-H) (C 002 C) (D 001 H) RM2 (Thin K-H) (D 001 H) (D 001 H) RM2 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (D 001 H) (D 001 H) RM3 (Thin K-H) (Thin K-H) (Thin K-H)	Providents	uputrese		Adaptores	ports	
(douxidd) Oran Granic Goldenin Oran Granic a Marcanal. See	KMCI QLosis add QLosis QLosis QLosis KEM 2 Clock cells QLosis QLosis QLosis KAVUM holes Emil Clock cells QLosis Question KAVUM holes Emil Clock cells QLosis Question KAVUM holes Emil Clock cells QLosis Question KAVUM holes Emilion holes QLosis QLosis QLosis XAV V LOSIS V ZXAVH holes	189.7	(Click to add	9	CLAR	@ tas 4:	
and	HERE (Teck cells () Lass () Case Here and the cells () Lass () Case Here and the cells () Case () Case Here and the cells () Case () Case () Case State () Case () Case () Case () Case () Case State () Case () Case () Case () Case () Case State () Case () Case () Case () Case () Case State () Case () Case () Case () Case () Case () Case State () Case () Case () Case () Case () Case () Case () Case State () Case	<i></i>	(70) in the	0	⊜uar	CUER	
a 🛐 or and . 👘	FayNumber. Emilian Contraction Contraction Her writight #up Sub-Window #S2 200 amild: thereaution 200 amild: thereaution 3F	HOME!	(click to edit	0	OIMI	@199.c	
	Hein window #2: 200 antich shor southaw: 36 www. 200 0 w. 201 Hein Heiner 1	H 24 2	(Disk is off	1	Ouur	@ 04.4	
Sub window #2: 250 amild: thortasticaw	37	Fa/ADF TOP	a 🕅	or sart.		tow.	
		Heir windom #1:	5.6	Nindon 42:		20 anith the tarties	
123-0 v 2.4 ± M ± Sec 1	A trebular 20 Kitshi ha Pi	3F		3.0	v	Ziel 4 Mil 4 Sec 1	
A desired as 121 Alexandre data as a sheet of the set		A relative 42	54	whether \$25		Also as estaded in the pro-	
 100.0 2.0.4 Million 1 	Alexandra Alexandra Mercandada da	Heir windom #12	5.6	Nindon #2:	v	20 anité életatio	

You can assign a USB upstream port with your video input. The assigned USB upstream port will be connected to the computer when its video is showing on the monitor.



It is particularly useful when you share mouse or keyboard which is connected to the monitor between two computers. You can define a shortcut key to quickly switch the device between the two computers.

insupport				
	input nema:	USD up of same	part:	
- 59 7	HE	39.201	Otek	
24 (M 1 vr)	Alement	Sec.	Clusic	
-124-1	PCL.	Otan	Suze	
68-3	PC0	Otan	Siuzk	
	OF sector		Serve	
Security of sheet of the				
Nate	22 USS C 145	~	Change active spaller.	

You can also use the **KVM wizard** to assign USB upstream ports to video inputs and select display partition for multiple devices.

Jack .	Auto Noce	Cash America	Inst Hanage	Options	
aput part.	- sp.d	Children .		i porta	
185 C	50		CLOSE	(Cases)	
a sumo	direct		 Russ 	Ousec	
041.	6.3		0190	(Europe	
47687	202		Clinic	(g) uporte	
R. 1/4	Prode	er and .	0	214	
avorra riput di Vorie		00-C - RU	~	Distance and the hear it	
trait with she					

NOTE: Make sure you have assigned a USB upstream port for each of the connected devices.

When PIP/PBP is on, if you share a device (e.g. a mouse) between the two computers, you can click **USB switch** button or use the defined **USB switch shortcut key** to quickly switch the device between the two computers.

Rec	In other 1	Reythough	Input Menosper	Quint	
ten peti	Spale		199 spektrum	pe la	
199.7	(36.5	edd	0.061	e care	
DP	(34.5.5	-14	3.0PP	OLMO	
HIM-S	(70)	(the	Own	ALC: NO	
HOP 7	(Jd.o	14012	Cues	第1040	
N/VR	model .	And and a		Sur-	
		falses for 72		What is such a bey	
So we have the			~	Cel 1 Alt 1 Mars 1	
Constantine (* 14 24	~	USE 4			

NOTE: Make sure you have assigned a USB upstream port for each of the two computers.

NOTE: Make sure the USB device is properly stopped before you switch it to another computer. Fail to do so may cause problems such as data corruption on a thumb drive.

DELI

Restoring Application Positions

DDM can help you restore application windows into their positions when you reconnect your PC to the monitor(s). You can quickly access this feature by rightclicking on DDM icon in the notification tray.



If you choose "**Auto-restore window layout**", your application windows' positions are tracked and remembered by DDM. DDM automatically puts the application windows into their original positions when you reconnect your PC to your monitor(s).

Open Dell Display I Attach to act wa win	
Sive concret windo	elaport
Restore sever winds	rv kyzat
Auto-restore windle	wlayout
Or line documentat	ion .
Check for new yest	on
bit	

To go back to a favorite layout, first "Save current window layout" and later "Restore saved window layout".

You may use monitors with different models or resolutions in your daily routine, and apply different window layouts on them. DDM is able to know the monitor you have reconnected and restore application positions accordingly.


In case you need to replace a monitor in a monitor matrix configuration, you can save the window layout before replacement and restore the layout after a new monitor is installed.

NOTE: You should keep your applications running in order to benefit from this feature. DDM doesn't launch applications.




Attach DDM to active window (only Windows 10)

For Windows 10, you can add the DDM shortcut icon to the toolbar region of active windows. To activate this feature, right-click on the DDM icon in the notification tray and choose **Attach to active window** from the opened menu.

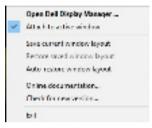

Once you right-click the icon in the toolbar, a quick menu of DDM appears, displaying options under **Auto Mode** and **Easy Arrange** for you to easily make adjustments.

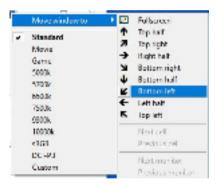

DELL

Applying Energy Conservation Features

The **Options** tab provides PowerNap energy conservation options and allows you to customize keyboard shortcuts.

In the upper pane, you can choose to set the monitor's brightness to the minimum level, or to put the monitor to sleep when the screensaver is activated.

Other Shortcut Keys

You can define the shortcut keys for quick access to the following DDM functions:

- Program shortcut key: to quickly open the Quick Settings dialog box.
- Easy Arrange MRU shortcut key: to quickly apply the 5 recently used window layouts.
- Application window shortcut key: to launch a quick menu for options under Auto Mode and Easy Arrange.

1 March 1	6.03.6304	LANS MININGS	Signal Renarger	Children v.	
Z Powerke	a optioner.				Configure
(2) A 10 4	e a planes similar	research all states			
Oad	e disaley to deep who	-	ales.		
Agendar	ind Sec.		Applement and as sh	orba, they i	
CH + SHR +	D		Ctrl + Shift + Num C		
-any Amarige	esta successive,				
carl + sh/t +	HBAD C				
Auto-swit	ch USD upstream port	a in PDP able-by-able	ande		

17

Troubleshooting

If DDM cannot work with your monitor, DDM will show below icon in your notification tray.



Click on the icon, DDM shows a more detailed error message.



Please note that DDM only works with Dell branded monitors. If you are using monitors from other manufacturers, DDM doesn't support them.

If DDM is unable to detect and/or communicate with a supported Dell monitor, please take below actions to troubleshoot:

- **1.** Make sure the video cable is properly connected to your monitor and your PC, especially the connectors should be firmly inserted into position.
- 2. Check the monitor OSD to ensure DDC/Cl is enabled.
- **3.** Make sure you have the correct and latest display driver from the graphics vendor (Intel, AMD, NVIDIA, etc.). Display driver is often the cause of DDM failure.
- **4.** Remove any docking stations or cable extenders or converters between the monitor and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/CI properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your system.



DDM may not work with below monitors:

- Dell monitor models earlier than year 2013 and D-series of Dell monitors. You can refer to Dell Product Support websites for more information
- Gaming monitors using NVIDIA-based G-sync technology
- · Virtual and wireless displays do not support DDC/CI
- Some early models of DP 1.2 monitors, it may be necessary to disable MST/ DP 1.2 using the monitor OSD

If your PC is connected to the Internet, you will be prompted with a message when a newer version of DDM application is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon while pressing and holding 'shift' key.

	Open Dell Display Manager
	Attach to active window
	Refreck-
	Save monitor asset report
	Save diagnostic report.
	Save current window layout
	Bettore caved window layout
	Auto-restore window layout
×	Auto-load at startup
4	Onspresh notifications
	Online documentation
	Check for now vasion.
	Exit

19