Acer LCD Monitor Quick Start Guide (QSG)

Important safety instructions

Please read the following instructions carefully.

- To clean the LCD monitor screen:
 - Turn off the LCD monitor and unplug the power cord.
 - Spray a non-solvent cleaning solution onto a rag and clean the screen gently.
- 2. Do not place the LCD monitor near a window. Exposing the monitor to rain, moisture or sunlight can severely damage
- Do not apply pressure to the LCD screen. Excessive pressure may cause permanent damage to the display.
- Do not remove the cover or attempt to service this unit yourself. An authorized technician should perform servicing of any nature.
- Store the LCD monitor in a room with a temperature of -20° to 60° C (-4° to140° F). Storing the LCD monitor outside this range may result in permanent damage.
- Immediately unplug your monitor and call an authorized technician if any of the following circumstances occur:
 - Monitor-to-PC signal cable is frayed or damaged.
 - Liquid spills onto the LCD monitor or the monitor is exposed to rain.
 - The LCD monitor or case is damaged.

Attaching the monitor to the base

- Remove the monitor from the packaging.
- Attach the footstand to the base. (for selected models).
- 3 Turn clockwise to lock. Ensure that the base in locked onto the stand. (for selected models)
- Secure the base to the stand by turning the screw using the intergrated tab or a suitable coin. (for selected models)


Connecting your monitor to a computer

- Turn off your computer and unplug your computer's power cord.
- Connect the signal cable to the DP (optional) and/or HDMI (optional) input socket of the monitor, and the DP(optional) and/or HDMI (optional) output socket of the graphics card on the computer.
- Connect the USB Cable(Optional) 3.
 - Connect the USB cable to port for fast charge.
 - Connect the USB cable to port.
- Insert the monitor power cable into the power port at the back of the monitor.
- Connect the power adapter and power cord to the monitor, then to a properly grounded AC outlet.



(d) ····

Note: Audio output is only for audio output model. Please check user manual for more instruction.

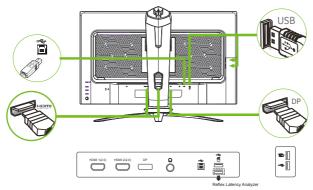

G-SYNC:

G-SYNC requires an NVIDIA GeForce GTX 1070 BOOST GPU or higher. For more information, visit the nVidia® website: http://www.nvidia.com/page/home.html

•) — 1
Ш	2
П	— з
Ш	4
0	5

External controls

1	Power button	Turns the monitor on/off.Blue indicates power on. Amber indicates standby/ power saving mode.		
2	Function key	Press to view Main page. Press again to enter hotkey1 function. When the Function Menu is active, press this key to view the basic information for your monitor and current input or reset the custom color settings to the factory defaults.		
3	Function key	Press to view Main page.Press again to enter hotkey2 function. When the Function Menu is active, press this button to select select scenario mode or game mode .		
4	Function key	Press to view Main page.Press again to enter Input select function. When the Function Menu is active, this button will quit the OSD.		
5	Function key	Press to view Main page.Press again to enter next function in the Function Menu. The single toggle button on the backside of the Display bezel operates like a joystick. To move the cursor, simply toggle the button in four directions. Press the button to select desired option.		

Note: Acer monitor is purposed for video and visual display of information obtained from electronic devices.

Regulations and safety notices

FCC notices

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- · Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CE declaration of conformity

Hereby, Acer Inc., declares that this LCD monitor is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive (2014/53/EU), and RoHS Directive 2011/65/EU and Directive 2009/125/EC with regard to establishing a framework for the setting of eco design requirements for energy-related product.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with EMC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user authority, which is granted by the Federal Communications Commission, to operate this product.

In order to prevent damage to the monitor, do not lift the monitor by its base.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

CAN ICES-3(B)/NMB-3(B)

Disposal of waste equipment by user in private household in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

SPECIFICATION

	Driving system	TFT Color LCD		
	Size	24.5"W (62cm)		
	Pixel pitch	0.28mm(H) x 0.28mm(V)		
	Brightness	Native 400nits, HDR400 mode: pe	eak 400nits	
	Contrast	1000:1 (Native)		
LCD Panel	Viewable angle	178° (H) 178° (V) (CR≥10) (Typical)		
LCD Panel	Response time	1ms (G to G) 0.3ms (G to G) min		
	Panel Type	In-Plane Switching		
		HDMI(2.0):30~291KHz		
	H-Frequency	DP(1.4):30~466KHz		
	V-Frequency	HDMI(2.0):24~240Hz		
	v-i requericy	DP(1.4):24~360Hz		
Display Colors		16.7M Colors		
Dot Clock		600MHz	600MHz	
Max. Resolution		Normal mode:		
		HDM: 1920x1080 @240Hz		
		DP: 1920x1080 @360Hz VESA DDCCI/DDC2B		
Plug & Play				
Dower consumption	ON Mode	37W		
Power consumption	Standby Mode	0.5W		
	Off Mode	0.3W		
		DP (Only DP Model)(Optional) HDMI (Only HDMI Model)		
Input Connector		USB Hub / USB3.0 x 3, USB2.0 x	1(Only USB Hub Model)	
		USB-B (Only USB-B Model)		
		DP (Only DP Model)(Optional)		
Input Video Signal		HDMI signal (Only HDMI-Input Model)		
		USB (Only USB Model)		
Speakers			2W x 2	
Audio		Audio-Output (Only Audio-Output Model)		
Maximum Screen Size		Horizontal:543mm Vertical:302mm		
Power Source		100-240V~, 50/60Hz		
Environmental		Operating Temp: 0° to 40°C		
Considerations		Storage Temp: -20° to 60°C		
		Operating Humidity: 20% to 80%		
Dimensions			557(W) x 411~507(H) x 236 (D)mm	
Weight (N. W.)		5.88kg Unit (net)		
		Tilt: -5° to 25° Swivel: +/-20°		
Mechanism spec		Height adjustment: 115mm		
		Pivot: Yes		
		Detachable foot stand: Yes		
		Peak white (nits)	Refresh Rate Num	
		Contrast Blue Light	Aim Point Language	
		Dark Boost	OSD Timeout	
		Backlight Response	Transparency	
		SDR/HDR Variable Backlight	OSD Lock	
		Auto Brightness	Auto Switch Input	
	Functions	Max Brightness Relative Gamma	Input	
F. da I		Color Temp.	Lighting Hot Key Assignment	
External Controls:		ColorSense	ProxiSense	
Controls.		DP YCbCr sRGB	Rest Reminder	
		HDMI YCbCr sRGB 6-axis color	Deep Sleep	
		Volume	Quick Start Mode Power-off USB Charge	
		G-SYNC Esports	Reset	
		NVIDIA Reflex Latency Analyzer		
		NVIDIA ULMB		
		Over Drive		
* Specifications may vary	depending on model, ski	and/or region.		
,				

Find manuals and other documents for your Acer product on the official Acer support website.