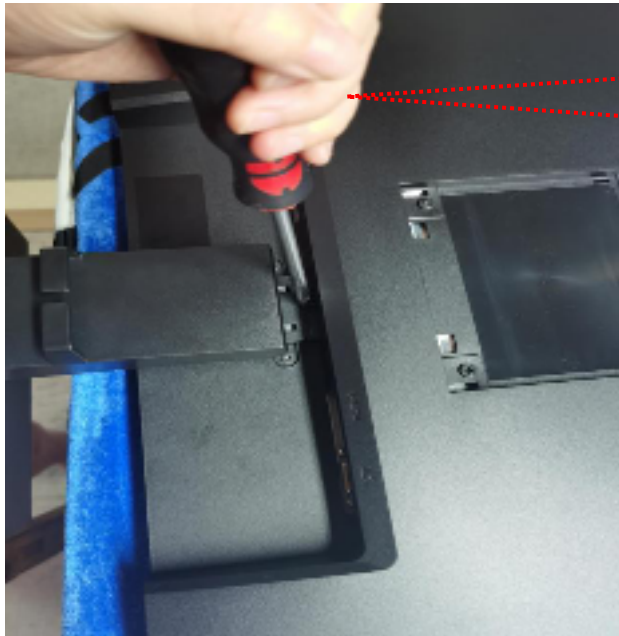

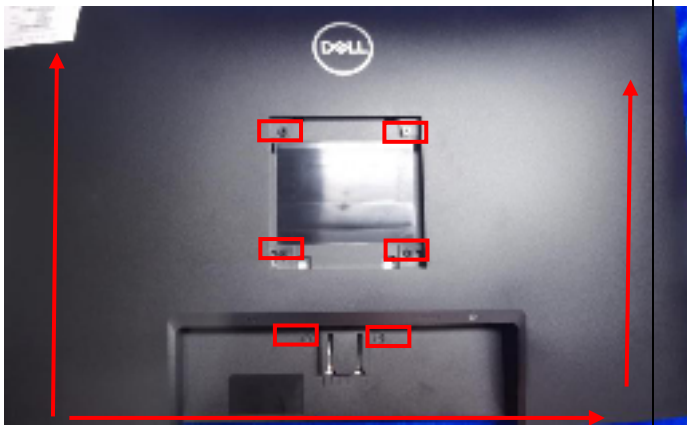


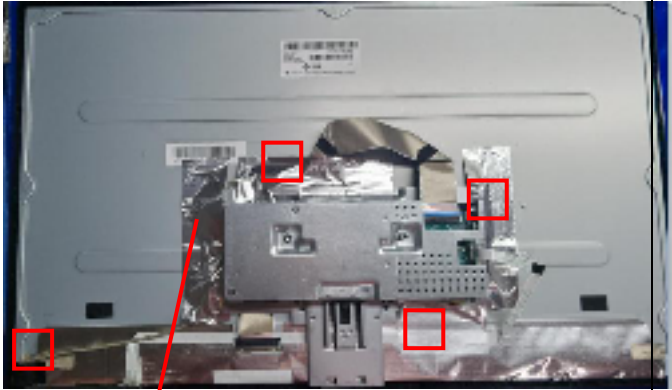
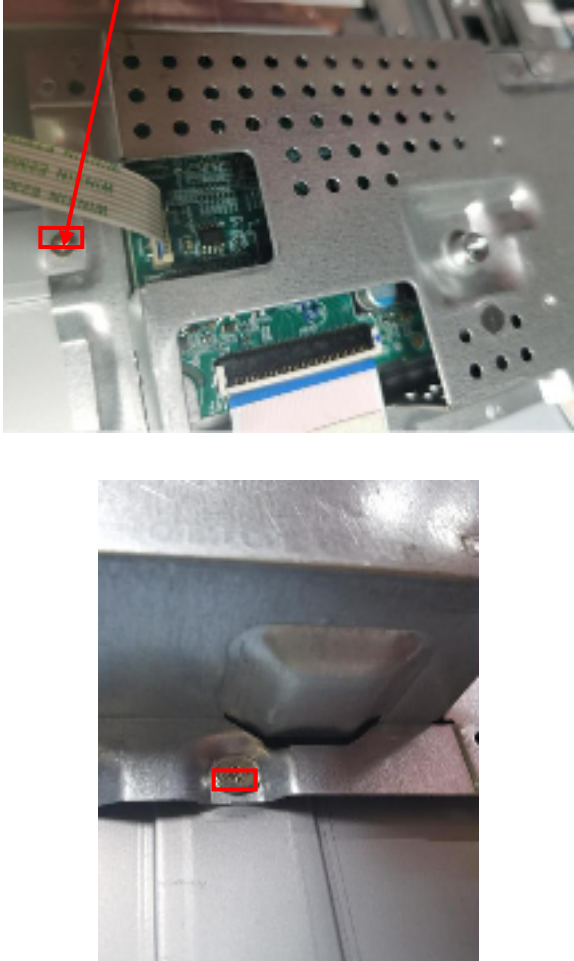
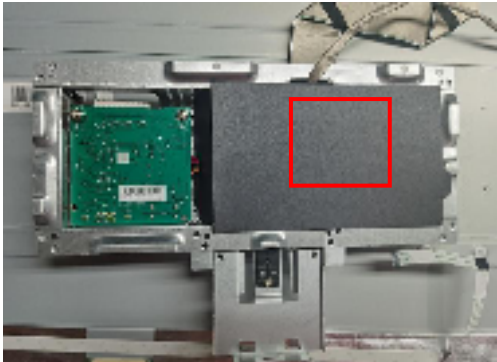
## 8. Mechanical Instruction

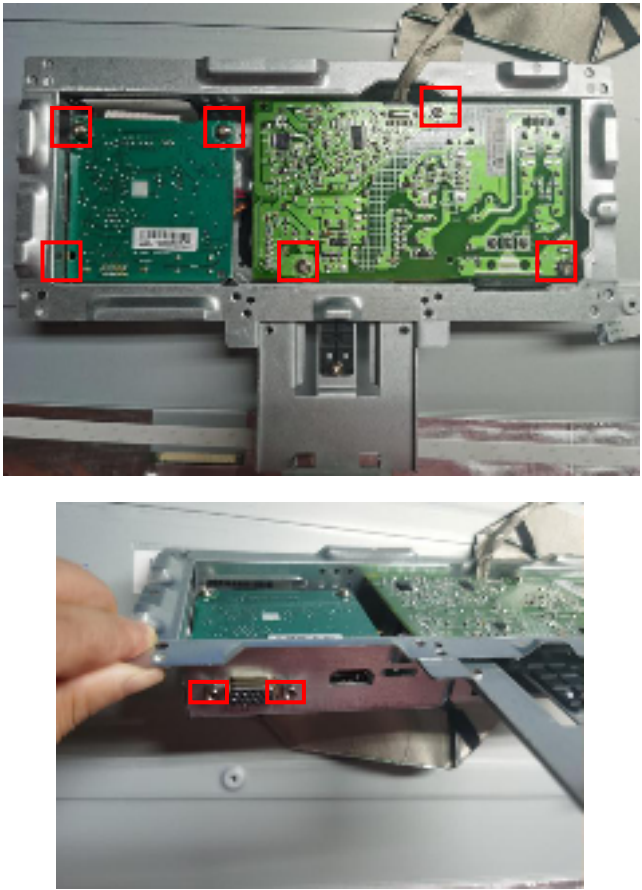


### 8.1.1 Disassembly Procedures (E2722H)

Tools: 2 Power screwdrivers ( $\phi=5\text{mm}$ ,  $L=60\text{mm}$ ); 1 small cross screwdriver; turnbuckle driver;

Setting: Power screwdriver torque A=6 kgF.Cm

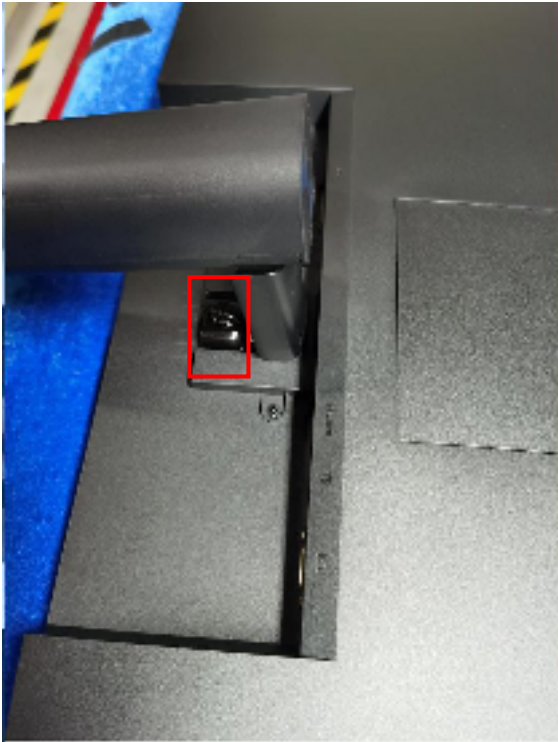
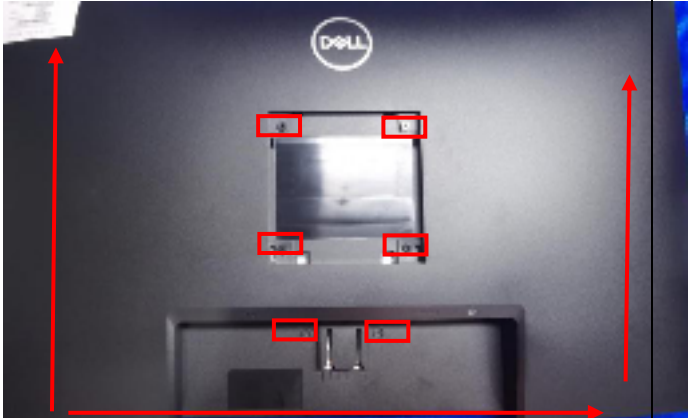

Step	Figure	TOOL	Remark
Remove the Base ass'y.			<p>Use the tip of the screw driver to press the hidden button and pull out the stand.</p> <p>Note: Put the monitor on a flat, soft and clean surface. Unscrew the 4 screws by the Philips-head Screwdriver.</p>
Remove the rear cover			Unscrew the 4 screws by the Philips-head Screwdriver and insert the scraper into the button site to open the rear cover

<p>Disconnect the cables</p>			<p>Remove the connectors and tapes</p>
<p>Remove the mainframe</p>			<p>Unscrew the two screws on the two sites of mainframe</p>
			<p>remove the mylar on the powerboard</p>

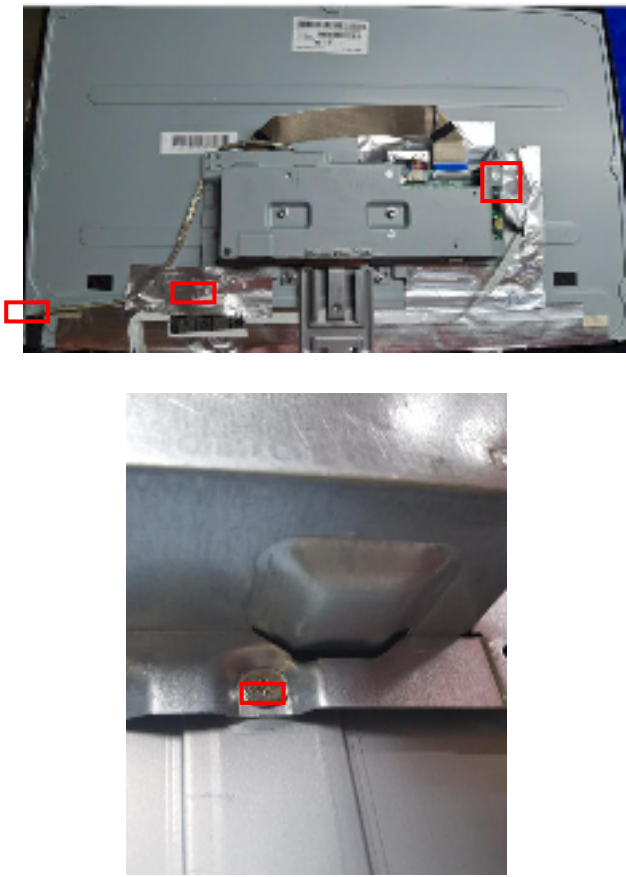
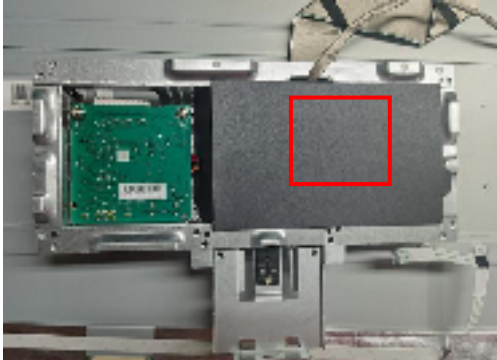
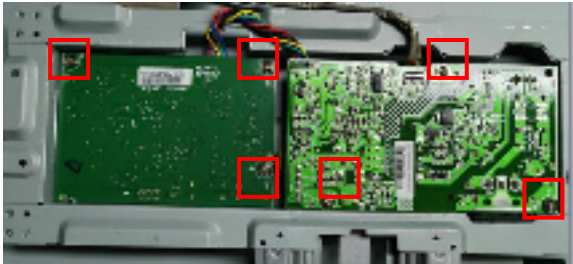
Remove the mainboard and power board			<p>Unscrew the screws on the boards</p> <p>Unscrew the two Hexagonal screws</p>
Mainboard and powerboard			
panel			




### 8.1.2Disassembly Procedures（E2722HS）

Step	Figure	TOOL	Remark
------	--------	------	--------

<p><b>Remove the Base ass'y.</b></p>			<p>Unscrew the screw loosely by hand and pull out the stand.</p> <p>Note:</p> <p>Put the monitor on a flat, soft and clean surface.</p>
<p><b>Remove the rear cover</b></p>			<p>Unscrew the 4 screws by the Philips-head Screwdriver and insert the scraper into the button site to open the rear cover</p>
			<p><b>Disconnect speaker cables</b></p>



<p><b>Remove the mainframe</b></p>			<p>Remove all the aluminum foil and the cable connectors and Unscrew the two screws on the two sites of mainframe</p>
			<p>remove the mylar on the powerboard</p>
<p><b>Remove the mainboard and power board</b></p>			<p>Unscrew the screws on the boards</p>

			Unscrew the two Hexagonal screws
Mainboard and powerboard			
panel			

## 8.2. Product material information

The following substances, preparations, or components should be disposed of or recovered separately from other WEEE in compliance with Article 4 of EU Council Directive 75/442/EEC.

Capacitors / condensers (containing PCB/PCT)	No used
Mercury containing components	No used
Batteries	No used
Printed circuit boards (with a surface greater than 10 square cm)	Product has printed circuit boards (with a surface greater than 10 square cm)
Component contain toner, ink and liquids	No used
Plastic containing BFR	No used
Component and waste contain asbestos	No used
CRT	No used
Component contain CFC, HCFC, HFC and HC	No used

Gas discharge lamps	No used
LCD display > 100 cm <sup>2</sup>	Product has an LCD greater than 100 cm <sup>2</sup>
External electric cable	Product has external cables
Component contain refractory ceramic fibers	No used
Component contain radio-active substances	No used
Electrolyte capacitors (height > 25mm, diameter > 25mm)	Product has electrolyte capacitors (height > 25mm, diameter > 25mm)

### 8.3. Tools Required

List the type and size of the tools that would typically can be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description:

- Screwdriver (Phillip-head, Hexagonal head)
- Penknife