SAMSUNG

User manual

TC222L TC242L

The color and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.

BEFORE USING THE	7 7	Copyright
FRODUCT	8	Cleaning
	9	Securing the Installation Space
	9	Precautions for storage
	10 10 11 12 14	Safety Precautions Symbols Electricity and Safety Installation and Safety Operation and Safety
	18	Correct posture to use the product
PREPARATIONS	19 19	Checking the Contents Checking the Components
	20 20 22 23	Parts Frontal Buttons Rear View Side View
	24 25 25 26 28	Installation Attaching the Stand Adjusting the Product Tilt and Height Rotating the Monitor Installing a Wall-mount Kit or Desktop Stand Anti-theft Lock
JSING THE SOFTWARE	29 29	Using IGEL OS - "common" General System Information
	30 33 34 36 38	Using IGEL OS - "Sessions" Citrix ICA Sessions Citrix StoreFront / Web Interface RDP Sessions Horizon Client Sessions Media Player

l

	40 40	Using IGEL OS - "Accessories" Network Diagnostics
	41 41 43	Using IGEL OS - "User Interface" Screen Screen Saver and Screen Lock
	44 44	Using IGEL OS - "Network" LAN Interfaces
	45 45	Using IGEL OS - "Devices" USB Storage Devices
CONNECTING AND USING A SOURCE DEVICE	46 46	Before Connecting Pre-connection Checkpoints
	46 46	Connecting and Using a PC Connection Using the D-SUB Cable (Analog Type)
	47 48 48 49 50	Connecting to a Dual Monitor Connecting to Headphones Connecting a Microphone Connecting the Power Setting Optimum Resolution
SCREEN SETUP	51 51	Brightness Configuring Brightness
	52 52	Contrast Configuring Contrast
	53 53	Sharpness Configuring Sharpness
	54 54	Eye Saver Mode Configuring Eye Saver Mode
	55 55	Game Mode Configuring Game Mode

	56 56	SAMSUNG MAGIC Bright Configuring SAMSUNG MAGIC Bright
	57 57	SAMSUNG MAGIC Angle Configuring SAMSUNG MAGIC Angle
	59 59	SAMSUNG MAGIC Upscale Configuring SAMSUNG MAGIC Upscale
	60 60	Image Size Changing the Image Size
	61 61	H-Position & V-Position Configuring H-Position & V-Position
	62 62	Coarse Adjusting Coarse
	63 63	Fine Adjusting Fine
CONFIGURING TINT	64 64	Red Configuring Red
	65 65	Green Configuring Green
	66 66	Blue Configuring Blue
	67 67	Color Tone Configuring the Color Tone Settings
	68 68	Gamma Configuring Gamma
RESIZING OR RELOCATING THE	69 69	Language Changing the Language
SCREEN	70 70	Menu H-Position & Menu V-Position Configuring Menu H-Position & Menu V- Position

	71 71	Display Time Configuring Display Time
	72 72	Transparency Changing Transparency
SETUP AND RESET	73 73	Reset All Initializing Settings (Reset All)
	74 74	Smart Eco Saving Configuring Smart Eco Saving
	75 75 77	Off Timer Plus Configuring Off Timer Configuring Eco Timer
	79 79	Key Repeat Time Configuring Key Repeat Time
INFORMATION MENU AND OTHERS	80 80	INFORMATION Displaying INFORMATION
	81	Configuring Brightness, Contrast and Sharpness from the Initial Screen
TROUBLESHOOTING GUIDE	82 82 82 82	Requirements Before Contacting Samsung Customer Service Center Testing the Product Checking the Resolution and Frequency Check the following
	85	Q & A
SPECIFICATIONS	87 88	General Standard Signal Mode Table

APPENDIX 90

Responsibility for the Pay Service (Cost to Customers)

Not a product defect

Terminology

- A Product damage caused by customer's fault Others
- 91

90

90

90

INDEX

Table Of Contents6

Copyright

The contents of this manual are subject to change without notice to improve quality.

© 2016 Samsung Electronics

Samsung Electronics owns the copyright for this manual.

Use or reproduction of this manual in parts or entirety without the authorization of Samsung Electronics is prohibited.

Microsoft, Windows are registered trademarks of Microsoft Corporation.

VESA, DPM and DDC are registered trademarks of the Video Electronics Standards Association.

Ownership of all other trademarks is attributed to their due owner.

- An administration fee may be charged if either
 - (a) an engineer is called out at your request and there is no defect in the product (i.e, where you have failed to read this user manual).
 - (b) you bring the unit to a repair center and there is no defect in the product (i.e, where you have failed to read this user manual).
- The amount of such administration charge will be advised to you before any work or home visit is carried out.

Icons used in this manual

The following images are for reference only. Real-life situations may
differ from what is shown in the images.

Cleaning

Exercise care when cleaning as the panel and exterior of advanced LCDs are easily scratched.

Take the following steps when cleaning.



- 1. Power off the monitor and computer.
- 2. Disconnect the power cable from the monitor.

3. Wipe the monitor screen using a clean, soft and dry cloth.



Hold the power cable by the plug and do not touch the cable with wet hands. Otherwise, an electric shock may result.



- Do not apply a cleaning agent that contains alcohol, solvent, or surfactant to the monitor.



Do not spray water or detergent directly on the product.



4. Wet a soft and dry cloth in water and wring thoroughly to clean the exterior of the monitor.



- 5. Connect the power cable to the product after cleaning the product.
- 6. Power on the monitor and computer.

Securing the Installation Space

• Ensure some space around the product for ventilation. An internal temperature rise may cause fire and damage the product. Be sure to allow the amount of space as shown below or greater when installing the product.



The exterior may differ depending on the product.



Precautions for storage

Ľ

Be sure to contact Samsung Customer Service Center if the inside of the monitor needs cleaning. (Service fee will be charged.)

Safety Precautions

Caution RISK OF ELECTRIC SHOCK DO NOT OPEN Caution: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.



Symbols

🔔 Warning	A serious or fatal injury may result if instructions are not followed.
Caution	Personal injury or damage to properties may result if instructions are not followed.
\oslash	Activities marked by this symbol are prohibited.
	Instructions marked by this symbol must be followed.

Electricity and Safety



The following images are for reference only. Real-life situations may differ from what is shown in the images.

🔔 Warning



Do not use a damaged power cable or plug, or a loose power socket.

An electric shock or fire may result.



Do not plug many products into the same power socket.

• Otherwise, the socket may overheat and cause a fire.



Do not touch the power plug with wet hands.

• Otherwise, an electric shock may result.



Insert the power plug all the way in so it is not loose.

• An unstable connection may cause a fire.



Connect the power plug to a grounded power socket (type 1 insulated devices only).

An electric shock or injury may result.



Do not bend or pull the power cable with force. Do not weigh the power cable down with a heavy object.

Damage to the cord may result in a fire or electric shock.
 Do not place the power cable or product near heat sources.



An electric shock or fire may result.



Clean any dust around the pins of the power plug or the power socket with a dry cloth.

Otherwise, a fire may result.

Caution



Do not unplug the power cable when the product is in use.

The product may become damaged by an electric shock.



Do not use the power cable for products other than authorized products supplied by Samsung.

• An electric shock or fire may result.



- Keep the power socket where the power cord is connected unobstructed.
- The power cord must be disconnected to cut off power to the product when an issue occurs.

Power to the product cannot be completely cut off with the power button.

Hold the plug when disconnecting the power cable from the power socket.



An electric shock or fire may result.

Installation and Safety

🚹 Warning



DO NOT PLACE CANDLES, INSECT REPELLANTS OR CIGARETTES ON TOP OF THE PRODUCT. DO NOT INSTALL THE PRODUCT NEAR HEAT SOURCES.

• Otherwise, a fire may result.



Avoid installing the product in a narrow space with bad ventilation, such as a bookshelf or wall closet.

Otherwise, a fire may result due to an increased internal temperature.



Keep the plastic packaging bag for the product in a place that cannot be reached by children.

Children may suffocate.



Do not install the product on an unstable or vibrating surface (insecure shelf, sloped surface, etc.).

- The product may fall and break or cause a personal injury.
- Using the product in an area with excess vibration may damage the product or cause a fire.



Do not install the product in a vehicle or a place exposed to dust, moisture (water drips, etc.), oil, or smoke.



An electric shock or fire may result.



Do not expose the product to direct sunlight, heat, or a hot object such as a stove.

Otherwise, the product lifespan may be reduced, or a fire may result.

Do not install the product within the reach of young children.

The product may fall and injure children.



Edible oil, such as soybean oil, can damage or deform the product. Do not install the product in a kitchen or near a kitchen counter.





Take care not to drop the product when moving it.

Otherwise, product failure or personal injury may result.



Do not set down the product on its front.

The screen may become damaged.



When installing the product on a cabinet or shelf, make sure that the bottom edge of the front of the product is not protruding.

- The product may fall and break or cause a personal injury.
- Install the product only on cabinets or shelves of the right size.



Put down the product carefully.

• The product may fall and break or cause a personal injury.



Installing the product in an unusual place (a place exposed to a lot of fine dust, chemical substances, extreme temperatures or a significant presence of moisture, or a place where the product will operate continuously for an extended period of time) may seriously affect its performance.

Be sure to consult Samsung Customer Service Center before installation if you want to install the product at such a place.

Operation and Safety





High voltage runs through the product. Do not attempt to disassemble, repair, or modify the product on your own.

- An electric shock or fire may result.
- Contact Samsung Customer Service Center for repair.



To move the product, first disconnect all the cables from it, including the power cable.

Otherwise, the power cord may be damaged and a fire or electric shock may result.



If the product generates a strange noise, a burning smell, or smoke, remove the power cable immediately and contact Samsung Customer Service Center.

An electric shock or fire may result.



Do not let children hang from the product or climb on top of it.

The product may fall, and your child may become injured or seriously harmed.



If the product is dropped or the outer case is damaged, turn off the power and disconnect the power cord. Then contact the Samsung Customer Service Center.

• Otherwise, an electric shock or fire may result.



Do not put a heavy object, toy, or sweets on top of the product.

The product or heavy objects may fall as children try to reach for the toy or sweets resulting in a serious injury.



During a lightning or thunderstorm, power off the product and remove the power cable.

An electric shock or fire may result.



Do not drop objects on the product or apply impact.

An electric shock or fire may result.



Do not move the product by pulling the power cable or any cable.

Otherwise, the cable may be damaged and product failure, an electric shock or fire may result.



If a gas leakage is found, do not touch the product or power plug. Also, ventilate the area immediately.



Sparks can cause an explosion or fire.



Do not lift or move the product by pulling the power cable or any cable.

Otherwise, the cable may be damaged and product failure, an electric shock or fire may result.



Do not use or keep combustible spray or an inflammable substance near the product.

An explosion or fire may result.



Ensure the vents are not blocked by tablecloths or curtains.

Otherwise, a fire may result from an increased internal temperature.



Do not insert a metallic object (a chopstick, coin, hair pin, etc.) or inflammable object (paper, match, etc.) into the vent or ports of the product.

- If water or any foreign substance enters the product, be sure to power off the product, remove the power cable, and contact Samsung Customer Service Center.
- Product failure, an electric shock or fire may result.



Do not place objects containing liquid (vases, pots, bottles, etc) or metallic objects on top of the product.

- If water or any foreign substance enters the product, be sure to power off the product, remove the power cable, and contact Samsung Customer Service Center.
- Product failure, an electric shock or fire may result.

Caution



Leaving the screen fixed on a stationary image for an extended period of time may cause afterimage burn-in or defective pixels.

If you are not going to use the product for an extended period of time, activate power-saving mode or a moving-picture screen saver.



Disconnect the power cable from the power socket if you do not plan on using the product for an extended period of time (vacation, etc.).

Otherwise, a fire may result from accumulated dust, overheating, an electric shock, or electric leakage.

Use the product at the recommended resolution and frequency.

Your eyesight may deteriorate.



Do not put AC/DC power adapters together.

Otherwise, a fire may result.

Remove the plastic bag from the AC/DC power adapter before you use it.



Otherwise, a fire may result.

Do not let water enter the AC/DC power device or get the device wet.



- An electric shock or fire may result.
- Avoid using the product outdoors where it can be exposed to rain or snow.
- Be careful not to get the AC/DC power adapter wet when you wash the floor.





Otherwise, a fire may result.



Keep the AC/DC power adapter in a well-ventilated area.



If you place the AC/DC power adapter so that it is hanging with the cord input facing upwards, water or other foreign substances could enter the Adapter and cause the Adapter to malfunction.

Make sure to rest the AC/DC power adapter flat on a table or the floor.



Looking at the screen too close for an extended period of time can deteriorate your eyesight.



Do not hold the monitor upside-down or move it by holding the stand.

The product may fall and break or cause a personal injury.



Do not use humidifiers or stoves around the product.

An electric shock or fire may result.

Rest your eyes for more than 5 minutes for every 1 hour of product use.



Eye fatigue will be relieved.



Do not touch the screen when the product has been turned on for an extended period of time as it will become hot.



Store the small accessories used with the product out of reach of children.



Exercise caution when adjusting the product angle or stand height.

- Otherwise, children's fingers or hands may become stuck and injured.
- Tilting the product excessively may cause it to fall and result in personal injury.

Do not place heavy objects on the product.



Product failure or personal injure may result.



When using headphones or earphones, do not turn the volume too high.

Having the sound too loud may damage your hearing.

Correct posture to use the product



Use the product in the correct posture as follows:

- Straighten your back.
- Allow a distance of 45 to 50 cm between your eye and the screen, and look slightly downward at the screen.

Keep your eyes directly in front of the screen.

- Adjust the angle so light does not reflect on the screen.
- Keep your forearms perpendicular to your upper arms and level with the back of your hands.
- Keep your elbows at about a right angle.
- Adjust the height of the product so you can keep your knees bent at 90 degrees or more, your heels attached to the floor, and your arms lower than your heart.

1.1 Checking the Contents

1.1.1 Checking the Components

- Contact the dealer from whom you purchased the product if any item is missing.
 - The pictures may look different from the actual components.

Components

K



Quick Setup Guide



AC/DC power adapter (Detachable)



Warranty card (Not available in some locations)



Power cable (Only provided with the detachable AC/DC power adapter)



Regulatory guide



Stand base

K

Components may vary depending on the country.

1.2 Parts

1.2.1 Frontal Buttons



The color and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.



Icons	Description		
	Open or close the onscreen display (OSD) menu, or return to the parent menu.		
	• OSD control lock: Maintain the current settings, or lock the OSD control to prevent unintended changes to settings.		
	Enable: To lock the OSD control, press the [MENU] button for 10 seconds.		
MENU	Disable: To unlock the locked OSD control, press the [MENU] button for more than 10 seconds.		
	If the OSD control is locked,		
	 <u>Brightness</u> and <u>Contrast</u> can be adjusted. <u>Eye Saver Mode</u> is available. <u>INFORMATION</u> can be viewed. 		
	 The Eye Saver Mode function can be used by pressing the [M] button. (The Eye Saver Mode is available even when the OSD control is locked.) 		
	Press [
A	The items below are not available if the Eye Saver Mode function is enable.		
	• PICTURE \rightarrow Brightness, <u>Game Mode</u> , ^{SAMSUNG} Bright, ^{SAMSUNG} Angle		
	• COLOR		
	SETUP&RESET → <u>Smart ECO Saving</u>		

Icons	Description		
▼/▲/⊙	Move to the upper or lower menu or adjust the value for an option on the OSD menu.		
	Confirm a menu selection.		
	Pressing the [, button when the OSD menu is not displayed will change the input source (Client/Analog). If you power on the product or change the input source by pressing the [, button, a message that shows the changed input source will appear at the top left corner of the screen.		
	Press the [AUTO] button to automatically adjust the screen settings.		
AUTO	• Available only in Analog mode.		
	 Changing the resolution in Display Properties will activate the Auto Adjustment function. 		
	Use this button for turning the Display on and off.		
C	Pressing the power button for more than 4 seconds forces the product to shut down.		
	• The power indicator will be lit when the product is operating normally.		
	 To reduce power consumption, it is best to remove the power cable when you will not be using the product for an extended period of time. 		
	Press one of the buttons on the monitor, Function Key Guide will appear on the screen. (This does not apply to the power button.)		
A Function Key Guide	If you press a button on the front of the monitor, an Function Key Guide will display showing the function of the button before the menu for the pressed button appears.		
	To go to the menu, press the button on the front of the monitor again.		
	Function Key Guide may vary according to functions and models. Please refer to actual product.		

1.2.2 Rear View



The color and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.



Port	Description	
۲	Connects to the AC/DC power adapter.	
	Connects to a Monitor device using the DVI or DVI to RGB cable.	
	Connect to a network using the LAN cable.	
	Connect to a USB device. Installation of a USB driver may be needed, depending on the USB device. Contact the USB device manufacturer for more information.	
۵	Speaker	

1.2.3 Side View



The color and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.



Port	Description	
\bigcirc	Connect to an audio output device such as headphones.	
MIC	Connect to a microphone.	
	 Connect to a USB device. Compatible with a USB cable version 3.0 or lower. Source devices can be charged using these USB ports. Installation of a USB driver may be needed, depending on the USB device. Contact the USB device manufacturer for more information. 	
RGB IN	Connects to a PC device using the D-SUB cable.	

1.3 Installation

1.3.1 Attaching the Stand

Before assembling the product, place the product down on a flat and stable surface so that the screen is facing downwards.



Place a protective cloth or cushion on a flat surface. Next, place the product with the face down on top of the cloth or cushion.



Insert the stand base into the stand in the direction of the arrow.



Do not remove the fixing pin until you are finished attaching the stand.





Fasten the screw tightly (using a A screwdriver or coin) into the t bottom of the stand base.

After installing the stand, place You car the product upright. And adj

You can remove the fixing pin and adjust the stand now.



- Caution

Do not hold the product upside down only by the stand.



- Disassembly is the reverse order of assembly.
- The color and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.

1.3.2 Adjusting the Product Tilt and Height



The color and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.





- To adjust the height, remove the fixing pin.
- The monitor tilt and height can be adjusted.
- When adjusting the tilt and height, hold both sides of the product and avoid using excessive force to prevent damage.
- The rotation and height adjustment has a certain tolerance. Stay within the tolerances when rotating or adjusting the height of the product.

1.3.3 Rotating the Monitor

You can rotate your monitor as shown below.





Be sure to fully extend the stand before rotating the monitor.

- If you rotate the monitor without fully extending the stand, the corner of the monitor may hit the floor and get damaged.
- Do not rotate the monitor counterclockwise. The monitor may get damaged.

Installing a Wall-mount Kit or Desktop Stand 1.3.4

Before Installation



Power the product off and remove the power cable from the power socket.







Unfasten the screw from the back of the product.

Lift and detach the stand.

Place a protective cloth or cushion on a flat surface. Next, place the product with the face down on top of the cloth or cushion.

Installing a Wall-mount Kit or Desktop Stand









A ttach the wall-mount kit or desktop stand here

B Bracket (sold separately)

Align the grooves and tightly fasten the screws on the bracket on the product with the corresponding parts on the wall-mount kit or desktop stand you want to attach.

👩 Notes

- Using a screw longer than the standard length can damage the internal components of the product.
- The length of screws required for a wall mount that does not comply with the VESA standards may vary depending on the specifications.
- Do not use screws that do not comply with the VESA standards. Do not attach the wall-mount kit
 or desktop stand using excessive force. The product may get damaged or fall and cause personal
 injury. Samsung shall not be held liable for any damage or injury caused by using improper screws
 or attaching the wall-mount kit or desktop stand using excessive force.
- Samsung shall not be held liable for any product damage or personal injury caused by using a wallmount kit other than the one specified or from an attempt to install the wall-mount kit on your own.
- To mount the product on a wall, ensure you purchase a wall-mount kit that can be installed 10 cm or farther away from the wall.
- Be sure to use a wall-mount kit that complies with the standards.
- To install the monitor using a wall mount, disconnect the stand base from the monitor.

1.3.5 Anti-theft Lock

An anti-theft lock allows you to use the product securely even in public places. The locking device shape and locking method depend on the manufacturer. Refer to the user guide provided with your anti-theft locking device for details. The lock device is sold separately.



To lock an anti-theft locking device:

- 1 Fix the cable of your anti-theft locking device to a heavy object such as a desk.
- 2 Put one end of the cable through the loop on the other end.
- 3 Insert the locking device into the anti-theft lock slot at the back of the product.
- 4 Lock the locking device.
- An anti-theft locking device can be purchased separately.
 - Refer to the user guide provided with your anti-theft locking device for details.
 - Anti-theft locking devices can be purchased at electronics retailers or online.



2.1 Using IGEL OS - "common"

2.1.1 General System Information

Within the **Application Launcher**, the **Information** page has important system data, such as the firmware version, licensed services and hardware specifications.



Details of the current network configuration with the IP address and device name are also provided.



2.2 Using IGEL OS - "Sessions"

2.2.1 Citrix ICA Sessions

K

 $\texttt{Menu path: Setup} \rightarrow \texttt{Sessions} \rightarrow \texttt{Citrix XenDesktop} \ / \ \texttt{XenApp} \rightarrow \texttt{Legacy ICA Sessions}$

If a session is created or edited, you can change the ICA session settings if they differ from the global settings.



The primary source of further information on Citrix connections should always be the relevant Citrix documentation. This manual provides only general configuration tips.



Server

🔮 IGEL Setup 5.00.500.01 (Dulid 5.1.19) 💶 🗄 🛪		
8 8 / * Sec	ions 🗶 Citris Xerchenicoso (XernApp 🗶 Legacy KA Sections 🗶 KA Section 🗶 Server	
Configuration Descent A Configuration Configurat	Image: Service I Lagor: Window Prevent Paccented Opening Image: Service I Compare I Destring Image: Service I Compare I Destring Image: Service I Compare I Destring	
 Gegecy/CA Selectors CA Section 	Caracterized Second Second Second Second Second Second Second Second	Contract of Contractory
Server	E Derit we default sever location	NOCTION Statedown
E Paconed Cotions	1 1	
E Desitup Integri > Cora Starefront / We	7 13	
- Citrix Access Gatawa	3 0	
In Entron Dant	4 4	
= 004 = = Browner	5 10 15	
 Media Player Sits Sessions 	B Ditris Server E Published Application	
Accessores •	Sever	- Ordene -
Antonik V Devices V	Applexton	
security ·	working breatory	
Search V		
		Nov (2010)

Browser Protocol	Allows you to select the protocol needed for transmission or global standard settings	
Don't use default server location	Lists the standard server requirements for each protocol separately	
Server	 By clicking Browse, you send a transmission signal which queries all available servers and published applications. By selecting the server, the user is connected to the entire desktop as if logging on at the server itself. As a result, all applications, rights and settings contained in the user's profile (the local server profile) are available. If one of the published applications is selected, the session is opened in a window which contains just one application. The session is ended if you close this application. You can also manually enter the IP address or the host name of the server in the Server field. 	
Application	If you have entered the server manually, you can specify a published application here. These fields are automatically filled in if you have selected one of the recognized published applications.	
Working Directory	Details of the application's work directory path name.	



Logon



Use Kerberos Passthrough authentication for the session	Enables single sign-on for this ICA session if Log on to the thin client with AD/Kerberos is configured. The server must also be configured for pass-through authentication. When launching the ICA session, it is no longer necessary to enter a user name and password again.
Use Passthrough authentication for the session	Enables single sign-on for this ICA session if Log on to the thin client with AD/Kerberos is configured. Because the user name and password are temporarily stored when logging on to the thin client, they no longer need to be entered again when launching a session.
User Name, Password, Domain	A user name, password and domain for the ICA session can be entered here. These details are automatically forwarded to the server and no longer need to be entered on the logon screen.
Don't show Password Protection Window before Logon	This option switches the Windows splash screen on and off. This option must be disabled when logging on to Windows using a smartcard!



2.2.2 Citrix StoreFront / Web Interface

Menu path: Setup \rightarrow Sessions \rightarrow Citrix XenDesktop / XenApp \rightarrow Citrix StoreFront / Web Interface

Some of the settings are already configured under Global settings for ICA and in the ICA session setup.

• Select the start options for the Citrix XenApp session. Refer to **Desktop integration** for details.

Server

Menu path: Setup \rightarrow Sessions \rightarrow Citrix XenDesktop / XenApp \rightarrow Citrix StoreFront / Web Interface \rightarrow Server

- Under Server Location, specify the master browsers where published applications can be searched.
- You can include up to 5 Citrix master browsers per domain. If a browser is unavailable, the next browser will be queried. Please note that multiple farms can be searched. You can specify addresses for multiple server farms.
- Click on **Use Citrix XenApp Service Page** to obtain settings from the server. Configure published applications via the Citrix XenApp service page.

Logging on and off

- Enable Use Kerberos Pass-Through Authentication (Web Interface only) in order to use local logon data for listing and launching applications. The option enables Single Sign-on for XenApp if logon with AD/Kerberos is configured on the thin client.
- Enable **Use Pass-Through Authentication** in order to use temporarily stored logon data for listing and launching applications.
- You can synchronize your Citrix password with Screen Lock.



2.2.3 RDP Sessions

Menu path: Setup \rightarrow Sessions \rightarrow RDP \rightarrow RDP Sessions

The following configuration pages offer you detailed setup options for the session:



Server and Logon	Allows you to specify a server and a start application for the terminal server session. The necessary logon information is configured here. Otherwise, the terminal server logon window for entering the user and the password appears.
Gateway	Allows you to enable gateway support. Logon data for RD Gateway may also be specified here.
Window	Allows you to specify the size of the session window and the color mode. The local task bar can be configured so that it remains visible during a full-screen session.
Keyboard	Allows you to specify the keyboard layout, scan codes and the direct connection between keyboard input and the Windows Server.
Mapping	Allows you to specify the audio output device (local/remote) and determine how key strokes and clipboard content are handled. The mapping of serial connections and local drives can be enabled for a session. You can make connected mass storage devices available to the user using the appropriate mapping: Select Enable , choose the drive letter and the device to be mapped.
Performance	Allows you to disable non-essential graphical functions, such as skin styles and window animation. This is useful in the event of performance problems.

Options	Allows you to specify the start application and the work directory for use during the session (how authentication errors are handled during the logon procedure). If, when connecting to the server, a terminal server gateway is to be used, you can configure the relevant settings here (No Gateway is pre-set).
USB Redirection	Allows you to specify native USB redirection
Multimedia	Allows you to specify video redirection.

Server

Menu path: Setup \rightarrow Sessions \rightarrow RDP \rightarrow RDP Sessions \rightarrow Session Name \rightarrow Server

In this area, you can overwrite the following server connection details and thus the standard settings:



Choose between Server and Enable RemoteApps Mode.

Server

To set up a server, proceed as follows:

- 1 Give the **Server** name or the IP address.
- 2 Define the **RDP Port** which is to be used for the connection.

The default port is 3389.

- 3 Under **Application**, specify a start-up application for the terminal server session.
- 4 Specify the **Working Directory**.
- 5 Enable **Changeable Server-URL on Local Logon** in order to allow the server to be entered freely. You must have enabled local logon in order to do this.

Otherwise, the terminal server logon window will be displayed so you can enter a user name and password. If the local logon is used (see above), the thin client's logon window will be shown.

If the **Pass-Through Authentication** option is enabled, the session with the local logon data for the terminal user, e.g. from the domain logon, is used. However, this setting will be overridden by the **Local Logon** global parameter. Do not use both options at the same time.





Microsoft RemoteApp

Like the published applications of a Citrix server, MS Windows Server 2008 offers the option of passing on RemoteApps to the thin client. Detailed instructions regarding server configuration can also be found on the Microsoft website: TS RemoteApp Step-by-Step Guide.

On the client side, only a few parameters need to be configured after enabling the RemoteApp mode.

Ľ

Please note that the name of the application to be launched must be preceded by two pipe characters (||), e.g. ||Excel.

2.2.4 Horizon Client Sessions

Menu path: Setup -> Sessions -> Horizon Client -> Horizon Client Sessions




Connection Settings

Menu path: Setup \rightarrow Sessions \rightarrow Horizon Client \rightarrow Horizon Client Sessions \rightarrow Session Name \rightarrow Connection Settings

In this area, you can specify the settings for the connection between the Horizon Client and the server.

- Server URL: URL of the VMware Horizon server
- Use Passthrough authentication for this session: If this option is enabled, the user name and password will be temporarily saved and used for authentication during this session.
- Username: User name when logging on to the VMware Horizon server
- User password: Password when logging on to the VMware Horizon server
- Domain: Domain when logging on to the VMware Horizon server
- Session Type: Specifies whether the session contains a desktop or an individual application. Possible values:
 - **Desktop**: The session contains a desktop.
 - **Application**: The session contains an individual application.
- **Desktopname**: Specifies a name for the desktop. This option is available if **Session Type** is set to **Desktop**.
- **Application**: Application that is launched during the session. This option is available if **Session Type** is set to **Application**.
- Autoconnect: If this option is enabled, the connection to the desktop or application is established automatically when the session starts. For this to be possible, the name of the desktop or application must be defined. If this option is disabled, the overview will be shown when the session starts.
- **Preferenced desktop protocol**: The selected option is preferred by the client when negotiating the connection protocol.
- Enable kiosk mode: If this option is enabled, the session will be held in kiosk mode.



2.2.5 Media Player

Menu path: Setup \rightarrow Sessions \rightarrow Media Player

Set up the Media Player for your multimedia applications here.

IGEL Linux supports the following multimedia formats and codecs out of the box:

- Ogg/Vorbis
- Ogg/Theora
- WAV
- FLAC

The following codecs are licensed via the separately available Multimedia Codec Pack:

	Supported Formats	Supported Codecs
With License	AVI	MP3
	MPEG	WMA stereo
	ASF (restricted under Linux)	WMV 7/8/9
	WMA	MPEG 1/2
	WMV (restricted under Linux)	MPEG4
	MP3	H.264
Without License	OGG	Vorbis
	WAV	Theora
	FLAC	WAV
		FLAC



Media Player Sessions

Menu path: Setup \rightarrow Sessions \rightarrow Media Player \rightarrow Media Player Sessions

You can set up your own personal Media Player sessions here.

- 1 Click on Add to create a new session.
- 2 Specify a **Session Name**.
- 3 Specify which **possible ways of launching the session** you would like. You may choose a number of options.
- 4 You may like to select the option of using **hotkeys** and define them.
- 5 You can also specify whether **autostart** (following a system start) and/or **restart** (after a connection is established) are to be used.
- 6 For the autostart option, you can also specify by how many seconds the session start is to be delayed.

As soon as you have set up a Media Player session of your own, it will appear in the structure tree under the **Media Player Sessions** directory. Your own session in turn contains three folders: **Playback**, **Options** and **Desktop Integration**.

Playback

Menu path: Setup \rightarrow Sessions \rightarrow Media Player \rightarrow Media Player Sessions \rightarrow Session Name \rightarrow Playback

Under Medium / File, give the path of the file which is to be played back when the session is launched.

Use the following formats:

/directory/filename or http://servername/filename.

For the window settings, you can choose whether you would like to carry over the global settings or use your own settings for this special session.

Options

Menu path: Setup \rightarrow Sessions \rightarrow Media Player \rightarrow Media Player Sessions \rightarrow Session Name \rightarrow Options

If necessary, you can change the pre-configured settings for the operating components here.

2.3 Using IGEL OS - "Accessories"

2.3.1 Network Diagnostics

Menu path: Setup \rightarrow Accessories \rightarrow Network Tools

The IGEL Universal Desktop Linux firmware features a number of tools for network analysis.

These include:

- Devices information
- Ping
- Netstat
- Traceroute
- Lookup



Devices Information

This tool provides information regarding the status of the network device used.

This includes:

- MAC and IP address
- Link speed
- Various interface statistics (bytes transferred, errors etc.)

Using the Software

2.4 Using IGEL OS - "User Interface"

2.4.1 Screen

Menu path: Setup \rightarrow User Interface \rightarrow Display



Color Depth	Allows you to select the desktop color depth. The following options are available:
	• 16 bits per pixel (High Color / 65,000 colors)
	• 24 bits per pixel (True Color / 16.7 million colors)



Make sure that all screens connected to the thin client support the color setting.

K

DDC	Allows you to activate the Display Data Channel in order to share information between the system and the screen. If screen problems should occur, enable and disable the DDC setting in the Options by way of a test. DDC is enabled by default and the native resolution supported by the screen is determined automatically.
Screen configuration	Extended screen connected to Samsung Linux thin client TC222L or TC242L can be configured independently. The position of the individual screens can be determined in relation to Screen.1. Click on Identify monitors to show the screen identifier on each device.

- For details of the display resolution supported by your IGEL thin client, please see its datasheet.
 - If you set the resolution higher than 1920x1080, Screen cannot be displayed.
 - In this case, you can reset the thin client to the default factory settings Reset to factory defaults
 - Resolution will be detected automatically.



2.4.2 Screen Saver and Screen Lock

Menu path: Setup \rightarrow User Interface \rightarrow Screen Lock/Saver

You can set up the screen saver so that it is activated either automatically or in response to a key combination (**Hotkey**). You can also select a password option. The look of the taskbar can be configured separately for the logon dialog and the locked screen.

Example configuration of a screen lock:

General

The screen can be locked via taskbar or desktop icons or using hotkey Ctrl-Shift-L.

Session Name	Lock Screen
Starting Methods for Session	
E Scart Merio	E scart menurs system tab
Paperson Launcher	Application Launcher is system the
M Desktop	E beskop context Menu
DE QUILE SLOT PARK	
Pierru faither	
Desktop felder	
Passward Protection None	×
🗹 Use Hotkey	
todrhens	Christiek

Options

The screen lock starts automatically after 5 minutes without user action at the thin client. The screen lock can be stopped by entering a user password or administrator password.



Taskbar

The locked screen does not display the taskbar until the logon dialog appears. The user can bring up a soft keyboard, e.g. to log on using touchscreen monitor.





2.5.1 LAN Interfaces

Menu path: Setup \rightarrow Network \rightarrow LAN Interfaces

Click on **Network** \rightarrow **LAN Interfaces** in the client setup.

Choose either automatic network setup with the protocols DHCP and BOOTP or manual network configuration in order to set the thin client for each network interface.

🗟 Activity default interface (Ethernet)		
Cas IP from DHEP Server C Spec B an P Address F Address		142.0.0.2
Katoch Hart		25535512552
Enfault Gatewory 📃 enable		
Tertynal Name		
Encline DNS		
Oulunt Persan		
Rebeierste		
Barnaware		
📄 variusily overwrite OHCP settings		
Dynamic DhS Registration		
Dynamic Dhis Pargerisi and Pethod	11	-
Sto key file for additional CRE authoritisation.		6



2.6 Using IGEL OS - "Devices"

2.6.1 USB Storage Devices

Menu path: Setup \rightarrow Devices \rightarrow Storage Devices

USB storage devices can be configured here.

Hotplug storage devices

Menu path: Setup \rightarrow Devices \rightarrow Storage Devices \rightarrow Storage Hotplug

In this area, you can set up the connection for hotplug storage devices. These can be, for example, USB mass storage devices or MMC card readers.

You can change the following settings:

- **Default permission**: Default access permissions for hotplug storage devices. Possible values:
 - Read/Write
 - Read only
- Enable dynamic client drive mapping. If this option is enabled, hotplug storage devices are automatically added and removed during ICA sessions and RDP sessions.
- Before you mechanically disconnect the hotplug storage device from the thin client, safely remove it. To do this, click on []] in the taskbar.
 - If the following warning is shown, "The device is still in use! Do NOT disconnect the device.", the hotplug storage device must not be removed.
 - Close either the named program or all open files or directories within a session located on the hotplug storage device.

3.1 Before Connecting

3.1.1 Pre-connection Checkpoints

- Before connecting a source device, read the user manual provided with it.
 The number and locations of ports on source devices may differ from device to device.
- Do not connect the power cable until all connections are completed.
 Connecting the power cable during connection may damage the product.
- Check the types of ports at the back of the product you want to connect.

3.2 Connecting and Using a PC

Select a connection method suitable for your PC.



Connecting parts may differ in different products.

3.2.1 Connection Using the D-SUB Cable (Analog Type)



Do not connect the power cable before connecting all other cables.

Ensure you connect a source device first before connecting the power cable.



- 1 Connect the D-SUB cable to the [RGB IN] port on the back of the product and the RGB port on the PC.
- 2 Connect the AC/DC power adapter to the product and a power socket. Next, turn on the power switch on the PC. (For details, refer to "3.2.5 Connecting the Power".)
- Press []/]/] to change the input source to Analog.

3.2.2 Connecting to a Dual Monitor

R

Do not connect the power cable before connecting all other cables.

Ensure you connect a source device first before connecting the power cable.



- 1 Connect [DVI-I OUT] on the product to [DVI IN] or [RGB IN] on another monitor using a DVI or DVI to D-SUB cable.
- 2 Connect the AC/DC power adapter to the product and a power socket. Next, turn on the power switch on the PC. (For details, refer to "3.2.5 Connecting the Power".)
- The [DVI-I OUT] port can be used only to connect to a dual monitor.
 - Connect to the [DVI-I OUT] port to display the same picture on another monitor such as the projector.

(For presentation purposes)

• The maximum resolution is 1920 x 1200 when a dual monitor is connected.

3.2.3 Connecting to Headphones

R

Do not connect the power cable before connecting all other cables. Ensure you connect a source device first before connecting the power cable.

1 Connect an audio output device (headphones) to $[\Omega_{1}]$ on the back of the product.

3.2.4 Connecting a Microphone

Do not connect the power cable before connecting all other cables. Ensure you connect a source device first before connecting the power cable.



1 Connect the microphone to [MIC] on the back of the product.



3.2.5 Connecting the Power

- Connecting parts may differ in different products.
 - The exterior may differ depending on the product.

Power connection using detachable AC/DC power adapter

• Connect the power cable to the AC/DC power adapter.

Then, connect the AC/DC power adapter to the [DC 14V] port on the back of the product. Next, connect the power cable to the power outlet.





The input voltage is switched automatically.

3.2.6 Setting Optimum Resolution

An information message about setting optimum resolution will appear if you power on the product for the first time after purchase.

Select a language and change the resolution to the optimum value.



- 1 Press $[\blacktriangle/]$ to move to the language you want and press $[\Box/]$.
- 2 To hide the information message, press $[\Box/\Box]$.
- If the optimum resolution is not selected, the message will appear up to three times for a specified time even when the product is turned off and on again.
 - The optimum resolution can also be selected in **Control Panel** on your PC.



Screen Setup

A detailed description of each function is provided. Refer to your product for details. Configure the screen settings such as brightness and color tone.

4.1 Brightness

You can adjust the general brightness of the picture. (Range: 0~100)

A higher value will make the picture appear brighter.

- This menu is not available when MAGICBright is set to Dynamic Contrast mode.
 - This menu is not available when **<u>Smart ECO Saving</u>** is set.
 - This menu is not available when **Eye Saver Mode** is enabled.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.1.1 Configuring Brightness

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- Press [▲/▼] to move to **PICTURE** and press [☐/[] on the product.
- Press [▲/▼] to move to Brightness and press [☐/[] on the product.
 The following screen will appear.

				Adjust the brightness
	Brightness		100	level. Values closer
	Contrast	_	75	brighter screen.
_	Sharpness	_	60	
* **	Eye Saver Mode		Off	
Ø	Game Mode		Off	
	MAGICBright		Custom	
	MAGICAngle		Off	
		<u></u>		AUTO (b

- 4 Adjust the **Brightness** using the [▲/▼] buttons.
- 5 The selected option will be applied.

4.2 Contrast

Adjust the contrast between the objects and background. (Range: 0~100)

A higher value will increase the contrast to make the object appear clearer.

- This menu is not available when MAGICBright is in Cinema or Dynamic Contrast mode.
 - This menu is not available when **<u>Game Mode</u>** is enabled.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.2.1 Configuring Contrast

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to PICTURE and press [☐/] on the product.
- Press [▲/▼] to move to Contrast and press [☐/[] on the product.
 The following screen will appear.

	PICTURE Brightness	1	00	Adjust the contrast level. Values closer to
	Contrast		75	light/dark contrast.
_	Sharpness		60	
ئپ ۴	Eye Saver Mode		Off	
•	Game Mode		Off	
	MAGICBright	Cust	om	
	MAGICAngle		Off	

- 4 Adjust the **Contrast** using the [▲/▼] buttons.
- 5 The selected option will be applied.

4.3 Sharpness

Make the outline of objects more clear or blurry. (Range: 0~100)

A higher value will make the outline of objects clearer.

- This menu is not available when MAGICBright is in Cinema or Dynamic Contrast mode.
 - This menu is not available when MAGICUpscale is in Mode1 or Mode2.
 - This menu is not available when <u>Game Mode</u> is enabled.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.3.1 Configuring Sharpness

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{r}]$ to move to **PICTURE** and press $[\Box / \Box]$ on the product.
- Press [▲/▼] to move to Sharpness and press [☐/┌─] on the product.
 The following screen will appear.

	PICTURE Brightness Contrast	_	100	Adjust the sharpness of the picture. Values closer to 100 mean a sharper image.
¢	Sharpness Eye Saver Mode		60 Off	
∲ ()	Game Mode ^{SAMSUNG} Bright MAGICBright SAMSUNG MAGICAngle		Off Custom Off	
				AUTO ტ

- 4 Adjust the **Sharpness** using the [▲/▼] buttons.
- 5 The selected option will be applied.



4

4.4 Eye Saver Mode

Set to an optimum picture quality suitable for eye relaxation.

TÜV Rheinland "Low Blue Light Content" is a certification for products which meet requirements for lower blue light levels. When **Eye Saver Mode** is '**On**', the blue light that wavelength is around 400nm will decrease, and it will provide an optimum picture quality suitable for eye relaxation. At the same time, the blue light level is lower than in the default settings, and it was tested by TÜV Rheinland and certified as it met the requirements of TÜV Rheinland "Low Blue Light Content" standards.

ß

The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.4.1 Configuring Eye Saver Mode

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[\blacktriangle]$ to move to **PICTURE** and press $[\Box]/\Box$ on the product.
- 3 Press [▲/▼] to move to Eye Saver Mode and press [☐/[] on the product. The following screen will appear.



- 4 Press $[\Lambda/]$ to move to the option you want and press $[\Box /]$.
- 5 The selected option will be applied.

4.5 Game Mode

Configure the product screen settings for game mode. Use this feature when playing games on a PC or when a game console such as PlayStation[™] or Xbox[™] is connected.

- This menu is not available when <u>Smart ECO Saving</u> is set.
 - This menu is not available when **<u>Eye Saver Mode</u>** is enabled.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.5.1 Configuring Game Mode

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- Press $[\Lambda]$ to move to **PICTURE** and press $[\Box]/\Box$ on the product.
- 3 Press [▲/▼] to move to Game Mode and press [☐/┌긎] on the product. The following screen will appear.

	PICTURE			Optimizes image
	Brightness		100	settings for playing
	Contrast		75	gamee.
<u> </u>	Sharpness		60	
* **	Eye Saver Mode			
Ø	Game Mode	V O#		
1	MAGICBright samsung MAGICAngle	On Always On		
			L	- AUTO - ひ

- 4 Press $[\Lambda/]$ to move to the option you want and press $[\Box /]$.
- 5 The selected option will be applied.
- When the monitor turns off, enters power-saving mode or changes input sources, Game Mode turns Off even if it is set to On.
 - If you want to keep Game Mode enabled all the time, select Always On.

4.6 SAMSUNG MAGIC Bright

This menu provides an optimum picture quality suitable for the environment where the product will be used.

• This menu is not available when <u>Smart ECO Saving</u> is set.

- This menu is not available when Game Mode is enabled.
- This menu is not available when **Eye Saver Mode** is enabled.
- This menu is not available when MAGICAngle is enabled.
- The functions available on the monitor may vary depending on the model. Refer to the actual product.

You can customize the brightness to suit your preferences.

4.6.1 Configuring SAMSUNG MAGIC Bright

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to PICTURE and press [☐/] on the product.
- 3 Press [▲/▼] to move to MAGICBright and press [☐/⊡] on the product. The following screen will appear.



- Custom: Customize the contrast and brightness as required.
- Standard: Obtain a picture quality suitable for editing documents or using Internet.
- Cinema: Obtain the brightness and sharpness of TVs suitable for enjoying video and DVD content.
- Dynamic Contrast: Obtain balanced brightness through automatic contrast adjustment.
- 4 Press $[\blacktriangle]$ to move to the option you want and press $[\Box]/\Box$.
- 5 The selected option will be applied.

4.7 SAMSUNG MAGIC Angle

MAGICAngle allows you to configure the settings to obtain the optimum picture quality according to your viewing angle.

- This menu is not available when MAGICBright is in Cinema or Dynamic Contrast mode.
 - This menu is not available when <u>Game Mode</u> or <u>Eye Saver Mode</u> is enabled.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

This feature provides the viewing angle, brightness, and tint to suit your preferences.

4.7.1 Configuring SAMSUNG MAGIC Angle

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to PICTURE and press [☐/] on the product.
- 3 Press [▲/▼] to move to SAMSUNGAngle and press [☐/[] on the product. The following screen will appear.



- Off (1): Select this option to view directly in front of the product.
- Lean Back Mode 1 2: Select this option to view from a place slightly lower than the product.
- Lean Back Mode 2 ③: Select this option to view from a place lower than Lean Back Mode 1.
- Standing Mode (4): Select this option to view from a place higher than the product.
- Side Mode (5): Select this option to view from either side of the product.
- Group View: Select this option for more than one viewer to view from places (1), (4), and (5).



- Custom: Lean Back Mode 1 will be applied by default if Custom is selected.
- 4 Press $[\Lambda]$ to move to the option you want and press $[\Box]/\Box$.
- 5 The selected option will be applied.

4.8 SAMSUNG MAGIC Upscale

MAGIC Upscale function can enhance the layers of the picture details and the vividness of the picture.

- The function has more obvious effects on low-resolution pictures.
 - This menu is not available when MAGICBright is in Cinema or Dynamic Contrast mode.
 - This menu is not available when Game Mode is enabled.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.8.1 Configuring SAMSUNG MAGIC Upscale

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to PICTURE and press [☐/] on the product.
- 3 Press [▲/▼] to move to MAGICUpscale and press [☐/⊡] on the product. The following screen will appear.

			Enhance picture
	MAGICUpscale	✓ Off	uetali anu viviuness.
=	Image Size	Mode1	
<u>_</u>	H-Position	Mode2	
	V-Position	L	
\\$	Coarse		
	Fine		

Comparing with Mode1, Mode2 has a stronger effect.

- 4 Press $[\blacktriangle/]$ to move to the option you want and press $[\Box/]$.
- 5 The selected option will be applied.

4.9 Image Size

Change the picture size.

ß

The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.9.1 Changing the Image Size

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **PICTURE** and press $[\Box / \Box]$ on the product.
- 3 Press [▲/▼] to move to Image Size and press [□/⊡] on the product.

	PICTURE SAMSUNG MAGIC Upscale Image Size H-Position V-Position Coarse Fine	▲ Auto ✔ Wide	Choose the size and aspect ratio of the picture displayed on screen.
()			

- Auto: Display the picture according to the aspect ratio of the input source.
- Wide: Display the picture in full screen regardless of the aspect ratio of the input source.
- 4 Press $[\Lambda]$ to move to the option you want and press $[\Box]$.
- 5 The selected option will be applied.



4.10 H-Position & V-Position

H-Position: Move the screen to the left or right.

V-Position: Move the screen up or down.

- This menu is available in **Analog** mode.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.10.1 Configuring H-Position & V-Position

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to PICTURE and press [☐/근] on the product.
- 3 Press [▲/▼] to move to H-Position or V-Position, and press [☐/⊡]. The following screen will appear.

	PICTURE SAMSUNG Upscale Image Size H-Position V-Position	Off Wide 50 50	Move the image displayed on the screen to the left or right.		PICTURE SAMSUNG Upscale Image Size H-Position V-Position	• Off Wide 50 50	Move the image displayed on the screen up or down.
• 🕸 ()	Coarse Fine	0	AUTO (b	•	Coarse Fine	0	

- 4 Press [▲/▼] to configure H-Position or V-Position.
- 5 The selected option will be applied.

4.11 Coarse

Adjust the screen frequency.

- This menu is available in **Analog** mode only.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

4.11.1 Adjusting Coarse

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to **PICTURE** and press [☐/] on the product.
- 3 Press [A/] to move to **Coarse** and press []/]/[]/] on the product.

□ □ ↓ ↓ ↓	PICTURE SAMSUNG MAGIC Upscale Image Size H-Position V-Position Coarse Fine	•	Off Wide 50 50 2200 0	Adjust the screen frequency.
				auto 🔿

- 4 Adjust the Coarse using the [A/] buttons.
- 5 The selected option will be applied.



4.12 Fine

Fine-adjust the screen to obtain a vivid picture.



This menu is available in **Analog** mode only.

4.12.1 Adjusting Fine

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **PICTURE** and press $[\Box / \Box]$ on the product.
- 3 Press [A/] to move to Fine and press $[\Box/]$ on the product.

- - - - - - - -	PICTURE SAMSUNG MAGICUpscale Image Size H-Position V-Position Coarse Fine	Off Vide 50 50 2200 0	Fine-tune the screen to get a vivid picture.
			AUTO ()

- 4 Adjust the Fine using the [A|] buttons.
- 5 The selected option will be applied.

Configuring Tint

A detailed description of each function is provided. Refer to your product for details. Adjust the tint of the screen. This menu is not available when ^{SAMSUNG}Bright is in Cinema or Dynamic Contrast mode. This menu is not available when <u>Game Mode</u> or <u>Eye Saver Mode</u> is enabled.

5.1 Red

Adjust the value of the color red in the picture. (Range: 0~100)

A higher value will increase the intensity of the color.

5.1.1 Configuring Red

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **COLOR** and press $[\Box/\Box]$ on the product.
- 3 Press [A/] to move to **Red** and press $[\Box/]$ on the product.

			Adjust the red
	Red	50	saturation level.
	Green	50	mean greater
<u> </u>	Blue	50	
* + *	Color Tone	Normal	
0	Gamma	Mode1	

- 4 Adjust the **Red** using the $[\blacktriangle/ \bullet]$ buttons.
- 5 The selected option will be applied.

5.2 Green

Adjust the value of the color green in the picture. (Range: 0~100)

A higher value will increase the intensity of the color.

5.2.1 Configuring Green

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **COLOR** and press $[\Box/\Box]$ on the product.
- 3 Press $[A|\mathbf{v}]$ to move to **Green** and press $[\Box/\Box]$ on the product.

			Adjust the green
	Red	50	saturation level. Values closer to 100
==	Green	50	mean greater
_	Blue	50	
***	Color Tone	Normal	
- Ō	Gamma	Mode1	

- 4 Adjust the Green using the $[\Lambda/\bullet]$ buttons.
- 5 The selected option will be applied.

5.3 Blue

Adjust the value of the color blue in the picture. (Range: 0~100)

A higher value will increase the intensity of the color.

5.3.1 Configuring Blue

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **COLOR** and press $[\Box/\Box]$ on the product.
- 3 Press $[\Lambda/]$ to move to Blue and press $[\Box/]$ on the product.

	COLOR Red Green Blue	50 50 50	Adjust the blue saturation level. Values closer to 100 mean greater intensity for the color.
* ; *	Color Tone	Normal	
•	Gamma	Mode1	
•			
			AUTO ()

- 4 Adjust the **Blue** using the [A/V] buttons.
- 5 The selected option will be applied.

5.4 Color Tone

Adjust the general color tone of the picture.



This menu is not available when MAGICAngle is enabled.

5.4.1 Configuring the Color Tone Settings

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **COLOR** and press $[\Box/\Box]$ on the product.
- 3 Press [▲/▼] to move to Color Tone and press [□/⊡] on the product.

	COLOR Red	50	Select a color tone that best suits your viewing needs.
	Green Blue	Cool 2 Cool 1	
تب• الله	Color Tone Gamma	✓ Normal	
•		Warm 2	
			AUTO 🖒

- Cool 2: Set the color temperature to be cooler than Cool 1.
- Cool 1: Set the color temperature to be cooler than Normal mode.
- Normal: Display the standard color tone.
- Warm 1: Set the color temperature to be warmer than Normal mode.
- Warm 2: Set the color temperature to be warmer than Warm 1.
- **Custom**: Customize the color tone.
- 4 Press $[\Lambda/\nabla]$ to move to the option you want and press $[\square/\Box]$.
- 5 The selected option will be applied.

5.5 Gamma

Adjust the mid-range brightness (Gamma) of the picture.



This menu is not available when MAGICAngle is enabled.

5.5.1 Configuring Gamma

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **COLOR** and press $[\Box/\Box]$ on the product.
- 3 Press [▲/▼] to move to Gamma and press [☐/-] on the product.



- 4 Press $[\Lambda/]$ to move to the option you want and press $[\square/]$.
- 5 The selected option will be applied.



Resizing or Relocating the Screen

A detailed description of each function is provided. Refer to your product for details.

6.1 Language

Set the menu language.

- A change to the language setting will only be applied to the onscreen menu display.
 - It will not be applied to other functions on your PC.

6.1.1 Changing the Language

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{T}]$ to move to **MENU SETTINGS** and press $[\Box/\Box]$ on the product.
- 3 Press [▲/▼] to move to Language and press [☐/┌─] on the product.

			Set the menu
	Language	Deutsch	language.
	Menu H-Position	✓ English	
_	Menu V-Position	Español	
ٹپ*	Display Time	Français	
•	Transparency	Italiano ▼	
1			
			ے OTUA

- 4 Press $[\blacktriangle]$ to move to the language you want and press $[\Box]/\Box$.
- 5 The selected option will be applied.

6.2 Menu H-Position & Menu V-Position

Menu H-Position: Move the menu position to the left or right.

Menu V-Position: Move the menu position up or down.

6.2.1 Configuring Menu H-Position & Menu V-Position

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{v}]$ to move to **MENU SETTINGS** and press $[\Box/\Box]$ on the product.
- 3 Press [▲/▼] to move to Menu H-Position or Menu V-Position, and press [☐/[]. The following screen will appear.



- 4 Press [▲/▼] to configure Menu H-Position or Menu V-Position.
- 5 The selected option will be applied.

6.3 Display Time

Set the on-screen display (OSD) menu to automatically disappear if the menu is not used for a specified period of time.

Display Time can be used to specify the time after which you want the OSD menu to disappear.

6.3.1 Configuring Display Time

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to MENU SETTINGS and press [☐/⊡] on the product.
- 3 Press [▲/▼] to move to **Display Time** and press [☐/┌긎] on the product.

	MENU SETTINGS Language Menu H-Position	English 100	Set how long the menu window will remain on screen for when it is not in use.
¢	Menu V-Position Display Time Transparency	5 sec 10 sec ✓ 20 sec 200 sec	
			AUTO 🔿

- 4 Press $[\Lambda/]$ to move to the option you want and press $[\square/]$.
- 5 The selected option will be applied.

6.4 Transparency

Set the transparency for the menu windows:

6.4.1 Changing Transparency

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to MENU SETTINGS and press [☐/[] on the product.
- 3 Press [▲/▼] to move to Transparency and press [□/⊡] on the product.



- 4 Press $[\Lambda/]$ to move to the option you want and press $[\square/]$.
- 5 The selected option will be applied.
7.1 Reset All

Return all the settings for the product to the default factory settings.

7.1.1 Initializing Settings (Reset All)

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to SETUP&RESET and press [☐/[] on the product.
- 3 Press [▲/▼] to move to Reset All and press [☐/[] on the product.

The following screen will appear.



- 4 Press $[\Lambda/]$ to move to the option you want and press $[\square /]$.
- 5 The selected option will be applied.

7.2 Smart Eco Saving

The **Smart Eco Saving** function reduces power consumption by controlling the electric current used by the monitor panel.

- This menu is not available when Eye Saver Mode is enabled.
 - <u>Game Mode</u> will automatically turn off when Smart Eco Saving is enabled.
 - The functions available on the monitor may vary depending on the model. Refer to the actual product.

7.2.1 Configuring Smart Eco Saving

- **1** Press any button on the front of the product to display the Function Key Guide. Next, press [**MENU**] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to SETUP&RESET and press [□/⊡] on the product.
- 3 Press [▲/▼] to move to Smart Eco Saving and press [☐/⊡] on the product. The following screen will appear.

SETUP&RESET Reset All	Adjust the power consumption of the
Smart Eco Saving Off Timer Plus Key Repeat Time	erergy automatically.
	J AUTO ᠿ

- Off: Deactivate the Smart Eco Saving function.
- On: The power consumption will automatically be reduced by about 10% over the current setting.

(The reduction of power consumption depends on the customer screen brightness condition.)

- 4 Press $[\blacktriangle/]$ to move to the option you want and press $[\square /]$.
- 5 The selected option will be applied.

7.3 Off Timer Plus

You can set the product to automatically turn off.



The functions available on the monitor may vary depending on the model. Refer to the actual product.

7.3.1 Configuring Off Timer

Off Timer

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to SETUP&RESET and press [□/⊡] on the product.
- 3 Press [▲/▼] to move to Off Timer Plus and press [☐/┌─] on the product.
- 4 Press [▲/▼] to move to Off Timer and press [☐/근] on the product.
- 5 Press [▲/▼] to move to Off Timer and press [☐/] on the product. The following screen will appear.



• Off: Deactivate the off timer so that the product does not power off automatically.



- On: Activate the off timer so that the product powers off automatically.
- 6 Press $[A|\mathbf{v}]$ to move to the option you want and press $[\Box/\Box]$.
- 7 The selected option will be applied.

Turn Off After

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to SETUP&RESET and press [☐/┌─] on the product.
- 3 Press [▲/▼] to move to Off Timer Plus and press [☐/근] on the product.
- 4 Press [▲/▼] to move to Off Timer and press [☐/] on the product.
- 5 Press [▲/▼] to move to Turn Off After and press [☐/]] on the product. The following screen will appear.



- 6 Press [▲/▼] to configure **Turn Off After**.
- 7 The selected option will be applied.
- The off timer can be set within a range of 1 to 23 hours. The product will automatically power off after the specified number of hours.
 - This option is only available when **Off Timer** is set to **On**.
 - For products for the market in some regions, the Off Timer is set to automatically activate 4 hours after the product powers on. This is done in accordance with power supply regulations. If you do not want the timer to activate, go to MENU → SETUP&RESET → Off Timer Plus and set Off Timer to Off.

Setup and Reset



Eco Timer

- 1 Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[\Lambda/]$ to move to **SETUP&RESET** and press $[\Box/]$ on the product.
- 3 Press [▲/▼] to move to Off Timer Plus and press [☐/┌┌] on the product.
- 4 Press $[\Lambda/]$ to move to **Eco Timer** and press $[\square/]$ on the product.
- 5 Press [▲/▼] to move to Eco Timer and press [☐/[] on the product. The following screen will appear.

 SETUP&RESET Reset All Smart Eco Saving Off Timer Plus Key Repeat Time A	Off • Acceleration	Set the monitor to automatically turn off after a certain time period.
₹ ₹		auto O
Off Timer Plus Off Timer Eco Timer		Enable or disable the Eco Timer.
		AUTO 🖒
Eco Timer Eco Timer Eco Off After On		Enable or disable the Eco Timer.

- Off: Deactivate the eco timer to disable the automatic power off feature. The product will not power off while in power-saving mode if this feature is deactivated.
- On: Activate the eco timer so that the product powers off automatically when it has been in power-saving mode for a specified period of time.
- 6 Press $[A/\bullet]$ to move to the option you want and press $[\Box/\Box]$.
- 7 The selected option will be applied.

Eco Off After

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press [▲/▼] to move to SETUP&RESET and press [☐/-] on the product.
- 3 Press [▲/▼] to move to Off Timer Plus and press [□/--] on the product.
- 4 Press [▲/▼] to move to Eco Timer and press [□/⊡] on the product.
- 5 Press [▲/▼] to move to Eco Off After and press [☐/⊡] on the product. The following screen will appear.



- 6 Press [▲/▼] to configure Eco Off After.
- 7 The selected option will be applied.
- The Eco timer can be set between 10 and 180 minutes. The product will automatically power off after the specified time has elapsed.
 - This option is only available when **Eco Timer** is set to **On**.

7.4 Key Repeat Time

K

Control the response rate of a button when the button is pressed.

The functions available on the monitor may vary depending on the model. Refer to the actual product.

7.4.1 Configuring Key Repeat Time

- Press any button on the front of the product to display the Function Key Guide. Next, press [MENU] to display the corresponding menu screen.
- 2 Press $[A|\mathbf{T}]$ to move to **SETUP&RESET** and press $[\Box/\Box]$ on the product.
- 3 Press [▲/▼] to move to **Key Repeat Time** and press [☐/[] on the product.

The following screen will appear.



- Acceleration, 1 sec, or 2 sec can be selected. If No Repeat is selected, a command responds only once when a button is pressed.
- 4 Press $[\blacktriangle/]$ to move to the option you want and press $[\Box/]$.
- 5 The selected option will be applied.

8.1 INFORMATION

View the current input source, frequency and resolution.

8.1.1 Displaying INFORMATION

- **1** Press any button on the front of the product to display the Function Key Guide. Next, press [**MENU**] to display the corresponding menu screen.
- 2 Press $[\blacktriangle]$ to move to **INFORMATION**.

The current input source, frequency and resolution will appear.





The displayed image may differ depending on the model.

8.2 Configuring Brightness, Contrast and Sharpness from the Initial Screen

Adjust the <u>Brightness</u>, <u>Contrast</u> and <u>Sharpness</u> setting using the [O] buttons in the initial screen (where no OSD menu is displayed).

Brightness :

- This menu is not available when MAGICBright is set to Dynamic Contrast mode.
- This menu is not available when <u>Smart ECO Saving</u> is enabled.
- This menu is not available when Eye Saver Mode is enabled.

Contrast :

- This menu is not available when **SAMSUNG**Bright is in Cinema or Dynamic Contrast mode.
- This menu is not available when <u>Game Mode</u> is enabled.

Sharpness :

- This menu is not available when MAGICBright is in Cinema or Dynamic Contrast mode.
- This menu is not available when MAGICUpscale is in Mode1 or Mode2.
- This menu is not available when Game Mode is enabled.
- Press any button on the front of the product (when no menu screen is displayed) to display the Function Key Guide. Next, press the [③] button. The following screen will appear.



- 2 Press the [, /] button to alternate between the **Brightness**, **Contrast** and **Sharpness** settings.
- 3 Adjust the Brightness, Contrast and Sharpness settings using the [▲/▼] buttons.

9.1 Requirements Before Contacting Samsung Customer Service Center

9.1.1 Testing the Product



Before calling Samsung Customer Service Center, test your product as follows. If the problem persists, contact Samsung Customer Service Center.

Check if your product is operating normally by using the product test function.

If the screen is turned off and the power indicator blinks even though the product is properly connected to a PC, perform a self-diagnosis test.

- 1 Power off both the PC and product.
- 2 Disconnect the cables from the product.
- 3 Power on the product.
- 4 If the message **Check Signal Cable** appears, the product is working normally.



If the screen remains blank, check the PC system, video controller and cable.

9.1.2 Checking the Resolution and Frequency

For a mode that exceeds the supported resolution (refer to "10.2 Standard Signal Mode Table"), the message **Not Optimum Mode** will appear for a short time.

9.1.3 Check the following.

Installation issue (PC mode)

Issues	Solutions
The screen keeps switching on and off.	Check the cable connection between the product and PC, and ensure the connectors are locked. (Refer to "3.2 Connecting and Using a PC")



Troubleshooting Guide

Screen issue

Issues	Solutions	
The power LED is off. The screen will not switch on.	Check that the power cable is connected properly. (Refer to "3.2 Connecting and Using a PC")	
The message Check Signal Cable appears.	Check that the cable is properly connected to the product. (Refer to "3.2 Connecting and Using a PC")	
	Check that the device connected to the product is powered on.	
Not Optimum Mode is displayed.	This message appears if the signal from the graphics card exceeds the maximum resolution or frequency for the product.	
	Change the maximum resolution and frequency to suit the product performance, referring to Standard Signal Mode Table (page 88).	
The images on the screen look distorted.	Check the cable connection to the product (Refer to "3.2 Connecting and Using a PC")	
The screen is not clear. The screen is blurry.	Adjust Coarse (page 62) and Fine (page 63).	
	Remove any accessories (video extension cable, etc.) and try again.	
	Set the resolution and frequency to the recommended level. (Refer to "10.2 Standard Signal Mode Table")	
The screen appears unstable and shaky.	Check that the resolution and frequency for the	
There are shadows or ghost images left on the screen.	PC are within the range of resolution and frequency compatible with the product. Next, if required, change the settings, referring to Standard Signal Mode Table (page 88) in this manual and the INFORMATION menu on the product.	
The screen is too bright. The screen is too dark.	Adjust Brightness (page 51) and Contrast (page 52).	
Screen color is inconsistent.	Change the COLOR settings. (Refer to " Configuring Tint")	
The colors on the screen have a shadow and are	Change the COLOR settings.	
distorted.	(Refer to " Configuring Tint")	
White does not really look white.	Change the COLOR settings.	
	(Refer to " Configuring Tint")	



Issues	Solutions
There is no image on the screen and the power	The product is operating in power-saving mode.
LED blinks every 0.5 to 1 second.	Press any key on the keyboard or move the mouse to return to normal operating mode.

Sound issue

Issues	Solutions
There is no sound.	Check the connection of the audio cable or adjust the volume.
	Check the volume.
The volume is too low.	Adjust the volume.
	If the volume is still low after turning it up to the maximum level, adjust the volume on your PC sound card or software program.

Source device issue

Issues	Solutions
A beeping sound is heard when my PC is booting.	If a beeping sound is heard when your PC is booting, have your PC serviced.

9.2 Q & A

Question	Answer	
How can I change the	Set the frequency on your graphics card.	
 Windows XP: Go to Co Themes → Display → and adjust Refresh rate Windows ME/2000: Go Settings → Advanced under Monitor settings Windows Vista: Go to Co Personalization → Pe Advanced Settings → under Monitor settings Windows 7: Go to Cont Personalization → Dis Advanced settings → Monitor settings. Windows 8: Go to Setti and Personalization → Advanced settings → Monitor settings. 	 Windows XP: Go to Control Panel → Appearance and Themes → Display → Settings → Advanced → Monitor, and adjust Refresh rate under Monitor settings. 	
	 Windows ME/2000: Go to Control Panel → Display → Settings → Advanced → Monitor, and adjust Refresh rate under Monitor settings. 	
	 Windows Vista: Go to Control Panel → Appearance and Personalization → Personalization → Display Settings → Advanced Settings → Monitor, and adjust Refresh rate under Monitor settings. 	
	 Windows 7: Go to Control Panel → Appearance and Personalization → Display → Screen Resolution → Advanced settings → Monitor, and adjust Refresh rate under Monitor settings. 	
	 Windows 8: Go to Settings → Control Panel → Appearance and Personalization → Display → Screen Resolution → Advanced settings → Monitor, and adjust Refresh rate under Monitor settings. 	

Troubleshooting Guide

Question	Answer	
How can I change the resolution?	 Windows XP: Go to Control Panel → Appearance and Themes → Display → Settings, and adjust the resolution. 	
	 Windows ME/2000: Go to Control Panel → Display → Settings, and adjust the resolution. 	
	 Windows Vista: Go to Control Panel → Appearance and Personalization → Personalize → Display Settings, and adjust the resolution. 	
	 Windows 7: Go to Control Panel → Appearance and Personalization → Display → Adjust Resolution, and adjust the resolution. 	
	 Windows 8: Go to Settings → Control Panel → Appearance and Personalization → Display → Adjust Resolution, and adjust the resolution. 	
How do I set power-saving mode?	 Windows XP: Set power-saving mode in Control Panel → Appearance and Themes → Display → Screen Saver Settings or BIOS SETUP on the PC. 	
	 Windows ME/2000: Set power-saving mode in Control Panel → Display → Screen Saver Settings or BIOS SETUP on the PC. 	
	 Windows Vista: Set power-saving mode in Control Panel → Appearance and Personalization → Personalize → Screen Saver Settings or BIOS SETUP on the PC. 	
	• Windows 7: Set power-saving mode in Control Panel \rightarrow	
	Appearance and Personalization \rightarrow Personalize \rightarrow Screen Saver Settings or BIOS SETUP on the PC.	
	 Windows 8: Set power-saving mode in Settings → Control Panel → Appearance and Personalization → Personalize → Screen Saver Settings or BIOS SETUP on the PC. 	



9

Refer to the user manual for your PC or graphics card for further instructions on adjustment.

10.1 General

Model Name		TC222L	TC242L	
Panel	Size	22 CLASS (21.5 inches / 54.6 cm)	24 CLASS (23.5 inches / 59.8 cm)	
	Display area	476.64 mm (H) x 268.11 mm (V)	521.28 mm (H) x 293.22 mm (V)	
		18.8 inches (H) x 10.6 inches (V)	20.5 inches (H) x 11.5 inches (V)	
Power Supply		This product supports 100 – 240 V.		
		Since the standard voltage may differ from country to country, please check the label on the back of the product.		
Environmental	Operating	Temperature: 50 °F - 104 °F (10 °C - 40 °C)		
considerations		Humidity: 10% - 80%, non-condensing		
	Storage	Temperature: -4 °F - 113 °F (-20 °C - 45 °C)		
		Humidity: 5% - 95%, non-condensing		

👩 Plug-and-Play

This monitor can be installed and used with any Plug-and-Play compatible systems. Two-way data exchange between the monitor and PC system optimizes the monitor settings. Monitor installation takes place automatically. However, you can customize the installation settings if desired.

Panel Dots (Pixels)

Due to the nature of the manufacturing of this product, approximately 1 pixel per million (1ppm) may appear brighter or darker on the panel. This does not affect product performance.

The above specifications are subject to change without notice to improve quality.

This device is a Class A digital apparatus.

For detailed device specifications, visit the Samsung Electronics website.

(USA only)

K

Dispose unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

www.samsung.com/recyclingdirect or call, (877) 278 - 0799

CALIFORNIA USA ONLY (Applicable for networking models only.)

This Perchlorate warning applies only to primary CR(Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA

"Perchloate Material - special handling may apply, See www.dtsc.ca.gov/hazardouswaste/ perchlorate."

10.2 Standard Signal Mode Table

- This product can be set to only one resolution for each screen size to obtain the optimum picture quality due to the nature of the panel. Therefore, a resolution other than the specified resolution may degrade the picture quality. To avoid this, it is recommended that you select the optimum resolution specified for the screen size of your product.
 - Check the frequency when you exchange a CDT monitor (connected to a PC) for an LCD monitor. If the LCD monitor does not support 85 Hz, change the vertical frequency to 60 Hz using the CDT monitor before you exchange it with the LCD monitor.

Model Name		TC222L	TC242L	
Synchronization	Horizontal Frequency	31 - 80 KHz		
	Vertical Frequency	56 - 75 Hz		
Resolution	Optimum Resolution	1920 x 1080 @ 60 Hz		
	Maximum Resolution	1920 x 1080 @ 60 Hz		

If a signal that belongs to the following standard signal modes is transmitted from your PC, the screen will automatically be adjusted. If the signal transmitted from the PC does not belong to the standard signal modes, the screen may be blank even though the power LED turns on. In such a case, change the settings according to the following table by referring to the graphics card user manual.

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
IBM, 720 x 400	31.469	70.087	28.322	-/+
VESA, 640 x 480	31.469	59.940	25.175	-/-
MAC, 640 x 480	35.000	66.667	30.240	-/-
VESA, 640 x 480	37.861	72.809	31.500	-/-
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 800 x 600	35.156	56.250	36.000	+/+
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 800 x 600	48.077	72.188	50.000	+/+
VESA, 800 x 600	46.875	75.000	49.500	+/+
MAC, 832 x 624	49.726	74.551	57.284	-/-
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1024 x 768	56.476	70.069	75.000	-/-
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1152 x 864	67.500	75.000	108.000	+/+

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
MAC, 1152 x 870	68.681	75.062	100.000	-/-
VESA, 1280 x 720	45.000	60.000	74.250	+/+
VESA, 1280 x 800	49.702	59.810	83.500	-/+
VESA, 1280 x 1024	63.981	60.020	108.000	+/+
VESA, 1280 x 1024	79.976	75.025	135.000	+/+
VESA, 1440 x 900	55.935	59.887	106.500	-/+
VESA, 1600 x 900 RB	60.000	60.000	108.000	+/+
VESA, 1680 x 1050	65.290	59.954	146.250	-/+
VESA, 1920 x 1080	67.500	60.000	148.500	+/+

• Horizontal Frequency

The time required to scan a single line from the left to the right side of the screen is called a horizontal cycle. The reciprocal number of a horizontal cycle is called horizontal frequency. Horizontal frequency is measured in kHz.

• Vertical Frequency

Repeating the same picture dozens of times per second allows you to view natural pictures. The repeat frequency is called "vertical frequency" or "refresh rate" and is indicated in Hz.

Appendix

Responsibility for the Pay Service (Cost to Customers)

K

When the service is requested, in spite of in warranty, we may charge you for a visit from a service technician in the following cases.

Not a product defect

Cleaning of the product, Adjustment, Explanation, Re-installation and etc.

- If a service technician gives instructions on how to use product or simply adjusts options without disassembling product.
- If a defect is caused by external environmental factors (Internet, Antenna, Wired Signal, etc.).
- If a product is reinstalled or devices are connected additionally after installing the purchased product for the first time.
- If a product is reinstalled to move to a different spot or to move to a different house.
- If customer requests instructions on how to use because of another company's product.
- If customer requests instructions on how to use the network or another company's program.
- If customer requests software installation and setup for the product.
- If a service technician removes/cleans dusts or foreign materials inside of the product.
- If customer requests an installation additionally after purchasing a product through home-shopping or online.

A Product damage caused by customer's fault

Product damage caused by customer's mishandling or wrong repair.

If a product damage is caused by;

- external impact or drop.
- use of supplies or separately sold product unspecified by Samsung.
- repair from a person besides an engineer of outsourcing service company or partner of Samsung Electronics Co., Ltd.
- remodeling or repairing the product by customer.
- using it with incorrect voltage or non-authorised electrical connections.
- not following the "cautions" in User Manual.

Others

- If product fails by natural disaster (lightning, fire, earthquake, flood damage, etc).
- If consumable components are all used up (Battery, Toner, Fluorescent lights, Head, Vibrator, Lamp, Filter, Ribbon, etc.).
- Ľ
- If customer requests a service in case the product has no defect, service fee may be charged. So please read User Manual first.

Terminology

OSD(On Screen Display)

On screen display (OSD) allows you to configure on-screen settings to optimize the picture quality as required. It allows you to change the screen brightness, tint, size and many other settings using menus displayed on the screen.

Coarse

Coarse refers to the frequency of radio wave vibrations per second. A higher frequency transmits a larger amount of data and is reflected easier. A lower frequency traverses obstacles more easily and can travel farther, but it transmits a smaller amount of data. The Coarse menu allows you to manually adjust the frequency to obtain the optimum picture quality. Adjust Coarse referring to Standard Signal Mode Table (page 88) according to the performance of your product and enjoy improved picture quality.

Gamma

The Gamma menu adjusts the grey scale that represents middle tones on the screen. Adjusting the brightness brightens the whole screen, but adjusting Gamma only brightens the medium brightness.

Grey scale

Scale refers to levels of color intensity that show variations of color change from darker areas to brighter areas on the screen. Changes to the screen brightness are expressed with black and white variation, and grey scale refers to the medium area between black and white. Changing the grey scale through Gamma adjustment will change the medium brightness on the screen.

Scanning rate

Scanning rate, or refresh rate, refers to the frequency of screen refreshes. Screen data is transmitted as it refreshes to display an image, although the refreshing is invisible to the naked eye. The number of screen refreshes is called scanning rate and is measured in Hz. A scanning rate of 60Hz means that the screen refreshes 60 times per second. The screen scanning rate depends on the performance of the graphics cards in your PC and monitor.

Horizontal Frequency

Characters or images displayed on the monitor screen consist of numerous dots (pixels). Pixels are transmitted in horizontal lines, which are then arranged vertically to create an image. The horizontal frequency is measured in kHz and represents how many times horizontal lines per second are transmitted and displayed on the monitor screen. A horizontal frequency of 85 means that the horizontal lines that make up an image are transmitted 85 000 times per second, and the horizontal frequency is indicated in 85kHz.

Appendix

Vertical Frequency

One image is made of numerous horizontal lines. The vertical frequency is measured in Hz and represents how many images can be created per second by those horizontal lines. A vertical frequency of 60 means that an image is transmitted 60 times per second. The vertical frequency is also called "refresh rate" and affects screen flicker.

Resolution

Resolution is the number of horizontal pixels and vertical pixels that form a screen. It represents the level of display detail.

A higher resolution displays a greater amount of information on the screen and is suitable for performing multiple tasks at the same time.

E.g. A resolution of 1920 x 1080 consists of 1920 horizontal pixels (horizontal frequency) and 1080 vertical lines (vertical resolution).

Plug & Play

The Plug & Play feature allows the automatic exchange of information between a monitor and PC to produce an optimum display environment.

The monitor uses VESA DDC (international standard) to execute Plug & Play.

Index

В

Before Connecting 46 Blue 66 Brightness 51

С

Checking the Contents 19 Cleaning 8 Coarse 62 Color Tone 67 Connecting and Using a PC 46 Contrast 52 Copyright 7 Correct posture to use the product 18

D

Display Time 71

Ε

Eye Saver Mode 54

F

Fine <mark>63</mark>

G

Game Mode 55 Gamma 68 General 87 Green 65

I

Image Size 60 INFORMATION 80 Installation 24

Key Repeat Time 79

L Languagey 69

O Off Timer Plus 75

Ρ

Parts 20

Q Q & A 85

R

Red 64

Requirements Before Contacting Samsung Customer Service Center 82

Reset All 73

Responsibility for the Pay Service (Cost to Customers) 90

S

Safety Precautions 10 SAMSUNG MAGIC Angle 57 SAMSUNG MAGIC Bright 56 SAMSUNG MAGIC Upscale 59 Sharpness 53 Smart Eco Saving 74 Standard Signal Mode Table 88

Т

Terminology 91 Transparency 72

Index

U

Using IGEL OS - Accessories 40 Using IGEL OS - common 29 Using IGEL OS - Devices 45 Using IGEL OS - Network 44 Using IGEL OS - Sessions 30 Using IGEL OS - User Interface 41