

# HANNING

by **HANN**spre

LCD Display

**HQ272PPB(HSG1365)**

**User's Manual**

Before operating the monitor, please read this manual thoroughly. This manual should be retained for future reference.

## FCC Class B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Parts 15 of the FCC Rule. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operations.

### CANADA

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulation.

**【Optional, depend on selected model】**



This device complies with requirement of EMC directive 2014/30/EU with regard to Electromagnetic Compatibility, and 2014/35/EU and 93/68/EEC with regard to Low Voltage directive.

**【Optional, depend on selected model】**

Socket-outlet shall be near the equipment and shall be accessible.

Trademark Notice:



HANNspree products incorporate High-Definition Multimedia Interface (HDMI™) technology.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

## **RECYCLING INFORMATION**

We, the **HANNspree** care very much about our environment protection strategy and firmly believe that it helps us have healthier earth via appropriate treatment and recycling of industrial technology devices at the end-of-life.

These devices contain recyclable materials, which can be re-decomposed and re-integrated into brand-new marvels. On the contrary, other material can be classified to hazardous and poisoned substances. We strongly encourage you to contact the provided information to recycle this product.

For more information, please visit  
<http://www.hannspree.eu/>

## **TABLE OF CONTENTS**

|                                                     |           |
|-----------------------------------------------------|-----------|
| <b>SAFETY NOTICE .....</b>                          | <b>5</b>  |
| <b>PRECAUTIONS.....</b>                             | <b>5</b>  |
| <b>SPECIAL NOTES ON LCD MONITORS .....</b>          | <b>6</b>  |
| <b>BEFORE YOU OPERATE THE MONITOR .....</b>         | <b>7</b>  |
| <b>FEATURES.....</b>                                | <b>7</b>  |
| <b>CHECKING THE CONTENTS OF THE PACKAGE .....</b>   | <b>7</b>  |
| <b>INSTALLATION INSTRUCTIONS .....</b>              | <b>8</b>  |
| <b>POWER.....</b>                                   | <b>8</b>  |
| <b>SETTING THE MONITOR ON THE WALL .....</b>        | <b>9</b>  |
| <b>MAKING CONNECTIONS.....</b>                      | <b>10</b> |
| <b>ADJUSTING THE VIEWING ANGLE.....</b>             | <b>11</b> |
| <b>OPERATING INSTRUCTIONS .....</b>                 | <b>12</b> |
| <b>GENERAL INSTRUCTIONS.....</b>                    | <b>12</b> |
| <b>FRONT PANEL CONTROL .....</b>                    | <b>13</b> |
| <b>HOW TO ADJUST A SETTINGS .....</b>               | <b>14</b> |
| <b>PLUG AND PLAY.....</b>                           | <b>16</b> |
| <b>TECHNICAL SUPPORT (FAQ) .....</b>                | <b>17</b> |
| <b>Q &amp; A FOR GENERAL PROBLEMS .....</b>         | <b>17</b> |
| <b>ERROR MESSAGE &amp; POSSIBLE SOLUTIONS .....</b> | <b>19</b> |
| <b>APPENDIX .....</b>                               | <b>21</b> |
| <b>SPECIFICATIONS.....</b>                          | <b>21</b> |

## **SAFETY NOTICE**

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.
4. Only use attachments/accesories specified by the manufacturer.

### **WARNING:**

To prevent fire or shock hazard, do not expose the monitor to rain or moisture. Dangerously high voltages are present inside the monitor. Do not open the cabinet. Refer servicing to qualified personnel only.

## **PRECAUTIONS**

- Do not use the monitor near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Do not place the monitor on an unstable cart, stand, or table. If the monitor falls, it can injure a person and cause serious damage to the appliance. Use only a cart or stand recommended by the manufacturer or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of the monitor and to protect it from overheating, be sure these openings are not blocked or covered. Do not place the monitor on a bed, sofa, rug, or similar surface. Do not place the monitor near or over a radiator or heat register. Do not place the monitor in a bookcase or cabinet unless proper ventilation is provided.
- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Unplug the unit during a lighting storm or when it will not be used for long period of time. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- Never push any object into the slot on the monitor cabinet. It could short circuit parts causing a fire or electric shock. Never spill liquids on the monitor.
- Do not attempt to service the monitor by yourself; opening or removing covers can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel.
- The wall socket shall be installed near the equipment and shall be easily accessible.

## **SPECIAL NOTES ON LCD MONITORS**

The following symptoms are normal with LCD monitor and do not indicate a problem.

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- If the screen suddenly flashes erratically or the backlighting fails, please contact your dealer or service center for repair. Do not attempt to repair the monitor yourself.

## BEFORE YOU OPERATE THE MONITOR


### FEATURES

- 68.6cm / 27" Wide Screen TFT Color LCD Monitor
- Crisp, Clear Display for Windows
- GP Green Product
- Ergonomic Design
- Space Saving, Compact Case Design

### CHECKING THE CONTENTS OF THE PACKAGE

The product package should include the following items:

#### LCD Monitor

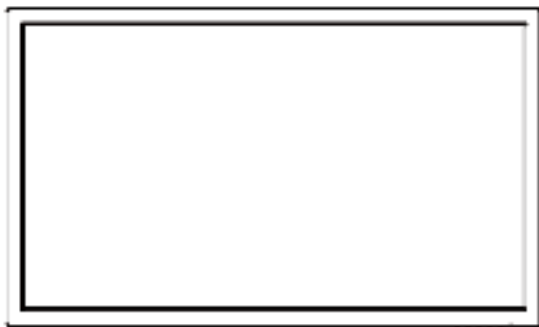

#### Cables and User manual



Power Cord



Warranty Card



Quick Start Guide



HDMI Cable




Screws



Screwdriver

## INSTALLATION INSTRUCTIONS

### INSTALL

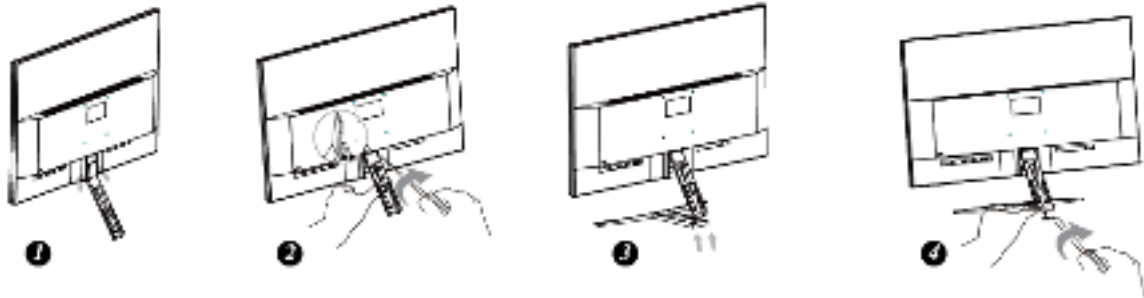

### REMOVE

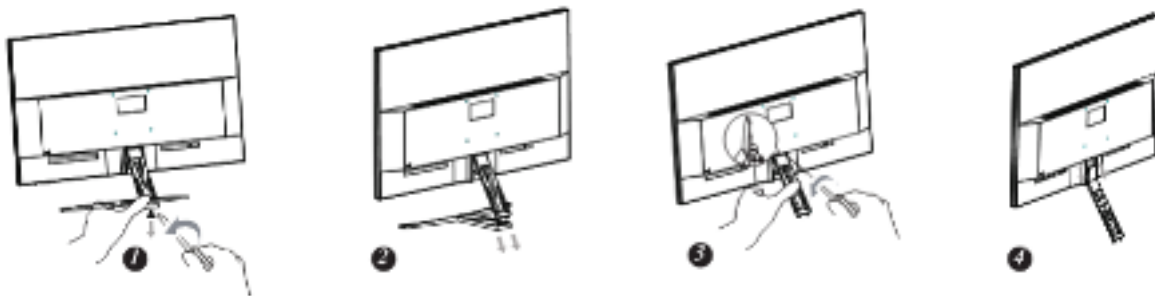


Figure.1. Installing and Removing the Base

#### **INSTALLATION:**

1. Monitor and the Arm alignment, Insert the Monitor port.
2. Install the Arm on Monitor with Two screws.
3. Align the monitor with the opening in the base.
4. Install the base on Arm with One screws.

#### **REMOVAL:**

1. Remove the screws so that the stand base can be removed.
2. Gently pull the base from the monitor until they are unattached.
3. Remove the screws so that the stand Arm can be removed.
4. Then gently remove the stand Arm.

**Warm prompt:** Place the Monitor face down on a soft and flat surface (blanket, foam, cloth, etc) to Monitor while install and remove.

## POWER

#### **POWER SOURCE:**


1. Make sure that the power cord is the correct type required in your area.
2. This LCD monitor has an Internal universal power supply that allows operation in either 100/120V AC or 220/240V AC voltage area (No user adjustment is required.)
3. Connect the AC-power cord one end to your LCD monitor's AC-input socket, the other end to wall-outlet.



## SETTING THE MONITOR ON THE WALL

### DISSEMBLING THE STAND BASE:


1. Disconnect all the cables and cords from the Monitor to prevent breakage.
2. Carefully place the Monitor face down on a soft and flat surface (blanket, foam, cloth, etc) to prevent any damage to the Monitor.
3. Squeeze the sides to release the retaining plastic tabs and pull the stand cover off.
4. Remove the screws so that the stand base can be removed.
5. Gently remove the stand base.

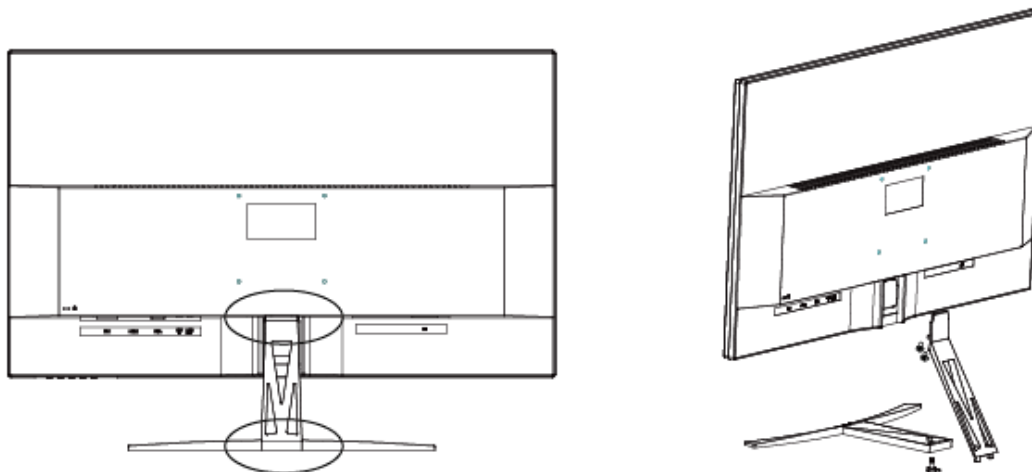

(For reference only)

### WALL MOUNTING THE MONITOR:

1. Purchase a VESA compatible wall bracket:  
VESA 100×100, 4 holes, M4, 8mm, 8kg.
2. Locate your ideal Monitor position on the wall.
3. Fix the wall bracket firmly on the wall.
4. Secure the Monitor to the bracket using the 4 mount holes on the back and center of the Monitor.

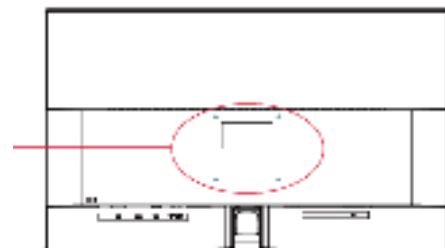

#### Note:

- Please read the instructions of your specific wall bracket to properly wall mount the Monitor.
- The pitch of the mounting holes is 100mm horizontally and 100mm vertically.
- The screws type required is metric: M4, 8mm length.
- The Monitor stand base can be screwed on a table or a hard surface using the hole on the back of the stand base.
- For use only with UL listed wall mount bracket.

*\*Installing the LCD Monitor requires special skill that should only be performed by qualified service personnel. Customers should not attempt to do the work themselves. HANNspree bears no responsibility for improper mounting or mounting that results in accident or injury. You can ask a qualified service personnel about using an optional bracket to mount the Monitor to the wall.*

## MAKING CONNECTIONS

### CONNECTING TO A PC

Turn off your computer before performing the procedure below.

1. Connect one end of the DP cable to the back of the monitor and connect the other end to the computer's DP port.
2. Connect one end of the MINI DP cable (optional) to the back of the monitor and connect the other end to the computer's MINI DP port.
3. Connect one end of the HDMI cable (optional) to the back of the monitor and connect the other end to the computer's HDMI port.
4. Plug one end of the AC power cord to the LCD monitor's AC input socket, and the other end to Wall outlet.
5. Turn on your monitor and computer.

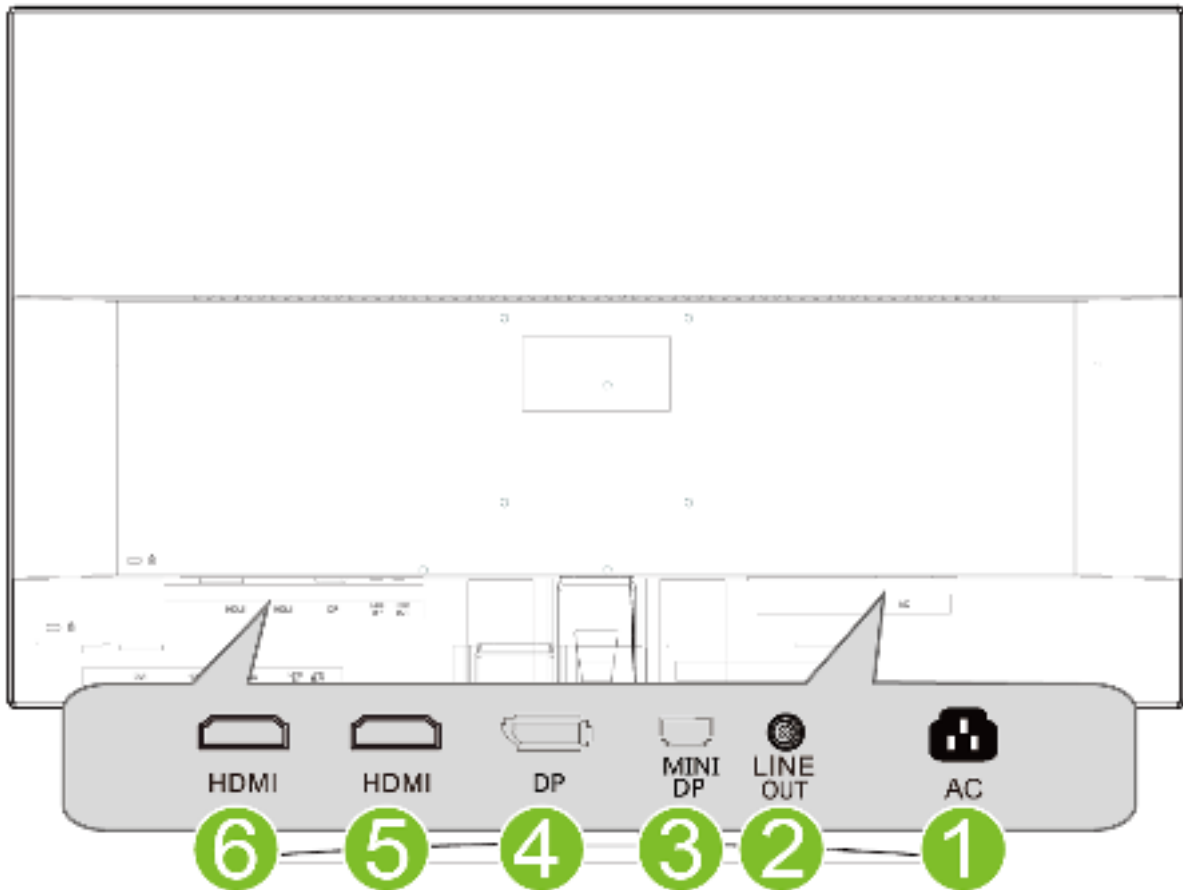


Figure.2. Connecting to a PC

|   |                       |   |                       |
|---|-----------------------|---|-----------------------|
| 1 | Power AC Input        | 2 | Earphone              |
| 3 | MINI DP(optional)     | 4 | DP(optional)          |
| 5 | HDMI Input (optional) | 6 | HDMI Input (optional) |

## ADJUSTING THE VIEWING ANGLE

- For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.
- Hold the stand so you do not topple the monitor when you change the monitor's angle.
- You are able to adjust the monitor's angle from  $-5^{\circ}$  to  $15^{\circ}$ .

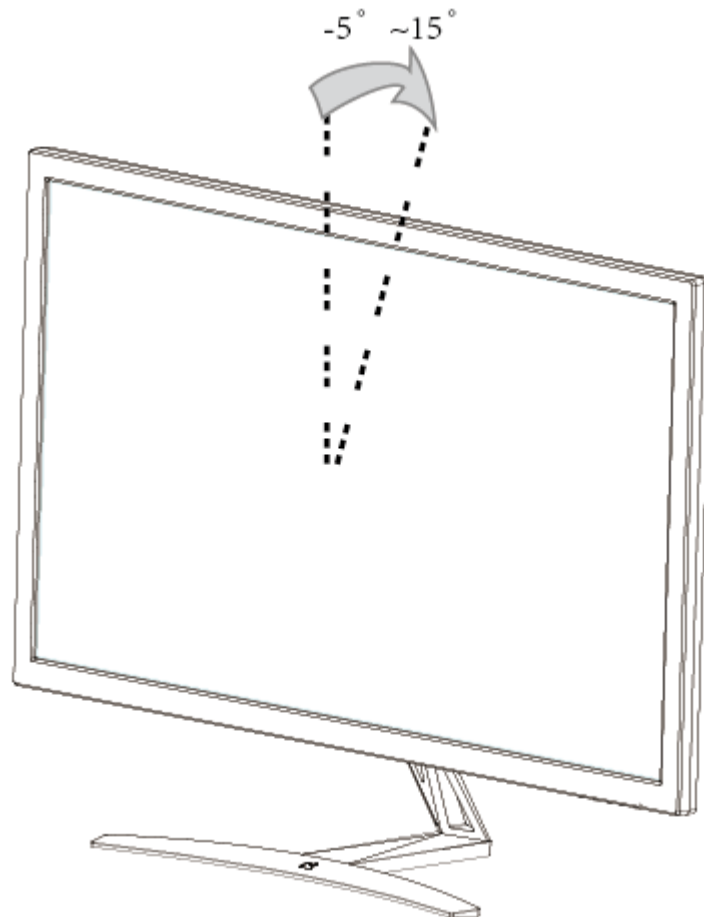


Figure.3. Monitor Angle

### **NOTES:**

- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Be careful not to place fingers or hands near the hinges when tilting the monitor, otherwise pinching can result.

# OPERATING INSTRUCTIONS

## GENERAL INSTRUCTIONS

Press the power button to turn the monitor on or off. The other control buttons are located on the front panel of the monitor (See Figure 4). By changing these settings, the picture can be adjusted to your personal preferences.

- The power cord should be connected.
- Connect the Signal cable from the monitor to the VGA card.
- Press the power button to turn on the monitor. The power indicator will light up.

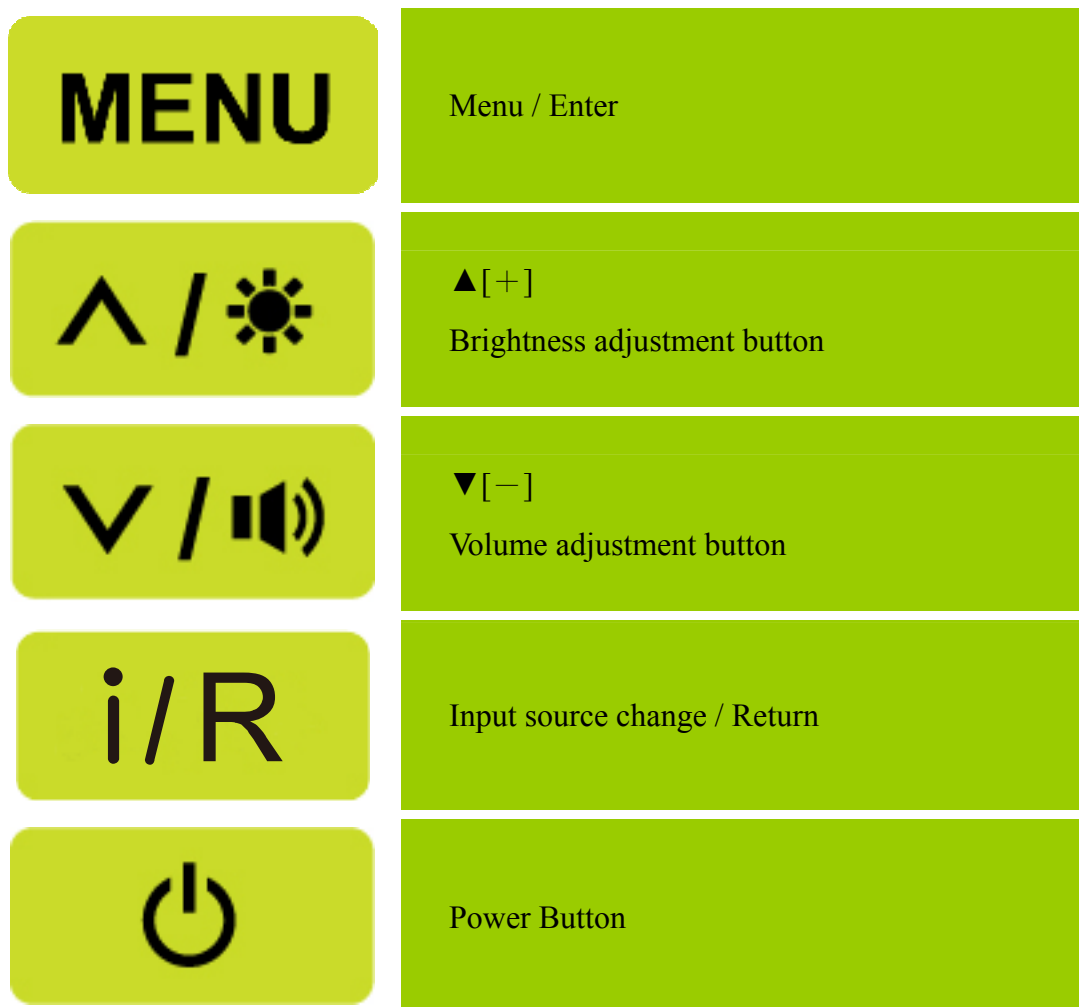


Figure.4. Control Panel Buttons

## FRONT PANEL CONTROL

- **Power Button:**  
Press this button to switch ON/OFF of monitor's power.
- **Power Indicator:**  
Green — Power On mode.  
Amber — Power Saving mode.
- **MENU / ENTER:**
  1. Turn the OSD menu on/off.
  2. The OSD menu is used as 《confirmation》 function during start-up.
- **Adjust ▲▼:**
  1. Adjust Brightness and volume when the OSD is off.
  2. Navigate through adjustment icons when OSD is ON or adjust a function when function is activated.
- **【 i 】 Button:** 《Digital Input Models》
  1. Press 【 i 】 to enter Source selections. (Selections include DP, HDMI, etc. The actual selections may vary depending on the models. This function is only available in models with digital inputs)
  2. Return to the previous menu.
- **Hotkeys:**
  1. **Restore Brightness and Contrast defaults:**  
To reset both the Brightness and Contrast to their default values, press the 【▲】 and 【▼】 keys at the same time.
  2. **ASPECT RATIO:**  
Press 【MENU】 + 【▲】 key to change to 「FULL MODE」 or 「FIT MODE」.
  3. **Change Preset Mode:** [The availability of this function depends upon the selected model]  
Press 【MENU】 key for 3 seconds to select one of the following modes 「PC」, 「MOVIE」, 「GAME」, 「ECO」. Default is 「PC」.

### NOTES:

- Do not install the monitor in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, or excessive dust or mechanical vibration or shock.
- Save the original shipping box and packing materials, as they will come in handy if you ever have to ship your monitor.
- For maximum protection, repackage your monitor as it was originally packed at the factory.
- To keep the monitor looking new, periodically clean it with a soft cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution. Never use strong solvents such as thinner, benzene, or abrasive cleaners, since these will damage the cabinet. As a safety precaution, always unplug the monitor before cleaning it.

## HOW TO ADJUST A SETTINGS

| BRIGHTNESS/ CONTRAST |                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BRIGHTNESS           | Adjust the brightness value of the display according to your preference. Select 「 BRIGHTNESS 」 option to adjust the brightness value.                                                                                                                                                                                                                                                                          |
| CONTRAST             | Adjust the contrast value of the display according to your preference. Select 「 CONTRAST 」 option to adjust the contrast value.                                                                                                                                                                                                                                                                                |
| SHARPNESS            | Select the 「 SHARPNESS 」 option to adjust the sharpness of the display. Set the value from -2 to 2.                                                                                                                                                                                                                                                                                                            |
| COLOR SETTING        |                                                                                                                                                                                                                                                                                                                                                                                                                |
| TEMPERATURE          | Adjust the color temperature value of the display according to your preference: WARM /NATURE/ COOL.                                                                                                                                                                                                                                                                                                            |
| COLOR EFFECT         | Move the cursor to the User option and select it,<br>1. To adjust the red, enter the 「 R 」 option and adjust the level.<br>2. To adjust the green, enter the 「 G 」 option and adjust the level.<br>3. To adjust the blue, enter the 「 B 」 option and adjust the level.                                                                                                                                         |
| IMAGE SETTING        |                                                                                                                                                                                                                                                                                                                                                                                                                |
| ASPECT RATIO         | When the aspect ratio of screen is distorted, you may make adjustments by using this function. 「 FULL 」 indicates full screen display, which does not ensure the image is shown as is or in initial scale. 「 FIT 」 indicates scaling by the proportion of original images, which may cause the screen showing black bands. <a href="#">[The availability of this function depends upon the selected model]</a> |
| OVER SCAN            | Select the 「 OVER SCAN 」 Can affect image quality.                                                                                                                                                                                                                                                                                                                                                             |
| OVER DRIVE           | Select the 「 OVER DRIVE 」 Can make the response time to speed up.                                                                                                                                                                                                                                                                                                                                              |
| ACTIVE CONTRAST      | Optimal setting for high contrast images or videos. The dark and light areas of the image are automatically detected, and the contrast is enhanced to provide a clearer, sharper image. Also, you may select the 「 ACTIVE CONTRAST 」 option.                                                                                                                                                                   |
| DDC/CI               | Select the 「 DDC/CI 」 option to switch the function On or Off. <a href="#">[Dual input mode optional]</a>                                                                                                                                                                                                                                                                                                      |

| INPUT SETTING |                                                                                                                                                                                                                                                                                                  |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INPUT SETTING | Select the 「 INPUT SETTING 」 option to change Digital (MINI DP/DP / HDMI) source. Enter the option and select Digital.                                                                                                                                                                           |
| AUDIO SETTING |                                                                                                                                                                                                                                                                                                  |
| AUDIO INPUT   | While transferring via the HDMI port, it is recommended to set AUDIO INPUT to HDMI; if no sound is outputted, it is recommended to select AUDIO INPUT as PC, and make sure the PC audio output cable is connected to monitor's LINE IN (or AUDIO IN) port. <a href="#">[For HDMI Input only]</a> |
| OSD SETTING   |                                                                                                                                                                                                                                                                                                  |
| FACTORY RESET | Select the 「 FACTORY RESET 」 option to reset to the monitor's default setting. This will erase the current settings. Enter the option and select On or Off.                                                                                                                                      |
| OSD TIME-OUT  | Select 「 OSD TIME-OUT 」 option to set the OSD time out from 10 to 100 seconds. Enter the option and adjust the level.                                                                                                                                                                            |
| H-POSITION    | Select 「 H-POSITION 」 option to adjust the horizontal position of the OSD. Enter the option and adjust the level.                                                                                                                                                                                |
| V-POSITION    | Select 「 V-POSITION 」 option to adjust the vertical position of the OSD. Enter the option and adjust the level.                                                                                                                                                                                  |
| LANGUAGE      | Select 「 LANGUAGE 」 option to change the language of the OSD. Enter the option and select a language. <a href="#">[Reference only, the OSD Language depends on the selected model]</a>                                                                                                           |
| TRANSPARENCY  | Select 「 TRANSPARENCY 」 option to adjust the transparency of the OSD. Enter the option and adjust the level.                                                                                                                                                                                     |
| INFORMATION   |                                                                                                                                                                                                                                                                                                  |
| INFORMATION   | Display Horizontal frequency/Vertical frequency/Resolution information.                                                                                                                                                                                                                          |

## **PLUG AND PLAY**

### **Plug & Play DDC2B Feature**

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities. The DDC2B is a bidirectional data channel based on the I<sup>2</sup>C protocol. The host can request EDID information over the DDC2B channel.

**THIS MONITOR WILL APPEAR TO BE NON-FUNCTIONAL IF THERE IS NO VIDEO INPUT SIGNAL. IN ORDER FOR THIS MONITOR TO OPERATE PROPERLY, THERE MUST BE A VIDEO INPUT SIGNAL.**



## TECHNICAL SUPPORT (FAQ)

### Q & A FOR GENERAL PROBLEMS

| PROBLEM & QUESTION                                              | POSSIBLE SOLUTION                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power LED is not on                                             | <ul style="list-style-type: none"> <li>*Check if the Power Switch is in the ON position.</li> <li>*Power Cord should be connected.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                 |
| No Plug & Play                                                  | <ul style="list-style-type: none"> <li>*Check if the PC system is Plug &amp; Play compatible.</li> <li>*Check if the Video Card is Plug &amp; Play compatible.</li> <li>*Check if any plug pins on the DP or HDMI connector are bent.</li> </ul>                                                                                                                                                                                                                                                                                              |
| The display is too dark or too bright.                          | <ul style="list-style-type: none"> <li>*Adjust the Contrast and Brightness Controls.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Picture bounces or a wave pattern is present in the picture     | <ul style="list-style-type: none"> <li>*Move electrical devices that may cause electrical interference.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                            |
| The power LED is ON (Amber) but there's no video or no picture. | <ul style="list-style-type: none"> <li>*Computer Power Switch should be in the ON position.</li> <li>*Computer Video Card should be snugly seated in its slot.</li> <li>*Make sure monitor's video cable is properly connected to the computer.</li> <li>*Inspect monitor's video cable and make sure none of the pins are bent.</li> <li>*Make sure computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.</li> </ul> |
| Missing one of the primary colors (RED, GREEN, or BLUE)         | <ul style="list-style-type: none"> <li>*Inspect the monitor's video cable and make sure that none of the pins are bent.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                            |
| Picture has color defects<br>(White does not look white)        | <ul style="list-style-type: none"> <li>*Adjust RGB color or select color temperature.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| The screen resolution needs to be adjusted                      | <ul style="list-style-type: none"> <li>*Use win 2000/ME/XP Right click anywhere on desktop and select <b>Properties&gt;Settings&gt;Screen Resolution</b>. Use the silder to adjust the reslution and click <b>Apply</b>.</li> </ul>                                                                                                                                                                                                                                                                                                           |
| No sound is outputted from monitor's built-in speaker           | <ul style="list-style-type: none"> <li>*Make sure PC audio output cable is connected to screen's LINE IN port (or AUDIO IN port).</li> <li>*Make sure the sound volume adjustment can be clearly identified.</li> <li>*Make sure the <b>System &gt; Silence</b> option in the monitor menu is on.</li> <li>*While transferring via HDMI port but no sound is outputted, it is recommended to select AUDIO INPUT as a PC option, and make sure PC audio output cable is connected to monitor's LINE IN</li> </ul>                              |

port(or AUDIO IN port). [For HDMI Input only]

### Addendum related to Windows 7 / Windows 8 / Windows 10

When you encounter display problem under Windows 7/ Windows 8/ Windows 10, you need to do the following:

1. Make sure your PC computer (Hardware requirement) can support Windows 7/ Windows 8/ Windows 10.
2. Make sure your video card can run Windows 7/ Windows 8/ Windows 10.
3. If your video card can support Windows 7/ Windows 8/ Windows 10, need to install the latest Windows 7/ Windows 8/ Windows 10 driver of your video card.

Suggest to do the following:

1. Install the latest Windows 7/ Windows 8/ Windows 10 video driver of your video card.
2. Try to use the recommended display resolution that is supported by the monitor.
3. If the recommended display resolution is not working, try the second recommended display resolution.

|                       | 1              | 2              |
|-----------------------|----------------|----------------|
| 35,56cm / 14" (16:9)  | 1366×768@60Hz  | 1366×768@50Hz  |
| 39,6cm / 15.6" (16:9) | 1366×768@60Hz  | 1366×768@75Hz  |
| 40,64cm / 16" (16:9)  | 1366×768@60Hz  | 1366×768@50Hz  |
| 43,2cm / 17" (16:10)  | 1440×900@60Hz  | 1440×900@75Hz  |
| 47cm / 18.5" (16:9)   | 1366×768@60Hz  | 1366×768@75Hz  |
| 48,3cm / 19" (5:4)    | 1280×1024@60Hz | 1280×1024@75Hz |
| 48,3cm / 19" (16:10)  | 1440×900@60Hz  | 1440×900@75Hz  |
| 51cm / 20" (16:9)     | 1600×900@60Hz  | 1600×900@50Hz  |
| 56cm / 22" (16:10)    | 1680×1050@60Hz | 1680×1050@50Hz |
| 54,6cm / 21.5" (16:9) | 1920×1080@60Hz | 1920×1080@50Hz |
| 58,4cm / 23" (16:9)   |                |                |
| 60cm / 23.6" (16:9)   |                |                |
| 62,5cm / 24.6 (16:9)  |                |                |
| 68,6cm / 27" (16:9)   |                |                |
| 68,6cm / 27" (16:9)   | 2560×1440@60Hz | 2560×1440@50Hz |
| 70cm / 27.5" (16:10)  | 1920×1200@60Hz | 1920×1200@50Hz |

And if you still have display problem after doing the above procedure, please visit Hanns-G support and Service Website: <http://www.hannspree.eu/en/monitors>

Windows is a registered trademark of Microsoft Corporation.

## ERROR MESSAGE & POSSIBLE SOLUTIONS

- **CABLE NOT CONNECTED:**
  1. Check that the signal-cable is properly connected, if the connector is loose, tighten the connector's screws.
  2. Check the signal-cable's connection pins for damage.
- **INPUT NOT SUPPORT :**  
Your computer has been set to unsuitable display mode, set the computer to display mode given in the following table.

### **FACTORY PRESET TIMING TABLE:**

| MODE | RESOLUTION      | HORIZONTAL FREQUENCY (KHz) | VERTICAL FREQUENCY (Hz) |
|------|-----------------|----------------------------|-------------------------|
| 1    | 640×400 @70Hz   | 31.469                     | 70.087                  |
| 2    | 640×480 @60Hz   | 31.469                     | 59.940                  |
| 3    | 640×480 @70Hz   | 36.052                     | 70.004                  |
| 4    | 640×480 @67Hz   | 35.000                     | 66.667                  |
| 5    | 640×480 @72Hz   | 37.861                     | 72.809                  |
| 6    | 640×480 @75Hz   | 37.500                     | 75.000                  |
| 7    | 720×400 @70Hz   | 31.469                     | 70.087                  |
| 8    | 800×600 @56Hz   | 35.156                     | 56.250                  |
| 9    | 800×600 @60Hz   | 37.879                     | 60.317                  |
| 10   | 800×600 @72Hz   | 48.077                     | 72.188                  |
| 11   | 800×600 @75Hz   | 46.875                     | 75.000                  |
| 12   | 832×624 @75Hz   | 49.725                     | 75.000                  |
| 13   | 1024×768 @60Hz  | 48.363                     | 60.004                  |
| 14   | 1024×768 @70Hz  | 56.476                     | 70.069                  |
| 15   | 1024×768 @75Hz  | 60.023                     | 75.029                  |
| 16   | 1152×870 @75Hz  | 68.681                     | 75.062                  |
| 17   | 1152×864 @75Hz  | 67.500                     | 75.000                  |
| 18   | 1280×720 @60Hz  | 45.000                     | 60.000                  |
| 19   | 1280×960 @60Hz  | 60.000                     | 60.000                  |
| 20   | 1280×960 @75Hz  | 74.592                     | 74.443                  |
| 21   | 1280×768 @60Hz  | 47.776                     | 59.870                  |
| 22   | 1280×768 @75Hz  | 60.289                     | 74.893                  |
| 23   | 1280×1024 @60Hz | 63.981                     | 60.020                  |
| 24   | 1280×1024 @75Hz | 79.976                     | 75.025                  |
| 25   | 1360×768 @60Hz  | 47.712                     | 60.015                  |
| 26   | 1366×768 @60Hz  | 47.852                     | 59.964                  |
| 27   | 1440×900 @60Hz  | 55.469                     | 59.901                  |

|    |                 |        |        |
|----|-----------------|--------|--------|
| 28 | 1440×900 @75Hz  | 70.635 | 74.984 |
| 29 | 1400×1050 @60Hz | 64.744 | 59.948 |
| 30 | 1600×900 @60Hz  | 55.540 | 59.978 |
| 31 | 1680×1050 @60Hz | 65.290 | 59.954 |
| 32 | 1920×1080 @60Hz | 67.500 | 60.000 |
| 33 | 2560×1440 @60Hz | 88.787 | 59.951 |

*(Video mode)*

| <b>MODE</b> | <b>RESOLUTION</b> |
|-------------|-------------------|
| 1           | 640×480p @60Hz    |
| 2           | 720×480i @60Hz    |
| 3           | 720×480p @60Hz    |
| 4           | 720×576i @50Hz    |
| 5           | 720×576p @50Hz    |
| 6           | 1280×720p @60Hz   |
| 7           | 1920×1080i @50Hz  |
| 8           | 1920×1080i @60Hz  |
| 9           | 1920×1080p @50Hz  |
| 10          | 1920×1080p @60Hz  |

\*\* We ensure that the monitor can be lighted under interlace signal mode, but we can not guarantee the image quality.

# APPENDIX

## SPECIFICATIONS

|                              |                   |                                                                                            |
|------------------------------|-------------------|--------------------------------------------------------------------------------------------|
| LCD Panel                    | Driving system    | TFT Color LCD                                                                              |
|                              | Size              | 68.6cm / 27" Diagonal                                                                      |
|                              | Pixel pitch       | 0,2331mm(H) × 0,2331mm(V)                                                                  |
| Video                        | H-Frequency       | 31KHz – 89KHz                                                                              |
|                              | V-Frequency       | 56Hz – 75Hz                                                                                |
| Display Colors               |                   | 1.07B Colors                                                                               |
| Max. Resolution              |                   | 2560 × 1440 @60Hz                                                                          |
| Plug & Play                  |                   | VESA DDC2B™                                                                                |
| Power consumption            | ON Mode           | 40W (Typical)                                                                              |
|                              | Power Saving Mode | ≤0.5W                                                                                      |
|                              | OFF Mode          | ≤0.3W                                                                                      |
| Audio output                 |                   | Rated Power 2.0 W rms (Per channel)                                                        |
| Input Terminal               |                   | DP<br>Mini DP (optional)<br>HDMI ×2 (optional)                                             |
| Maximum Screen Size          |                   | Hor. : 597mm<br>Ver. : 336mm                                                               |
| Power Source                 |                   | 100–240V , 50–60Hz                                                                         |
| Environmental Considerations |                   | Operating Temp:5° to 35°C<br>Storage Temp.: -20° to 60°C<br>Operating Humidity: 20% to 85% |
| Dimensions                   |                   | 639.8(W)×465.1(H)×197.3(D) mm<br>25.2 "(W)×18.3 "(H)×7.8 "(D)                              |
| Weight (NW)                  |                   | 4.8 kg (10.6 lb)                                                                           |

\*\*\* The above specification is subject to actual product specification and is subject to change without prior notice.

### NOTES:

The Maximum Resolution will depends on the display card supporting. Related issue can refer to <http://www.hannspree.eu/en/monitors>. FAQ section.