







Copyright

© 2020 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.

The trademarks mentioned in this manual are legally registered to their respective owners.

Disclaimer

Information in this manual is protected by copyright laws and is the property of GIGABYTE.

Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice.

No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission.

- In order to assist in the use of this monitor, carefully read the User Guide.
- For more information, check on our website at: https://www.gigabyte.com


CONTENTS

SOFTWARE INSTALLATION	4
Preparation	4
Installing the Software	
Uninstalling the Software	6
USING THE SOFTWARE	7
Launching the Software	7
Configuring the Settings	7
DISPLAY SETTING	8
HOT KEY	17
GENERAL SETTING	19
ABOUT	20

SOFTWARE INSTALLATION

Preparation

- 1. Connect one end of a USB (A-Male to B-Male) cable to the USB port of the LCD monitor and the other end to the USB port of your computer.
- 2. Connect any of the following:
 - One end of an HDMI cable to the HDMI port of the LCD monitor and the other end to the HDMI port of your computer.
 - One end of a DisplayPort cable to the DP port of the LCD monitor and the other end to the DP port of your computer.
- 3. Plug the power adapter to the DC port on the monitor. Then plug the power cables of your computer and the LCD monitor into a power outlet.
- 4. Turn on your computer and the LCD monitor.

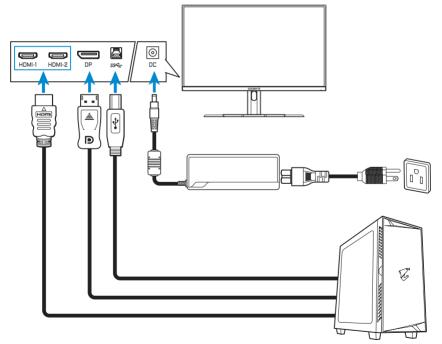

Installing the Software

IMPORTANT! If you have installed an older version of the software on your computer, you have to remove the previously installed software first before proceeding with the following installation process. To uninstall the software, refer to the "Uninstalling the Software" section.

- 1. Open the web browser and enter https://www.gigabyte.com/Monitor/All-Series to the address bar.
- 2. Click on your gaming monitor name and download the software to your computer.
- 3. Double-click UpdPack.exe. The extracting wizard appears.

🗗 21% Educting	x
	Carcal
	Carco

4. Wait until the installation is complete and click **OK** when prompted.



Uninstalling the Software


1. From the Windows desktop, click **and select GIGABTYE**.



2. Right-click on OSD_Sidekick. Then select Uninstall.

\square	220	Microsoft Fr
26	HE Pin to Start	
	Couple Mone	>
0	🧿 Grades 📋 Urrisdad	
2h	1	

- 3. The *Programs and Features* page appears on the screen. Select **OSDSidekick** from the list.
- 4. Right-click on **OSDSidekick** and select **Uninstall**. Then follow the on-screen instructions to uninstall the software.

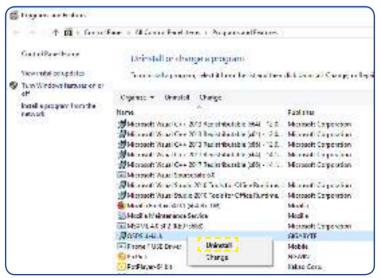

USING THE SOFTWARE

Launching the Software

IMPORTANT! Before launching the software, make sure your computer is connected to the LCD monitor through a USB cable as described in step 1 in "Preparation" on page 4.

After the driver installation is complete, the OSD Sidekick software shortcut icon appears on the desktop.



Double-click the 🚟 icon to launch the software.

Note: The first time you open the OSD Sidekick software, you need to run it as an administrator. To do so, right-click **OSD_Sideclick** in **SideClick** in **GIGABYTE** folder, and select More > Run as administrator. Then launch the software.



Configuring the Settings

Using the OSD Sidekick software, you can configure the advanced settings for the monitor.


THE WORK IN	•••	247	THERE NO	nes: agen		
	Or an Inter		e ui			UNHE
ti)	7.411.02		CONTRACTOR	-A.V212	1000125	e vata
	4.47%.7%					CONC.
	Included as a		944 - C			SHE
	0.0040.400.06				CONTRACTOR	
(THE	INVERTING IN			\$185346F (52234	NK K	1

Note:

- Most of the configuration options are similar with the OSD menu and Quick menu that you can directly access using the Control button on the monitor. For more information, refer to the monitor user guide.
- To make the adjustment, generally, you can do one of the following:
 - ⇒ Drag the slider to adjust the setting.
 - ⇒ Click the ON/OFF button to enable or disable the function.
 - \Rightarrow Click the \checkmark icon to select the available option.
- All the changes will be applied directly to the monitor.

DISPLAY SETTING

Configure the game, image, multi-picture, Dashboard, and Game Assist related settings.

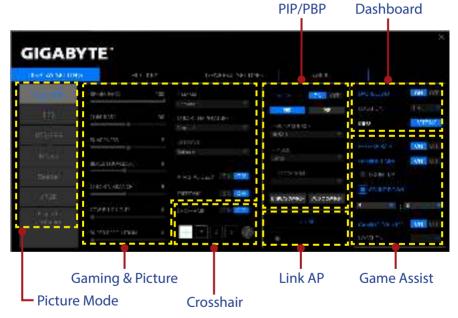

Configuring the Picture Mode Profiles

By default, there are 6 preset **Picture Mode** profiles. These profiles cannot be deleted.

Note: Hover the cursor over the preset **Picture Mode** name and click **()** to reset the preset **Picture Mode** profile to its default settings.


However, you can still do the following:



- ⇒ Click *E-sports Customize* > ★ to add an additional profile or import other profile.
 - √ To add an additional profile, select Add profile.
 Note: Make sure to configure the necessary *Gaming & Picture* settings before creating a new profile.
 - $\sqrt{}$ To import other profile from the specified folder, select **Import profile**.




Browse the location and select the profile file to import. Then click **OK** to import the file.

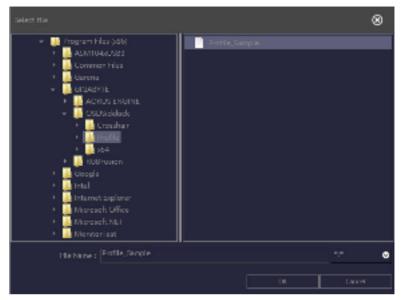

Note: The default *Profile* folder is located at the OSDsidekick installation path.


 \Rightarrow Click \square to export a profile to the specified folder.

Browse the location and enter the file name. Then click **OK** to export the file.

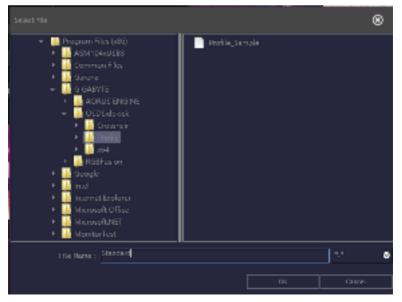

Note: The default *Profile* folder is located at the OSDsidekick installation path.

- \Rightarrow Click **2** and do any of the following to customize the profile:
 - Rename the profile.
 - Click **III** to modify the profile picture. Browse for the picture, and click **OK** to upload.

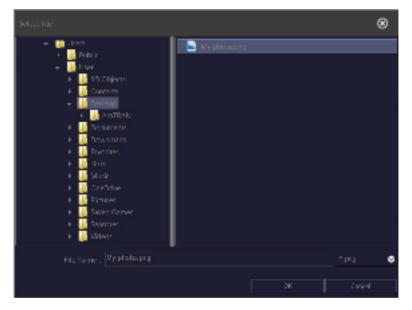


- Click 🛃 to confirm the modifications.
- Click 🔕 to reject the modifications.
- \Rightarrow Click $\boxed{1}$ to delete the customized profile.
- ⇒ Click to close the *E-sports Customize* menu.
 Note: The user defined Picture Mode applies to the monitor Custom 3.

Customizing the Crosshair Cursor

Set the **CROSSHAIR** setting to **ON** to activate the function. Then select one of the rectangular grids (marked in the illustration below) and click




Select the desired color and line thickness. Then draw a new crosshair cursor.

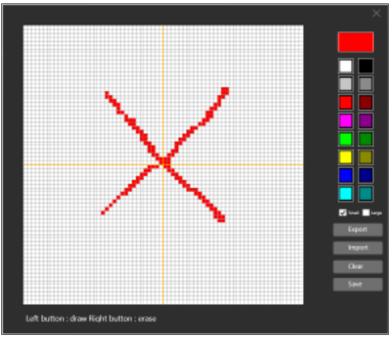

Once complete, click **Save**. The new crosshair cursor will appear on the screen.

Exporting/Importing the Crosshair Cursor



⇒ Click **Export** to export the Crosshair file to the specified folder. Browse the location and enter the file name. Then click **OK** to export the file.

	۲
Bengram Tilec (x10) E Activite (x10)	
File-Mannes Crossbair	92 o
	Canod

Note: The default *Crosshair* folder is located at the OSDsidekick installation path.

⇒ Click **Import** to import the Crosshair file from the specified folder. Browse the location and select the Crosshair file to import. Then click **OK** to import the file.

Note: The default **Crosshair** folder is located at the OSDsidekick installation path.

Customizing the PIP/PBP Settings

Set the **Picture-in-Picture** (**PIP**)/ **Picture-by-Picture** (**PBP**) setting to **ON** to activate the function. Select any of the following items to configure the **PIP/PBP** settings:

PIP/PDP	ON OFF
PRP	pilb.
PBP/PIP SOURC	10
HDMI1	
PIP SIZE	
PIPTOCATION	
DISPLAY SWITCH	AUDIO SWITCH


- ⇒ Click **PBP** to display the screen image from two sources side by side.
- ⇒ Click **PIP** to display the screen image from the main source on the full screen and the second source in a sub window.
- ⇒ In **PBP/PIP SOURCE**, click the **▼** icon to select the main source.
- If you have selected the PIP layout, in PIP SIZE, click the ▼ icon to set the sub window size to Large, Medium, or Small.
- If you have selected the PIP layout, in PIP LOCATION, click the ▼ icon to set the sub window location to Left-Top, Right-Top, Left-Bottom, or Right-Bottom.
- ⇒ Click **DISPLAY SWITCH** to switch the main source and sub source, regardless the screen layout.
- ⇒ Click AUDIO SWITCH to switch the audio source, regardless the screen layout.

Linking Apps to the Profile

Click 🔁 to link the profile with an application.



Then select the application (*.exe) you want to link and click OK.

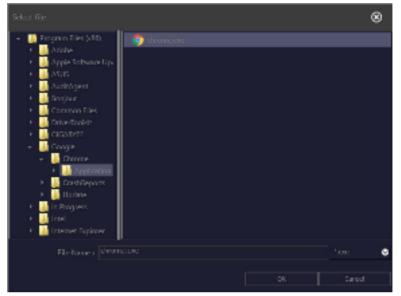

When you open that application, the display setting will automatically change to the profile you linked.



Customizing the Dashboard Information

Set the **DASHBOARD** setting to **ON** to activate the function. Then configure the following settings:

DASHBOARD	ON OT
TOCATION	
INFO	SETTING

In LOCATION, click the ▼ icon to set the location of the options on the screen to Up or Down.

Note: The **DASHBOARD** location on the right side or on the left side of the screen depends on the **Game Assist** location setting. For example, if the **Game Assist** items are on the left side of the screen, then the **DASHBOARD** items are on the right side of the screen and vice versa.

➡ Click SETTINGS and check the desired option(s) to be shown on the screen.



Note: Uncheck the option to hide it from the screen.

Customizing the Game Assist Settings

Configure the following Game Assist settings:



- ⇒ Set the **REFRESH RATE** setting to **ON** to enable displaying the refresh rate.
- ⇒ Set the GAMING TIMER setting to ON to enable displaying the gaming timer.
 - Select either COUNT UP or COUNT DOWN the timer.
 - Click the **v** icon to set the countdown time.

- ⇒ Set the GAMING COUNTER setting to ON to enable displaying the gaming counter.
- ⇒ In LOCATION, click the ▼ icon to set the gaming counter location on the screen to Left Top, Left Center, Left Bottom, Right Top, Right Center, or Right Bottom.

HOT KEY

Manage the keyboard shortcut to access a particular function which you are using frequently.




Note: By default, the assigned hot keys appears on the HOT KEYS panel.

Assigning a Hot Key

1. On the **FUNCTION** panel, scroll down to select the function you want to assign a hot key to.



- 2. Click 🙀 to add the function to the **HOT KEYS** panel.
- 3. To assign a hot key to the function, do as follows:
 - a) Click on one or more modifier key(s): ALT, SHIFT, and/or CTRL.
 - b) Click on the symbol field and enter any desired symbol.
 - c) Click 🐷 to save the settings.




Note: A function hot key consists of one or more modifier keys (Alt, Shift, Ctrl) plus a symbol.

Editing a Hot Key

To edit a hot key, do as follows:

- 1. Select the function on the HOT KEYS panel and click .
- 2. To assign a new hot key, do as follows:
 - a) Click on one or more modifier key(s): ALT, SHIFT, and/or CTRL.
 - b) Click on the symbol field and enter any desired symbol.
 - c) Click 🐷 to save the settings.




Deleting a Hot Key

On the **HOT KEYS** panel, select the hot key you want to delete and click **O**.

Wolume (Mate)	ALL	SHEE	E I R	+	
Internet					

GENERAL SETTING

Configure the display screen, system, and hot keys (for the **Control** button) related settings.

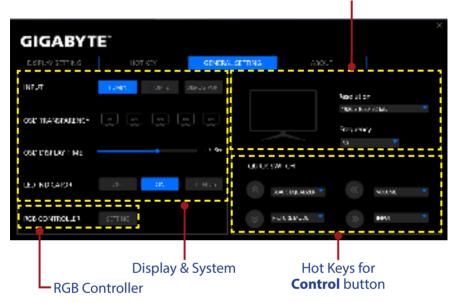

Screen resolution & Frequency

Changing the Hot Key for the Control Button

On the **QUICK SWITCH** panel, you can change the preset hot key function for the **Control** button.

Select the key position (()/()/()/() and click the \checkmark icon. Then select the desired option.



ABOUT

View the current firmware and software version and give you options to update the latest version.

IMPORTANT! During the firmware updating process, do not turn off the monitor. Any interruption may cause the device to malfunction.

GIGABYTE			
0.02.02.20110.00	SHE FM	THAT AND A CONTRACT OF A CONTRACTACT OF A CONTRACT OF A CONTRACT OF A CONTRACT OF A CONTRACT OF A CO	
OSD SIDBUCK		MONITOR FIRVWARE	
BOILD BAIL	B20.02 1.1	URMWAR, V.RSION	F03
het vervior:		Last version :	2435
. Gentlete	6	Contraction (1944)	
AUROUPDA L	Cast case		1957/30 005400

Updating the Software Automatically

Click **LIVE UPDATE** to check and automatically update software when a new version is available.




Set the **AUTO UPDATE** setting to **ON** to allow the system to check for software updates and display a message when a new update is available every time you open the app.

Note: Checking and updating software automatically requires Internet connection.

Updating the Firmware Manually

Note: Updating firmware manually does not require Internet connection.

- 1. Click **DOWNLOAD**. Then download the latest firmware from GIGABYTE web site and save the file on your computer.
- 2. Click BROWSE. Then select for the firmware file (*.bin) and click OK.

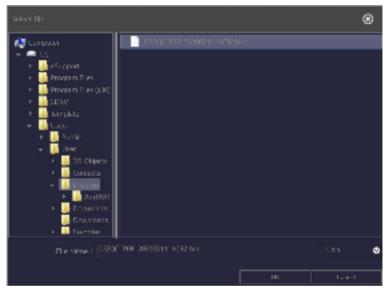

3. The firmware file is displayed on the field. Click **UPDATE** to update the firmware to the latest version.



4. Wait until the updating process is complete. Once the process is complete, a "Success" message appears on the screen. Then click **OK** to close the message window.

