

# LCD Monitor User Manual

# C2789FH8 LED backlight



WWW.AOC.COM ©2016 AOC. All Rights Reserved.

Safety	4
National Conventions	4
Power	5
Installation	6
Cleaning	7
Other	8
Setup	9
Contents in Box	9
Setup Base	10
Adjusting Viewing Angle	11
Connecting the Monitor	12
Free-Sync function	13
Adjusting	14
Setting Optimal Resolution	14
Windows 10	14
Windows 8	16
Windows 7	18
Hotkeys	20
OSD Setting	21
Luminance	22
Image Setup	23
Color Setup	24
Picture Boost	25
OSD Setup	26
Game Setting	27
Extra	
Exit	29
LED Indicator	
Driver	31
Monitor Driver	31
Windows 10	31
Windows 8	35
Windows 7	
i-Menu	43
e-Saver	44
Screen+	45
Troubleshoot	46
Specification	48
General Specification	48
Preset Display Modes	49
Pin Assignments	50
Plug and Play	51
Regulation	52
FCC Notice	52
WEEE Declaration	53
RoHS Declaration	53

	E-Waste Declaration for India	53
	EPA Energy Star	54
	EPEAT Declaration	55
Ser	vice	56
	Warranty Statement for Europe	56
	Warranty Statement for Middle East and Africa (MEA)	58
	AOC International (Europe) B.V.	60
	Warranty Statement for North & South America (excluding Brazil)	61
	EASE PROGRAME	.63
	TCO DOCUMENT	64

# Safety

## **National Conventions**

The following subsections describe notational conventions used in this document.

#### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

### Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100-240VAC, Min.5A

A The wall socket shall be installed near the equipment and shall be easily accessible.

For use only with the attached power adapter (Only for monitors with power adapter). Manufacturers: TPV ELECTRONICS (FUJIAN) CO., LTD model : ADPC21938EX

### Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.


Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Lo not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or with the stand:

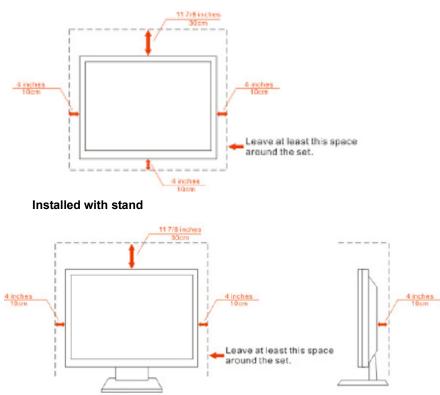

#### Installed on the wall

## Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.



### Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

All Make sure that the ventilating openings are not blocked by a table or curtain.


Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

If the phone on the base of LCD monitor when the phone calls will affect the circuit characteristics, may cause the screen to mute or screen interference.

# Setup

## **Contents in Box**

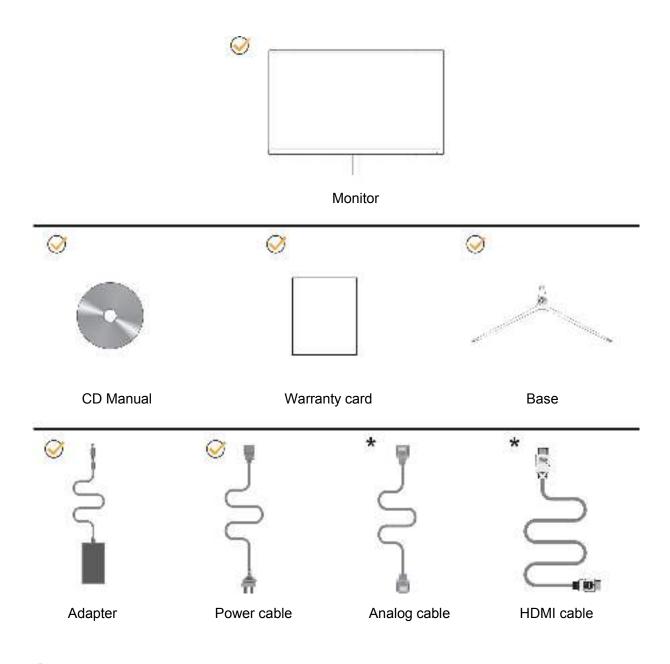


\* Not all signal cables (Analog, HDMI) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.


# Setup Base

Please setup or remove the base following the steps as below. Please place the monitor on a soft and flat surface to prevent the scratch.

Setup:

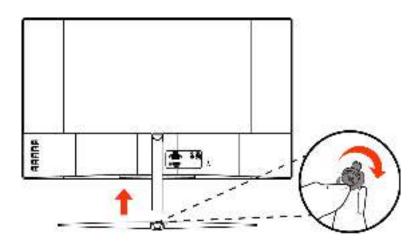

Remove:

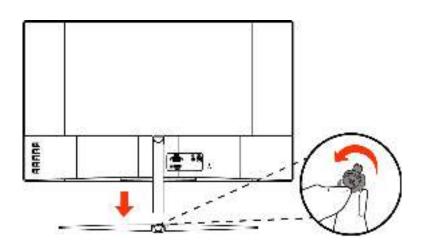


## **Adjusting Viewing Angle**

For optimal viewing, it is recommended to look at the full face of the monitor, and then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor's angle from -3.5° to 21.5 °.

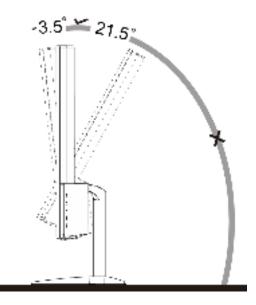


# 

Do not adjust the viewing angle over 21.5 degrees in order to avoid damage.

### **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:

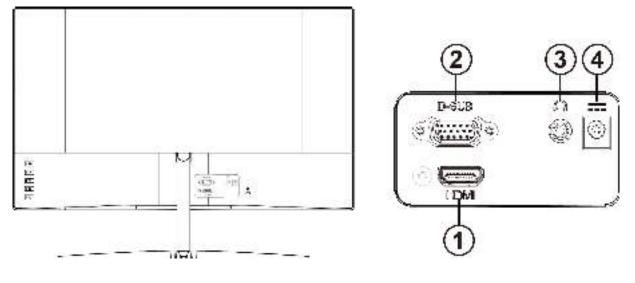

- 1 HDMI
- 2 D-SUB
- 3 Earphone
- 4 Power

To protect equipment, always turn off the PC and LCD monitor before connecting.

- 1 Connect the Adapter cable to the DC port on the back of the monitor.
- 2 Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
- 3 Optional (Requires a video card with HDMI port) Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.
- 4 (Optional –Requires a video card with Audio port) Connect one end of the Audio cable to the back of the monitor and connect the other end to the computer's Audio port.
- 5 Turn on your monitor and computer.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

## **Free-Sync function**


- 1. Free-Sync function is working with HDMI
- 2. Compatible Graphics Card: Recommend list is as the below, also could be checked by visiting www.AMD.com
- AMD Radeon RX 400 系列
- AMD Radeon R9 300 系列(370 series except)
- AMD Radeon R9 Fury X
- AMD Radeon R9 Nano
- AMD Radeon R7 360
- AMD Radeon R9 295X2
- AMD Radeon R9 290X
- AMD Radeon R9 290
- AMD Radeon R9 285
- AMD Radeon R7 260X
- AMD Radeon R7 260

# Adjusting

# **Setting Optimal Resolution**

### Windows 10


- Right click START.
- Click "CONTROL PANEL".

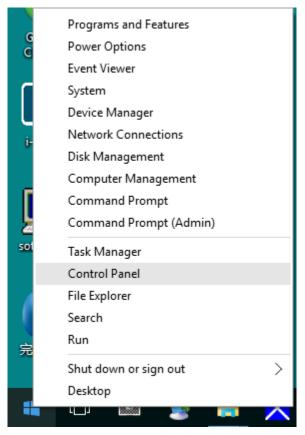

#### • Click "DISPLAY".

Basemente					- 7 X
n in the second s	the base of the				and the Parallel of
15 M 46 10 M					
All the second second					and the second second
C. Mathematica Science	No seeks	Stational Inco.	1. State Mediagnee	🚰 ale la grane	
👷 Sale of Barrya	💒 tanan 🗤	🌇 Marila da	A second	and Second Con-	
🖏 Are	🚷 tanà Ana Antoir	in a set the	🦉 - De Leitere Voor in	No research	
Z terrest see	L see	al and a	die versteren geneen	E martine.	
age indexed	🐏 intern	3 · · · ·	新 Section States	10 mm mm	
(3) Second State	🐮 haad ina	() Super editions:	😁 Salat Kalendarya	di sere	
A 44	<ul> <li>Second control for the interval of the second control of the second contro</li></ul>	🌾 tradiçi e Maharana	🛞 ta .	Even Angeler	
🐺 ta catalogue	🔞 A stea	States -	Labora diseases	Market Sectors	
🔍 server	Martin Martin	💣 Andrea ann	🍓 ana ana	40 Course	

• Click on the "Change display settings" button.

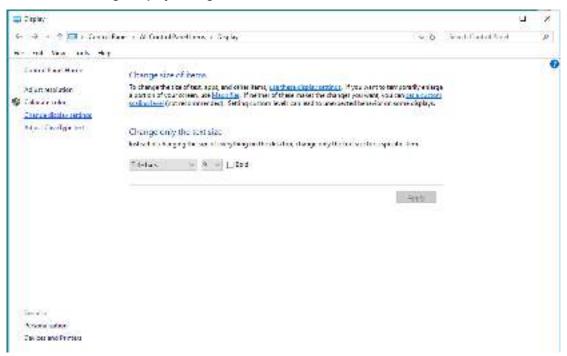

• Set the resolution **SLIDE-BAR** to Optimal preset resolution.

III Icrees Resultation				- 0	х
+ T 🖬 r Cartol Par	ul + All Control Pa	cel terrs + Display + Screen Resulution	+ 6	Search Epimic (False)	10
The Edit New York Help					
	Change the	appearance of your display			
		0	Dobat Sdowidy		
	Digiliyi Rocolution Orientetov	1. Epa - 1920 - 1080 (Recommended) - Lentrope -			
			Abarratisting		
		the Area lage a scale Registional change			
			DK Cancel April		

#### Windows 8


For Windows 8:

• Right click and click All apps at the bottom-right of the screen.






- Set the "View by" to "Category".
- Click "Appearance and Personalization".

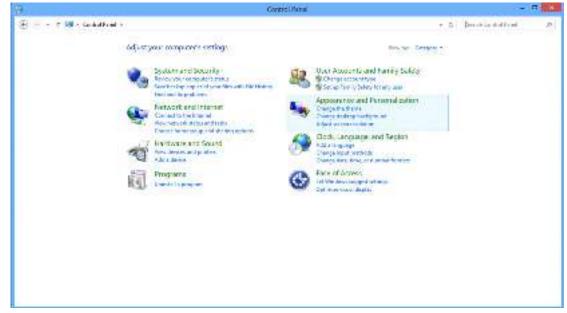

• Click "DISPLAY".

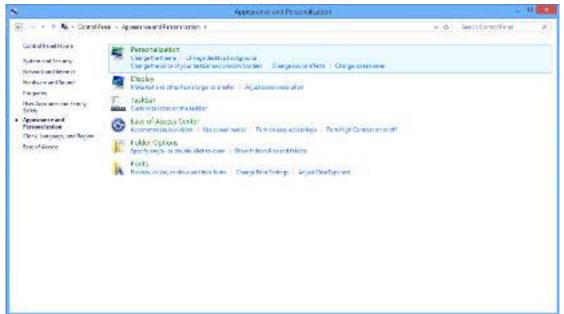


· Set the resolution SLIDE-BAR to Optimal preset resolution

	Screen Resolution		-	
	🛞 🛞 + 🕈 👼 + Contral Parel + Appearance and Prese officialer + Diplay + Second Resolution — 🗸 🖉	đ	Search Carried Form	,p
	Change the appearance of your display			
	1 Electric Streetly			
	Deploy: 1. PLC2/IBM v Revolution: 1420 a 1000 (Sever reversion) v			
	Crisensitive 1905 1900 - 1900 (Recommended) Information of the Note set and other			
L	What signing setting			
	06 Canod Appy 1004 = 730			

#### Windows 7

#### For Windows 7:

- Click START.
- Click "CONTROL PANEL".

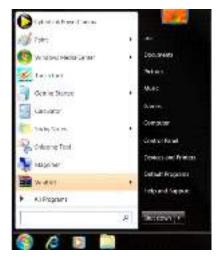


Click "Appearance".

•

٠

After programme to hep-				 
and the second second	· participant in the second second	() and a () The off the () The off the ()	Bernard and memory           Be local to open           Be local to open	

#### Click "DISPLAY".

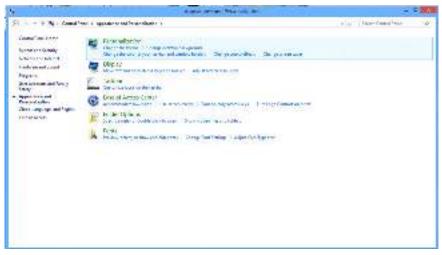


• Click on the "Change display settings" button.




Set the resolution SLIDE-BAR to Optimal preset resolution

•

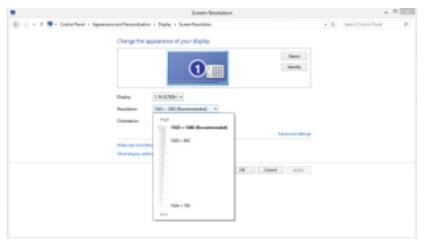

### **Hotkeys**

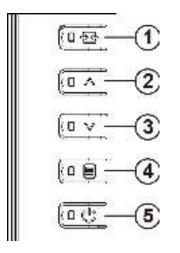

1				
1	Source/Auto/Exit			
2	Image Ratio/Volume/ ∧			
3	Game mode/∨			
4	Menu/Enter			
5	Power			

#### Menu/Enter

Press to display the OSD or confirm the selection.

#### Power

Press the Power button to turn on/off the monitor.

#### Image Ratio/Volume/ \/

When there is no OSD, Press Volume button to active volume adjustment bar, Press  $\land$  or  $\lor$  to adjust volume.

#### Auto/Exit/Source hot key

When there is no OSD, Press Auto/Source button continuously about 2 second to do auto configure. When the OSD is closed, press Source button will be Source hot key function. Press Source button continuously to select the input source showed in the message bar, press Menu/Enter button to change to the source selected.

#### Game Mode/ $\lor$

When there is no OSD, press the minus key to open game mode function, then press  $\land$  or  $\lor$  key to select game mode (FPS, RTS, Racing, Gamer 1, Gamer 2 or Gamer 3) basing on the different game types.

## **OSD Setting**

Basic and simple instruction on the control keys.

<	<b>N</b> Image Serie	được Satup	Fichne Loopt	CSL CALLS	ැංකි Game Setting	× Leta	5 1.1
Contrast							
Brightness	_						
Fachade	• Standard	*					

- 1. Press the III MENU-button to activate the OSD window.
- Press ∧ or ∨ to navigate through the functions. Once the desired function is highlighted, press the MENU-button to activate it. If there is a sub-menu, press ∧ or ∨ to navigate through the sub-menu functions.
- 3. Press  $\land$  or  $\lor$  to change the settings of the selected function. Press **AUTO** to exit. If you want to adjust any other function, repeat steps 2-3.
- 4. OSD Lock Function: To lock the OSD, press and hold the **MENU-button** while the monitor is off and then press **U** power button to turn the monitor on. To un-lock the OSD press and hold the **MENU-button** while the monitor is off and then press **U** power button to turn the monitor on.

#### Notes:

- 1. If the product has only one signal input, the item of "Input Select" is disabled.
- 2. If the product screen size is 4:3 or input signal resolution is native resolution, the item of "Image Ratio" is disabled.
- 3. One of DCR, Color Boost and Picture Boost functions is activated; the other two functions are turned off accordingly.

### Luminance

<	Z. Intege Serip	a. Coor See p	- Petro Leon	CSC Selas	्यून्त्र Came Setting	X Los	¶ La
Contrast							
Brightness							
Fachade							

1 Press III (Menu) to display menu.

2 Press  $\land$  or  $\lor$  to select  $\overset{\frown}{\clubsuit}$  (Luminance), and press IIII (Menu) to enter.

3 Press  $\land$  or  $\lor$  to select submenu.

4 Press  $\land$  **or**  $\lor$  to adjust.

5 Press 🔁 to exit.

	Contrast	0-100		Contrast from Digital-register.
	Brightness	0-100		Backlight Adjustment
		Standard		Standard Mode
		Text	T	Text Mode
	Eco mode	Internet	8	Internet Mode
		Game	<b>199</b>	Game Mode
		Movie	ø	Movie Mode
		Sports	30	Sports Mode
		Gamma1		Adjust to Gamma 1
	Gamma	Gamma2		Adjust to Gamma 2
		Gamma3		Adjust to Gamma 3
		Off		Disable dynamic contrast ratio
	DCR	On	DCR	Enable dynamic contrast ratio

### Image Setup

Karaka Senja	State Set p	Poine boost	<b>S</b> 000 (Selins	Came Seling	X Lata	¶] La	*
Clock			Poston	50			
Phase			Position 📃	50			
Sharpman							

1 Press III (Menu) to display menu.

- 2 Press  $\land$  or  $\lor$  to select (Image Setup), and press (Menu) to enter. 3 Press  $\land$  or  $\lor$  to select submenu.
- 4 Press  $\land$  or  $\lor$  to adjust.

5 Press 편 to exit.

Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
 Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise.
Sharpness	0-100	Adjust picture sharpness.
H. Position	0-100	Adjust the horizontal position of the picture.
V. Position	0-100	Adjust the vertical position of the picture.

### **Color Setup**

		Fichae Loo		CSED Selus	्रम्भ Game Seting	× Laix	N) La	*	The setup
Celor Temp					_	50			
DOB Mode					sh 📃	50			
ОСВ Ветр				Blue	_	- ×			
1 Press	(Me	nu) to dis	play n	nenu.					

2 Press $\land$ or $\lor$ to select $\clubsuit$ (Color Setup), and press IIII (Menu) to enter.
3 Press $\land$ or $\lor$ to select submenu.
4 Press $\land$ or $\lor$ to adjust.
5 Press 🖬 to exit.

		Warm		Recall Warm Color Temperature from EEPROM.
		Normal		Recall Normal Color Temperature from EEPROM.
		Cool		Recall Cool Color Temperature from EEPROM.
	Color Temp.	sRGB		Recall SRGB Color Temperature from EEPROM.
			Red	Red gain from Digital-register.
		User	Green	Green gain from Digital-register.
			Blue	Blue gain from Digital-register.
		Full Enhance	ON/OFF	Red/Green/Blue Gain
		Nature Skin	ON/OFF	Red Gain from Digital-register.
	DCB Mode	Green Field	ON/OFF	Green Gain from Digital-register.
		Sky-blue	ON/OFF	Blue Gain from Digital-register.
		AutoDetect	ON/OFF	Auto gain for input signal
	DCB Demo		ON/OFF	Enhance Area in half Picture

### **Picture Boost**

<		Sa Sales	( Sen	PA X e Selling Lota	¶] La	<b>ж</b> Солганся	📑 Insge Setup	e Color Setup
Bright Frame				Erightness				o
France Size			14	Contrast			V. Position	•
1 Press $\boxed{10}$ (Menu) to display menu. 2 Press $\land$ or $\lor$ to select $\boxed{10}$ (Picture Boost), and press $\boxed{10}$ (Menu) to enter.								
3 Press \land oi	· v	to select	submen	J.				
4 Press $\wedge$ or $\vee$ to adjust.								
5 Press 🛨	to e	exit.						

	Bright Frame	ON/OFF	Enable/Disable Bright Frame		
	Frame Size	14-100	Adjust the Size of the Frame		
	Brightness	0-100	Brightness Adjustment for Enhance Area		
N	Contrast	0-100	Contrast Adjustment for Enhance Area		
	H. position	0-100	Adjust the horizontal position of the Frame		
	V. position	0-100	Adjust the vertical position of the Frame		

#### Note:

Adjust the brightness, contrast, and position of the Bright Frame for better viewing experience.

### **OSD Setup**

	çan. Game Settinç	X	SI LA	*	A Inage Seluc	de Color Setus	Picture Boost
Language Timeout	<ul> <li>English</li> </ul>	► 10	H. Position V. Disition		50 0	Transparence 📃	25 Oli •

1 Press III (Menu) to display menu.

2 Press $\land$ or $\lor$ to select $\bigcirc$ (OSD Setup), and pres	s 🔟 (Menu) to enter.
3 Press $\land$ or $\lor$ to select submenu.	
4 Press $\land$ or $\lor$ to adjust.	
5 Press 🍱 to exit.	

Language Select the OSD language Timeout 5-120 Adjust the OSD timeout. H. Position 0-100 Adjust the horizontal position of the OSD. V. Position 0-100 Adjust the vertical position of the OSD. Adjust the Transparence of the OSD Transparence 0-100 Break Break Reminder if the user continuely work for more than 1 ON/OFF Reminder hours

### Game Setting

Come Calor Come Calor		Low Flue Ugn Overdrive	Image Stellus     Color Estup     Forture Local     Option Stellup       Image Stellus     Color Estup     Forture Local     Option Stellup					
<ol> <li>Press I to display menu.</li> <li>Press ∧ or ∨ to select (Game setting), and press (Menu) to enter.</li> <li>Press ∧ or ∨ to select submenu</li> <li>Press ∧ or ∨ to adjust.</li> </ol>								
5. Press	to exit.							
		FPS	For playing FPS (first Person Shooters) games. Improves dark theme black level details.					
	Game Mode	RTS	For playing RTS (Real Time Strategy). Improves the image quality.					
		Racing	For playing Racing games, Provides fastest response time and high color saturation.					
		Gamer 1	User's preference settings saved as Gamer 1.					
		Gamer 2	User's preference settings saved as Gamer 2.					
		Gamer 3	User's preference settings saved as Gamer 3.					
		off	No optimization by Smart image game					
<b>100</b>	Shadow Control 0-100		<ul> <li>Shadow Control Default is 50, then end-user can adjust from 50 to 100 or 0 to increase contrast for clear picture.</li> <li>1. If picture is too dark to be saw the detail clearly, adjusting from 50 to100 for clear picture</li> <li>2. If picture is too white to be saw the detail clearly, adjusting from 50 to0 for clear picture</li> </ul>					
	Game Color	0-20	Game Color will provide 0-20 level for adjusting saturation to get better picture.					
	Low Blue Light	Off/Weak/ Medium/Strong	Decrease blue light wave by controlling color temperature.					
		Weak						
	Overdrive	Medium	Adjust the response time.					
	Overanive	Strong						
		Off						

### Extra

< 🔆 >	ľ	¶] Ext	<b>Ж</b> Політкосн	The second secon	Č. Color Set. p	Picture Roosi	San amp	Game Setting
input Select				Image Ratio		Resolution		0(9)
Auto Contig.						H Frequen	cy : 45KHz	
OTTIN						∀ Гюдью		

1 Press III (Menu) to display menu.

- 2 Press  $\land$  or  $\lor$  to select  $\checkmark$  (Extra), and press  $\blacksquare$  (Menu) to enter.
- 3 Press  $\land$  or  $\lor$  to select submenu.
- 4 Press  $\land$  **or**  $\lor$  to adjust.

### 5 Press 🗗 to exit.

		Auto	Auto Detect input signal		
	Input Select	D-SUB	Select D-SUB signal source as input		
		HDMI	Select HDMI signal Source as input		
2/	Auto Config.	Yes / No	Auto adjust the picture to default.		
	Off Timer	0-24 hrs	Select DC off time.		
	Image Ratio	Wide or 4:3	Select image Ratio format for display.		
	DDC/CI	Yes / No	Turn on or off DDC/CI Support.		
	Reset	Yes / No	Reset the menu to default.		

Exit							
$< \underbrace{\mathbb{N}}_{n} >$	No conce	Nage Selary	ék Color Setup	Polare Good	Sa concerna	Carro Betting	× Extra
1 Press 🔟	(Menu) to displ	ay menu.					
2 Press ∧ o	r ∨ to select	📲 (Exit), ar	nd press 💷	(Menu) to enter	:		
3 Press 晒	to exit.						
	T						
▶	Exit			Ex	it the main O	SD	

# **LED Indicator**


Status	LED Color
Full Power Mode	White
Power Saving	Orange

# Driver

### **Monitor Driver**

### Windows 10

- Start Windows® 10
- Right click START.
- Click "Control Panel".

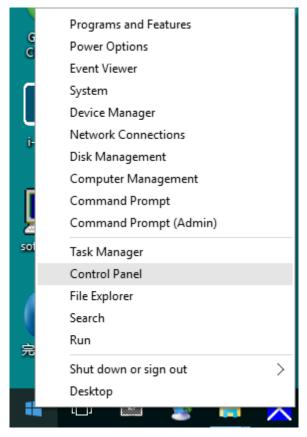


#### Click on the "Display" icon.

•

 Bit and the state of the s

Click on the "Change display settings" button

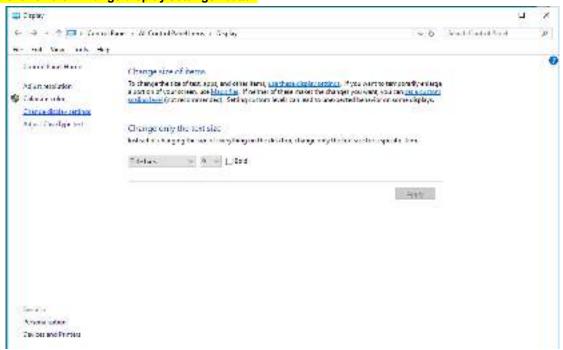


#### Click the "Advanced Settings" button.

٠

🖶 🗉 + 🕇 🛄 + Cantol Fand + All Control Facel Bank terra + Digity + Screen Beautoice 🚽 👌 (Santh Lorma) Face	
	( R
The last New York Help	
Change the appearance of your display	
Brit	
1 Savety	
District 1.824 -	
Parolution 1000 - 1000 (Recommended) -	
Oversetore Lendcape -	
Advanced settings	
Make for and other dense langer or analysis Wind display entropy chandel channel"	
DK Cancel Appl	

Click the "Monitor" tab and then click the "Properties" button.

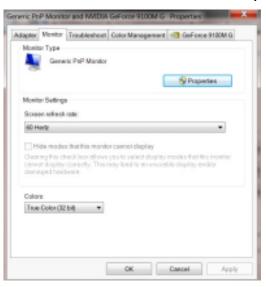

• Click the "Driver" tab.

•


Deceric Pa	F Monitor Prager	sei			
General	Driver Dotata				
4	Generic Pyd <sup>a</sup> Manian				
	DeverProvider	Mount			
	Crivel Date	82242008			
	Dever Western	6.1760016036			
	Digital Right	Merce Millindowy			
- De	ver Derate	To view details attoat the store files			
	Late Dover	To up take the other selfware for the stevice.			
The	Derritmen	The device fails after updating the dever, rule basis in the previously installed driver			
	Deaphe	Disables the selected device			
Omet		To prevatal the cliver of channels			
		OR. Canal			

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... "and then

click the "Browse my computer for driver software" button.



• Select "Let me pick from a list of device drivers on my computer".

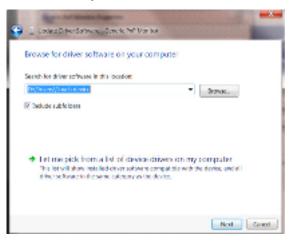

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).



- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

### Windows 8

- Start Windows® 8
- Right click and click **All apps** at the bottom-right of the screen.



• Click on the "Control Panel" icon

C 🗖 🖽

• Set the "View by" to "Large icons" or "Small icons".

-		12 + ++	A reducerous	3	10 mar -
E I m him av	S Sauth	No. is not inque at	di halanan	and below office	
1 2 an a	Christen inter	By territory	in the same	I taltantist	
K w-na.	In mark	46	do main	C + land and	
\$ M	P	a service	A true	the balance of the set	
State and	W. with constant			g maintain	
in market	All reparent lease	*	Here	A second wind have	
() has	1. Bala May an	28 Louisia	() Late a	By law	
1. mail	Aberton	A	in a work to have	the more trace	
a	The second second				

2000

Click on the "Display" icon.

•

•

A fair, provide page 111 begs				and set and
Sector Sector	· participant in the second second	() anothe of the only two of the only two denses denses denses theory one denses th	Boundation     Build to any     A second to any     Build to any	


Click on the "Change display settings" button.



• Click the "Advanced Settings" button.

A section b Attach Relation & Second Seco	Vehilerative		<ul> <li>In Deschool Keel</li> </ul>
Ourse he	. 0	Post Meth	
Parts Britshin Langeray	The second secon	vicer range	
	the destinger of choice.		
	×	Game Ann	

Click the "Monitor" tab and then click the "Properties" button.

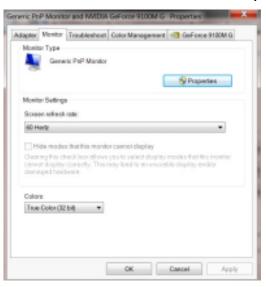

• Click the "Driver" tab.

•

•


Deceric Pa	F Monitor Prager	sei Liit
General	Driver Dotata	
	Generic ProP Ma	-
	Dever Provider	Mount
	Cevel Date	82242008
	Dever Western	6.17600 %305
	Digital Rights:	Mercel Windowy
( De	vei Deraria	To view details attoat the store files
. And	Line Devel	To up take the cover software for the stevice.
The	Derritmen	The Device Spin offer updating the dever, rull back. In the previously installed dever
	Dauble	Disables the selected device.
	Jenuis1	To presidal the cliver of channels
		OR. Canal

Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver..." and

then click the "Browse my computer for driver software" button.




• Select "Let me pick from a list of device drivers on my computer".

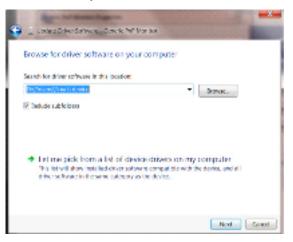

• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

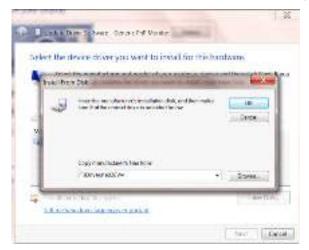

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

#### Windows 7

- Start Windows® 7
- Click on the "Start" button and then click on "Control Panel".



• Click on the "Display" icon.

After processing on the				
Propartie 2 Listemann 2 Distance 2 Distance 2 Distance 2 Distance 2 Distance 3 Distance 3 Distance 4 Distance 4 Distance 5 Distance 5 Distance 5 Distance 6 Distance 6 Distance 6 Distance 9 Dis	· a patro manadage	Guerrie 17 La cel re- 16 La cel re- La cel re- 16 La cel re- La cel re	B         Second at a second           B         Second at a second           B         Second at a second a	


• Click on the "Change display settings" button.



• Click the "Advanced Settings" button.

ana is Series I Venindecisión	• a Dan Saciliari A
Comp de agrocer e l'yest affet	
Perio Incodel Milanta   moltar Plate machine   Lannar Amazza	
Sale for and the shall reprint over Whether a straight and the set	
X Gen Aur	

Click the "Monitor" tab and then click the "Properties" button.

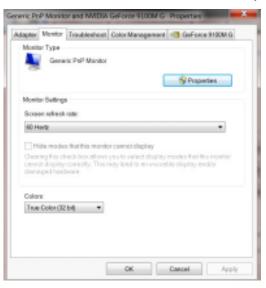

Click the "Driver" tab.

•

•




• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... " and

then click the "Browse my computer for driver software" button.



• Select "Let me pick from a list of device drivers on my computer".

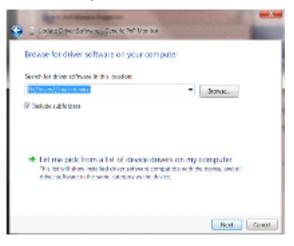

•

Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

uk bei	Tok -	And the second in	-
-	togethe acceleration second	And Incident	ia: Gener
	Copy many findate in Take Bow		
	Copyraio, Adaem Nacional / Konwerk XX/w		5044

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

## i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide. The software Supported operating systems: Windows 8, Windows 7, Windows10.



## e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC statuses, you may choose the desired time (in minutes) from the pull-down menu for your monitor to automatically shutdown. The example below illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.




You can click "RESET" to set the e-Saver to its default settings like below.



## Screen+



Welcome to "Screen+" software by AOC. Screen+ software is a desktop screen splitting tool; it splits the desktop into different panels, and each panel displays a different window. You only need to drag the window to a corresponding panel when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it. The software Supported operating systems: Windows 8, Windows 7, Windows 10.

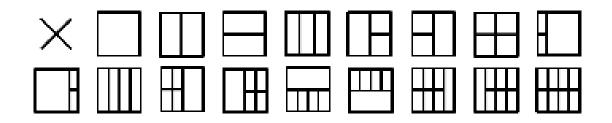

# Troubleshoot

Problem & Question	Possible Solutions			
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.			
No images on the screen	<ul> <li>Is the power cord connected properly? Check the power cord connection and power supply.</li> <li>Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection.</li> <li>* DVI input is not available on every model.</li> <li>If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen.</li> <li>If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/2000) and then change the frequency of the video card.</li> <li>(Refer to the Setting the Optimal Resolution)</li> <li>If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</li> <li>Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly.</li> <li>Adjust the maximum resolution and frequency that the monitor can handle properly.</li> <li>Make sure the AOC Monitor Drivers are installed.</li> </ul>			
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back.			
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution you are using.			

Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.	
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.	
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).	
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.	
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME shut-down mode to adjust CLOCK and PHASE. Press to auto-adjust.	

# Specification


# **General Specification**

	Model name	C2789FH8	
	Driving system	TFT Color LCD	
	Viewable Image Size	686 mm diagonal	
Panel	Pixel pitch	0.3114 (H)mm x 0.3114 (V)mm	
	Video	R, G, B Analog Interface	
	Separate Sync.	H/V TTL	
	Display Color	16.7M Colors	
		30~83KHz (D-SUB)	
	Horizontal scan range	30~85kHz (HDMI)	
	Horizontal scan Size(Maximum)	597.888 mm	
	Vertical scan range	50~76Hz (D-SUB)	
		48~76Hz (HDMI)	
	Vertical scan Size(Maximum)	336.312 mm	
	Optimal preset resolution	1920×1080@60Hz	
Other	Plug & Play	VESA DDC2B/CI	
	Input Connector	R/G/B Analog, HDMI	
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive TMDS	
	Output Connector	Earphone	
	Power Source	19VDC, 2A	
		30 W (Typ.)	
	Power Consumption	≦35W(Max.)	
		Standby ≦0.5 W	
	Off timer	0-24 hrs	
	Connector Type	R/G/B Analog, HDMI, Earphone out	
	Signal Cable Type	Detachable	
	Dimensions & Weight:		
Physical Characteristics	Height (with base)	452.11 mm	
Characteriotice	Width	612.7 mm	
	Depth	179.94 mm	
	Weight (monitor only)	3.96 kg	
	Temperature:		
	Operating	0° to 40°C	
	Non-Operating	-25° to 55°C	
	Humidity:		
Environmental	Operating	10% to 85% (non-condensing)	
	Non-Operating	5% to 93% (non-condensing)	
	Altitude:		
	Operating	0~ 3658m(0~ 12000 ft)	
	Non-Operating	0~ 12192m (0~ 40000 ft )	

# Preset Display Modes


Standard	Resolution	H. Frequency (kHz)	V. Frequency (Hz)
VGA	640x480@60Hz	31.469	59.94
VGA	640x480@72Hz	37.861	72.809
VGA	640x480@75Hz	37.5	75
VGA	720x400@70Hz	31.649	70.087
SVGA	800x600@56Hz	35.156	56.25
SVGA	800x600@60Hz	37.879	60.317
SVGA	800x600@72Hz	48.077	72.188
SVGA	800x600@75Hz	46.875	75
XGA	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
XGA	1024x768@75Hz	60.023	75.029
WXGA+	1440x900@60Hz	55.935	59.887
WXGA+	832x624@75Hz	49.725	74.77
WXGA+	1680x1050@60Hz	64.674	59.883
SXGA	1280x1024@60Hz	63.981	60.02
SXGA	1280x1024@75Hz	79.976	75.025
HD	1280x720@60HZ	44.772	59.855
HD	1280x960@60Hz	60	60
Full HD	1920x1080@60Hz	67.5	60

# **Pin Assignments**



### 15-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	Video-Red	9	+5V
2	Video-Green	10	Ground
3	Video-Blue	11	N.C.
4	N.C.	12	DDC-Serial data
5	Detect Cable	13	H-sync
6	GND-R	14	V-sync
7	GND-G	15	DDC-Serial clock
8	GND-B		



19-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2+	11	TMDS Clock Shield
2	TMDS Data 2 Shield	12	TMDS Clock
3	TMDS Data 2	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device
5	TMDS Data 1Shield	15	SCL
6	TMDS Data 1	16	SDA
7	TMDS Data 0+	17	DDC/CEC Ground
8	TMDS Data 0 Shield	18	+5V Power
9	TMDS Data 0	19	Hot Plug Detect
10	TMDS Clock +		

## **Plug and Play**

#### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

# Regulation

## **FCC Notice**

#### FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

#### NOTICE:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

## **WEEE Declaration**

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## **RoHS Declaration**

his product complies with all implemented RoHS type regulations worldwide, including but not limited to, EU, Korea, Japan, US States (e.g. California), Ukraine, Serbia, Turkey, Vietnam and India. We continue to monitor, influence and develop our processes to comply with upcoming proposed RoHS type

regulations, including but not limited to, Brazil, Argentina, Canada.

## **E-Waste Declaration for India**



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit: <u>http://www.aocindia.com/ewaste.php</u> and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 080-6788-6788 / 080-3323-1313 (Monday to Saturday, 10 a.m. to 6 p.m.)

Centralized E-waste collection center

Address: *TPV Technology India Private Limited,* 59, Maheswari Nagar, 1st Main Road, Mahadevapura Post, Whitefield Road, Bangalore, Karnataka, PIN: 560048, Tel: 080-3023-1000

E-mail: <u>serviceindia@aoc.com</u>.

### **Restriction on Hazardous Substances statement (India)**

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1). Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

## **EPA Energy Star**



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency. (FOR EPA CERTIFIED MODELS)

## **EPEAT Declaration**



EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products. (FOR EPEAT CERTIFIED MODELS)

AOC believes in protecting the environment. With a key concern for the conservation of natural resources, as well as landfill protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and filler materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam filler and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

#### For North America:

http://us.aoc.com/aoc-corporation/?page=environmental-impact For Germany: http://aoc-europe.com/de/content/environment For Brazil: http://www.aoc.com.br/pg/embalagem-verde

# Service

## Warranty Statement for Europe

#### LIMITED THREE-YEAR WARRANTY\*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u> for the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return. Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

#### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aoc-europe.com">http://www.aoc-europe.com</a>

## Warranty Statement for Middle East and Africa (MEA)

### And

## The Commonwealth of Independent States (CIS)

### LIMITED ONE to THREE YEARS WARRANTY\*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center) Warranty Support at an AOC's Authorized Service Center or Dealer and at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. As a Standard Policy, the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: <u>http://aocmonitorap.com/egypt\_eng</u>
- CIS Central Asia: <u>http://aocmonitorap.com/ciscentral</u>
- Middle East: <u>http://aocmonitorap.com/middleeast</u>
- South Africa: <u>http://aocmonitorap.com/southafrica</u>
- Saudi Arabia: <u>http://aocmonitorap.com/saudiarabia</u>

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

#### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source

- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Center or dealer will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aocmonitorap.com">http://www.aocmonitorap.com</a>



## AOC International (Europe) B.V.

Prins Bernhardplein 200 / 6th floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933


# AOC Pixel Policy ISO 9241-307 Class 1

July 25<sup>th</sup>, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

#### **Pixels and Sub Pixel Definition**

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.

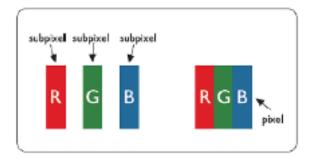

#### **Types of Pixel Defects**

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off".

ISO 9241-307 Pixel Defect Class	Defect Type 1 Bright Pixel	Defect Type 2 Black Pixel	Defect Type 3 Bright Sub pixel		<b>Defect Type 4 Black</b> Sub pixel
			2	+	1
Class 1	1	1	1	+	3
			0	+	5

AOC International (Europe) B.V.

### Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT

for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI ( EPI is the abbreviation of Envision Peripherals, Inc. ) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/find\_service\_center ARGENTINA: http://ar.aoc.com/support/find service center BOLIVIA: http://bo.aoc.com/support/find\_service\_center CHILE: http://cl.aoc.com/support/find service center COLOMBIA: http://co.aoc.com/support/find service center COSTA RICA: http://cr.aoc.com/support/find\_service\_center DOMINICAN REPUBLIC: http://do.aoc.com/support/find service center ECUADOR: http://ec.aoc.com/support/find service center EL SALVADOR: http://sv.aoc.com/support/find service center GUATEMALA: http://gt.aoc.com/support/find\_service\_center HONDURAS: http://hn.aoc.com/support/find service center NICARAGUA: http://ni.aoc.com/support/find service center PANAMA: http://pa.aoc.com/support/find\_service\_center PARAGUAY: http://py.aoc.com/support/find service center PERU: http://pe.aoc.com/support/find service center URUGUAY: http://pe.aoc.com/support/find service center VENEZUELA: http://ve.aoc.com/support/find service center IF COUNTRY NOT LISTED: http://latin.aoc.com/support/find\_service\_center

## EASE PROGRAME



Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both

ways.

Step 1: Phone our TECH Department at 888.662.9888.

Step 2: Fill out and return EASE registration forms by mail or fax.

Step 3: We will issue a Return Authorization Number upon verification into the program.

Step 4: A monitor will be advance shipped to your location.

Step 5: We will issue a UPS Call Tag to pick up the defective unit.

Step 6: Please review the following chart to see your EASE program qualifications.

WARRANTY	COVERAGE AT	CUSTOMER
PERIOD	NO CHARGE	CHARGES
Within the first three months of	- New AOC monitor - Call tag	- None*
purchase: Covered by EASE	dispatched and return freight	
	charges via UPS	
Between 4 months – 1 Year	- All Parts & Labor Including CRT	- UPS Return Freight to AOC
	Tube & LCD Panel	
Between 1 Year - 3 Years: Covered	- Parts & Labor (excluding CRT	- UPS Return Freight to AOC
by standard limited warranty	Tube & LCD Panel)	

\*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.



## **TCO DOCUMENT**

## **Congratulations!**

#### This product is designed for both you and the planet!



TCO Development works for sustainable IT manufacture, use and recycling of Π products reflecting environmental, social and economic responsibility.

TCO Certified is a third party verified program, where every product model is tested by an accredited impartial test laboratory. TCO

Certified represents one of the toughest certifications for ICT products worldwide.

#### Some of the Usability features of TCO Certified Displays:

- Visual Ergonomics for image quality is tested to ensure top performance and reduce sight and strain problems. Important parameters are Resolution, Luminance, Contrast, Reflection and Colour characteristics
- Products are tested according to rigorous safety standards at impartial laboratories
- Electric and magnetic fields emissions as low as normal household background levels
- Workload ergonomics to ensure a good physical environment

#### Some of the Environmental features of TCO Certified Displays:

- Production facilities have an Environmental Management System (EMAS or ISO 14001)
- Low energy consumption to minimize climate impact
- Restrictions on Chlorinated and Brominated flame retardants, plasticizers, plastics and heavy metals such as cadmium, mercury and lead (RoHS compliance)
- Both product and product packaging is prepared for recycling
- The brand owner offers take-back options

#### Corporate Social Responsibility

 The brand owner demonstrates the product is manufactured under working practices that promote good labour relations and working conditions.

The Criteria Document can be downloaded from our web site. The criteria included in this label have been developed by TCO Development in co-operation with scientists, experts, users as well as manufacturers all over the world. Since the end of the 1980s TCO has been involved in influencing the development of IT equipment in a more user and environmentally friendly direction. Our ICT product labeling system began in 1992 and is now requested by users and ICT-manufacturers all over the world.

For more information, please visit www.tcodevelopment.com

TCO Certified Document for Displays version, 2.3



(FOR TCO CERTIFIED MODELS)