
Dell C2423H Dell C2723H Video Conferencing Monitor Dell Display Manager

Dell Display Manager User's Guide



Model: C2423H/C2723H Regulatory model: C2423Hb/C2723Hb

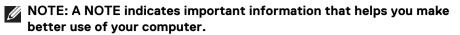

- △ CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
- MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2022 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2022 - 02

Rev. A00

Contents

Overview
Using the Quick Settings Dialog 5
Setting Basic Display Functions 6
Assigning Preset Modes to Applications
Organizing Windows with Easy Arrange 8
Managing Multiple Video Inputs
Restoring Application Positions
Attach DDM to active window (only Windows 10) 13
Applying Energy Conservation Features
Other Shortcut Keys
Troubleshooting 15

(Dell

Overview

Dell Display Manager (DDM) is a Microsoft Windows application used to manage a monitor or a group of monitors. It allows manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on select Dell monitors. Once installed, Dell Display Manager runs each time the system starts and places its icon in the notification tray. Information about monitors connected to the system is available when hovering over the notification-tray icon.



Alternatively, you may launch DDM by right-clicking on the desktop background to select Dell Display Manager from the desktop menu.

NOTE: Dell Display Manager uses DDC/CI channel to communicate with your monitor. Ensure DDC/CI is enabled in the menu as below.

 equivalente 	the start start.		
41			
45.246	-SGer-Herly;	. ar	
u Nie			
12 mil. 1794 m			
C New			
A desider	0.00They		



DEL

Using the Quick Settings Dialog

Clicking Dell Display Manager's notification tray icon opens the **Quick Settings** dialog box. When more than one supported Dell monitors are connected to the computer, a specific target monitor can be selected using the menu. The **Quick Settings** dialog box enables you to easily adjust the brightness, contrast, resolution, window layout, and so on. You can select **Manual Mode** or **Auto Mode**, and the screen resolution can be changed.

D NAM	Mixioger	ii)
Taylor Taylor	Calicoutry +	
() natifiale # Tenatifiale		Santari -
ingresse controls	_	35
inertiant		
	Start Del Statut Marco	

The **Quick Settings** dialog box also provides access to Dell Display Manager's advanced user interface that is used to adjust basic functions, configure auto mode and access other features.

DEL



~		
Feature	Function	Description
Quick DDM Access	Quick key to call up DDM UI	Ctrl+Shift+D
Access		 Use Page Up/Page Down key or click on ">" to flip through all Easy Arrange layouts.
	Control individual	 From dropdown box to select monitor, selected monitor has Dell logo shown.
	monitor in	• Perform monitor self-test feature check.
	multiple monitor setup	 Move DDM UI to the monitor to be controlled.
		 Press Ctrl+Shift+D to bring up the miniUl under the mouse pointer.

Setting Basic Display Functions

Select **Manual Mode** that enables you to manually select a preset mode or select **Auto Mode** that applies a preset mode based on the active application. An onscreen message displays the current preset mode whenever it changes. The selected monitor's **Brightness** and **Contrast** can also be directly adjusted from the **Basic** tab.

Qualc	An e Mailin	Augure	***	Ante Measure	Dj Bress
erenter	14.1612-1				iles,
C Auto Model Paper de la	alessa je se stara i	and store			Configure
8 Harus Hoos Discontraport				Faisley'	3
	1.0		24		
Sec. 1			79.82		



6



NOTE: When multiple Dell monitors are connected, select "Enable display matrix control" to apply brightness, contrast and color presets controls to all monitors.

Onsic	Acres 1	Aughterer	Alter Branks	Di general
Receive	14.612.1			1.00
C Auto Mode anti-procest a	ubaayo xafaa a	• • • • • • •		Contain
 Nerve Hoos Department 			* miles	-
			MR.	
Sector 1			244	

Assigning Preset Modes to Applications

The **Auto Mode** tab allows you to associate a specific **Preset Mode** with a specific application, and apply it automatically. When Auto Mode is enabled, Dell Display Manager automatically switches to the corresponding **Preset Mode** whenever the associated application is activated. The **Preset Mode** assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to another.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu or elsewhere, and drop it onto the current list.

NOTE: Preset Mode assignments for batch files, scripts, loaders, and di. non-executable files such as zip archives or packed files, are not supported.

DEL

7

You can also configure the Game preset mode to be used whenever a Direct3D application runs in full-screen mode. To prevent an application from using mode, assign a different preset mode to it.

Enr	#uto Hode	Aug Anner -	Alte Weaths	Di Berri
nigr a prasat	wede te a spadife applicat	ten. To add an applicati	on, drag i tro the let	
Application .		Yest: Node	2.4	
tel ceaux	inter an Antherit	(avial	~	
C (Column	or Alberton DirectSCI	Sec.	×	
Celest)	or universal Witteans cap	d (49.)	v]	
🙆 Adress Ad	rebor: Russder DC	A with a	~	
Adver 14	i Stema Ci i	44.1	2	
	dev	4.001	~	3

Organizing Windows with Easy Arrange

Easy Arrange helps you to effectively organize your application windows on the desktop. You first choose a pre-defined layout pattern which suits your work, then you just need to drag the application windows into the defined zones. Press ">" or use Page Up/Page Down key to find more layouts.

To create a custom layout, right-click on the thumbnail with a tiny triangle at the bottom right corner, arrange the numbers of rows and columns in the open window, and then click **OK** to set up your preferred arrangement.

en) o de la	y Manager		04103	1994 e 11
F.m.	ALC: No	Early Amariga	An B sale	a ann
tela a narda		uit's include. Co	ersa kiesko geharae	al careal.
1000000			-	-
×				
	150 -21			
Lunch and	unkatione a	where all leaded	22	
	ected:toe		m, dato non zana	
D stideur	ward they to enable to	one positioning		



For Windows 10, you can apply different window layouts for each of the virtual desktops.

If you often use Windows snap feature, you can select "**Hold down the SHIFT key to enable zone positioning**". This gives Windows snap priority over **Easy Arrange**. You will then need to press the Shift key to use **Easy Arrange** positioning.



If you are using multiple monitors in an array or matrix, **Easy Arrange** layout can be applied across to all the monitors as one desktop. Select "**Span multiple monitors**" to enable this feature. You need to align your monitors properly to make it effective.



There are other advanced ways for the usage of **Easy Arrange**. Refer to table below.

Feature	Function	Description
Enhanced Easy Arrange	Custom layouts	 Save and name 5 customized Easy Arrange patterns.
		 Configure x*y patterns.
	6 MRU (most- recently-	 Press Ctrl+Shift+Home to cycle among the last 6 MRU layouts.
	used) layouts	
	On the fly partition resizing	 Hold down Ctrl while resizing current Easy Arrange layout to adjust the size and numbers of cells in a layout.
		 Newly formed Easy Arrange pattern is saved into the Easy Arrange icon position.
		 Hold down Ctrl while clicking on a modified layout icon to restore it to default layout.
	Easy Arrange layouts for portrait mode	Portrait mode Easy Arrange icons are presented when monitor is rotated.

NOTE: Some application requires a minimum effective resolution for its window. The application may not fit in an Easy Arrange zone if the zone is smaller than the required window size.

Managing Multiple Video Inputs

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell monitor. This makes it very easy to switch between inputs while working with multiple computers.

All video input ports available to your monitor are listed. You can give each input a name as you like. Please save your changes after editing.

You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.



En	Are Main	K-phrometers	10000	ut insinger	iq inter
1914 A	3.4.1994	8		n kompetent a	11.5
19 (101.9)	18				
Hire	Altreate				
				6.	£1
lauri na si si s					
14 a	* 0PG	Astura	24	Oversit	a land i .
p.r.o. think above	arben				
hone	>> \$f+V	•	- (~ (HEYE + Han under	8 2

You can use the dropdown list to switch to any input source.

En	Los Main	Aug Arvent	inax	tiranager	Dj Berri
india a	A second second			n segret a se	0.04
ue (sonte)	10				
Him	Acrese				
				9	L 107 -
ner an sint	ulles .				
Har ar	Y DEC-	Alemana	- 14	Control	in spil
put avitability and	aben				
tione	> 24+14		- 191	HERE PROVIDE	e
				-CP1 Alcove	-

NOTE: DDM communicates with your monitor even when the monitor is displaying video from another computer. You can install DDM on the PC you frequently use and control input switching from it. You may also install DDM on other PCs connected to the monitor.

Restoring Application Positions

DDM can help you restore application windows into their positions when you reconnect your PC to the monitor(s). You can quickly access this feature by rightclicking on DDM icon in the notification tray.

1	Open Dell Deploy Manager Ottoch to active numbers
	Swe moved window by nat
	karren sonst windew lantet
4	Auto-nettope window layout
	Отахлиних назвит.
	Dit

If you choose "**Auto-restore window layout**", your application windows' positions are tracked and remembered by DDM. DDM automatically puts the application windows into their original positions when you reconnect your PC to your monitor(s).



To go back to a favorite layout, first **"Save current window layout**" and later **"Restore saved window layout**".

You may use monitors with different models or resolutions in your daily routine, and apply different window layouts on them. DDM is able to know the monitor you have reconnected and restore application positions accordingly.

In case you need to replace a monitor in a monitor matrix configuration, you can save the window layout before replacement and restore the layout after a new monitor is installed.

NOTE: You should keep your applications running in order to benefit from this feature. DDM doesn't launch applications.




Attach DDM to active window (only Windows 10)

For Windows 10, you can add the DDM shortcut icon to the toolbar region of active windows. To activate this feature, right-click on the DDM icon in the notification tray and choose **Attach to active window** from the opened menu.

×	Open Dell Display Manager Attach to active window
	Save current window layout
	Restore seved window layout
	Auto restore window layout
	Checkfor new vasion.
	Ect

Once you right-click the icon in the toolbar, a quick menu of DDM appears, displaying options under **Auto Mode** and **Easy Arrange** for you to easily make adjustments.

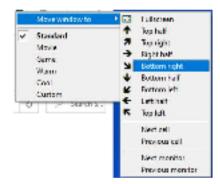

DELI

13

Applying Energy Conservation Features

The **Options** tab provides PowerNap energy conservation options and allows you to customize keyboard shortcuts.

In the upper pane, you can choose to set the monitor's brightness to the minimum level, or to put the monitor to sleep when the screensaver is activated.

Other Shortcut Keys

You can define the shortcut keys for quick access to the following DDM functions:

- **Program shortcut key**: to quickly open the **Quick Settings** dialog box.
- Easy Arrange MRU shortcut key: to quickly apply the 6 recently used window layouts.
- Application window shortcut key: to launch a quick menu for options under Auto Mode and Easy Arrange.

Ker	Li e Nal-	September	Alto Works	Cotona		
Dever-up a	C1071:			Configure		
1.000.00	egittest vienoreess	NW KINAMA				
Retrie	able to perpiritain pro-	anse-et echt etan				
	2	Appellent of an annexes of online the se-				
in passion beat of	4.4.75			Citri + Shift + frankC		
Cti + 3ht + D			ift - hund			

Troubleshooting

If DDM cannot work with your monitor, DDM will show below icon in your notification tray.



Click on the icon, DDM shows a more detailed error message.



Please note that DDM only works with Dell branded monitors. If you are using monitors from other manufacturers, DDM doesn't support them.

If DDM is unable to detect and/or communicate with a supported Dell monitor, please take below actions to troubleshoot:

- 1. Make sure the video cable is properly connected to your monitor and your PC, especially the connectors should be firmly inserted into position.
- 2. Check the monitor OSD to ensure DDC/Cl is enabled.
- **3.** Make sure you have the correct and latest display driver from the graphics vendor (Intel, AMD, NVIDIA, etc.). Display driver is often the cause of DDM failure.
- **4.** Remove any docking stations or cable extenders or converters between the monitor and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/CI properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your system.

DEL

DDM may not work with below monitors:

- Dell monitor models earlier than year 2013 and D-series of Dell monitors. You can refer to Dell Product Support websites for more information
- Gaming monitors using NVIDIA-based G-sync technology
- · Virtual and wireless displays do not support DDC/CI
- Some early models of DP 1.2 monitors, it may be necessary to disable MST/ DP 1.2 using the monitor OSD

If your PC is connected to the Internet, you will be prompted with a message when a newer version of DDM application is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon.

