

# G Series

**LCD Monitor** 

G32CQ5P (3DB4)

User Guide

### **Contents**

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
OSD Setup	9
Navi Key	9
Hot Key	9
OSD Menus	10
Gaming	10
Professional	12
Image	13
Input Source	14
PIP/PBP	15
Navi Key	15
Setting	16
Specifications	18
Preset Display Modes	20
Troubleshooting	21
Safety Instructions	22
TÜV Rheinland Certification	24
ENERGY STAR Certification	24
Regulatory Notices	25

#### Revision

V1.0, 2023/9

### **Getting Started**

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

### **Package Contents**

Monitor	G32CQ5P		
Documentation	Quick Start Guide		
	Stand		
Accessories	Stand Base with Screw(s)		
Accessories	Screw(s) for Wall Mount Bracket(s)		
	External Power Supply & Power Cord		
Cables	DisplayPort Cable (Optional)		




### ! Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

### **Installing the Monitor Stand**

- 1. Leave the monitor in its protective packaging. Align the stand to the monitor groove.
- 2. Push the stand towards the monitor groove until it locks in place.
- 3. Connect the base to the stand and tighten the base screws to secure the base.
- Make sure the stand assembly is properly installed before setting the monitor upright.

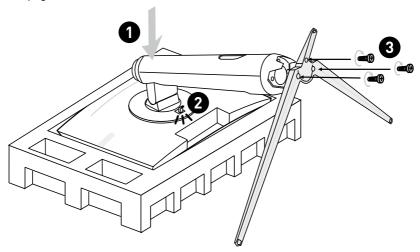

#### 

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!





### **Adjusting the Monitor**

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.




• Avoid touching the display panel when adjusting the monitor.

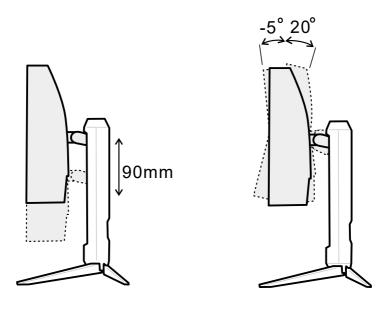

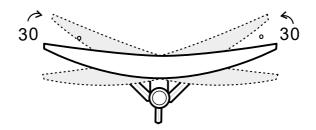


### **Monitor Overview**

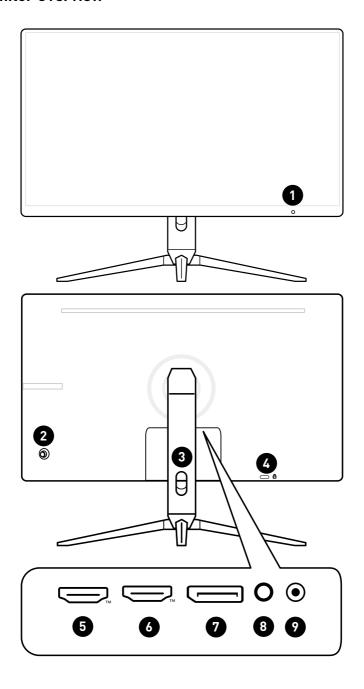

1	Power LED
	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
2	Power Button & Navi Key
3	Cable Routing Hole
4	Kensington Lock
5	HDMI <sup>TM</sup> Connector MIGH-OEFINTION MULTIMEDIA INTERFACE
	Supports HDMI™ CEC, 2560x1440@170Hz as specified in HDMI™ 2.0b.
6	HDMI <sup>TM</sup> Connector HIGH-DEFINITION MULTIMEDIA RITERFACE
	Supports 2560x1440@170Hz as specified in HDMI™ 2.0b.
	DisplayPort
	Supports 2560x1440@170Hz as specified in DisplayPort 1.2a.
8	Headphone Jack
9	Power Jack

### Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Assemble the external power supply & power cord. (Figure A)
- **4.** Connect the external power supply to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

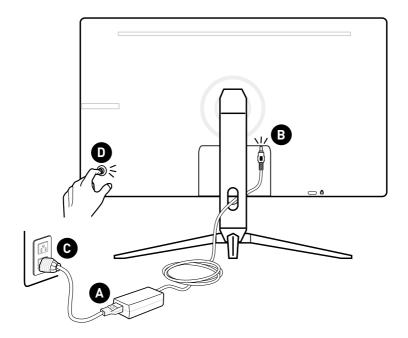

### **OSD Setup**


This chapter provides you with essential information on OSD Setup.



All information is subject to change without prior notice.

#### **Navi Key**

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

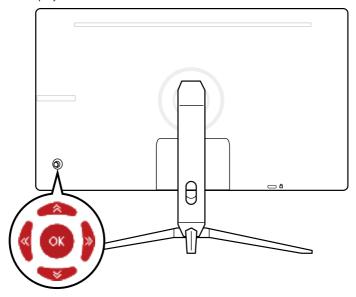

#### Up/Down/Left/Right:

- · selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

#### Press (OK):

- launching the On-Screen Display (OSD)
- · entering submenus
- confirming a selection or setting

### **Hot Key**

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

### **OSD Menus**





### Important

The following settings will be grayed out when HDR signals are received:

- Night Vision
- MPRT
- Low Blue Light
- HDCR

- Brightness
- Contrast
- Color Temperature
- PIP/PBP

### **Gaming**

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	User	Use Up or Down Button to select and preview
	FPS	mode effects.
	Racing	Press the OK Button to confirm and apply your mode type.
	RTS	
	RPG	
Night Vision	OFF	This function optimizes background brightness
	Normal	and is recommended for FPS games.
	Strong	
	Strongest	
	A.I.	
Response Time	Normal	Setting to Fastest will reach the shortest
	Fast	response time and help improve blurred images when playing very fast games.
	Fastest	

1st Level Menu	2nd/3rd Le	evel Menu	Description		
MPRT	OFF ON		MPRT is available when the refresh rate is ove 85Hz.      Activating MPRT will affect:		
			Affected Function Function Status		
			» Response Time  » Brightness  Unable to select		
			» Adaptive-Sync » HDCR Set to OFF » PIP/PBP		
			» Screen Size 1:1 Set to Auto		
Refresh Rate	Location	Left Top	Location is adjustable in OSD Menu. Press the		
		Right Top	OK Button to confirm and apply your Refresh Rate Location.		
		Left Bottom	This monitor follows and works at the Operating		
			System's preset Screen Refresh Rate.		
		Customize			
	OFF				
	ON				
Alarm Clock	Location	Left Top	After setting the time, press the OK Button to		
		Right Top	<ul> <li>activate the timer.</li> <li>Users have to manually restore their preset</li> </ul>		
		Left Bottom	Alarm Clock after any AC power loss and		
		Right Bottom	reconnection.		
		Customize			
	OFF				
	15:00	00:01 ~ 99:59			
	30:00	7			
	45:00	7			
	60:00	7			

1st Level Menu	2nd/3rd Level Menu	Description	
Screen Assistance	None  Icon	Through AI algorithm, this function enhances the visibility of in-game crosshair.  Users can select the color and position of the crosshair.	
Adaptive-Sync	OFF ON	Adaptive-Sync prevents screen tearing.     Activating Adaptive-Sync will affect:	
		Affected Function Function Status	
		» MPRT » PIP/PBP Set to 0FF	
		» Screen Size 1:1 Set to Auto	

### **Professional**

1st Level Menu	2nd Level Menu	Description
Pro Mode	Eco	Use Up or Down Button to select and preview mode effects.
	User	Press the OK Button to confirm and apply your mode
	Anti-Blue	type.
	Movie	
	Office	
	sRGB	
Low Blue Light	OFF	Low Blue Light protects your eyes against blue light.  When an head how Blue Light adjusts the against plue light.
	ON	When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.
		When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.

1st Level Menu	2nd Level Menu	Description		
HDCR	OFF ON	HDCR enhances image questions of images.     Activating HDCR will afference.	, ,	
		Affected Function	Function Status	
		» MPRT	Set to OFF	
		» Brightness	Unable to select	
MPRT	OFF	MPRT is available when t	he refresh rate is over 85Hz.	
	ON	Activating MPRT will affer	ct:	
		Affected Function	Function Status	
		» Response Time	Unable to select	
		» Brightness		
		» Adaptive-Sync » HDCR » PIP/PBP	Set to OFF	
		» Screen Size 1:1	Set to Auto	
Image Enhancement	OFF	Image Enhancement enhances image edges to impro their acutance.		
	Weak			
	Medium			
	Strong			
	Strongest			

### Image

1st Level Menu	2nd/3rd Level Menu		Description	
Brightness	0-100		Properly adjust Brightness according to the surrounding lighting.	
Contrast	0-100		Properly adjust Contrast to relax your eyes.	
Sharpness	0-5		Sharpness improves clarity and details of images.	
Color Temperature	Cool Normal Warm		Use Up or Down Button to select and preview     mode effects	
			111040 01100101	
			Press the OK Button to confirm and apply your mode type.	
	Customization R (0-100) G (0-100) B (0-100)		Users can adjust Color Temperature in	
			Customization mode.	

	Description			
Auto	Users can adjust Screen Size in any mode, resolution and any screen refresh rate.     Activating Screen Size 1:1 will affect:      Affected Function Function Status			
4:3				
16:9				
1:1	» PIP/PBP Set	t to OFF		
1	4:3	resolution and any screen resolution and system resolution resolut		

### **Input Source**

1st Level Menu	2nd Level Menu	Description	
HDMI™ 1		Users can adjust Input Source in any mode.	
HDMI™ 2			
DP			
Auto Scan	OFF	Users can use the Navi Key to select Input Source at	
	ON	below status:	
		<ul> <li>While "Auto Scan" is set to "OFF" with the monitor at power saving mode;</li> </ul>	
		While "No Signal" message box is shown on the monitor.	

### PIP/PBP

1st Level Menu	2nd/3rd Level Menu		Description		
OFF		PIP (Picture in Picture) allows users to			
PIP	Source	HDMI™ 1		simultaneously display mu one screen. One program	
		HDMI™ 2	l .	s one or more other inset windows.	
		DP		a similar feature that	
	PIP Size	Small		s side-by-side on the	
		Medium		rs to switch between	
		Large		primary and secondary inp	
	Location	Left Top		If there is only one signal i and Audio Switch will be q	
		Right Top		Activating PIP/PBP will aff	,
		Left Bottom			Function Status
		Right		» Adaptive-Sync	Set to OFF
	B: 1 6 ::	Bottom		» Response Time	
	Display Swit			» MPRT	Unable to select
		Audio Switch		» HDMI™ 2.1	
PBP	Source 1	HDMI™ 1		» HDMI™ CEC	Set to OFF & Unable to select
		HDMI™ 2		» DP OverClocking	Set to Auto
		DP		» PIP: Screen Size 1:1	
	Source 2	HDMI™ 1		» PBP: Screen Size 1:1	
	HDMI™ 2				
		DP			
	Display Swit	Display Switch			
Audio Switc		า			

### Navi Key

1st Level Menu	2nd Level Menu	Description
Up	0FF	All Navi Key items can be adjusted via OSD Menus.
Down	Brightness	
Left Right	Game Mode	
	Screen Assistance	
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	Night Vision	

### Setting

1st Level Menu	2nd Level Menu Description			
Language	繁體中文	Users have to press the OK Button to confirm and		
	English	apply the Language setting.  • Language is an independent setting. Users' own		
	Français	language setting will override the factory default.		
	Deutsch	When users set Reset to Yes, Language will not be changed.		
	Italiano			
	Español			
	한국어			
	日本語			
	Русский			
	Português			
	简体中文			
	Bahasa Indonesia			
	Türkçe			
	(More languages coming soon)			
Transparency	0~5	Users can adjust Transparency in any mode.		
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.		
Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.		
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.		
Info. On Screen	OFF	The information of the monitor status will be shown		
	ON	on the right side of the screen.		
DP OverClocking	OFF	To overclock the monitor refresh rate, users have to set DP OverClocking to ON.		
	ON	3		
HDMI™ CEC	OFF	HDMI™ CEC (Consumer Electronics Control)     supports Sony PlayStation®, Nintendo® Switch™,		
	ON	Xbox Series X S consoles and various audio-visual devices that are CEC-capable.		
		• If HDMI <sup>TM</sup> CEC is set to 0N:		
		The monitor will automatically power on when the CEC device is turned on.		
		The CEC device will enter power saving mode when the monitor is turned off.		
		When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Game Mode and Pro Mode will be automatically set to default Eco mode and can be adjusted to users' preferred modes later.		

1st Level Menu	2nd Level Menu	Description	
Reset	YES	Users can Reset and restore settings to original	
	N0	OSD Default in any mode.	

## **Specifications**

Monitor	G32CQ5P	
Size	31.5 inch	
Curvature	1500R	
Panel Type	VA	
Resolution	2560 x 1440 (WQHD)	
Aspect Ratio	16:9	
Brightness	SDR: 250 nits (typ.)	
Contrast Ratio	3000:1	
Refresh Rate	170Hz	
Response Time	1ms (MPRT)	
	4ms (GTG)	
	20ms (Tr+Tf)	
1/0	HDMI™ Connector x 2	
	DisplayPort x 1	
	Headphone Jack x 1	
View Angles	178°(H) , 178°(V)	
DCI-P3*/ sRGB	91%/ 115%	
Surface Treatment	Anti-glare	
Display Colors	1.07B 10bits (8 bits + FRC)	
Monitor Power Options	19.0V === 3.42A	
External Power Supply	Model: ADS-65HI-19A-1 19065E	
Power Input	100~240Vac, 50~60Hz	
Power Output	19.0V === 3.42A	
Adjustment (Height)	0 ~ 90mm	
Adjustment (Tilt)	-5° ~ 20°	
Adjustment (Swivel)	-30° ~ 30°	
Kensington Lock	Yes	
VESA Mounting	• Plate Type: 75 x 75 mm	
	• Screw Type: M4 x 10 mm	
	• Thread Diameter: 4 mm	
	• Thread Pitch: 0.7 mm	
	Thread Length: 10 mm	

Monitor		G32CQ5P	
Dimension (W x D x H)		709.97 x 286.97 x 555.61 mm	
Woight	Net	6.7 kg	
Weight	Gross	9.2 kg	
Environment Operating		• Temperature: 0°C to 40°C	
		Humidity: 20% to 90%, non-condensing	
		• Altitude: 0 ~ 5000m	
	Storage	• Temperature: -20°C to 60°C	
		• Humidity: 10% to 90%, non-condensing	

<sup>\*</sup> Based on CIE1976 test standards.

### **Preset Display Modes**



All information is subject to change without prior notice.

Chandand	Resolution		G32CQ5P	
Standard			HDMI™	DP
VGA	640x480	@60Hz	V	V
		@67Hz	V	V
		@72Hz	V	٧
		@75Hz	٧	٧
Dos-Mode	720x480	@60Hz	٧	V
	720x576	@50Hz	٧	V
SVGA	800x600	@56Hz	٧	V
		@60Hz	٧	V
		@72Hz	V	V
		@75Hz	V	V
XGA	1024x768	@60Hz	V	٧
		@70Hz	٧	٧
		@75Hz	V	٧
SXGA	1280x1024	@60Hz	V	٧
		@75Hz	V	٧
WXGA+	1440x900	@60Hz	V	٧
WSXGA+	1680x1050	@60Hz	٧	٧
QHD	2560x1440	@60Hz	٧	٧
		@120Hz	٧	٧
		@144Hz	٧	٧
		@165Hz		٧
		@170Hz		V*
Video Timing	720P		٧	٧
Resolution	1080P	@60Hz	٧	V
	1080P	@120Hz	٧	V
	2160P	@30Hz	٧	
	2160P	@60Hz	٧	
PBP Mode	1280x1440	@60Hz	٧	٧

<sup>\*</sup> Users have to set DP OverClocking to ON. This is the highest refresh rate supported by DP OverClocking. If any monitor error occurs during overclocking, please downscale the refresh rate.

### **Troubleshooting**

#### The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

#### No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

#### The screen image is not properly sized or centered.

 Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

#### No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

#### The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- · Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

#### The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

### Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

#### Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

#### **Environment**

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the device.
  - The device has been exposed to moisture.
  - The device does not work well or you can not get it working according to the User Guide.
  - The device has dropped and damaged.
  - The device has obvious sign of breakage.

### **TÜV Rheinland Certification**

### TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

#### TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

### **ENERGY STAR Certification**

ENERGY STAR is a program run by the U.S. Environmental Protection Agency (EPA) and U.S. Department of Energy (DOE) to promote energy efficiency. This product qualifies for ENERGY STAR in the "factory default" settings through which power savings will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption, which could exceed the limits necessary to qualify for ENERGY STAR rating.



For more information on ENERGY STAR, refer to https://www.energystar.gov/.

### Regulatory Notices

#### **CE Conformity**

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

#### FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

#### MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828

www.msi.com

#### WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



#### Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

#### RoHS Statement

#### Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

#### India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

#### **Turkey EEE Regulation**

Conforms to the EEE Regulations of the Republic Of Turkey

#### Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017,  $\mathbb{N}^2$  139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

#### Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

#### **Green Product Features**

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- · Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

#### **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

#### Warning!

Overuse of screens is likely to affect eyesight.

#### Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

### **Copyright and Trademarks Notice**

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator. Inc.

#### **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.