Dell UltraSharp 24 USB-C Hub Monitor - U2421E Dell Display Manager User's Guide





NOTE: A NOTE indicates important information that helps you make better use of your computer.

Copyright © 2020 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2020 - 10

Rev. A00

Contents

Overview
Using the Quick Settings Dialog
Setting Basic Display Functions
Assigning Preset Modes to Applications
Organizing Windows with Easy Arrange
Managing Multiple Video Inputs
Restoring Application Positions
Applying Energy Conservation Features
Other Shortcut Keys13
Attach DDM To Active Window (Only Windows 10)
Troubleshooting

(D&LL

Overview

Dell Display Manager is a Microsoft Windows application used to manage a monitor or a group of monitors. It enables manual adjustment of the displayed image, assignment of automatic settings, energy management, window organization, image rotation, and other features on selected Dell monitors. After installed, Dell Display Manager runs each time the system starts and places its icon in the notification tray. Information about monitors connected to the system is available when hovering over the notification-tray icon.



NOTE: Dell Display Manager uses DDC/CI channel to communicate with your monitor. Ensure that DDC/CI is enabled in the menu as below.





Using the Quick Settings Dialog

Clicking Dell Display Manager's notification tray icon to open the **Quick Settings** dialog box. When more than one supported Dell monitors are connected to the computer, a specific target monitor can be selected using the menu. The **Quick Settings** dialog box enables convenient adjustment of the monitor's brightness, contrast, resolution, window layout, and so on. You can select **Manual Mode** or **Auto Mode**, and the screen resolution can be changed.

Ost Display 1	Manager	,
Displaye	Dell 024230	
For talk tion:	19205-1200	Charge
🔿 Auto Hode		Configure
Hanual Node	Standard	~
Englithes:		255
Contrasto		75%
		>
	Open Del Dipley Hanager	

The **Quick Settings** dialog box also provides access to Dell Display Manager's advanced user interface that is used to adjust basic functions, configure auto mode and access other features.

MOTE:

Feature	Function	Description
Quick DDM Access	Quick key to call up DDM UI	 Ctrl+Shift+D Use Page Up/Page Down key or click on ">" to flip through all Easy Arrange layouts.
	Control individual monitor in multiple monitor setup	 From dropdown box to select monitor, selected monitor has Dell logo shown. Perform monitor self-test feature check. Move DDM UI to the monitor to be controlled. Press Ctrl+Shift+D to bring up the miniUI under the mouse pointer.

Setting Basic Display Functions

You can select **Manual Mode** that enables you to manually select a preset mode or select **Auto Mode** that applies a preset mode based on the active application. An on-screen message displays the current preset mode whenever it changes. The selected monitor's **Brightness** and **Contrast** can also be directly adjusted from the **Basic** tab.

(Hange Display	Manager			Dell	US4216
Sanic	Auto Made	Easy Arrange	Diput Manager	Options	θ
Resolution:	1529x1200			0	hange
O Auto Mode Use preset mo	ide assignments for a	active applications		Car	figure
Manual Hode Choose a pres	wit mode:		Standar	t	\sim
Brightness			75%		
Contracts			75%		

NOTE: When multiple Dell monitors are connected, select "Enable display matrix control" to apply brightness, contrast and color presets controls to all monitors.

Dealc	Auto Motic	Carry America	heut Nanosco	Outlons	
Resolutions	1930×1230				0 or as
	rode assignments for a	ctive applications		9	dan
(9) Manual Mark Choose a pre			Stand	and	v
Right Heats	1		Xitta		
			2022		

DELI

Assigning Preset Modes to Applications

The **Auto Mode** tab allows you to associate a specific **Preset Mode** with a specific application, and apply it automatically. When **Auto Mode** is enabled, Dell Display Manager automatically switches to the corresponding **Preset Mode** whenever the associated application is activated. The **Preset Mode** assigned to a particular application may be the same on each connected monitor, or it can vary from one monitor to another.

Dell Display Manager is pre-configured for many popular applications. To add a new application to the assignment list, simply drag the application from the desktop, Windows Start Menu, or elsewhere, and drop it onto the current list.

NOTE: Preset Mode assignments for batch files, scripts, loaders, and nonexecutable files such as zip archives or packed files, are not supported.

You can also configure the Game preset mode to be used whenever a Direct3D application runs in full-screen mode. To prevent an application from using mode, assign a different preset mode to it.

Inne Budo Mode End, ango a preset multi la a specific aspis arbor.	Arrange input Har To add an analyzing Arra		Queens	
Refeator	Preset Media	11929107		
Colar to instant	itactori .	-		
Confact for fullement (Direct B)	Game			1
🗿 (Default for Livie and Introduce appl)	Danisland	*		
Adobe Pheneskop COV	Destini	+		
E Mernt Dolere	(standard	+		
Monard Inter	Standard	-		

DEL

Organizing Windows with Easy Arrange

Easy Arrange helps you to effectively organize your application windows on the desktop. You first choose a pre-defined layout pattern which suits your work, then you just need to drag the application windows into the defined zones. Press ">" or use Page Up/Page Down key to find more layouts. To create a custom layout, arrange the open windows and then click **Save**.




For Windows 10, you can apply different window layouts for each of the virtual desktops.

If you often use Windows snap feature, you can select **"Hold down the SHIFT key to enable zone positioning**". This gives Windows snap priority over **Easy Arrange**. You will then need to press the Shift key to use **Easy Arrange** positioning.

test	Auto Made	Ben Aringe	iqui farage	Queens	
Select e coeffict selecton and re	and or current wholes	issue for the monitor	n. Open sittelesie stragg	efirit set me e	
-	-	-	-		-
X	Say Always	_		-	-
	IT interest	aladah kawat kati kawi at	and the location layout		
	AGENCIA		-		
			1.14		



If you are using multiple monitors in an array or matrix, **Easy Arrange** layout can be applied across to all the monitors as one desktop. Select "**Span multiple monitors**" to enable this feature. You need to align your monitors properly to make it effective.

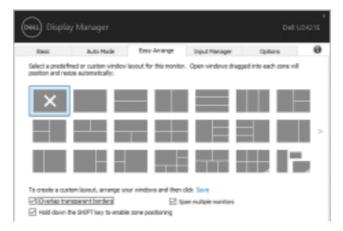

There are other advanced ways for the usage of Easy Arrange. Refer to table below.

Feature	Function	Description
Enhanced Easy Arrange	Custom layouts	 Save and name 5 customized Easy Arrange patterns. Configure x*y patterns.
	5 MRU (most- recently-used) layouts	 Press Ctrl+Shift+Home to cycle among the last 5 MRU layouts.
	On the fly parti- tion resizing	 Hold down Ctrl while resizing current Easy Arrange layout to adjust the size and numbers of cells in a layout. Newly formed Easy Arrange pattern is saved into the Easy Arrange icon position. Hold down Ctrl while clicking on a modified layout icon to restore it to default layout.
	Easy Arrange layouts for portrait mode	Portrait mode Easy Arrange icons are presented when monitor is rotated.

NOTE: An application may require a minimum effective resolution for its application window. Such application may not fit in an Ease Arrange zone if the zone is smaller than the required window size.

Organizing Windows with Easy Arrange 9

DEL

Managing Multiple Video Inputs

The **Input Manager** tab provides convenient ways for you to manage multiple video inputs connected to your Dell monitor. It makes it very easy to switch between inputs while you work with multiple computers.

All video input ports available to your monitor are listed. You can give each input a name as you like. Please save your changes after editing.

You can define a shortcut key to quickly switch to your favorite input and another shortcut key to quickly switch between two inputs if you often work between them.

Basic .	Auto Made	Easy Amange	Dep.	Nene	pt Options	
Input port:	Input	name:				
U198-C	(Okk	ta edit)				
OP	(Okk	to edit)				
HOME (Justive)	(Click	is edit)				
					Save	
works input shortout	tkey:					
None	- 10	.198-C	~		Change active input	6
input switch shortcut	key:					
None	1.0	EME .			U58-C	~

You can use the dropdown list to switch to any input source.

Basic	Auto Mode	Easy Arrange	Deput Pa	noger	Options	
Input port:	Input ner	ne:				
USB-C	(Click to e	olit)				
0P	(Click to e	odi()				
HEME (MOVIE)	(Click to e	40				
	young and	1940				
		1010			Store	
favorita input sho			~	0	Store	
favorite input sho	fautikey: 10 USB		v	0		

NOTE: DDM communicates with your monitor even when the monitor is displaying video from another computer. You can install DDM on the computer you frequently use and control input switching from it. You may also install DDM on other computers connected to the monitor.



Restoring Application Positions

DDM can help you restore application windows into their positions when you reconnect your computer to the monitor(s). You can quickly access to this feature by right-clicking on DDM icon in the notification tray.

Open Dell Display Vanager Attach to active window	
Save current window layout	
Rectore street window byour-	
Auto restore window leyout	
Online documentation	
Ordefic reservations	
bit	

If you choose "**Auto-restore window layout**", your application windows' positions are tracked and remembered by DDM. DDM automatically puts the application windows into their original positions when you reconnect your computer to your monitor(s).

	Open Dell Display Vocager
	Attack to active window
	Save current window leyout
	Remote stored window layout
4	Auto restore window kyout
	Online documentation
	Check for researching.
	bit

If you want to go back to a favorite layout after you have moved the application windows around, you can first "Save current window layout" and later "Restore saved window layout".

Open Dell Display Vocager	
Alla Florative weeks	
Sizes area whites by not	
Fermy street window by a m	
Auto restore a network good.	
Online documentation.	
fleshforeises.ee.	
bi	

You may use monitors with different models or resolutions in your daily routine, and you may apply different window layouts on them. DDM is able to know the monitor you have reconnected and restore application positions accordingly.

In case you need to replace a monitor in a monitor matrix configuration, you can save the window layout before replacement and restore the layout after a new monitor is installed.


NOTE: You should keep your applications running in order to benefit from this feature. DDM doesn't launch applications.



Applying Energy Conservation Features

On supported Dell models, an **Options** tab is available that provides PowerNap energy conservation options. You can choose to set the monitor's brightness to the minimum level, or to put the monitor to sleep when the screensaver is activated.

000 Display Manager					Dell U24216	
Basic	Auto Made	Easy Arrange	Diput Manager	Options	0	
-	otions: brightness when some display to alwap when a			Carl	lare	
Program sharto Call + Sivit + C Basy Anange M Call + Sivit + C	RU shortout keys	Ass	ication window shortcu w	tkey:		

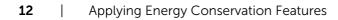

Other Shortcut Keys

Shortcut keys can be defined for below operations, you can define the shortcut keys for quick access to perform these operations:


- Program shortcut key: to quickly open the Quick Settings dialog box.
- Easy Arrange MRU shortcut key: to quickly apply the 5 recently used window layouts.
- Application window shortcut key: to launch a quick menu for options under Auto Mode and Easy Arrange.

😡 Display Manager				Dell	Dell U24216	
Basic	Auto Made	Easy Arrange	Diput Manager	Options	0	
-	brightness when some	maaver activates acteenceiver activates		Carl	la.re	
Program diverto: Coli + Shift + A Bany Anange M Coli + Att +			écatian mindom shortcu I + sili + D	tkey:		

Attach DDM To Active Window (Only Windows 10)

DDM icon can be attached to the active window you are working on. Click on the icon for easy access to below features.

Feature	Function	Description
Attach DDM to Active Window (only Windows	Change preset or snap to different partitions	 DDM icon attached to active window and user can eas- ily switch windowposition, change color preset mode, and associate auto preset mode.
10)	Shortcut key trigger	 On a running app window, press Ctrl+Shift+Ins also triggers the attached DDM menu.
	Move app window among Easy Arrange cells	 Send the app window to previous/next Easy Arrange cell.
	Move app window among monitors	• Send the app window to previous/next monitor.

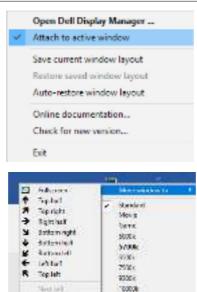

Custom


DELL

PRODUCE


Ned monitor Previous monitor

Troubleshooting

If DDM does not work with your monitor, DDM will show below icon in your notification tray.

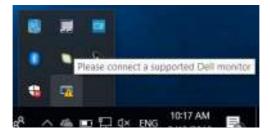

Click on the icon, DDM shows a more detailed error message.

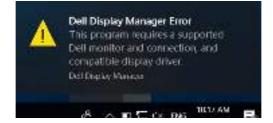

Please note that DDM only works with Dell branded monitors. If you are using monitors from other manufacturers, DDM doesn't support them.

If DDM is unable to detect and/or communicate with a supported Dell monitor, please take below actions to troubleshoot:

- **1.** Make sure the video cable is properly connected to your monitor and your computer. especially the connectors should be firmly inserted into position.
- 2. Check the monitor OSD to ensure DDC/Cl is enabled.
- **3.** Make sure you have the correct and latest display driver from the graphics vendor (Intel, AMD, NVidia, etc.). Display driver is often the cause of DDM failure.
- 4. Remove any docking stations or cable extenders or converters between the monitor and the graphics port. Some low-cost extenders, hubs or converters may not support DDC/ Cl properly and can fail DDM. Update the driver of such device if the latest version is available.
- 5. Restart your computer.

DG

DDM may not work with below monitors:

- Dell monitor models earlier than year 2013 and D-series of Dell monitors. For more information see www.dell.com/support/monitors.
- Gaming monitors using Nvidia-based G-sync technology
- Virtual and wireless displays do not support DDC/CI
- Some early models of DP 1.2 monitors, it may be necessary to disable MST/DP 1.2 using the monitor OSD

If your PC is connected to the Internet, you will be prompted to upgrade to a newer version of DDM when it is available. It is recommended to download and install the latest DDM application.

You may also check for new version by right clicking on DDM icon while pressing and holding 'shift' key.

	Open Dell Display Manager					
	Refresh					
	Save monitor asset report					
	Save diagnostic report					
	Save current window layout					
	Restore saved window layout					
	Auto-restore window layout					
\checkmark	Auto-load at startup					
~	Onscreen notifications					
	Check for new version					
	Exit					

