# ///**5**/<sup>™</sup>

# Modern Series LCD Monitor

Modern MD272P (3PB1) Modern MD272PW (3PB1) Modern MD272QP (3PB1) Modern MD272QPW (3PB1) Modern MD272QP Ultramarine (3PB1)

User Guide

# Contents

Getting Started
Package Contents
Installing the Monitor Stand
Adjusting the Monitor5
Monitor Overview
Connecting the Monitor to PC8
)SD Setup
OSD Keys
)SD Menus
Professional11
Image
Input Source
Navi Key 14
Setting
pecifications
Preset Display Modes
roubleshooting
Safety Instructions
ÜV Rheinland Certification23
Regulatory Notices

#### Revision

V1.1, 2023/02

# **Getting Started**

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

#### **Package Contents**


	Modern MD272P	
	Modern MD272PW	
Monitor	Modern MD272QP	
	Modern MD272QPW	
	Modern MD272QP Ultramarine	
Documentation	Quick Start Guide	
	Stand with Screw(s)	
	Stand Base with Screw(s)	
Accessories	Screw(s) for Wall Mount Bracket(s)	
	Power Cord	
	External Power Supply (Optional)	
	High Speed HDMI™ Cable (Optional)	
Cables	USB Upstream Cable (for USB Type-B Upstream Port) (Optional)	

# Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

### Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- **4.** Make sure the stand assembly is properly installed before setting the monitor upright.

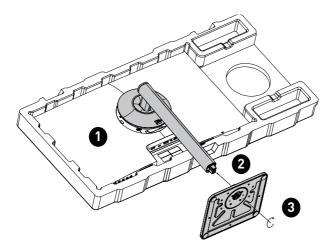

# Important

- Remove the screws on the monitor groove if needed before installing the stand.
- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!





### Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.


# Important

- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.








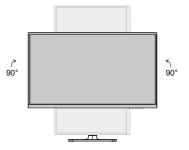


#### **Monitor Overview**

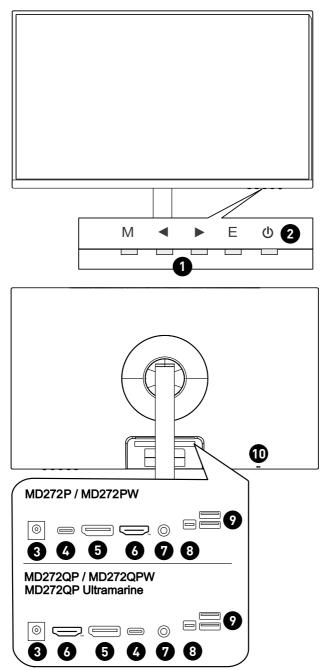

0	OSD Keys
0	<b>Power Button / Power LED</b> Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
3	Power Jack
6	<b>USB Type-C Port</b> This port supports DisplayPort Alternate (DP Alt) Mode and up to 20V/3.25A (65W) power delivery.
6	DisplayPort
6	HDMI™ Connector HEDERIA METATAL METAL METATAL METATAL METATAL METATAL METATAL METATAL METATAL METATAL
8	USB 2.0 Type-B Upstream Port
U	For USB Upstream Cable.
9	USB 2.0 Type-A Port
0	Kensington Lock

### **Connecting the Monitor to PC**

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Assemble the external power supply & power cord. (Figure A)
- 4. Connect the external power supply to the monitor power jack. (Figure B)
- 5. Plug the power cord into the electrical outlet. (Figure C)
- 6. Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

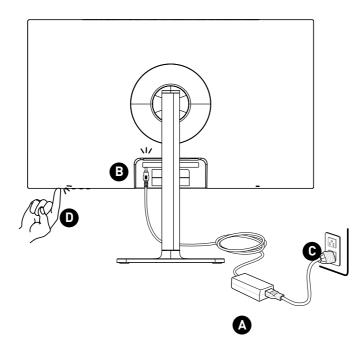

# **OSD** Setup


This chapter provides you with essential information on OSD Setup.



All information is subject to change without prior notice.

### **OSD Keys**

The monitor comes with a set of OSD Keys that help to control the On-Screen Display (OSD) menu.

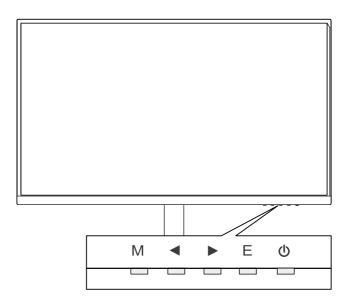

OSD Key	Hot Key (When OSD is OFF)	OSD Setup (When OSD is ON)
Μ	• Activating the OSD Main Menu	<ul><li>Entering the submenus.</li><li>Confirming a selection or setting.</li></ul>
	• Mode	<ul> <li>Navigating through function menus and items.</li> </ul>
	Input Source	• Adjusting function values.
Е	• Audio Volume	<ul><li>Confirming the selection.</li><li>Exiting the current menu.</li></ul>

# **OSD Menus**

#### Modern MD272P/ Modern MD272PW

11151	1920s (000   20 F.7	Rea EDM
Professional	Moda	✓ be
Den incasjic	Recorde Time	Car.
input 5 a me	Seturah Rane	s 1223
San Kay	Akmi Uzsk	Art (New
Serie;	ION .	N'unic
	Science Site	Office
	2:1/10:1-3/07	Naci-White
P.9-009	101.51	IIII Maxe IIII Dave

#### Modern MD272QP/ Modern MD272QPW/ Modern MD272QP Ultramarine

11151 2206	1990 - 23 F.Z	Rep 39
Errolized and	Studia	V bu
Σε kαγε	Desconse Time	CAL
ipo. štorav	Reforch Stree	103
Section 2	Alarm Gook	Art Rbs
an Sectory	KvW	h'osw
	Science Ste	0124
	PLS/C	Not-White
P.2 009	101 St	IIII Maxe IIII Frazi

# 🕼 Important

When receiving HDR signals, Low Blue Light, HDCR, Brightness, Contrast, and Color Temperature will be grayed out.

### Professional

1st Level Menu	2nd/3rd Level Menu		Description
Mode	Eco		• Use Up or Down Button to select
	User		and preview mode effects. • Press the E Button to confirm and
	sRGB		apply your mode type.
	Anti-Blue		
	Movie		
	Office		
	Black-White		
Response Time	Normal Fast Fastest		• Users can adjust Response Time in
			any mode.
Refresh Rate	Location	Left Top	• Location is adjustable in OSD Menu.
		Right Top	Press the E Button to confirm and apply your Refresh Rate Location.
Bottom at the Operating S	This monitor follows and works at the Operating System's preset Screen Refresh Rate.		
		Right Bottom	
	OFF ON		

1st Level Menu	2nd/3rd Lev	vel Menu	Description
Alarm Clock	Location	Left Top	• After setting the time, press the E
		Right Top	<ul><li>Button to activate the timer.</li><li>Users have to manually restore</li></ul>
		Left Bottom	their preset Alarm Clock after any AC power loss and reconnection.
		Right Bottom	
	OFF		
	15:00	00:01 ~	
	30:00	99:59	
	45:00		
	60:00		
KVM	Auto		Auto allows the monitor to
	Upstream		automatically switch between USB input sources, such as keyboards, mice or other USB devices.
	Туре С		<ul> <li>Users can also designate Upstream port or USB Type-C as the only USB signal source.</li> </ul>
Screen Size	Auto 4:3		• Users can adjust Screen Size in
			any mode, any resolution and any screen refresh rate.
	16:9		
Adaptive-Sync	OFF		Adaptive-Sync prevents screen
(Modern MD272P/ Modern MD272PW)	ON		tearing.
FreeSync	OFF		• FreeSync prevents screen tearing.
(Modern MD272QP/ Modern MD272QPW/ Modern MD272QP Ultramarine)	ON		

#### Image

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	<ul> <li>Properly adjust Brightness according to the surrounding lighting.</li> </ul>
		<ul> <li>Brightness will be grayed out when HDCR is enabled.</li> </ul>
Contrast	0-100	• Properly adjust Contrast to relax your eyes.
Sharpness	0-5	• Sharpness improves clarity and details of images.
Image	OFF	Image Enhancement enhances
Enhancement	Weak	image edges to improve their acutance.
	Medium	
	Strong	
	Strongest	
Low Blue Light	OFF	Low Blue Light protects your
	ON	eyes against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.
		<ul> <li>When Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.</li> </ul>
		• This monitor is a Low Blue Light monitor which will decrease the blue light emitted without adjusting the OSD settings.
HDCR	OFF	HDCR enhances image quality
	ON	by increasing the contrast of images.
		• When HDCR is set to ON, Brightness will be grayed out.

1st Level Menu	2nd/3rd Level Menu		Description
Color	Cool		<ul> <li>Use Up or Down Button to select and preview mode effects.</li> </ul>
Temperature	Normal Warm Customization R (0-100)		<ul> <li>Press the E Button to confirm</li> </ul>
			and apply your mode type.
			<ul> <li>Users can adjust Color Temperature in Customization</li> </ul>
		G (0-100)	mode.
		B (0-100)	

# Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™		• Select an Input Source from the list.
DP		
Туре С		
Auto Scan	OFF	Users can use the Navi Key to select Input     Source at below status:
	ON	<ul> <li>While "Auto Scan" is set to "OFF" with the monitor at power saving mode;</li> <li>While "No Signal" message box is shown on the monitor.</li> </ul>

### Navi Key

1st Level Menu	2nd Level Menu	Description
Enter	OFF	• All Navi Key items can be adjusted via
Left	OSD Menus. Brightness	USD Menus.
Right	Mode	
	Alarm Clock	
	Input Source Refresh Rate	
	Info. On Screen	
	Audio Volume	
	KVM	

### Setting

1st Level Menu	2nd Level Menu	Description	
Language	繁體中文	<ul> <li>Users have to press the E Button to confirm and apply the Language setting.</li> </ul>	
	English	<ul> <li>Language is an independent setting.</li> </ul>	
	Français	Users' own language setting will override the factory default. When users set Reset	
	Deutsch	to Yes, Language will not be changed.	
	Italiano		
	Español		
	한국어		
	日本語		
	Русский		
	Português		
	简体中文		
	Bahasa Indonesia		
	Türkçe		
	(More languages coming soon)		
Transparency	0~5	<ul> <li>Users can adjust Transparency in any mode.</li> </ul>	
OSD Time Out	5~30s	• Users can adjust OSD Time Out in any mode.	
Power Button	OFF	<ul> <li>When set to OFF, users can press the power button to turn off the monitor.</li> </ul>	
	Standby	<ul> <li>When set to Standby, users can press the power button to turn off the panel and backlight.</li> </ul>	

1st Level Menu	2nd Level Menu	Description	
HDMI™ CEC	OFF ON	<ul> <li>HDMI<sup>™</sup> CEC (Consumer Electronics Control) supports Sony PlayStation<sup>®</sup>, Nintendo<sup>®</sup> Switch<sup>™</sup>, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.</li> <li>If HDMI<sup>™</sup> CEC is set to ON: <ul> <li>The monitor will automatically power on when the CEC device is turned on.</li> </ul> </li> <li>The CEC device will enter power saving mode when the monitor is turned off.</li> <li>When Sony PlayStation<sup>®</sup>, Nintendo<sup>®</sup> Switch<sup>™</sup>, or Xbox Series XIS console is connected, Mode will be automatically set to Eco mode (Default) and can be adjusted to users' preferred modes later.</li> </ul>	
Info. On Screen	OFF	<ul> <li>The information of the monitor status will be shown on the right side of the screen.</li> <li>Users can enable or disable the Info. On Screen.</li> </ul>	
Audio Volume	0-100	• Users can adjust Audio Volume in any mode.	
Reset	YES NO	<ul> <li>Users can Reset and restore settings to original OSD Default in any mode.</li> </ul>	

# **Specifications**

Model	Modern MD272P Modern MD272PW	Modern MD272QP Modern MD272QPW Modern MD272QP Ultramarine		
Size	27 inch			
Curvature	Flat			
Panel Type	IPS			
Resolution	1920 x 1080	2560 x 1440		
Aspect Ratio	16.9			
Brightness (nits)	250 (typ.)	300 (typ.)		
Contrast Ratio	1000:1			
Refresh Rate	75Hz			
Response Time	5ms (GtG)	4ms (GtG)		
I/O	<ul> <li>Power Jack x1</li> <li>USB Type-C Port x1</li> <li>DisplayPort x1</li> <li>HDMI<sup>™</sup> Connector x1</li> <li>Headphone Jack x1</li> <li>USB 2.0 Type-A Port x2</li> <li>USB 2.0 Type-B Upstream Port x1</li> </ul>			
View Angles	178°(H) , 178°(V)			
DCI-P3*/ sRGB	80% / 100%	80% / 99%		
Surface Treatment	Anti-glare			
Display Colors	16.7M (8 bit)			
Speaker	2W x2			
Monitor Power Options	19V 💶 5.79A			
External Power Supply Specs	Model: ADS-110CL-19-3 190110G			
Power Input	100~240Vac, 50~60Hz, 1.5A Max			
Power Output	19V === 5.79A			

Model		Modern MD272 Modern MD272P Modern MD272 Modern MD272PW Modern MD273 Ultramaring			
Adjustment (Tilt)		-5° ~ 20°			
Adjustment (Height)		0 ~ 110mm			
Adjustment (Swivel)		-30° ~ 30°			
Adjustment (Pivot)		-90° ~ 90°			
Kensington Lock		Yes			
VESA Mounting		<ul> <li>Plate Type: 75 x 75 mm</li> <li>Screw Type: M4 x 10 mm</li> <li>Thread Diameter: 4 mm</li> <li>Thread Pitch: 0.7 mm</li> <li>Thread Length: 10 mm</li> </ul>			
Dimension (W >	c D x H)	613.50 x 200.81 x 401.50 mm			
Weight		5.85 Kg (net) / 8.10 Kg (gross)			
Environment	Operating	<ul> <li>Temperature: 0°C to 40°C</li> <li>Humidity: 20% to 90%, non-condensng</li> <li>Altitude: 0 ~ 5000m</li> </ul>			
	Storage	<ul> <li>Temperature: -20°C to 60</li> <li>Humidity: 10% to 90%, no</li> </ul>			

\* Based on CIE1976 test standards.

# **Preset Display Modes**



All information is subject to change without prior notice.

Standard	rd Resolution		Modern MD272P Modern MD272PW		Modern MD272QP Modern MD272QPW Modern MD272QP Ultramarine	
			HDMI™	DP Type-C	HDMI™	DP Type-C
Full HD	1920x1080	@60Hz	V	V	V	V
		@75Hz	V	V	V	V
QHD	2560x1440	@60Hz			V	V
		@75Hz			V	V
Video Timing Resolution	720P		V	V	V	V
	1080P	ଜ60Hz	V	V	V	V

# Troubleshooting

#### The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

#### No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

#### The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

#### No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

#### The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

#### The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

# **Safety Instructions**

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

#### Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

### Battery

Please take special precautions if this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

#### **European Union:**



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

BSMI:



#### 廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

#### California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

#### Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the device.
  - The device has been exposed to moisture.
  - The device does not work well or you can not get it working according to the User Guide.
  - The device has dropped and damaged.
  - The device has obvious sign of breakage.

# **TÜV Rheinland Certification**

## **TÜV Rheinland Low Blue Light Certification**

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.

- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

### **TÜV Rheinland Flicker Free Certification**

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on

internationally applicable standards or standards common within the industry and exceeds these requirements.

- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)





# **Regulatory Notices**

## **CE Conformity**

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

### FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if



(F

not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

#### MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

### WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



### **Chemical Substances Information**

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

### **RoHS Statement**

#### Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

#### India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

#### **Turkey EEE Regulation**

Conforms to the EEE Regulations of the Republic Of Turkey

#### **Ukraine Restriction of Hazardous Substances**

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017,  $\mathbb{N}^{\circ}$  139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

#### Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

### **Green Product Features**

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

#### **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

#### Warning!

Overuse of screens is likely to affect eyesight.

#### **Recommendations:**

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

#### **Copyright and Trademarks Notice**

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

#### **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

