

G Series

LCD Monitor

G272C (3CC9)

G272CP (3CC9)

G272CQP (3CC9)

G322C (3DC2)

G322CQP (3DC2)

User Guide

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	6
Monitor Overview	8
Connecting the Monitor to PC	12
OSD Setup	14
Navi Key	14
Hot Key	15
OSD Menus	16
Gaming	17
Professional	19
Image	20
Input Source	21
Navi Key	22
Setting	23
Specifications	25
Preset Display Modes	27
Troubleshooting	29
Safety Instructions	30
TÜV Rheinland Certification	32
Regulatory Notices	33

Revision

V1.0, 2021/06

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

	G272C	
	G272CP	
Monitor	G272CQP	
	G322C	
	G322CQP	
Documentation	Quick Start Guide	
	Stand with Screw(s)	
	Stand Base with Screw(s)	
Accessories	Screw(s) for Wall Mount Bracket(s)	
Accessories	Stand Cover (for G272C and G322C)	
	Power Cord	
	Power Adapter	
Cables	DisplayPort Cable (Optional)	




- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand


G272C/G322C

- 1. Leave the monitor in its protective foam packaging. Align the stand to the monitor groove. Tighten the stand with screws.
- 2. Connect the base to the stand and tighten the screw to secure the base.
- 3. Align and push the stand cover towards the monitor groove until it locks in place.
- 4. Make sure the stand assembly is properly installed before setting the monitor upright.

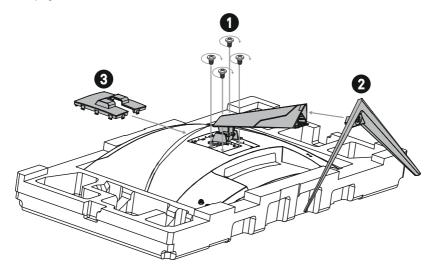

G272CP/ G272CQP/ G322CQP

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- 4. Make sure the stand assembly is properly installed before setting the monitor upright.

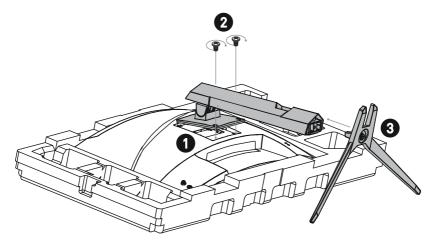



Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!



Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.




/ Important

- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.


G272C/G322C

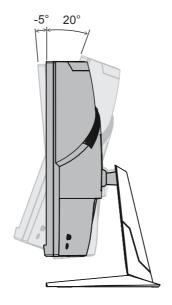



G272CP/ G272CQP

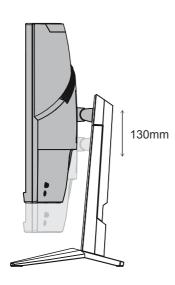

G322CQP

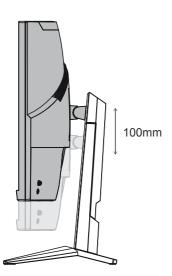


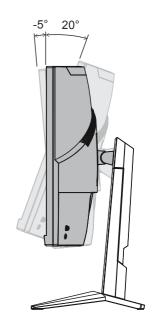


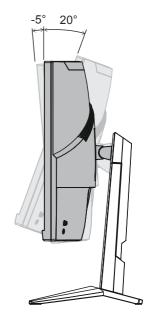


Monitor Overview

G272C/G322C

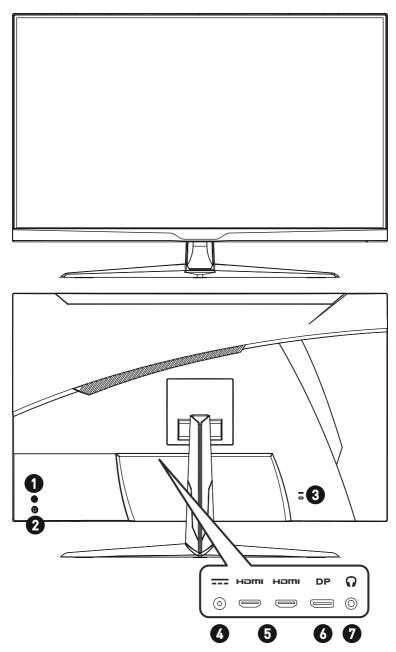

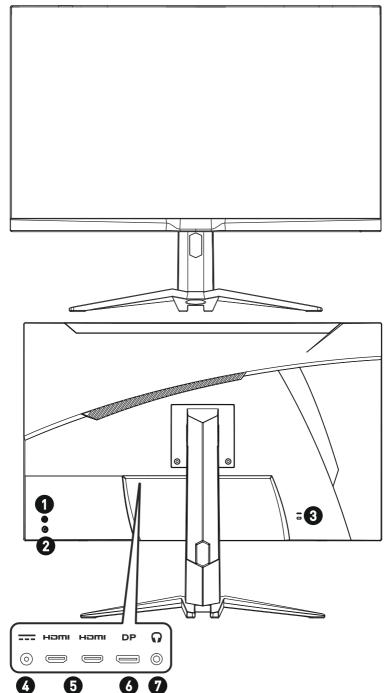

G272CQP/ G322CQP

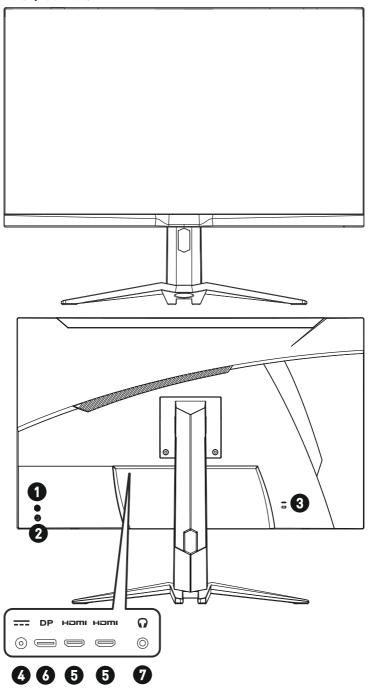


0	Navi Key
2	Power Button
3	Kensington Lock
4	Power Jack
5	HDMI Port HDMI 100 NOISEAN NATUREAL NITERACE
6	DisplayPort Port
7	Headphone Jack


Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Assemble the monitor power adapter & power cord. (Figure A)
- **4.** Connect the power adapter to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

G272C/G322C

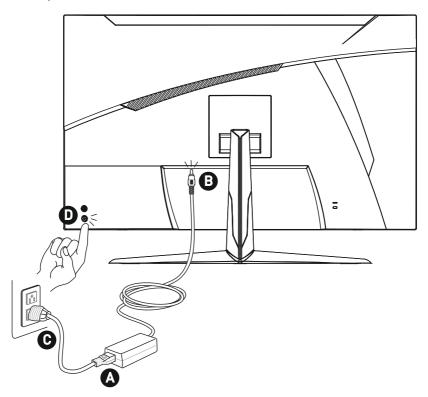

G272CP/ G272CQP/ G322CQP

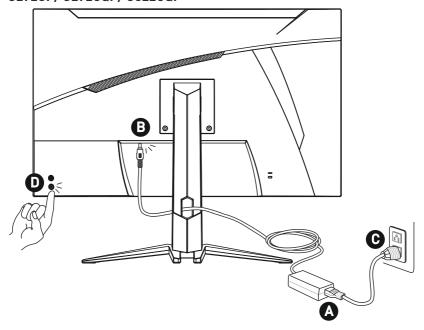

OSD Setup

This chapter provides you with essential information on OSD Setup.




/ Important

All information is subject to change without prior notice.


Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

G272C/G322C

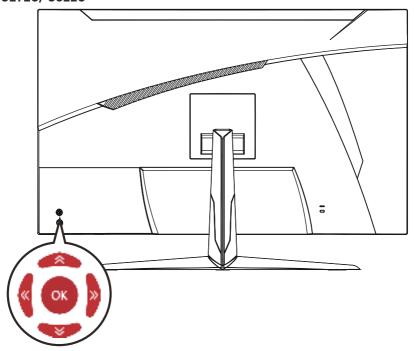

G272CP/ G272CQP/ G322CQP

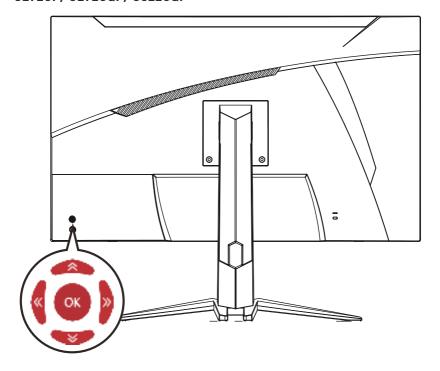

Up/ Down/ Left/ Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

Press (OK):


- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

G272C/G272CP/G322C

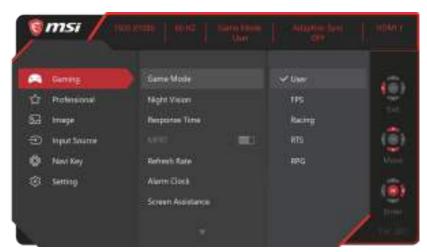

G272CQP/G322CQP





When receiving HDR signals, Night Vision, MPRT, Low Blue Light, HDCR, Brightness, Contrast, Color Temperature will be grayed out.

Gaming

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	User	Use Up or Down Button to select
	FPS	and preview mode effects. • Press the OK Button to confirm and
	Racing	apply your mode type.
	RTS	
	RPG	
Night Vision	OFF	This function optimizes background
	Normal	brightness and is recommended for FPS games.
	Strong	
	Strongest	
	A.I.	
Response Time N	Normal	Users can adjust Response Time in
	Fast	any mode. • Response Time will be grayed out
	Fastest	while MPRT is enabled.
MPRT	OFF	When MPRT is enabled, Brightness cannot be enabled and will be grayed out.
	ON	HDCR and MPRT cannot be enabled simultaneously.
		Response time will be grayed out while MPRT is enabled.
		MPRT is available when the refresh rate is over 85Hz.
		MPRT has to be disabled while Adaptive-Sync is set to 0N.

1st Level Menu	2nd/3rd L	evel Menu	Description
Refresh Rate	Location	Left Top	Location is adjustable in OSD
		Right Top	Menu. Press the OK Button to confirm and apply your Refresh
		Left Bottom	Rate Location.
		Right Bottom	This monitor follows and works at the Operating System's preset
		Customize	Screen Refresh Rate.
		(for G272CQP/ G322CQP)	
	OFF		
	ON		
Alarm Clock	Location	Left Top	After setting the time, press the OK
		Right Top	Button to activate the timer. • Users have to manually restore
		Left Bottom	their preset Alarm Clock after any
		Right Bottom	AC power loss and reconnection.
		Customize	
		(for G272CQP/ G322CQP)	
	OFF	I	
	15:00	00:01 ~ 99:59	
	30:00		
	45:00		
	60:00		
Screen	Assistance (for G272CP/		Users can adjust Screen
G272C/ G272CP/			Assistance in any mode.
G322C)			
	нан г	1	

1st Level Menu	2nd/3rd Level Menu		Description
Smart Crosshair (for G272CQP/ G322CQP)	Color Position	None F 7 % L J / % HAH	Through AI algorithm, this function enhances the visibility of in-game crosshair. Users can select the color and position of the crosshair.
	Reset		
Adaptive-Sync	OFF		Adaptive-Sync prevents screen
	ON		tearing.

Professional

1st Level Menu	2nd Level Menu	Description
Pro Mode	User	Use Up or Down Button to select and
	Anti-Blue preview mode effects. Press the OK Button to con your mode type. Office sRGB	Press the OK Button to confirm and apply
		11 7
	Eco	
Low Blue Light	OFF	Low Blue Light protects your eyes against
	ON	blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.
		When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.

1st Level Menu	2nd Level Menu	Description
HDCR	OFF	HDCR enhances image quality by increasing the contrast of images.
	ON	When HDCR is set to ON, Brightness will be grayed out.
		HDCR and MPRT cannot be enabled simultaneously.
MPRT	OFF	When MPRT is enabled, Brightness cannot be enabled and will be grayed out.
	ON	HDCR and MPRT cannot be enabled simultaneously.
		Response time will be grayed out while MPRT is enabled.
		MPRT is available when the refresh rate is over 85Hz.
		MPRT has to be disabled while Adaptive- Sync is set to ON.
Enhancement We Me	OFF	Image Enhancement enhances image
	Weak	edges to improve their acutance.
	Medium	
	Strong	
	Strongest	

Image

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	 Properly adjust Brightness according to the surrounding lighting.
		Brightness will be grayed out when MPRT or HDCR are enabled.
Contrast	0-100	Properly adjust Contrast to relax your eyes.
Sharpness	0-5	Sharpness improves clarity and details of images.

1st Level Menu	2nd/3rd Level Menu		Description
Color	Cool Normal		Use Up or Down Button to select
Temperature			and preview mode effects.Press the OK Button to confirm and apply your mode type.
	Warm		
	Customization	R (0-100)	Users can adjust Color Temperature in Customization
		G (0-100)	mode.
		B (0-100)	
Screen Size	Auto 4:3 16:9		Users can adjust Screen Size in
			any mode, any resolution and any screen refresh rate.

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI1		Users can adjust Input Source in any mode.
HDMI2		
DP		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at below status:
	ON	Source at below status:
	JUN	 While "Auto Scan" is set to "OFF" with the monitor at power saving mode;
		While "No Signal" message box is shown on the monitor.

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	All Navi Key items can be adjusted via
Down	Brightness	OSD Menus.
Left Right	Game Mode	
	Screen Assistance (for G272C/ G272CP/ G322C)	
	Smart Crosshair (for G272CQP/ G322CQP)	
	Alarm Clock	
Inp	Input Source	
	Refresh Rate	
	Info. On Screen	
	Night Vision	

Setting

1st Level Menu	2nd Level Menu	Description			
Language	繁體中文	Users have to press the OK Button to			
	English	confirm and apply the Language setting.Language is an independent setting.			
	Français	Users' own language setting will override the factory. When users set Reset to Yes,			
	Deutsch	Language will not be changed.			
	Italiano				
	Español				
	한국어				
	日本語				
	Русский				
	Português				
	简体中文				
	Bahasa Indonesia				
	Türkçe				
	(More languages coming soon)				
Transparency	0~5	Users can adjust Transparency in any mode.			
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.			
Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.			
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.			
Info. On Screen	OFF	The information of the monitor status will be			
	ON	shown on the right side of the screen. Users can enable or disable the Info. On Screen.			

1st Level Menu	2nd Level Menu	Description		
DP OverClocking	OFF ON	To reach maximum resolution of 1920x1080 @170Hz, users have to set DP OverClocking to ON. (for G272C/ G272CP/ G322C)		
		To reach maximum resolution of 2560x1440 @170Hz, users have to set DP OverClocking to ON. (for G272CQP/ G322CQP)		
HDMI CEC	OFF	HDMI CEC (Consumer Electronics Control)		
	ON	supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC- capable.		
		If HDMI CEC is set to ON: The monitor will automatically power on when the CEC device is turned on.		
		The CEC device will enter power saving mode when the monitor is turned off.		
		 When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Game Mode and Pro Mode will be automatically set to default modes and can be adjusted to users' preferred modes later. 		
Reset	YES	Users can Reset and restore settings to		
	NO	original OSD Default in any mode.		

Specifications

Monitor	G272C G272CP	G272CQP	G322C	G322CQP	
Size	27 inch		31.5 inch		
Curvature	1000R				
Panel Type	VA				
Resolution	1920 x 1080 (FHD)	2560 x 1440 (QHD)	1920 x 1080 (FHD)	2560 x 1440 (QHD)	
Aspect Ratio	16:9				
Brightness	300 nits (typ.) 250 nits (typ.)			yp.)	
Contrast Ratio	3000:1			2500:1	
Refresh Rate	170Hz (Default: 165H	z)			
Response Time	4ms (GTG) 1ms (MPRT)				
1/0	 Power Jack x1 Headphone Jack x1 HDMI Port x2 DisplayPort Port x1 				
View Angles	178°(H), 178°(V)				
DCI-P3*/ sRGB	92%/ 116%	90%/ 114%	92%/ 116%	92%/ 115%	
Surface Treatment	Anti-glare				
Display Colors	16.7M	1.07B (8 bit + FRC)	16.7M	1.07B (8 bit + FRC)	
Monitor Power Options	20V === 2.25A	20V 3.25A	20V 2.25A	20V 3.25A	
Power Adapter Specs	Model: ADPC2045	Model: ADPC2065	Model: ADPC2045	Model: ADPC2065	
Power Input	100~240Vac, 50~60Hz, 1.5A				
Power Output	20V ==== 2.25A	20V ==== 3.25A	20V 2.25A	20V 3.25A	
Adjustment (Height)	0 ~ 130mm	0 ~ 130mm		0 ~ 100mm	
Adjustment (Tilt)	-5° ~ 20°				
Kensington Lock	Yes				

Monitor		G272C	G272CP	G272CQP	G322C	G322CQP	
		• Plate Type: 100 x 100 mm					
			• Screw Type: M4 x 10 mm				
VESA Mounting		• Thread Diameter: 4 mm					
		• Thread Pitch: 0.7 mm					
		Thread Length: 10 mm					
Dimension (W x H x D)		607 x 449 x 229 mm	607 x 426 x 267 mm	607 x 426 x 267 mm	701 x 495 x 249 mm	701 x 480 x 269 mm	
Weight		4.7 kg (net)	5.6 kg (net)	6.1 kg (net)	6.4 kg (net)	7.7 kg (net)	
		7.5 kg (gross)	8.4 kg (gross)	8.9 kg (gross)	9.2 kg (gross)	10.9 kg (gross)	
		Temperature: 0°C to 40°C					
Environment	Operating	Humidity: 20% to 90%, non-condensing					
		• Altitude: 0 ~ 5000m					
	Chamana	• Temperature: -20°C to 60°C					
	Storage	• Humidity: 10% to 90%, non-condensing					

^{*} Based on CIE1976 test standards.

Preset Display Modes



All information is subject to change without prior notice.

a	Resolution		G272C/ G272CP/ G322C		
Standard			HDMI	DP	
VGA	640x480	@60Hz	V	V	П
		@67Hz	V	V	
		@72Hz	V	V	
		@75Hz	٧	V	
Dos-Mode	720x480	@60Hz	٧	V	
	720x576	@50Hz	٧	V	
SVGA	800x600	@56Hz	V	V	
		@60Hz	V	V	
		@72Hz	V	V	
		@75Hz	V	V	
XGA	1024x768	@60Hz	٧	V	
		@70Hz	٧	V	
		@75Hz	V	V	
SXGA	1280x1024	@60Hz	V	V	
		@75Hz	٧	V	
WXGA+	1440x900	@60Hz	V	V	
WSXGA+	1680x1050	@60Hz	V	V	
Full HD	1920x1080	@60Hz	V	V	
		@85Hz	V	V	
		@144Hz	٧	V	
		@165Hz	V	V	
		@170Hz		V *	
Video	720P		V	V	
Timing Resolution	1080P @60Hz		V	V	
Nesotution	1080P @120Hz		V	V	

^{*} Users have to set DP OverClocking to ON. This is the highest refresh rate supported by DP OverClocking. If any monitor error occurs during overclocking, please downscale the refresh rate.

Classical and	dand Danslution		G272CQP/ G322CQP		
Standard	Resolution		HDMI	DP	
VGA	640x480	@60Hz	V	٧	
		@67Hz	V	V	
		@72Hz	V	V	
		@75Hz	V	٧	
Dos-Mode	720x480	@60Hz	V	٧	
	720x576	@50Hz	V	٧	
SVGA	800x600	@56Hz	V	V	
		@60Hz	V	V	
		@72Hz	V	V	
		@75Hz	V	٧	
XGA	1024x768	@60Hz	V	٧	
		@70Hz	V	٧	
		@75Hz	V	V	
SXGA	1280x1024	@60Hz	V	٧	
		@75Hz	V	V	
WXGA+	1440x900	@60Hz	V	V	
WSXGA+	1680x1050	@60Hz	V	V	
Full HD	1920x1080	@60Hz	V	V	
QHD	2560x1440	@60Hz	V	V	
	2560x1440	@120Hz	V	V	
	2560x1440	@144Hz	V	V	
	2560x1440	@165Hz		V	
	2560x1440	@170Hz		V *	
Video	480P		V	V	
Timing Resolution	576P		V	V	
Resolution	720P		V	٧	
	1080P @60Hz		V	V	
	1080P @120Hz		V	V	
	2160P @30Hz		V		
	2160P @50Hz		V		
	2160P @60Hz		V		

^{*} Users have to set DP OverClocking to ON. This is the highest refresh rate supported by DP OverClocking. If any monitor error occurs during overclocking, please downscale the refresh rate.

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- · Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Battery

Please take special precautions if this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

European Union:



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

Taiwan:



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eve level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

• TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.



- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA [626] 913-0828

www.msi.com

WFFF Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, № 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- · Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- · Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.