### Overview

Firmware update tool is an application used to update monitor firmware.


### Pre-requisites for firmware update

1. Connect the monitor to a power source, during the firmware update process.



- **NOTE:** Ensure that all other video cables between the monitor and the computer are unplugged.
- 2. Connect the supplied Thunderbolt<sup>™</sup> 4 passive cable between the monitor and your computer. Do not use any other device between this connection.

If you are not using a Thunderbolt<sup>™</sup> 4-equipped computer, use the supplied DisplayPort or HDMI cable to connect the monitor and computer, and then connect the supplied USB Type-A to USB Type-C cable from your computer to the USB-C upstream port of the monitor.

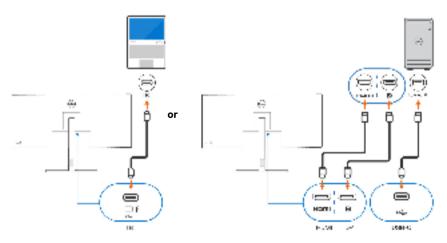



**NOTE:** Ensure that other USB cables and USB devices between the monitor and the computer are unplugged.



**NOTE:** Disconnect all other monitors from the notebook or desktop. This will ensure that only one display is connected while conducting firmware update.



**NOTE:** It is recommended to update the firmware with a notebook as the monitor screen may go blank during the firmware update process.



**NOTE:** Please disconnect the monitor when upgrading Docking firmware.




**NOTE:** For faster firmware update, use Thunderbolt<sup>™</sup> 4 connection to the monitor if it is available. Ensure to select "Always Connect" in Thunderbolt<sup>™</sup> software.



Ű

**NOTE:** Do not unplug the cables till the updating process is complete.




**NOTE:** Update one monitor at a time. Do not conduct firmware update on multiple monitors at a given time.

## Installation

### Installing through GUI

1. Double-click **deb file (for example, Dell\_U3425WE\_FWUpdate\_M3B102\_Ubuntu. deb)** on the desktop and then click the **Install** button in Ubuntu software center.

|   |   | > = : < = • •  |
|---|---|----------------|
|   |   |                |
|   |   |                |
| 2   | -   |                |
| Ш   | and we first of a first an over density.  | -              |
|   |   |                |
| E   |   |                |
| •   |   | and the first  |
| 2   |   |                |
| 2   |   |                |
| <u>.</u>                                    | with an of all second and prove   |                |
|   | All and a second s  |                |
| -   |   |                |
| -   | 1927 - C.   | see [second]   |
| -   | C manufacture and   |                |
| -   |   |                |
|   | The approximate from a descent of a second sec  |                |
|   |   |                |
|   |   |                |
| <b>Table</b>                                |   |                |
|   |   | 20100          |
|   |   | ) E : C 10 + O |
|   | ver 22. 1.2 − 2. 2.<br>Ver delemonitor-finavare-update-utility  | ) E : E 5) + O |
|   | deli-monitor-firmware-update-utility  |                |
|   | deli-monitor-firmware-update-utility  | >=:=:0         |
| 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1       | deli-monitor-firmware-update-utility  |                |
| 21 D C 0 0 0                                |   | _              |
| 🔁 🗐 🐨 🗔 😸 😸                                 | deli-monitor-firmware-update-utility  |                |
| 🖂 🛃 🗐 🐨 🖪 😸 😸 🗐 🖂                           | deli-monitor-firmware-update-utility  | _              |
| 1 🏖 🖂 🗐 🗐 🐨 🕲 🗐 🔜                           | deli-monitor-firmware-update-utility  | _              |
| ) A 🗞 🛛 🗐 🗊 🖬 🖬 😸 🧃 🖉                       | Image: Source of the state              | _              |
| 🚺 A 🏷 🛛 📄 💵 🐨 🐨 🧰 📰 🗶                       | Image: Source of the state              | _              |
| i 📷 🖬 🗠 🖧 🖾 🛃 💵 🐨 🖼 😸 📷 🗶                   | Image: Section of the section of t             |                |
| 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1       | Image: Source of the second             | _              |
| i i i i i i i i i i i i i i i i i i i       | Image: Source of the second             |                |
| · [1] 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 | Image: Source of the second             |                |
|   | Constrained and a second a |                |
| 4. 有自己有效可以会议的。                              | Image: Section of the section of th                           |                |

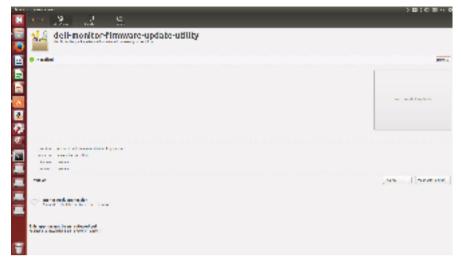

2. Execute firmware update tool using Ubuntu desktop.



3. Initializing for device status.



4. The utility loads the firmware file automatically. Or, you can select your file manually by clicking and navigate to the UPG firmware file.



#### 5. Click Update.

The utility will start updating the new firmware.



6. Once update is complete, follow the on-screen instructions to re-start your monitor.





**NOTE:** Update takes up to 15 minutes. Do not power off or disconnect cable while updating.



**NOTE:** The monitor screen may blank and only show update progress bar while updating. Please wait and don't close the Monitor Firmware Update Utility.

**NOTE:** If you experience problems during or after update, refer to Troubleshooting.

### Installing through a command

- Copy deb file (for example, Dell\_U3425WE\_FWUpdate\_M3B102\_Ubuntu.deb) to the desktop.
- 2. Open the terminal and input command.

sudo dpkg -i filename (for example, sudo dpkg -i  $\sim\!\!/\text{Desktop}/$ 

Dell\_U3425WE\_FWUpdate\_M3B102\_/Ubuntu.deb)



3. Execute firmware update tool using Ubuntu desktop.



4. Initializing for device status.



5. The utility loads the firmware file automatically. Or, you can select your file manually by clicking and navigatie to the UPG firmware file.



#### 6. Click Update.

The utility will start updating the new firmware.

| File Petr      | Hanne Darim and A Mill/Timession (1905-6765).                 | - |
|----------------|---|---|
| Ascil He       | DOD W/F   |   |
| Ourset Persons | Validation  |   |
| Nov Proven     | Service -   |   |
| File Checkson  | 7100  |   |
| ueded na.      |   |   |
|                | Semantics. Us and power off or a science case is an experime. |   |

7. Once update is complete, follow the on-screen instructions to re-start your monitor.





**NOTE:** Update takes up to 15 minutes. Do not power off or disconnect cable while updating.



Ŵ

**NOTE:** The monitor screen may blank and only show update progress bar while updating. Please wait and don't close the Monitor Firmware Update Utility.

NOTE: If you experience problems during or after update, refer to Troubleshooting.

## Uninstall

1. Open the terminal and input command.

sudo dpkg -P dell-monitor-firmware-update-utility

# Troubleshooting

| Errors   | Possible Solutions  |
|--|---|
| File permission error  | <ul> <li>Save the firmware file in another location.</li> <li>Check if the firmware file has read permission.</li> <li>Check if you have owner rights for the firmware file.</li> <li>Run the utility with administrator privileges.</li> </ul> |
| Monitor not detected   | Follow Firmware Update Pre-requisites to check if the power and USB cables are properly connected to your computer and reopen the Monitor Firmware Update Utility.  |
| Write protection error   | Re-try updating with the following steps:   |
| Flash erase error  | <b>1.</b> Close the Monitor Firmware Update Utility.  |
| Update error   | <b>2.</b> Turn off the monitor by pressing the power button.  |
| Monitor firmware checksum error  | <ul><li><b>3.</b> Re-plug the power cord.</li><li><b>4.</b> Turn on the monitor.</li></ul>  |
|  | <b>5.</b> Try updating again with the Monitor Firmware Update Utility.  |
| USB device inactive after new firmware installation.   | Re-try the updating steps from 1 to 4 as stated above.  |
| A warning message<br>appears: "Firmware<br>update was not<br>completed. Please update<br>the monitor firmware<br>again." | Re-try updating the monitor's firmware. Do not turn off the ISP tool<br>until the update is complete.   |