Brilliance 241P6 241B6



www.philips.com/welcome

ΕN	User manual	1
	Customer care and warranty	41
	Troubleshooting & FAQs	46



Table of Contents

1.	Important1
	1.1 Safety precautions and maintenance .1
	1.2 Notational Descriptions2
	1.3 Disposal of product and packing
	material3
2.	Setting up the monitor4
	2.1 Installation
	2.2 Operating the monitor6
	2.3 Remove the Base Assembly for VESA
	Mounting10
	2.4 MHL (Mobile High-Definition Link)
	introduction11
3.	Image Optimization12
	3.1 SmartImage12
	3.2 SmartContrast
	3.3 Philips SmartControl Premium13
	3.4 SmartDesktop Guide20
4.	PowerSensor [™] 25
5.	LightSensor26
5. 6.	LightSensor26 Built-in Webcam with Microphone 27
	Built-in Webcam with Microphone 27
6.	-
6.	Built-in Webcam with Microphone 27 Technical Specifications
6. 7.	Built-in Webcam with Microphone 27 Technical Specifications
6. 7. 8. 9.	Built-in Webcam with Microphone 27 Technical Specifications 7.1 Resolution & Preset Modes 7.2 Power Management 33 Regulatory Information 34 Customer care and warranty
6. 7. 8. 9.	Built-in Webcam with Microphone 27 Technical Specifications 7.1 Resolution & Preset Modes 7.2 Power Management 33 Regulatory Information 34 Customer care and warranty 10.1 Philips' Flat Panel Monitors Pixel
6. 7. 8. 9.	Built-in Webcam with Microphone 27 Technical Specifications 7.1 Resolution & Preset Modes 7.2 Power Management 33 Regulatory Information 34 Customer care and warranty

- 11.3 General FAQs48

1. Important

This electronic user's guide is intended for anyone who uses the Philips monitor. Take time to read this user manual before you use your monitor. It contains important information and notes regarding operating your monitor.

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

1.1 Safety precautions and maintenance

Warnings

Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Read and follow these instructions when connecting and using your computer monitor.

Operation

- Please Keep the monitor out of direct sunlight, very strong bright lights and away from any other heat source. Lengthy exposure to this type of environment may result in discoloration and damage to the monitor.
- Remove any object that could fall into ventilation holes or prevent proper cooling of the monitor's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the monitor, make sure the power plug and outlet are easily accessible.
- If turning off the monitor by detaching the power cable or DC power cord, wait for 6 seconds before attaching the power cable or DC power cord for normal operation.

- Please use approved power cord provided by Philips all the time. If your power cord is missing, please contact with your local service center. (Please refer to Customer Care Consumer Information Center)
- Do not subject the monitor to severe vibration or high impact conditions during operation.
- Do not knock or drop the monitor during operation or transportation.

Maintenance

- To protect your monitor from possible damage, do not put excessive pressure on the LCD panel. When moving your monitor, grasp the frame to lift; do not lift the monitor by placing your hand or fingers on the LCD panel.
- Unplug the monitor if you are not going to use it for an extensive period of time.
- Unplug the monitor if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your monitor.
- To avoid the risk of shock or permanent damage to the set, do not expose the monitor to dust, rain, water, or excessive moisture environment.
- If your monitor gets wet, wipe it with dry cloth as soon as possible.
- If foreign substance or water gets in your monitor, please turn the power off immediately and disconnect the power cord. Then, remove the foreign substance or water, and send it to the maintenance center.
- Do not store or use the monitor in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your monitor and use it for a longer lifetime, please use the monitor in a location that falls within the following temperature and humidity ranges.

- Temperature: 0-40°C 32-95°F
- Humidity: 20-80% RH

Important information for Burn-in/Ghost image

- Always activate a moving screen saver program when you leave your monitor unattended. Always activate a periodic screen refresh application if your monitor will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen.
- "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "after-image" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Service

- The casing cover should be opened only by qualified service personnel.
- If there is any need for any document for repair or integration, please contact with your local service center. (please refer to the chapter of "Consumer Information Center")
- For transportation information, please refer to "Technical Specifications".
- Do not leave your monitor in a car/trunk under direct sun light.

Note

Consult a service technician if the monitor does not operate normally, or you are not sure what procedure to take when the operating instructions given in this manual have been followed.

1.2 Notational Descriptions

The following subsections describe notational conventions used in this document.

Notes, Cautions and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold or italic type. These blocks contain notes, cautions or warnings. They are used as follows:

Solution Note

This icon indicates important information and tips that help you make better use of your computer system.

Caution

This icon indicates information that tells you how to avoid either potential damage to hardware or loss of data.

(1) Warning

This icon indicates the potential for bodily harm and tells you how to avoid the problem.

Some warnings may appear in alternate formats and may not be accompanied by an icon. In such cases, the specific presentation of the warning is mandated by the relevant regulatory authority.

1.3 Disposal of product and packing material

Waste Electrical and Electronic Equipment-WEEE



This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into mono materials.

Please find out about the local regulations on how to dispose of your old monitor and packing from your sales representative.

Taking back/Recycling Information for Customers

Philips establishes technically and economically viable objectives to optimize the environmental performance of the organization's product, service and activities.

From the planning, design and production stages, Philips emphasizes the important of

making products that can easily be recycled. At Philips, end-of-life management primarily entails participation in national take-back initiatives and recycling programs whenever possible, preferably in cooperation with competitors, which recycle all materials (products and related packaging material) in accordance with all Environmental Laws and taking back program with the contractor company.

Your display is manufactured with high quality materials and components which can be recycled and reused.


To learn more about our recycling program please visit

http://www.philips.com/sites/philipsglobal/ about/sustainability/ourenvironment/ productrecyclingservices.page

2. Setting up the monitor

2.1 Installation

1 Package contents

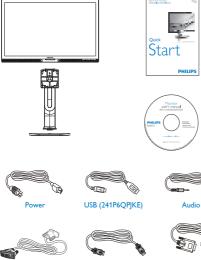

*DP




*Depends on the country


*DVI

2 Install the base


1. Place the monitor face down on a smooth surface. Pay attention not to scratch or damage the screen.



- 2. Hold the stand with both hands.
 - (1) Gently attach the stand to the VESA mount area until the latch locks the stand.
 - (2) Gently attach the base to the stand.
 - (3) Use your fingers to tighten the screw located at the bottom of the base, and secure the base to the stand tightly.

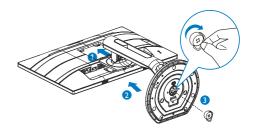


Warnings

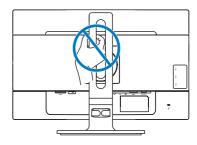


3 Connecting to your PC

241P6QPJE:

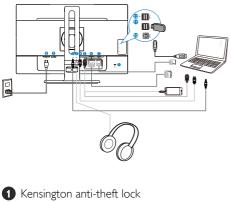


241P6QPJKE:

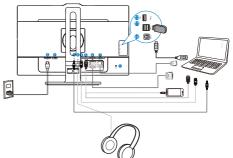

- 1 Kensington anti-theft lock 2 Audio input 3 Earphone jack 2 Audio input 4 Display port input 3 Earphone jack **5** MHL-HDMI input 4 Display port input 6 DVI input **5** MHL-HDMI input **7** VGA input 6 DVI input 8 AC power input **7** VGA input 9 Power Switch 8 AC power input **1** USB upstream 9 Power Switch **1** USB downstream **10** USB upstream 12 USB fast charger **1** USB downstream
- 12 USB fast charger

241B6QPYE:

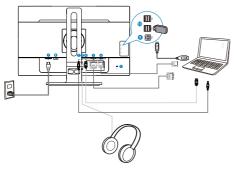


- 1 Kensington anti-theft lock
- 2 Audio input
- 3 Earphone jack
- 4 Display port input
- 5 DVI input
- 6 VGA input
- 7 AC power input
- 8 Power Switch
- 9 USB upstream
- 10 USB downstream


Connect to PC

- 1. Connect the power cord to the back of the monitor firmly.
- 2. Turn off your computer and unplug its power cable.
- Connect the monitor signal cable to the video connector on the back of your computer.
- 4. Plug the power cord of your computer and your monitor into a nearby outlet.
- 5. Turn on your computer and monitor. If the monitor displays an image, installation is complete.

- 2.2 Operating the monitor
- 1 Description of the control buttons


241P6QPJE:

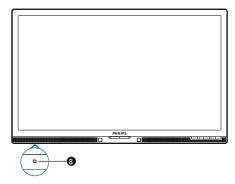




0	ወ	Switch monitor's power ON and OFF.
0	⊜/OK	Access the OSD menu. Confirm the OSD adjustment.
8		Adjust the OSD menu.
4	SENSOR	PowerSensor
6	Ju	Adjust the speaker volume.
6	◀	Return to previous OSD level.
0	Þ	SmartImage hot key.There are 6 modes to select: Office, Photo, Movie, Game, Economy, Off.
8	LightSens	sor

241P6QPJKE:

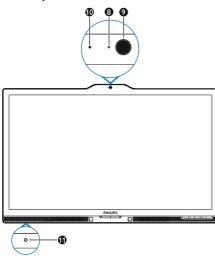




0	ወ	Switch monitor's power ON and OFF.	
0	■/OK	Access the OSD menu. Confirm the OSD adjustment.	
8		Adjust the OSD menu.	
4	SENSOR	PowerSensor	
6	ı	Adjust the speaker volume.	
6	◀	Return to previous OSD level.	
0	Ì	SmartImage hot key.There are 6 modes to select: Office, Photo, Movie, Game, Economy, Off.	
8	Webcam activity light		
9	2.0 Megapixel Webcam		
10	Microphone		
0	LightSens	sor	

241B6QPYE:





0	ወ	Switch monitor's power ON and OFF.
0	⊜/OK	Access the OSD menu. Confirm the OSD adjustment.
8		Adjust the OSD menu.
4	SENSOR	PowerSensor
6	ľ	Adjust the speaker volume.
6	•	Return to previous OSD level.
0	Ø٦	SmartImage hot key.There are 6 modes to select: Office, Photo, Movie, Game, Economy, Off.

2 Description of the On Screen Display

What is On-Screen Display (OSD)?

On-Screen Display (OSD) is a feature in all Philips LCD monitors. It allows an end user to adjust screen performance or select functions of the monitors directly through an on-screen instruction window. A user friendly on screen display interface is shown as below:

241P6QPJE, 241P6QPJKE:

PowerSensor	On • 0 Off •
LightSensor	
J Input	
Picture	
Audio	
· ·	

241B6QPYE:

PowerSensor	On Off	• 0 •	
J Input			
Picture			
Audio			
Color			

Basic and simple instruction on the control keys

In the OSD shown above, you can press ▼ ▲ buttons at the front bezel of the monitor to move the cursor, and press OK button to confirm the choice or change.

The OSD Menu

Below is an overall view of the structure of the On-Screen Display. You can use this as a reference when you want to work your way around the different adjustments later on.

Maiı	n menu	Sub	menu		
	PowerSensor		On		0, 1, 2, 3, 4
		L	Off		
\vdash	LightSensor		On		
	(available for selective models	L	Off		
\vdash	Input	, 	VGA		
		-	DVI		
			MHL-HDMI (available for selective r	nodel	s)
			DisplayPort		
	Picture		Picture Format		Wide Screen, 4:3
			Brightness	—	0~100
			Contrast	—	0~100
		-	SmartResponse	_	Off, Fast, Faster, Fastest
		\vdash	SmartContrast	—	Off, On
			Gamma	—	1.8, 2.0, 2.2, 2.4, 2.6
			Pixel Orbiting Over Scan		Off, On
					Off, On
	Audio		Volume		0~100
			Stand-Alone Mute		On, Off On, Off
			Audio Source		Audio In ,
			Addio Source		HDMI, (available for selective models) DisplayPort
\vdash	Color	Γ	Color Temperature	—	5000K, 6500K, 7500K, 8200K, 9300K, 11500K
		-	sRGB		
			User Define		Red: 0~100
				-	Green: 0~100
					Blue: 0~100
	Language	_		ortugu a, Suc	
\vdash	OSD Settings		Horizontal	—	0~100
		⊢	Vertical	—	0~100
		F	Transparency	—	Off, 1, 2, 3, 4
			OSD Time Out	—	5s, 10s, 20s, 30s, 60s
	Setup		Auto		
		\vdash	Power LED	_	0, 1, 2, 3, 4
		-	H.Position	—	0~100
		\vdash	V.Position	—	0~100
		-	Phase	—	0~100
		\vdash	Clock	_	0~100
		\vdash	Resolution Notification		On, Off
		\vdash	Reset	—	Yes, No
		L	Information		


5 Resolution notification

This monitor is designed for optimal performance at its native resolution, 1920 × 1080 @ 60 Hz. When the monitor is powered on at a different resolution, an alert is displayed on screen: Use 1920 × 1080 @ 60 Hz for best results.

Display of the native resolution alert can be switched off from Setup in the OSD (On Screen Display) menu.

6 Physical Function


Tilt

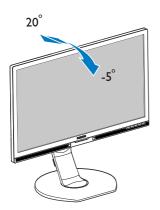


Height adjustment



Pivot

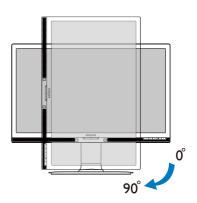

Swivel

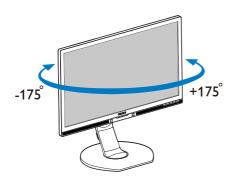


2.3 Remove the Base Assembly for VESA Mounting

Before you start disassembling the monitor base, please follow the instructions below to avoid any possible damage or injury.


1. Extend the monitor base to its maximum height.



2. Place the monitor face down on a smooth surface. Pay attention not to scratch or damage the screen. Then lift the monitor stand.




3. While keeping the release button pressed, tilt the base and slide it out.

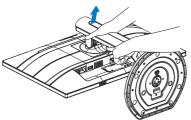

Solution Note

This monitor accepts a 100mm × 100mm VESA-Compliant mounting interface. VESA Mounting Screw M4.Always contact manufacturer for wall-mount installation.

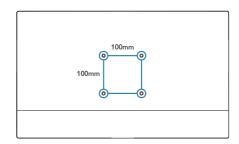

2.4 MHL (Mobile High-Definition Link) introduction

1 What is it?

Mobile High Definition Link (MHL) is a mobile audio/video interface for directly connecting mobile phones and other portable devices to high-definition displays.

An optional MHL cable allows you to simply connect your MHL capable mobile device to this large Philips MHL display, and watch your HD videos come to life with full digital sound. Now not only you can enjoy your mobile games, photos, movies, or other apps on its big screen, you can simultaneously charge your mobile device so you never run out of power half way.


2 How do I use the MHL function?

To use the MHL function, you need an MHL-Certified mobile device. To find a list of MHLcertified devices, visit the official MHL website (http://www.mhlconsortium.org)

You also need a optional MHL certified special cable in order to use this function.

3 How does it work? (how do I connect?)

Connect the Optional MHL cable to the mini USB port on the mobile device side, and the [MHL-HDMI] marked port on the monitor side. You are now ready to view the images on your big screen display and operate all function on you the mobile device such as internet surfing, game playing, photo browsing...etc. if your monitor has speaker function, then you will be able to hear accompanying sound too. When the MHL cable is disconnected or the mobile device is turned off, the MHL function will be automatically disabled.

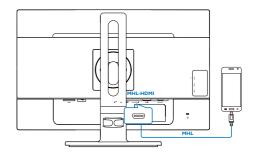

- The port marked [MHL-HDMI] is the only port on the monitor that supports the MHL function when the MHL cable is used. Note that the MHL certified cable is different than a standard HDMI cable.
- A mobile device with MHL certification must be purchased separately
- You may have to manually switch the monitor to MHL-HDMI mode in order to activate the monitor, if you have other devices already working and connected to available inputs
- Standby/Off energy saving of ErP is not applicable for the MHL charging functionality
- This Philips display is MHL certified. However, in case your MHL device does not connect or work correctly, check with your MHL device FAQ or vendor directly for direction. The policy of your device manufacturer may require you to purchase their brand specific MHL cable or adapter in order to work with other brand MHL devices. Note that this is not a fault of this Philips display.

3.1 SmartImage

1 What is it?

SmartImage provides presets that optimize display for different types of content, dynamically adjusting brightness, contrast, color and sharpness in real time. Whether you're working with text applications, displaying images or watching a video, Philips SmartImage delivers great optimized monitor performance.


2 Why do I need it?

You want a monitor that delivers optimized display all your favorite types of content, SmartImage software dynamically adjust brightness, contrast, color and sharpness in real time to enhance your monitor viewing experience.

3 How does it work?

SmartImage is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage dynamically enhances the contrast, color saturation and sharpness of images to enhance the contents being displayed - all in real time with the press of a single button.

4 How to enable SmartImage?

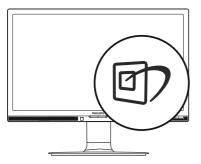

1. Press 27 to launch the SmartImage on screen display.

- 2. Keep pressing ▼ ▲ to toggle among Office, Photo, Movie, Game, Economy and Off.
- 3. The SmartImage on screen display will remain on screen for 5 seconds, or you can also press "OK" to make confirmation.

There are six modes to select: Office, Photo, Movie, Game, Economy and Off.

SmartImage
Office
Photo
Movie
Game
Economy
Off

- Office: Enhances text and dampens brightness to increase readability and reduce eye strain. This mode significantly enhances readability and productivity when you're working with spreadsheets, PDF files, scanned articles or other general office applications.
- Photo: This profile combines color saturation, dynamic contrast and sharpness enhancement to display photos and other images with outstanding clarity in vibrant colors - all without artifacts and faded colors.
- Movie: Ramped up luminance, deepened color saturation, dynamic contrast and razor sharpness displays every details in darker areas of your videos without color washout in brighter areas maintaining a dynamic natural values for the ultimate video display.
- Game: Turn on over drive circuit for best response time, reduce jaggy edges for fast moving objects on screen, enhance contrast ratio for bright and dark scheme, this profile delivers the best gaming experience for gamers.

- Economy: Under this profile, brightness, contrast are adjusted and backlighting finetuned for just right display of everyday office applications and lower power consumption.
- Off: No optimization by SmartImage.

3.2 SmartContrast

1 What is it?

Unique technology that dynamically analyzes displayed content and automatically optimizes a Monitor's contrast ratio for maximum visual clarity and viewing enjoyment, stepping up backlighting for clearer; crisper and brighter images or dimming backlighting for clear display of images on dark backgrounds.

2 Why do I need it?

You want the very best visual clarity and viewing comfort for every type of content. SmartContrast dynamically controls contrast and adjusts backlighting for clear, crisp, bright gaming and video images or displays clear, readable text for office work. By reducing your monitor's power consumption, you save on energy costs and extend the lifetime of your monitor.

3 How does it work?

When you activate SmartContrast, it will analyse the content you are displaying in real time to adjust colors and control backlight intensity. This function will dynamically enhance contrast for a great entertainment experience when viewing videos or playing games.

3.3 Philips SmartControl Premium

The new SmartControl Premium software by Philips allows you to control your monitor via an easy to use on-screen graphic interface. Complicated adjustments are a thing of the past as this user friendly software guides you through fine-tuning resolution, Color calibration, Clock/Phase adjustments, RGB White point adjustment, etc.

Equipped with latest technology in core algorithm for fast processing and response, this Windows compliant eye catching animated Icon based software is ready to enhance your experience with Philips monitors!

1 Installation


- Follow the instruction and complete the installation.
- You can launch after installation is completed.
- If you want to launch later, you can either click the shortcut on desktop or toolbar.

PHILIPS	

First launch -Wizard

- The first time after installation of SmartControl Premium, it will automatically go to Wizard for first time launch.
- The wizard will guide you through adjustment your monitor performance step by step.
- You can go to Plug-in menu to launch wizard later on as well.
- You can adjust more options without wizard by Standard pane.





Adjust menu

- Adjust Menu allows you to adjust Brightness, Contrast, and Resolution.
- You can follow the instruction and do the adjustment.
- Cancel prompts user if you want to cancel installation.





Color menu

- Color Menu allows you to adjust RGB, Black Level, White Point, Display Gamma, Calibration, SmartImage, and SmartKolor.
- You can follow the instruction and do the adjustment.
- Refer to below table for sub-menu item base on your input.
- Example for Color Calibration.

martControl Panky	PHILIPS
	F3 High and the set of the set o

11

12.5

SmartControl Panlaw PHILIPS


Station and





- 1. "Show Me" starts color calibration tutorial.
- 2. Start starts the 6-step color calibration sequence.
- 3. Quick View loads the before/after images.
- 4. To return to Color home pane, click the **Cancel** button.
- 5. Enable color calibration by default is on. If unchecked, does not allow for color calibration to happen, dimes out start and quick view buttons.
- 6. Must have patent info in calibration screen.

First Color Calibration Screen

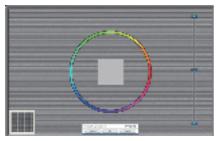

- Previous button is disabled until the second color screen.
- Next goes to the succeeding target (6-targets).
- Final next goes File > Presets pane.
- Cancel closes the UI and returns to the plug in page.

SmartImage

Allow users to change setting for better display setting based on content.

When Entertainment is set, SmartContrast and SmartResponse are enabled.



Eco Power menu



Options menu

Options>Preferences - Will only be active when selecting Preferences from the dropdown Options menu. On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available.



- Displays current preference settings.
- A checked box enables the feature. The check box is a toggle.
- Enable Context Menu on desktop is checked (On) by default. Enable Context menu displays SmartControl Premium selections for Select Preset and Tune Display in the desktop right-click context

menu. Disabled removes SmartControl Premium from the right click context menu.

- Enable Task Tray icon is checked (On) by default. Enable context menu shows the task tray menu for SmartControl Premium. A right click on the task tray icon displays the menu options for Help, Technical Support. Check for Update, About, and Exit. When Enable task tray menu is disabled, the task tray icon will only display Exit.
- Run at Startup is checked (On) by default. When disabled, SmartControl Premium will not launch at start or be in the task tray. The only way to launch SmartControl Premium is either from the desktop short cut or from the program file. Any preset set to run at startup will not load when this box is unchecked (Disabled).
- Enable transparency mode (Windows 7, Windows 8, Vista, XP). Default is 0% Opaque.

Options>Audio - Will only be active when selecting Volume from the drop-down Options menu.

On a non-supported display capable of DDC/ Cl, only the Help and Options tabs are available.



Option>Auto Pivot.



Options>Input - Will only be active when selecting Input from the drop-down Options menu. On a non-supported display capable of DDC/CI, only the Help and Options tabs are available. All other SmartControl Premium tabs are not available.



- Display the Source instruction pane and current input source setting.
- On single input displays, this pane will not be visible.

Options>Theft Deterrence - Theft Deterrence Pane will only be active when selecting Theft Deterrence Mode from the drop-down Plug-in menu.



To enable Theft Deterrence, click on **On** button to bring up the following screen:

- User can enter PIN between 4 and 9 digits numbers only.
- After entering PIN, Accept button takes user to the pop-up dialog box on the following page.
- Minimum minutes set to 5. Slider set to 5 by default.
- Does not require the display be attached to a different host to go into Theft Deterrence mode.

After creating PIN, the Theft Deterrence pane will indicate Theft Deterrence Enabled and provide PIN Options button:

- Theft Deterrence Enabled is displayed.
- Disable Theft Deterrence Mode opens pane screen on next page.
- PIN Options button only available after user creates PIN, button opens secure PIN web site.

Help menu

Help>User Manual - Will only be active when selecting User Manual from the drop-down Help menu. On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available.



Help>Version - Will only be active when selecting Version from the drop- down Help menu. On a non-supported display capable of DDC/Cl, only the Help and Options tabs are available.



Context Sensitive menu

The Context Sensitive menu is Enabled by default. If Enable Context Menu has been checked in the Options>Preferences pane, then the menu will be visible.



The Context Menu has four entries:

- SmartControl Premium When selected the About screen is displayed.
- Select Preset Provides a hierarchical menu of saved presets for immediate use. A check mark shows the currently selected preset. Factory Preset can also be called from the drop-down menu.
- **Tune Display** Opens the SmartControl Premium control panel.
- SmartImage Check current settings: Off, Office, Photo, Movie, Game, Economy.

Task Tray Menu Enabled

The task tray menu can be displayed by rightclicking on the SmartControl Premium icon from the task tray. Left Click will launch the application.



The task tray has five entries:

• Help - Access to User Manual file: Open User Manual file using the default browser window.

- Technical Support Displays the tech support page.
- Check for Update Takes the user to PDI Landing and checks the user's version against the most current available.
- About Displays detailed reference information: product version, release information, and product name.
- Exit Close SmartControl Premium.

To run SmartControl Premium again, either select SmartControl Premium from Program menu, double-click the desktop PC icon, or restart the system.



Task Tray Menu Disabled

When the Task Tray is disabled in the preference folder, only the Exit selection is available. To completely remove SmartControl Premium from the task tray, disable Run at Startup in Options>Preferences.

Solution Note

All the illustrations in this section are for reference only. SmartControl software version might be changed without notification. Please always check official Portrait website <u>www.</u> <u>portrait.com/dtune/phl/enu/index</u> to download the latest version of SmartControl software.


3.4 SmartDesktop Guide

SmartDesktop

SmartDesktop is in SmartControl Premium. Install SmartControl Premium and select SmartDesktop from Options.



- Align to partition check box will enable automatic alignment for the window when dragged into the defined partition.
- Select the desired partition by clicking on the icon. The partition will be applied to the desktop and the icon will be highlighted.
- Identify provides a quick way to view the grid.

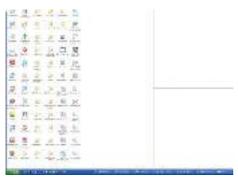

2 Drag and Drop Windows

Once the partitions are configured and Align to partition is selected a window can be dragged into the region and it will automatically align. When the window and mouse cursor are within the region, the region will become highlighted.

Note

If the outline of the region is not visible when dragging the window, "Show windows contents while dragging" is disabled. To enable:

1. In Control Panel, click System.

2. Click Advanced system settings (For Vista & Win7, Win8 OS, this is located on the left sidebar)

3. In Performance section, click Settings.

4. In the box, check Show window contents while dragging, and click OK.

Other alternative path:

Vista

Control Panel > Personalization > Window Color and Appearance > Click "Open Classic appearance properties for more color options" > Click "Effects" button > check Show window contents while dragging

XP:

Display Properties>Appearance>Effects...> check Show window contents while dragging

Win 7:

No other alternative path available.

Win 8:

Windows 8 is to right click on the lower left hand corner then select System > Advanced System Settings (Left side bar) > Performance section - Settings > Show Windows contents while dragging.

3 Title Bar Options

Desktop Partition can be accessed from the title bar of the active window. This provides a quick and easy way to manage the desktop as well as sending any window to any partition without having to drag and drop. Move the cursor into the active window's title bar to access the drop down menu.



4 Right Click Menu

Right click on the Desktop Partition icon to view the drop down menu.



1. Find Windows – In some cases, the user may have sent multiple windows to the same partition. Find Window will show all open windows and move the selected window to the forefront.

2. Desktop Partition – Desktop Partition shows the current selected partition and allows the user to quickly change to any of the partitions shown in the drop down.



If more than one display is attached, the user can select the targeted display to change the partition. The highlighted icon represents the current active partition. **3. Identify Partition** – Displays the outline grid on the desktop for the current partition.

4.Align On/Align Off – Enables/disables the drag and drop auto align feature.

5. Exit – Closes Desktop Partition and Display Tune. To re-initialize, launch Display Tune from the start menu or short cut on the desktop.

5 Left Click Menu

Left click on the Desktop Partition icon to quickly send the active window to any partition without having to drag and drop. Releasing the mouse will send the window to the highlighted partition.



6 Task Tray Right Click

The task tray also contains most of the features supported in the title bar (with the exception of automatically sending a window to any partition).



- Find Windows In some cases, the user may have sent multiple windows to the same partition. Find Window will show all open windows and move the selected window to the forefront.
- **Desktop Partition** Desktop Partition shows the current selected partition and allows the user to quickly change to any of the partitions shown in the drop down.
- Identify Partition Displays the outline grid on the desktop for the current partition.
- Align On/Align Off Enables/disables the drag and drop auto align feature.

7 SmartDesktop Partition Definitions

Name	Description	Image
Full Desktop	Applies all settings to the entire desktop.	
Vertical	Assesses the screen resolution and divides the display into two evenly sized vertical regions. For 90/270 maintain vertical configuration.	
Horizontal	Assesses the screen resolution and divides the display into two evenly sized horizontal regions. For 90/270 maintain horizontal configuration.	
Vertical Triple	Assesses the screen resolution and divides the display into three evenly sized vertical regions. For 90 Partition 1 horizontal top Partition 2 horizontal center Partition 3 horizontal bottom. For 270 Partition 3 horizontal top Partition 2 horizontal center Partition 1 horizontal bottom.	1 2 5
Vertical Split Left	Assesses the screen resolution and divides the display into two vertical regions, the left hand side is a single region, the right hand side is split into two evenly sized regions. For 90 Partition 1 on top Partition 2&3 on bottomFor 270 Partition 1 on bottom Partition 2&3 on top.	
Vertical Split Right	Assesses the screen resolution and divides the display into two vertical regions, the right hand side is a single region, the left hand side is split into two evenly sized regions. For 90 Partition 1&2 on top Partition 3 on bottom.For 270 Partition 3 on top Partition 1&2 on bottom.	

```
3. Image Optimization
```

Name	Description	Image
Horizontal Split Top	Assesses the screen resolution and divides the display into two evenly sized horizontal regions, the top region is single, the bottom region is spilt into two evenly sized regions For 90 Partition 1 on right side Vertical Partition 2&3 on left side Vertical. For 270 Partition 1 on left side Vertical Partition 2&3 on right side Vertical.	2 8
Horizontal Split Bottom	Assesses the screen resolution and divides the display into two evenly sized horizontal regions, the bottom region is single, the top region is spilt into two evenly sized regionsFor 90 Partition 1&2 on right side Vertical Partition 3 on left side Vertical.For 270 Partition 1&2 on left side Vertical Partition 3 on right side Vertical.	
Even Split	Assesses the screen resolution and divides the display into four evenly sized regions.	57

4. PowerSensor[™]

1 How does it work?

- PowerSensor works on principle of transmission and reception of harmless "infrared" signals in order to detect user-presence.
- When the user is in front of the monitor, the monitor operates normally, at the predetermined settings that the user has set- i.e. brightness, contrast, color, etc
- Assuming that the monitor was set to 100% of brightness for example, when the user leaves his seat and is no longer in front of the monitor, the monitor automatically reduces the power consumption upto 80%.

User present in front

User not present



Power consumption as illustrated above is for reference purpose only

2 Setting

Default settings

PowerSensor is designed to detect the presence of the user located between 30 and 100 cm (12 and 40 inches) from the display and within five degrees left or right of the monitor.


Custom settings

If you prefer to be in a position outside the perimeters listed above, choose a higher strength signal for optimal detection efficiency: The higher the setting, the stronger the detection signal. For maximum PowerSensor efficiency and proper detection, please position yourself directly in front of your monitor.

- If you choose to position yourself more than 100 cm or 40 inches from the monitor use the maximum detection signal for distances up to 120 cm or 47 inches. (Setting 4)
- Since some dark colored clothing tends to absorb infrared signals even when the user is within 100 cm or 40 inches of the display, step up signal strength when wearing black or other dark clothes.




Sensor distance





Landscape/Portrait mode



Above illustrations are for reference purpose only, may not reflect the exact display of this model.

3 How to adjust settings

If PowerSensor is not operating correctly inside or outside the default range, here's how to fine-tune detection:

- Press the PowerSensor hot key.
- You will find the adjustment bar.
- Adjust the PowerSensor detection adjustment to Setting 4 and press OK.
- Test the new setup to see if PowerSensor properly detects you in your current position.
- PowerSensor function is designed to work in Landscape mode (horizontal position) only. After PowerSensor turn on it, it will automatically turn Off if the monitor is used in Portrait mode (90 degree/ vertical position); it will automatically turn ON if monitor is returned to its default Landscape position.

Note

A manually selected PowerSensor mode will remain operational unless and until it is readjusted or the default mode is recalled. If you find that the PowerSensor is excessively sensitive to nearby motion for some reason, please adjust to a lower signal strength.

5. LightSensor

(Available for 241P6QPJE, 241P6QPJKE)

1 What is it?

Light Sensor is a unique and intelligent way of optimizing picture quality by measuring and analyzing the incoming signal to automatically adjust picture quality settings. Light Sensor uses a sensor to adjust the picture brightness depending on the room light conditions.

2 How to enable LightSensor?



- 1. Press 🖨 button on the front bezel to enter OSD menu screen.
- Press ▲ or ▼ button to select main menu [LightSensor], then press button OK .
- 3. Press ▲ or ▼ button to turn on or off the LightSensor.


6. Built-in Webcam with Microphone

(Available for 241P6QPJKE)

Note

USB connection between the monitor and PC is required for the webcam to operate.

The webcam allows you to hold interactive video and audio conference calls over the internet. It provides the most convenient and easiest way for Business persons to communicate with other colleagues around the world, saving a lot time and money. Depending on the software used, it also allows you to take photos, share files or use microphone only without enabling webcam. The microphone and activity light are on the side of the webcam on the bezel of the display.

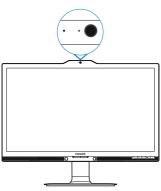


6.1 PC system requirements

- Operating system : Microsoft Windows 7, Microsoft Windows Vista, Microsoft Windows XP (SP2), and any other OS whichever support UVC/UAC (USB Video Class compliant / Audio Class compliant) under USB 2.0 standard
- Processor: 1.6GHz or above
- RAM: 512MB (for XP) / 1GB(for Vista and Windows7)
- Hard disk space: minimum 200MB

• USB: USB 2.0 or above, UVC/UAC support

6.2 Using the device

Philips monitor with webcam device transmits video and sound data through USB port. It can be enabled by simply connecting your USB cable from your PC to the USB upstream of USB hub on the side IO of monitor.

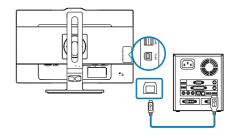

- Connect your USB cable to upstream of USB hub on the side IO of monitor from PC side.
- Turn on your PC and make sure your internet connection is working properly.
- Download and enable free online chatting software such as Skype, Internet Messenger, or equivalent. You can also subscribe to dedicated software in case of more sophisticated usage like multi conferencing, etc.
- The webcam is ready to be used for chat or make the phone call through internet service.
- Make the call by following the instruction of the software program.

Note

To set up a video call, you must have a reliable Internet connection, an ISP, and software like Internet messenger or video phone call program. Make sure the person that you are calling has compatible video-calling software. The video and audio performance quality depends on the bandwidth available on both ends. The person you are calling must have similar capability of devices and software.

7. Technical Specifications

Monitor Panel TypeAH-IPS LCDBacklightLEDPanel Size23.8" W (60.5 cm)Aspect Ratio16.9Pixel Pitch0.2745(H) mm × 0.2745(V) mmBrightness250 cd/m²SmartContrast20.000.001Contrast Ratio (typ.)1000.1Response Time (typ.)14 msSmartResponse Time (typ.)5 ms(GG)Optimum Resolution1920 × 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ C/R > 10Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivity241P6QPJE 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: USB 3.0×4 includes 1 fast charger 241P6QPJE: USB 3.0×3 includes 1 fast charger 241P6QPJE: USB 3.0×4 includes 1 fast charger 24	Picture/Display					
BacklightLEDPanel Size23.8"W (60.5 cm)Aspect Ratio16.9Pixel Pitch0.2745(H) mm x 0.2745(V) mmBrightness250 cd/m²SmartContrast20.000.000:1Contrast Ratio (typ.)1000:1Response Time (typ.)14 msSmartResponse Time (typ.)5 ms(GtG)Optimum Resolution1920 x 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ C/R > 10Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivity241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: USB 3.0×3 includes 1 fast charger 241P6QPJKE: USB 2.0×4Input SignalSeparate Sync. Sync on Green Audio In/OutPC audio-in.headphone outConvenienceEp/Ish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian,		AH-IPS LCD				
Aspect Ratio16.9Pixel Pitch0.2745(H) mm × 0.2745(V) mmBrightness250 cd/m²SmartContrast20,000,000.1Contrast Ratio (typ.)1000:1Response Time (typ.)14 msSmartResponse Time (typ.)5 ms(GtG)Optimum Resolution1920 × 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ CR > 10Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080 P @ 30 HzsRGBYESConnectivity241P6QPJE, 241P6QPJKE: DVI(Digital), VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital), VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger 241P6QPJKE: USB 3.0×4Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenience $\mathbf{English}$, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/Cl, sRGB, Windows 8.1/8/7, Mac OS ×Stand-Tilt-5/ + 20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	//	LED				
Pixel Pitch0.2745(H) mm × 0.2745(V) mmBrightness250 cd/m²SmartContrast20,000,000:1Contrast Ratio (typ.)1000:1Response Time (typ.)14 msSmartResponse Time (typ.)5 ms(GtG)Optimum Resolution1920 × 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ C/R > 10Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivityUSB241P6QP[E, 241P6QP[KE: DVI(Digital), VGA(Analog), DisplayPort241P6QP[E: USB 3.0×4 includes 1 fast charger241P6QP[E: USB 3.0×4 includes 1 fast chargerAudio In/OutPC audio-in, headphone outConvenienceED/<	Panel Size	23.8" W (60.5 cm)				
Brightness250 cd/m²SmartContrast20,000,000:1Contrast Ratio (typ.)1000:1Response Time (typ.)5 ms(GtG)Optimum Resolution1920 x 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ $C/R > 10$ Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivitySignal Input241P6QPJE, 241P6QPJKE: DVI(Digital), VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital), VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on Green Audio In/OutPC audio-in, headphone outConvenienceConvenienceEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDC/CI, sRGB, Windows 8.1/8/7, Mac OS XStand	Aspect Ratio	16:9				
Brightness250 cd/m²SmartContrast20,000,000:1Contrast Ratio (typ.)1000:1Response Time (typ.)5 ms(GtG)Optimum Resolution1920 x 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ $C/R > 10$ Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivitySignal Input241P6QPJE, 241P6QPJKE: DVI(Digital), VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital), VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on Green Audio In/OutPC audio-in, headphone outConvenienceConvenienceEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDC/CI, sRGB, Windows 8.1/8/7, Mac OS XStand	Pixel Pitch	0.2745(H) mm × 0.2745(V) mm				
Contrast Ratio (typ.)1000:1Response Time (typ.)14 msSmartResponse Time (typ.)5 ms(GtG)Optimum Resolution1920 x 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ $C/R > 10$ Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivitySignal Input241P6QPJE, 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on Green Pudio In/OutPC audio-in,headphone outConvenienceSoSD LanguagesEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows 8.1/8/7, Mac OS ×StandTit-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Brightness					
Response Time (typ.)14 msSmartResponse Time (typ.)5 ms(GtG)Optimum Resolution1920 x 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ $C/R > 10$ Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivitySignal Input241P6QPJE, 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPortUSB241P6QPJE, USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenience $ID/V \times 2$ Built-in speaker $2 W \times 2$ OSD LanguagesEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVES mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows 8.1/8/7, Mac OS XStandTit-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	SmartContrast	20,000,000:1				
SmartResponse Time (typ.)5 ms(GtG)Optimum Resolution1920 × 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ C/R > 10Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivity241P6QPJK: DVI(Digital),VGA(Analog), DisplayPort, ML-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPortUSB241P6QPJE, 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, ML-HDMI 241B6QPYE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on Green Put adjout in New 2Osch Languages2W × 2User Convenience10/<	Contrast Ratio (typ.)	1000:1				
Optimum Resolution1920 x 1080 @ 60 HzViewing Angle178° (H) / 178° (V) @ C/R > 10Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivitySignal Input241P6QPJE, 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 2.0×4Input Signal Separate Sync, Sync on Green Audio In/OutPC audio-in,headphone outConvenienceImplyImplyBuilt-in speaker2W × 2User ConvenienceImplyImplyOSD LanguagesEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows 8.1/8/7, Mac OS XStand-175 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Response Time (typ.)	14 ms				
Viewing Angle 178° (H) / 178° (V) @ $C/R > 10$ Display Colors 16.7 MVertical Refresh Rate 56 Hz - 76 HzHorizontal Frequency 30 kHz - 83 kHzMHL $1080P$ @ $30Hz$ sRGBYESConnectivity241P6QPJK: 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4 Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenience $\overline{107}$ Built-in speaker $2 W \times 2$ User Convenience $\overline{107}$ OSD LanguagesEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100 mm), Kensington LockPlug & Play CompatibilityDDC/Cl, sRGB, Windows 8.1/8/7, Mac OS XStandTilt $-5 / +20$ degreeSwivel $-175 / +175$ degreeHeight adjustment130mm	SmartResponse Time (typ.)	5 ms(GtG)				
Display Colors16.7 MVertical Refresh Rate56 Hz - 76 HzHorizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivitySignal Input241P6QPJE, 241P6QPJKE: DVI(Digital), VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital), VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenienceConvenienceBuilt-in speaker2 W × 2User ConvenienceClyl < uly suson/▲ Cok, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows 8.1/8/7, Mac OS XStandTilt-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Optimum Resolution	1920 × 1080 @ 60 Hz				
Vertical Refresh Rate 56 Hz - 76 Hz Horizontal Frequency 30 kHz - 83 kHz MHL 1080P @ 30Hz sRGB YES Connectivity 241P6QPJE, 241P6QPJKE: DVI(Digital), VGA(Analog), DisplayPort Signal Input 241P6QPJE: DVI(Digital), VGA(Analog), DisplayPort USB 241P6QPJE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 2.0×4 Input Signal Separate Sync, Sync on Green Audio In/Out PC audio-in,headphone out Convenience English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean Other Convenience VESA mount(100×100mm), Kensington Lock Plug & Play Compatibility DDC/CI, sRGB, Windows 8.1/8/7, Mac OS X Stand	Viewing Angle	178° (H) / 178° (V) @ C/R > 10				
Horizontal Frequency30 kHz - 83 kHzMHL1080P @ 30HzsRGBYESConnectivity241P6QPJE, 241P6QPJKE: DVI(Digital), VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital), VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4 Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenience $\boxed{D7/4}$ ¶/▼ sussk/▲ \blacksquare/ok \textcircled{O} Built-in speaker $2W \times 2$ USD Languages $\boxed{D7/4}$ ¶/▼ sussk/▲ \blacksquare/ok \textcircled{O} Other ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows $8.1/8/7$, Mac OS XStand-175 / +175 degreeHeight adjustment130mm	Display Colors	16.7 M				
MHL 1080P @ 30Hz sRGB YES Connectivity 241P6QPJK: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPort 241B6QPYE: USB 3.0×4 includes 1 fast charger 241P6QPJK: USB 3.0×3 includes 1 fast charger 241P6QPJK: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4 Input Signal Separate Sync, Sync on Green Audio In/Out PC audio-in,headphone out Convenience Built-in speaker 2W × 2 User Convenience Implish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean Other Convenience VESA mount(100×100mm), Kensington Lock Plug & Play Compatibility DDC/CI, sRGB, Windows 8.1/8/7, Mac OS X Stand - Tilt -5 / +20 degree Swivel -175 / +175 degree Height adjustment 130mm	Vertical Refresh Rate	56 Hz - 76 Hz				
sRGB YES Connectivity 241P6QPJE, 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPort 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPort USB 241P6QPJE: USB 3.0×4 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4 Input Signal Separate Sync, Sync on Green Audio In/Out PC audio-in,headphone out Convenience Implie: MX 2 User Convenience Implie: MX 2 OSD Languages English, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, Korean Other Convenience VESA mount(100×100mm), Kensington Lock Plug & Play Compatibility DDC/CI, sRGB, Windows 8.1/8/7, Mac OS X Stand Tilt Tilt -5 / +20 degree Swivel -175 / +175 degree Height adjustment 130mm	Horizontal Frequency	30 kHz - 83 kHz				
ConnectivitySignal Input241P6QPJE, 241P6QPJKE: DVI(Digital), VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital), VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenience1/▼ \$	MHL	1080P @ 30Hz				
Signal Input241P6QPJE, 241P6QPJKE: DVI(Digital),VGA(Analog), DisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×4Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenienceBuilt-in speaker2 W × 2User ConvenienceImput, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows 8.1/8/7, Mac OS ×Stand-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	sRGB	YES				
Signal InputDisplayPort, MHL-HDMI 241B6QPYE: DVI(Digital),VGA(Analog), DisplayPortUSB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 3.0×4Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenienceBuilt-in speaker2W × 2User ConvenienceImput Signal, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows 8.1/8/7, Mac OS ×Stand-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Connectivity					
USB241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger 241B6QPYE: USB 2.0×4Input SignalSeparate Sync, Sync on GreenAudio In/OutPC audio-in,headphone outConvenienceBuilt-in speaker2W×2User ConvenienceImplied Implied Impl	Signal Input	DisplayPort, MHL-HDMI				
Audio In/Out PC audio-in,headphone out Convenience 2 W × 2 Built-in speaker 2 W × 2 User Convenience Imp/< In/< SENSOR/▲ Imp/A Imp	USB	241P6QPJE: USB 3.0×4 includes 1 fast charger 241P6QPJKE: USB 3.0×3 includes 1 fast charger				
Audio In/Out PC audio-in,headphone out Convenience 2 W × 2 Built-in speaker 2 W × 2 User Convenience Imp/< In/< SENSOR/▲ Imp/A Imp	Input Signal	Separate Sync, Sync on Green				
Built-in speaker 2 W × 2 User Convenience Imp/<						
User ConvenienceImpliesImpliesImpliesOSD LanguagesEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/CI, sRGB, Windows 8.1/8/7, Mac OS XStandTilt-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Convenience					
OSD LanguagesEnglish, German, Spanish, Greek, French, Italian, Hungarian, Dutch, Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/Cl, sRGB, Windows 8.1/8/7, Mac OS XStand-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Built-in speaker	2Wx2				
OSD LanguagesPortuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese, Japanese, KoreanOther ConvenienceVESA mount(100×100mm), Kensington LockPlug & Play CompatibilityDDC/Cl, sRGB, Windows 8.1/8/7, Mac OS XStandTiltTilt-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	User Convenience	IT/< II/▼ SENSOR/▲ ■/OK U				
Plug & Play Compatibility DDC/Cl, sRGB, Windows 8.1/8/7, Mac OS X Stand -5 / +20 degree Tilt -5 / +20 degree Swivel -175 / +175 degree Height adjustment 130mm	OSD Languages	Portuguese, Brazil Portuguese, Polish, Russian, Swedish, Finnish, Turkish, Czech, Ukranian, Simplified Chinese, Traditional Chinese,				
StandTilt-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Other Convenience	VESA mount(100×100mm), Kensington Lock				
Tilt-5 / +20 degreeSwivel-175 / +175 degreeHeight adjustment130mm	Plug & Play Compatibility	DDC/Cl, sRGB, Windows 8.1/8/7, Mac OS X				
Swivel -175 / +175 degree Height adjustment 130mm	Stand					
Height adjustment 130mm	Tilt	-5 / +20 degree				
Height adjustment 130mm	Swivel					
	Height adjustment					
	·	90 degree				

Power(241P6QPJE)						
On Mode	23.3W (typ.), 65W (i	23.3W (typ.), 65W (max.)				
Sleep (Standby)	<0.3W	/				
Off	<0.2W					
Off (AC switch)	0W					
On Mode(ECO mode)	14W (typ.)					
Power(EnergyStar test method)						
Energy Consumption	AC Input Voltage AC Input Voltage AC Input Voltage at 100VAC, 50Hz at 115VAC, 60Hz at 230VAC, 50Hz					
Normal Operation	18.36W (typ.) 18.27W (typ.) 18.04W (typ.)					
Sleep (Standby)	<0.56W <0.57W <0.60W					
Off	<0.11W <0.11W <0.14W					
Off (AC switch)	0W 0W 0W					
Heat Dissipation*	AC Input Voltage AC Input Voltage AC Input Voltage at 100VAC, 50Hz at 115VAC, 60Hz at 230VAC, 50Hz					
Normal Operation	62.662 BTU/hr62.355 BTU/hr61.57 BTU/hr(typ.)(typ.)(typ.)					
Sleep (Standby)	<1.911 BTU/hr <1.945 BTU/hr <2.048 BTU/hr					
Off	<0.375 BTU/hr	<0.375 BTU/hr	<0.478 BTU/hr			
Off (AC switch)	0 BTU/hr 0 BTU/hr 0 BTU/hr					
Power LED indicator	On mode: White, Standby/Sleep mode: White (blinking)					
PowerSensor	4.7W (typ.)					
Power Supply	Built-in, 100-240V AC, 50-60Hz					

Power(241P6QPJKE)						
On Mode	24.6W (typ.), 65W (24.6W (typ.), 65W (max.)				
Sleep (Standby)	<0.3W					
Off	<0.2W					
Off (AC switch)	0W					
On Mode(ECO mode)	14.8W (typ.)					
Power(EnergyStar test method)						
Energy Consumption	AC Input Voltage AC Input Voltage AC Input Voltage at 100VAC, 50Hz at 115VAC, 60Hz at 230VAC, 50Hz					
Normal Operation	18.36W (typ.) 18.27W (typ.) 18.04W (typ.)					
Sleep (Standby)	<0.56W <0.57W <0.60W					
Off	<0.11W <0.11W <0.14W					
Off (AC switch)	0W 0W 0W					
Heat Dissipation*	AC Input VoltageAC Input VoltageAC Input Voltageat 100VAC , 50Hzat 115VAC , 60Hzat 230VAC , 50Hz					
Normal Operation	62.662 BTU/hr 62.355 BTU/hr 61.57 BTU/hr (typ.) (typ.)					
Sleep (Standby)	<pre><1.911 BTU/hr <1.945 BTU/hr <2.048 BTU/hr</pre>					
Off	<0.375 BTU/hr	<0.375 BTU/hr	<0.478 BTU/hr			
Off (AC switch)	0 BTU/hr	0 BTU/hr	0 BTU/hr			

7. Technical Specifications

Power LED indicator	On mode: White, Standby/Sleep mode: White (blinking)
PowerSensor	4.9W (typ.)
Power Supply	Built-in, 100-240V AC, 50-60Hz

Power(241B6QPYE)					
On Mode	23.2W (typ.), 50W (max.)				
Sleep (Standby)	<0.3W				
Off	<0.2W				
Off (AC switch)	0W				
On Mode(ECO mode)	14W (typ.)				
Power(EnergyStar test method)					
Energy Consumption	AC Input Voltage AC Input Voltage AC Input Voltage at 100VAC, 50Hz at 115VAC, 60Hz at 230VAC, 50Hz				
Normal Operation	16.25W (typ.) 16.73W (typ.) 16.74W (typ.)				
Sleep (Standby)	<0.55W <0.55W <0.58W				
Off	<0.15W <0.16W <0.20W				
Off (AC switch)	0W 0W				
Heat Dissipation*	AC Input Voltage AC Input Voltage AC Input Voltage at 100VAC, 50Hz at 115VAC, 60Hz at 230VAC, 50Hz				
Normal Operation	55.46 BTU/hr	57.1 BTU/hr	57.13 BTU/hr		
'	(typ.)	(typ.)	(typ.)		
Sleep (Standby)	<1.877 BTU/hr	<1.877 BTU/hr	<1.98 BTU/hr		
Off	<0.512 BTU/hr <0.546 BTU/hr <0.68 BTU/hr				
Off (AC switch)	0 BTU/hr 0 BTU/hr 0 BTU/hr				
Power LED indicator	On mode: White, Standby/Sleep mode: White (blinking)				
PowerSensor	4.6W (typ.)				
Power Supply	Built-in, 100-240V AC, 50-60Hz				

Dimensions	
Product with stand (WxHxD)	531 x 422 x 256 mm
Product without stand (WxHxD)	531 x 363 x 52 mm
Weight	
Product with stand	6.47 kg
Product without stand	3.98 kg
Product with packaging	9.13 kg
Operating Condition	
Temperature range (operation)	0°C to 40 °C
Temperature range (Non-operation)	-20°C to 60°C
Relative humidity	20% to 80%
MTBF	30,000hrs
Environmental and energy	
ROHS	YES

7. Technical Specifications

EPEAT	Gold (<u>www.epeat.net</u>)			
Packaging	100% recyclable			
Specific Substances	100% PVC BFR free housing			
EnergyStar	YES			
Compliance and standards				
Regulatory Approvals	CE Mark, FCC Class B, SEMKO, cETLus, CU-EAC, TCO Edge,TUV-GS,TUV-ERGO, EPA, PSB, WEEE, C-TICK, UKRAINIAN, CCC, CECP, PSE, KC, ICES-003, E-standby, J-MOSS			
Cabinet				
Color	Silver/Black			
Finish	Texture			

Note

- 1. EPEAT Gold or Silver is valid only where Philips registers the product. Please visit <u>www.epeat.net</u> for registration status in your country.
- 2. This data is subject to change without notice. Go to <u>www.philips.com/support</u> to download the latest version of leaflet.
- 3. Smart response time is the optimum value from either GtG or GtG (BW) tests.

7.1 Resolution & Preset Modes

1 Maximum Resolution

1920 × 1080 @ 60 Hz (analog input) 1920 × 1080 @ 60 Hz (digital input)

2 Recommended Resolution

1920 × 1080 @ 60 Hz (digital input)

H. freq (kHz)	Resolution	V. freq (Hz)
31.47	720 × 400	70.09
31.47	640 × 480	59.94
35.00	640 × 480	66.67
37.86	640 × 480	72.81
37.50	640 × 480	75.00
37.88	800 × 600	60.32
46.88	800 × 600	75.00
48.36	1024 x 768	60.00
60.02	1024 × 768	75.03
44.77	1280 x 720	59.86
60	1280 x 960	60
63.89	1280 x 1024	60.02
79.98	1280 x 1024	75.03
55.94	1440 × 900	59.89
70.64	1440 × 900	74.98
65.29	1680 x 1050	59.95
67.50	1920 × 1080	60.00

Note

Please notice that your display works best at native resolution of 1920×1080 @ 60Hz. For best display quality,please follow this resolution recommendation.

8. Power Management

If you have VESA DPM compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If an input from a keyboard, mouse or other input device is detected, the monitor will 'wake up' automatically.The following table shows the power consumption and signaling of this automatic power saving feature:

241P6QPJE:

	Power Management Definition					
VESA Mode	Video	H-sync	V-sync	Power Used	LED Color	
Active ON Yes Yes 23.3W (typ.) 65W (max.) White						
Sleep (Standby) OFF No No 0.3W (typ.) White (blink)						
Switch Off	OFF	-	-	0W (typ.)	OFF	

241P6QPJKE:

	Power Management Definition				
VESA Mode	Video	H-sync	V-sync	Power Used	LED Color
Active ON Yes Yes 24.6W (typ.) 65W (max.) White					
Sleep (Standby)	OFF	No	No	0.3W (typ.)	White (blink)
Switch Off	OFF	-	-	0W (typ.)	OFF

241B6QPYE:

	Power Management Definition					
VESA Mode	Video	H-sync	V-sync	Power Used	LED Color	
Active	Active ON Yes Yes 23.2W (typ.) 50W (max.)					
Sleep (Standby)	OFF	No	No	0.3W (typ.)	White (blink)	
Switch Off	OFF	-	-	0W (typ.)	OFF	

The following setup is used to measure power consumption on this monitor.

- Native resolution: 1920 × 1080
- Contrast: 50%
- Brightness: 250 nits

 Color temperature: 6500k with full white pattern

Note

This data is subject to change without notice.

9. Regulatory Information

Congratulations!

This product is TCO Certified - for Sustainable IT



TCO Certified is an international third party sustainability certification for IT products.

TCO Certified ensures that the manufacture, use and recycling of IT products reflect environmental, social and economic responsibility. Every TCO Certified product model is verified by an accredited independent test laboratory.

Along with meeting all requirements in TCO Certified, this product also meets the exclusive TCO Certified Edge certification, recognizing best in class products in a specific sustainability attribute.

Summary of TCO Certified Criteria: Corporate Social Responsibility

Socially responsible production - working conditions and labor law in manufacturing country

Energy Efficiency

Energy efficiency of product and power supply. Energy Star compliant, where applicable

Environmental Management System

Manufacturer must be certified according to either ISO 14001 or EMAS

Minimization of Hazardous Substances

Limits on cadmium, mercury, lead & hexavalent chromium including requirements for mercuryfree products, halogenated substances and hazardous flame retardants

Design for Recycling

Coding of plastics for easy recycling. Limit on the number of different plastics used.

Product Lifetime, Product Take Back

Minimum one-year product warranty. Minimum three-year availability of spare parts. Product takeback

Packaging

Limits on hazardous substances in product packaging. Packaging prepared for recycling

Ergonomic, User-centered design

Visual ergonomics in products with a display. Adjustability for user comfort (displays, headsets) Acoustic performance-protection against sound spikes (headsets) and fan noise (projectors, computers) Ergonomically designed keyboard (notebooks)

Electrical Safety, minimal electro-magnetic Emissions

Third Party Testing

All certified product models have been tested in an independent, accredited laboratory.

A detailed criteria set is available for download at <u>www.tcodevelopment.com</u>, where you can also find a searchable database of all TCO Certified IT products.

TCO Development, the organization behind TCO Certified, has been an international driver in the field of Sustainable IT for 20 years. Criteria in TCO Certified are developed in collaboration with scientists, experts, users and manufacturers. Organizations around the world rely on TCO Certified as a tool to help them reach their sustainable IT goals. We are owned by TCO, a non-profit organization representing office workers. TCO Development is headquartered in Stockholm, Sweden, with regional presence in North America and Asia.

> For more information, please visit: <u>www.tcodevelopment.com</u>

User define mode is used for TCO Certified compliance.

Lead-free Product



Lead free display promotes environmentally sound recovery and disposal of waste from electrical and electronic equipment. Toxic

substances like Lead has been eliminated and compliance with European community's stringent RoHs directive mandating restrictions on hazardous substances in electrical and electronic equipment have been adhered to in order to make Philips monitors safe to use throughout its life cycle.

EPEAT

(www.epeat.net)



The EPEAT (Electronic Product Environmental Assessment Tool) program evaluates computer

desktops, laptops, and monitors based on 51 environmental criteria developed through an extensive stakeholder consensus process supported by US EPA.

EPEAT system helps purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.

Benefits of EPEAT

Reduce use of primary materials Reduce use of toxic materials

Avoid the disposal of hazardous waste EPEAT'S requirement that all registered products meet ENERGY STAR's energy efficiency specifications, means that these products will consume less energy throughout their life.

CE Declaration of Conformity

CE

This product is in conformity with the following standards

- EN60950-1:2006+A11:2009+A1: 2010+A12:2011+A2:2013(Safety requirement of Information Technology Equipment).
- EN55022:2010(Radio Disturbance requirement of Information Technology Equipment).
- EN55024:2010 (Immunity requirement of Information Technology Equipment).
- EN61000-3-2:2006+A1:2009+A2:2009 (Limits for Harmonic Current Emission).
- EN61000-3-3:2008 (Limitation of Voltage Fluctuation and Flicker) following provisions of directives applicable.
- 2006/95/EC (Low Voltage Directive).
- 2004/108/EC (EMC Directive).
- 2009/125/EC (ErP Directive, EC No. 1275/2008 Implementing Directive for Standby and Off mode power consumption)

And is produced by a manufacturing organization on ISO9000 level.

- ISO9241-307:2008 (Ergonomic requirement, Analysis and compliance test methods for electronic visual displays).
- GS EK1-2000:2011 (GS mark requirement).
- prEN50279:1998 (Low Frequency Electric and Magnetic fields for Visual Display).
- MPR-II (MPR:1990:8/1990:10 Low Frequency Electric and Magnetic fields).
- TCO CERTIFIED (Requirement for Environment Labeling of Ergonomics, Energy, Ecology and Emission, TCO: Swedish Confederation of Professional Employees) for TCO versions.

9. Regulatory Infomation

Energy Star Declaration

(www.energystar.gov)



As an ENERGY STAR[®] Partner, we have determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.

Note

We recommend you switch off the monitor when it is not in use for a long time.

Federal Communications Commission (FCC) Notice (U.S. Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only RF shielded cable that was supplied with the monitor when connecting this monitor to a computer device.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

FCC Declaration of Conformity

Declaration of Conformity for Products Marked with FCC Logo,

United States Only



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Commission Federale de la Communication (FCC Declaration)

Cet équipement a été testé et déclaré conforme auxlimites des appareils numériques de class B,aux termes de l'article 15 Des règles de la FCC. Ces limites sont conçues de façon à fourir une protection raisonnable contre les interférences nuisibles dans le cadre d'une installation résidentielle.

CET appareil produit, utilise et peut émettre des hyperfréquences qui, si l'appareil n'est pas installé et utilisé selon les consignes données, peuvent causer des interférences

nuisibles aux communications radio. Cependant, rien ne peut garantir l'absence d'interférences dans le cadre d'une installation particulière. Si cet appareil est la cause d'interférences nuisibles pour la réception des signaux de radio ou de télévision, ce qui peut être décelé en fermant l'équipement, puis en le remettant en fonction, l'utilisateur pourrait essayer de corriger la situation en prenant les mesures suivantes:

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.
- Brancher l'équipement sur un autre circuit que celui utilisé par le récepteur.
- Demander l'aide du marchand ou d'un technicien chevronné en radio/télévision.
- Toutes modifications n'ayant pas reçu l'approbation des services compétents en matière de conformité est susceptible d'interdire à l'utilisateur l'usage du présent équipement.

N'utiliser que des câbles RF armés pour les connections avec des ordinateurs ou périphériques.

CET APPAREIL NUMERIQUE DE LA CLASSE **B** RESPECTE TOUTES LES EXIGENCES DU REGLEMENT SUR LE MATERIEL BROUILLEUR DU CANADA.

EN 55022 Compliance (Czech Republic Only)

The overall being the calling $r_{\rm p}$ is device an obtained in EM 20002, $r_{\rm s}$ when the spectrum planet final time that $r_{\rm s}$ and $r_{\rm s}$ and $r_{\rm s}$ and $r_{\rm s}$ are the following approximation of the following approximation of the second state of protocol up to at the second state of the second state of protocol up to at the second state of the s denote is ablight to take all stage necessary to service equipped of any tenance to sale contrustonion prodel: devices.

Palas di suar tran legensian di bina problada secolaren, Banquinia ata da vilaj A proba 86 AV200, openal antarea teng da Bary II yante 764 86029. Pre estimat enterente en Bary il otare nat - construction (see the PATRATE paint activity of a Degler 1.1 in Acrol table constraints which higher Saffarent (an Assister procession provider fallows) age (by 1.2 alog ordered activity).

Polish Center for Testing and Certification Notice

The equipment should draw power from a socket with an attached protection circuit (a three-prong socket). All equipment that works together (computer, monitor, printer, and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/T-42107 and PN-89/E-06251.

Wymegenia Polskiego Centrum Badań i Certyfikocji

Device is particular by the interpolation prolongery devices whereas provide a initial state of the sector of the sector plantic devices particle (particle particle sector).

Invating of a system parallelecturity performance interaction proves for theory in sector as a resum provide analysis w parallelecturies in summing contractions of the object (10) MA (corporate) We de vallew is provident a statistical a viet data and a statistical el we was table. En la graph o general de la Maria previone angla serie de la viet data de la graph de agost. Zoak hop: see fature. IN some or he special/complexes or any rescanced herse beneficial any itse many computer Prior in the Prior P

Pozostale Instrukcje bezpieczeństwa

- b is easierly edge and we provide and provide the form of the linear set of a dense space we provide the definition of provide set of provide the definition of the provide set of th
- Per antinense ar ong ming a single gen pada anglesis de allergens serantani lab què la contra serantani lab què la contra propie de la contra p
- Manufacty and and applying and implicitly in plants are given hangements;
- ⁴ Microbioly report to balance production of a strendy reprint transmission page page to the inspectational point (dependentic page), provide an activity demonstrative processing of the strends.
- ¹ System experiments are not an investigated and state while it is due on a constraint of the system of the s

North Europe (Nordic Countries) Information

Placering/Ventilation

VARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅPLATS.

Placering/Ventilation

ADVARSEL:

SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMTTILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

sijoita laite siten, että verkkojohto Voidaan tarvittaessa helposti irrottaa pistorasiasta.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

Ergonomie Hinweis (nur Deutschland)

Der von uns gelieferte Farbmonitor entspricht den in der "Verordnung über den Schutz vor Schäden durch Röntgenstrahlen" festgelegten Vorschriften.

Auf der Rückwand des Gerätes befindet sich ein Aufkleber, der auf die Unbedenklichkeit der Inbetriebnahme hinweist, da die Vorschriften über die Bauart von Störstrahlern nach Anlage III ¤ 5 Abs. 4 der Röntgenverordnung erfüllt sind.

Damit Ihr Monitor immer den in der Zulassung geforderten Werten entspricht, ist darauf zu achten, daß

- 1. Reparaturen nur durch Fachpersonal durchgeführt werden.
- 2. nur original-Ersatzteile verwendet werden.
- 3. bei Ersatz der Bildröhre nur eine bauartgleiche eingebaut wird.

Aus ergonomischen Gründen wird empfohlen, die Grundfarben Blau und Rot nicht auf dunklem Untergrund zu verwenden (schlechte Lesbarkeit und erhöhte Augenbelastung bei zu geringem Zeichenkontrast wären die Folge). Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 beträgt 70dB (A) oder weniger.

ACHTUNG: BEIM AUFSTELLEN DIESES GERÄTES DARAUF ACHTEN, DAß NETZSTECKER UND NETZKABELANSCHLUß LEICHT ZUGÄNGLICH SIND.

China RoHS

The People's Republic of China released a regulation called "Management Methods for Controlling Pollution by Electronic Information Products" or commonly referred to as China RoHS. All products produced and sold for China market have to meet China RoHS request.

中国电子信息产品污染控制标识要求(中国 RoHS法规标示要求)产品中有毒有害物质或 元素的名称及含量

	有毒有害物质或元素					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳	0	0	0	0	0	0
液晶显示屏/灯管	×	0	0	0	0	0
电路板组件*	х	0	0	0	0	0
电源适配线	Х	0	0	0	0	0
电源线/连接线	Х	0	0	0	0	0

*: 电路板组件包括印刷电路板及其构成的零部件,如电阻、电容、集成电路、连接器等。

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在《电子信息产品 中有毒有害物质的限量要求标准》规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出《电子信 息产品中有毒有害物质的限量要求标准》规定的限量要求;但是上表中打 "X"的部件,符合欧盟RoHS法规要求(属于豁免的部分)。

Restriction on Hazardous Substances statement (India)


This product complies with the "India E-waste Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

E-Waste Declaration for India



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment . The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling in India please visit the below web link.

http://www.india.philips.com/about/sustainability/ recycling/index.page



此标识指期限(十年),电子信息产品中含有 的有毒有害物质或元素在正常使用的条件 下不会发生外泄或突变,电子信息产品用户 使用该电子信息产品不会对环境造成严重 污染或对其人身、财产造成严重损害的期 限。

中国教教教室标识

根据中国大陆《唱馆家审修领管理办法》本显示描符合以下坚该。

開始改革(ALW) 電波電信 電波振行	≥ 1.05
\$52年12	105
2010/2	GB 21520-2008

详细有关语思慎直然中国影响排发网:<u>http://www.energ/abs-lgov.cn</u>

《废弃电器电子产品回收处理管理条例》 提示性说明

为了更好地关爱及保护地球,当用户不再 需要此产品或产品寿命终止时,请遵守国 家废弃电器电子产品回收处理相关法律法 规,将其交给当地具有国家认可的回收处 理资质的厂商进行回收处理。

Information for U.K. only

WARNING - THIS APPLIANCE MUST BE EARTHED.

Important:

This apparatus is supplied with an approved moulded 13A plug. To change a fuse in this type of plug proceed as follows:

- 1. Remove fuse cover and fuse.
- 2. Fit new fuse which should be a BS 1362 5A,A.S.T.A. or BSI approved type.
- 3. Retit the fuse cover.


If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate 3-pin plug fitted in its place.


If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

NOTE: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

- The GREEN&YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured GREEN or GREEN&YELLOW.
- The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
- 3. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the three wires.

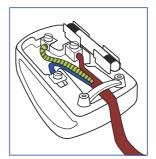

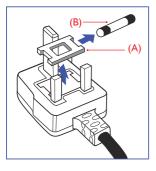

How to connect a plug


The wires in the mains lead are coloured in accordance with the following code:

BLUE -"NEUTRAL"("N") BROWN -"LIVE"("L") GREEN&YELLOW -"EARTH"("E")

10. Customer care and warranty

10.1 Philips' Flat Panel Monitors Pixel Defect Policy

Philips strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT Monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This notice explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT Monitor panel must exceed these acceptable levels. For example, no more than 0.0004% of the sub pixels on a monitor may be defective. Furthermore, Philips sets even higher quality standards for certain types or combinations of pixel defects that are more noticeable than others. This policy is valid worldwide.



Pixels and Sub pixels

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. Many pixels together form an image. When all sub pixels of a pixel are lit, the three colored sub pixels together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel. Other combinations of lit and dark sub pixels appear as single pixels of other colors.

Types of Pixel Defects


Pixel and sub pixel defects appear on the screen in different ways. There are two categories of pixel defects and several types of sub pixel defects within each category.

Bright Dot Defects

Bright dot defects appear as pixels or sub pixels that are always lit or 'on'. That is, a bright dot is a sub-pixel that stands out on the screen when the monitor displays a dark pattern. There are the types of bright dot defects.



One lit red, green or blue sub pixel.

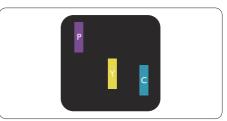

Two adjacent lit sub pixels:

- Red + Blue = Purple
- Red + Green = Yellow
- Green + Blue = Cyan (Light Blue)




Three adjacent lit sub pixels (one white pixel).

Note

A red or blue bright dot must be more than 50 percent brighter than neighboring dots while a green bright dot is 30 percent brighter than neighboring dots.


Black Dot Defects

Black dot defects appear as pixels or sub pixels that are always dark or 'off'. That is, a dark dot is a sub-pixel that stands out on the screen when the monitor displays a light pattern. These are the types of black dot defects.

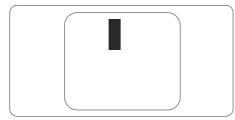

Proximity of Pixel Defects

Because pixel and sub pixels defects of the same type that are near to one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects.

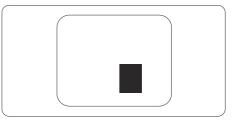

Pixel Defect Tolerances

In order to qualify for repair or replacement due to pixel defects during the warranty period, a TFT Monitor panel in a Philips flat panel monitor must have pixel or sub pixel defects exceeding the tolerances listed in the following tables.

BRIGHT DOT DEFECTS	ACCEPTABLE LEVEL
1 lit subpixel	3
2 adjacent lit subpixels	1
3 adjacent lit subpixels (one white pixel)	0
Distance between two bright dot defects*	>15mm
Total bright dot defects of all types	3
BLACK DOT DEFECTS	ACCEPTABLE LEVEL
1 dark subpixel	5 or fewer
2 adjacent dark subpixels	2 or fewer
3 adjacent dark subpixels	0
Distance between two black dot defects*	>15mm
Total black dot defects of all types	5 or fewer
TOTAL DOT DEFECTS	ACCEPTABLE LEVEL
Total bright or black dot defects of all types	5 or fewer

Note

- 1. 1 or 2 adjacent sub pixel defects = 1 dot defect
- 2. This monitor is ISO9241-307 compliant(ISO9241-307: Ergonomic requirement , analysis and compliance test methods for electronic visual displays)
- 3. ISO9241-307 is the successor of formerly known ISO13406 standard, which is withdrawn by the International Organisation for Standardisation (ISO) per: 2008-11-13.

10.2 Customer Care & Warranty

For warranty coverage information and additional support requirement valid for your region, please visit <u>www.philips.com/support</u> website for details. You may also contact your local Philips Customer Care Center number listed below.

Country	CSP	Hotline Number	Price	Opening Hours
Austria	RTS	+43 0810 000206	€ 0.07	Mon to Fri : 9am - 6pm
Belgium	Ecare	+32 078 250851	€ 0.06	Mon to Fri : 9am - 6pm
Cyprus	Alman	800 92 256	Free of charge	Mon to Fri : 9am - 6pm
Denmark	Infocare	+45 3525 8761	Local call tariff	Mon to Fri : 9am - 6pm
Finland	Infocare	+358 09 2290 1908	Local call tariff	Mon to Fri : 9am - 6pm
France	Mainteq	+33 082161 1658	€ 0.09	Mon to Fri : 9am - 6pm
Germany	RTS	+49 01803 386 853	€ 0.09	Mon to Fri : 9am - 6pm
Greece	Alman	+30 00800 3122 1223	Free of charge	Mon to Fri : 9am - 6pm
Ireland	Celestica	+353 01 601 1161	Local call tariff	Mon to Fri : 8am - 5pm
Italy	Anovo Italy	+39 840 320 041	€ 0.08	Mon to Fri : 9am - 6pm
Luxembourg	Ecare	+352 26 84 30 00	Local call tariff	Mon to Fri : 9am - 6pm
Netherlands	Ecare	+31 0900 0400 063	€ 0.10	Mon to Fri : 9am - 6pm
Norway	Infocare	+47 2270 8250	Local call tariff	Mon to Fri : 9am - 6pm
Poland	MSI	+48 0223491505	Local call tariff	Mon to Fri : 9am - 6pm
Portugal	Mainteq	800 780 902	Free of charge	Mon to Fri : 8am - 5pm
Spain	Mainteq	+34 902 888 785	€ 0.10	Mon to Fri : 9am - 6pm
Sweden	Infocare	+46 08 632 0016	Local call tariff	Mon to Fri : 9am - 6pm
Switzerland	ANOVO CH	+41 02 2310 2116	Local call tariff	Mon to Fri : 9am - 6pm
United Kingdom	Celestica	+44 0207 949 0069	Local call tariff	Mon to Fri : 8am - 5pm

Contact Information for WESTERN EUROPE region:

Contact Information for China:

Country	Call center	Consumer care number
China	PCCW Limited	4008 800 008

Contact Information for NORTH AMERICA :

Country	Call center	Consumer care number
U.S.A.	EPI-e-center	(877) 835-1838
Canada	EPI-e-center	(800)479-6696

Contact Information for CENTRAL AND EASTERN EUROPE region:

Country	Call center	CSP	Consumer care number
Belarus	NA	IBA	+375 17 217 3386 +375 17 217 3389
Bulgaria	NA	LAN Service	+359 2 960 2360
Croatia	NA	MR Service Ltd	+385 (01) 640 1111
Czech Rep.	NA	Asupport	420 272 188 300
Estonia	NA	FUJITSU	+372 6519900(General) +372 6519972(workshop)
Georgia	NA	Esabi	+995 322 91 34 71
Hungary	NA	Profi Service	+36 1 814 8080(General) +36 1814 8565(For AOC&Philips only)
Kazakhstan	NA	Classic Service I.I.c.	+7 727 3097515
Latvia	NA	ServiceNet LV	+371 67460399 +371 27260399
Lithuania	NA	UAB Servicenet	+370 37 400160(general) +370 7400088 (for Philips)
Macedonia	NA	AMC	+389 2 3125097
Moldova	NA	Comel	+37322224035
Romania	NA	Skin	+40 21 2101969
Russia	NA	CPS	+7 (495) 645 6746
Serbia&Montenegro	NA	Kim Tec d.o.o.	+381 11 20 70 684
Slovakia	NA	Datalan Service	+421 2 49207155
Slovenia	NA	PC H.and	+386 1 530 08 24
the republic of Belarus	NA	ServiceBy	+ 375 17 284 0203
Turkey	NA	Tecpro	+90 212 444 4 832
Ukraine	NA	Topaz	+38044 525 64 95
Ukraine	NA	Comel	+380 5627444225

Contact Information for LATIN AMERICA region:

Country	Call center	Consumer care number
Brazil		0800-7254101
Argentina	Vermont	0800 3330 856

Contact Information for APMEA region:

Country	ASP	Consumer care number	Opening hours
Australia	AGOS NETWORK PTY LTD	1300 360 386	Mon.~Fri. 9:00am-5:30pm
New Zealand	Visual Group Ltd.	0800 657447	Mon.~Fri. 8:30am-5:30pm
Hong Kong Macau	Company: Smart Pixels Technology Ltd.	Hong Kong: Tel: +852 2619 9639 Macau:Tel: (853)-0800-987	Mon.~Fri. 9:00am-6:00pm Sat. 9:00am-1:00pm
India	REDINGTON INDIA LTD	Tel: 1 800 425 6396 SMS: PHILIPS to 56677	Mon.~Fri. 9:00am-5:30pm
Indonesia	PT. CORMIC SERVISINDO PERKASA	+62-21-4080-9086 (Customer Hotline) +62-8888-01-9086 (Customer Hotline)	Mon.~Thu. 08:30-12:00; 13:00-17:30 Fri. 08:30-11:30; 13:00-17:30
Korea	Alphascan Displays, Inc	1661-5003	Mon.~Fri. 9:00am-5:30pm Sat. 9:00am-1:00pm
Malaysia	R-Logic Sdn Bhd	+603 5102 3336	Mon.~Fri. 8:15am-5:00pm Sat. 8:30am-12:30am
Pakistan	TVONICS Pakistan	+92-213-6030100	Sun.~Thu. 10:00am-6:00pm
Singapore	Philips Electronics Singapore Pte Ltd (Philips Consumer Care Center)	(65) 6882 3966	Mon.~Fri. 9:00am-6:00pm Sat. 9:00am-1:00pm
Taiwan	FETEC.CO	0800-231-099	Mon.~Fri. 09:00 - 18:00
Thailand	Axis Computer System Co., Ltd.	(662) 934-5498	Mon.~Fri. 8:30am~05:30pm
South Africa	Computer Repair Technologies	011 262 3586	Mon.~Fri. 8:00am~05:00pm
Israel	Eastronics LTD	1-800-567000	Sun.~Thu. 08:00-18:00
Vietnam	FPT Service Informatic Company Ltd Ho Chi Minh City Branch	+84 8 38248007 Ho Chi Minh City +84 5113.562666 Danang City +84 5113.562666 Can tho Province	Mon.~Fri. 8:00-12:00, 13:30- 17:30,Sat. 8:00-12:00
Philippines	EA Global Supply Chain Solutions ,Inc.	(02) 655-7777; 6359456	Mon.~Fri. 8:30am~5:30pm
Armenia Azerbaijan Georgia Kyrgyzstan Tajikistan	Firebird service centre	+97 14 8837911	Sun.~Thu. 09:00 - 18:00
Uzbekistan	Soniko Plus Private Enterprise Ltd	+99871 2784650	Mon.~Fri. 09:00 - 18:00
Turkmenistan	Technostar Service Centre	+(99312) 460733, 460957	Mon.~Fri. 09:00 - 18:00
Japan	フィリップスモニター ・サポ <i>ー</i> トセンター	0120-060-530	Mon.~Fri. 10:00 - 17:00

11. Troubleshooting & FAQs

11.1 Troubleshooting

This page deals with problems that can be corrected by a user. If the problem still persists after you have tried these solutions, contact Philips customer service representative.

1 Common Problems

No Picture (Power LED not lit)

- Make sure the power cord is plugged into the power outlet and into the back of the monitor:
- First, ensure that the power button on the front of the monitor is in the OFF position, then press it to the ON position.

No Picture (Power LED is White)

- Make sure the computer is turned on.
- Make sure the signal cable is properly connected to your computer.
- Make sure the monitor cable has no bent pins on the connect side. If yes, repair or replace the cable.
- The Energy Saving feature may be activated

Screen says



- Make sure the monitor cable is properly connected to your computer. (Also refer to the Quick Start Guide).
- Check to see if the monitor cable has bent pins.
- Make sure the computer is turned on.

AUTO button doesn't function

• The auto function is applicable only in VGA-Analog mode. If the result is not

satisfactory, you can do manual adjustments via the OSD menu.

Note

The Auto Function is not applicable in DVI-Digital mode as it is not necessary.

Visible signs of smoke or sparks

- Do not perform any troubleshooting steps
- Disconnect the monitor from mains power source immediately for safety
- Contact with Philips customer service representative immediately.

2 Imaging Problems

Image is not centered

- Adjust the image position using the "Auto" function in OSD Main Controls.
- Adjust the image position using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Image vibrates on the screen

• Check that the signal cable is properly securely connected to the graphics board or PC.

Vertical flicker appears

-			_
-		- 1	-
_			=
-			
-		- 3	
-		- 4	
-			Ξ.
-		- 3	2
_	-		_

- Adjust the image using the "Auto" function in OSD Main Controls.
- Eliminate the vertical bars using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Horizontal flicker appears

w	1.00
the second se	
Contraction of the local division of the loc	
the second se	
and the second se	
The second se	
the second se	

• Adjust the image using the "Auto" function in OSD Main Controls.

11.Troubleshooting & FAQs

 Eliminate the vertical bars using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Image appears blurred, indistinct or too dark

• Adjust the contrast and brightness on On-Screen Display.

An "after-image", "burn-in" or "ghost image" remains after the power has been turned off.

- Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen. "Burnin", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.
- Always activate a moving screen saver program when you leave your monitor unattended.
- Always activate a periodic screen refresh application if your LCD monitor will display unchanging static content.
- Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "after-image" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Image appears distorted. Text is fuzzy or blurred.

• Set the PC's display resolution to the same mode as monitor's recommended screen native resolution.

Green, red, blue, dark, and white dots appears on the screen

• The remaining dots are normal characteristic of the liquid crystal used in today's technology, Please refer the pixel policy for more detail.

The "power on" light is too strong and is disturbing

• You can adjust "power on" light using the power LED Setup in OSD main Controls.

For further assistance, refer to the Consumer Information Centers list and contact Philips customer service representative.

11.2SmartControl Premium FAQs

- Q1. I change the monitor on a PC to a different one and the SmartControl Premium becomes un-usable, what do I do?
- Ans.: Restart your PC and see if SmartControl Premium can work. Otherwise, you will need to remove and re-install SmartControl Premium to ensure proper driver is installed.

Q2. The SmartControl Premium functions worked well before, but it does not work anymore, what can I do?

- Ans.: If the following actions were executed, the monitor driver may need to be re-installed.
- Changed video graphic adapter to another one
- Updated video driver
- Activities on OS, such as service pack or patch
- Run Windows Update and updated monitor and/or video driver
- Windows was booted with the monitor power off or disconnected.
- To find out, please right click My Computer and click on Properties->Hardware-> Device Manager.
- If you see "Plug and Play Monitor" shows under Monitor, then you need to re-install. Simply remove SmartControl Premium and re-install it.

11.Troubleshooting & FAQs

- Q3. After installing SmartControl Premium, when clicking on SmartControl Premium tab, nothing shows up after a while or a failure message shows, what happened?
- Ans.: It might be your graphic adaptor is not compatible with the SmartControl Premium. If your graphic adaptor is one of the above mentioned brands, try to download the most updated graphic adaptor driver from corresponding companies' web site. Install the driver. Remove SmartControl Premium, and re-install it once more.

If it is still not working, we are sorry that the graphic adaptor is not supported. Please visit Philips website and check if an updated SmartControl Premium driver is available.

- Q4. When I click on Product Information, only partial information is shown, what happened?
- Ans.: It might be your graphic card adaptor driver is not the most updated version which fully supporting DDC/ CI interface. Please try to download the most updated graphic adaptor driver from corresponding companies' web site. Install the driver. Remove SmartControl Premium and re-install it once more.



Q5. I forgot my PIN for Theft Deterrence Function. How can I do?

Ans.: Philips Service center has a right to ask for legitimate identification and authorization, in order to establish ownership of the monitor.

11.3 General FAQs

Q1: When I install my monitor what should I do if the screen shows 'Cannot display this video mode'?

- Ans.: Recommended resolution for this monitor: 1920 × 1080 @ 60 Hz.
- Unplug all cables, then connect your PC to the monitor that you used previously.
- In the Windows Start Menu, select Settings/ Control Panel. In the Control Panel Window, select the Display icon. Inside the Display Control Panel, select the 'Settings' tab. Under the setting tab, in box labelled 'desktop area', move the sidebar to 1920 × 1080 pixels.
- Open 'Advanced Properties' and set the Refresh Rate to 60 Hz, then click OK.
- Restart your computer and repeat step 2 and 3 to verify that your PC is set at 1920 × 1080 @ 60 Hz.
- Shut down your computer, disconnect your old monitor and reconnect your Philips LCD monitor;
- Turn on your monitor and then turn on your PC.

Q2: What is the recommended refresh rate for LCD monitor?

- Ans.: Recommended refresh rate in LCD monitors is 60 Hz, In case of any disturbance on screen, you can set it up to 75 Hz to see if that removes the disturbance.
- Q3: What are the .inf and .icm files on the CD-ROM? How do I install the drivers (.inf and .icm)?
- Ans.: These are the driver files for your monitor. Follow the instructions in your user manual to install the drivers. Your computer may ask you for monitor drivers (.inf and .icm files) or a driver disk when you first install your monitor. Follow the instructions to insert the companion CD-ROM included in this

package. Monitor drivers (.inf and .icm files) will be installed automatically.

Q4: How do I adjust the resolution?

Ans.: Your video card/graphic driver and monitor together determine the available resolutions. You can select the desired resolution under Windows® Control Panel with the "Display properties".

Q5: What if I get lost when I am making monitor adjustments via OSD?

Ans.: Simply press the OK button, then select 'Reset' to recall all of the original factory settings.

Q6: Is the LCD screen resistant to scratches?

Ans.: In general it is recommended that the panel surface is not subjected to excessive shocks and is protected from sharp or blunt objects. When handling the monitor, make sure that there is no pressure or force applied to the panel surface side. This may affect your warranty conditions.

Q7: How should I clean the LCD surface?

Ans.: For normal cleaning, use a clean, soft cloth. For extensive cleaning, please use isopropyl alcohol. Do not use other solvents such as ethyl alcohol, ethanol, acetone, hexane, etc.

Q8: Can I change the color setting of my monitor?

- Ans.: Yes, you can change your color setting through OSD control as the following procedures,
- Press "OK" to show the OSD (On Screen Display) menu
- Press "Down Arrow" to select the option "Color" then press "OK" to enter color setting, there are three settings as below.
 - 1. Color Temperature: The six settings are 5000K, 6500K, 7500K, 8200K, 9300K

and 11500K. With settings in the 5000K range the panel appears "warm, with a red-white color tone", while a 11500K temperature yields "cool, bluewhite toning".

- 2. sRGB:This is a standard setting for ensuring correct exchange of colors between different device (e.g. digital cameras, monitors, printers, scanners, etc).
- 3. User Define: The user can choose his/ her preference color setting by adjusting red, green blue color.

Note

A measurement of the color of light radiated by an object while it is being heated. This measurement is expressed in terms of absolute scale, (degrees Kelvin). Lower Kevin temperatures such as 2004K are red; higher temperatures such as 9300K are blue. Neutral temperature is white, at 6504K.

Q9: Can I connect my LCD monitor to any PC, workstation or Mac?

Ans.: Yes. All Philips LCD monitors are fully compatible with standard PCs, Macs and workstations. You may need a cable adapter to connect the monitor to your Mac system. Please contact your Philips sales representative for more information.

Q10: Are Philips LCD monitors Plug-and-Play?

Ans.: Yes, the monitors are Plug-and-Play compatible with Windows 8.1/8/7, Mac OSX

Q11: What is Image Sticking, or Image Burnin, or After Image, or Ghost Image in LCD panels?

Ans.: Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on

11.Troubleshooting & FAQs

your screen. "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "burned in" or "atter-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

Always activate a moving screen saver program when you leave your monitor unattended.

Always activate a periodic screen refresh application if your LCD monitor will display unchanging static content.

Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "after-image" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

- Q12: Why is my Display not showing sharp text, and is displaying jagged characters?
- Ans.: Your LCD monitor works best at its native resolution of 1920 × 1080 @ 60 Hz. For best display, please use this resolution.
- Q13: How to unlock/lock my hot key?
- Ans.: Please press ≡/OK for 10 seconds to unlock/lock the hot key, by doing so, your monitor pops out "Attention" to show the unlock/lock status as shown below illustrators.

Attention
Monitor control unlocked
Attention
Monitor control locked



© 2014 Koninklijke Philips N.V. All rights reserved.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

Specifications are subject to change without notice.

Version: M6241PBE1L