

Modern Series

Modern MD241P (3PA5) Modern MD271P (3PA4) Modern MD271QP (3PA4)

User Guide

Contents

Getting Started	3
Package Contents	
Installing the Monitor Stand	
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	9
OSD Setup	10
OSD Keys	10
OSD Menus	11
Specifications	14
Preset Display Modes	16
Troubleshooting	
Safety Instructions	19
TÜV Rheinland Certification	21
Regulatory Notices	22

Revision

V1.1, 2023/04

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents


Monitor	Modern MD241P Modern MD271QP				
	Modern MD271P				
Documentation	Quick Start Guide				
Accessories	Stand				
	Stand Base with Screw(s)				
	Power Cord				
	External Power Supply				
Cables	High Speed HDMI™ Cable (Optional)	Premium High Speed HDMI™ Cable (Optional)			

Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the stand to the monitor groove. Push the stand towards the monitor groove until it locks in place.
- 2. Connect the base to the stand and tighten the base screw to secure the base.
- **3.** Make sure the stand assembly is properly installed before setting the monitor upright.

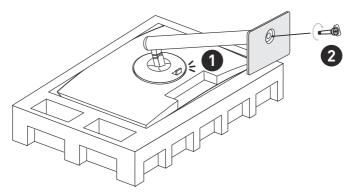

Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!




Adjusting the Monitor

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.


Important


- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.

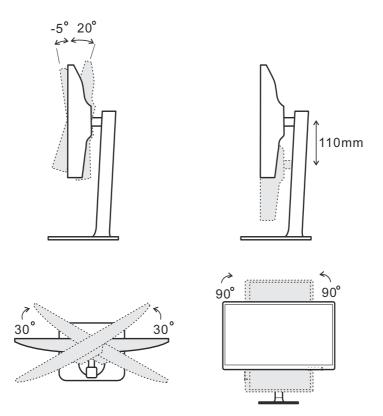

Monitor Overview

Modern MD241P / Modern MD271P

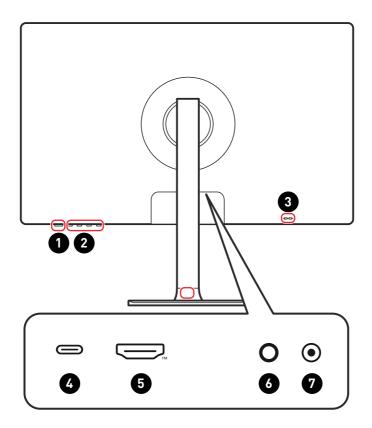

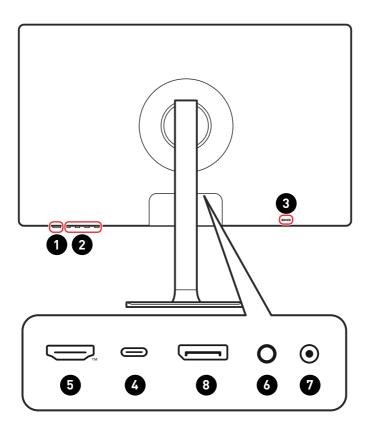


1	Power Button
2	OSD Keys
3	Kensington Lock
	USB Type-C Port
	This port supports DisplayPort Alternate (DP Alt) Mode and up to 5V/3A (15W) power delivery. It only carries video signals and doesn't support data transmission function.
	Important
	Your USB-C signal source and cable must support DisplayPort Alternate Mode to enable video output to the monitor.

5	HDMI TM Connector
	Supports 1920x1080@75Hz as specified in HDMI™ 1.4b.
	Supports 2560x1440@75Hz as specified in HDMI™ 2.0b.
6	Headphone Jack
7	Power Jack
8	DisplayPort

Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Assemble the external power supply & power cord. (Figure A)
- 4. Connect the external power supply to the monitor power jack. (Figure B)
- 5. Plug the power cord into the electrical outlet. (Figure C)
- 6. Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

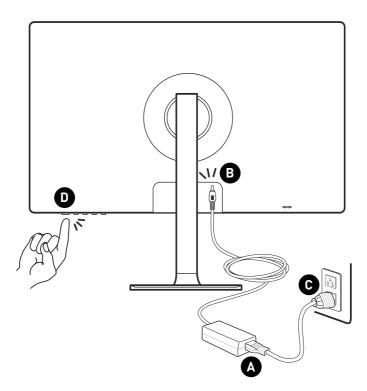

OSD Setup


This chapter provides you with essential information on OSD Setup.



All information is subject to change without prior notice.

OSD Keys

The monitor comes with a set of OSD Keys that help to control the On-Screen Display (OSD) menu.

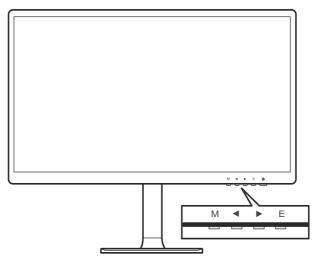

OSD Key	Hot Key (When OSD is OFF)	OSD Setup (When OSD is ON)
Μ	Activating the OSD Main Menu	 Returning to the previous menu Exiting from the OSD Main Menu
•	 Used as the designated shortcut hotkey 	 Navigating through function menus and items Adjusting function values
E	 Activating the auto adjustment function that automatically sets the horizontal position, vertical position, clock and focus (for VGA signals only) 	• Confirming the selection

OSD Menus

Press the M key to launch the On-Screen Display (OSD) main menu and use the OSD keys to tune the desired function to suit your personal preferences.

III <i>S</i> 1							
🤌 🕕	⇔ ≮	> &	다	ŧ	⊕	\odot	÷
Registers sectors:	DOK V						b val.
1st Level Menu	2nd/2rd	l ovol Monu	Dec	enintion			
Brightness	2nd/3rd Level Menu Description 0-100 • Adjusting display brightness. This			c Thic			
Digitiless	0-100		fu	nction is ode.			
Contrast	0-100		fu	ljusting o nction is ode.			
DCR	ON OFF			CR enhar creasing		5 1	
			Br	hen DCR rightness Il be gra	s cannot	,	rast, and ted and
				hen DCR Il be set			r Temp.
	Return		Retu	Returning to the previous menu			
	Exit		Exit	Exiting from this function menu			
Mode	Standard		• St	Standard Mode			
	Movie		• M	Movie Mode			
	FPS			FPS Mode			
	RTS		• R	RTS Mode			
	Low Blue	Light	• Lo	Low Blue Light Mode			
	Return		Retu	Returning to the previous menu			
	Exit		Exit	Exiting from this function menu			
Color Temp.	Cool			etting Co efault	ol Color	Tempera	iture to
	Warm			• Setting Warm Color Temperature to default			rature
	User	R (0-100)	• Ac	ljusting t	he Red (Gain	
		G (0-100)	• Ac	justing t	he Gree	n Gain	
		B (0-100)	• Ac	Adjusting the Blue Gain			
		Return	Retu	Returning to the previous menu			nu
		Exit	Exiting from this function menu			nu	
	Return		Retu	Returning to the previous menu			nu
Exit Exiting from this function menu				nu			

1st Level Menu	2nd/3rd Le	vel Menu	Description	
Aspect	Auto		Selecting the Image Aspect Ratio	
	16:9			
	4:3			
	Return		Returning to the previous menu	
	Exit		Exiting from this function menu	
Input	HDMI™		Selecting the video input source	
	Туре-С			
	Return		Returning to the previous menu	
	Exit		Exiting from this function menu	
Adjust	Gamma	Gamma 1	 Adjusting color tone brightness gray 1 	
		Gamma 2	Adjusting color tone brightness gray 2	
		Return	Returning to the previous menu	
		Exit	Exiting from this function menu	
	Return		Returning to the previous menu	
	Exit		Exiting from this function menu	
Other	Language	English	 Selecting the OSD language 	
	(More	Deutsch		
	languages	Français		
	coming	Italiano		
	soon)	Español		
		Русский		
		Return	Returning to the previous menu	
		Exit	Exiting from this function menu	
	Power Off	ON	• Turning off the monitor after saving power for 1 minute	
		OFF	• Deactivating the timed switch-off function	
		Return	Returning to the previous menu	
		Exit	Exiting from this function menu	

1st Level Menu	2nd/3rd Le	vel Menu	Description	
Other	Reset	YES	Resetting and restoring settings to	
		NO	original OSD defaults	
		Return	Returning to the previous menu	
		Exit	Exiting from this function menu	
	OD	OFF	• Deactivating the response time overdrive function	
		Normal	• Setting the monitor's response time to normal speed	
		Extreme	• Setting the monitor's response time to extreme speed	
		Return	Returning to the previous menu	
		Exit	Exiting from this function menu	
	Volume		Adjusting the volume	
	Eco Mode ON		• When ECO Mode is set to ON:	
			• Brightness curve will be adjusted.	
			• Mode and DCR will be grayed out.	
		OFF	• When ECO Mode is set to OFF:	
			• A warning message will be shown on the screen.	
			 Users can set Brightness to higher value. 	
		Return	Returning to the previous menu	
		Exit	Exiting from this function menu	
	Return		Returning to the previous menu	
	Exit		Exiting from this function menu	
Exit	Exiting fro	om the OSD S	etup	

Specifications

Model	Modern MD241P	Modern MD271P	Modern MD271QP		
Size	23.8 inch 27 inch				
Panel Type	IPS				
Resolution	1920 x 1080 @75Hz 2560 x 1440 @75Hz				
Aspect Ratio	16:9				
Brightness (nits)	250 nits (TYP)				
Contrast Ratio	1000:1				
Refresh Rate	75 Hz				
Response Time	5 ms				
Input Interface	 HDMI[™] Connector x1 USB Type-C (DP Alt Mode) x 1 (Up to 5V/3A power delivery) HDMI[™] Connector DP x1 USB Type 				
input internace	(DP Alt Mode) × 1 (Up to 5V/3A p delivery				
View Angles	178°(H) , 178°(V)				
DCI-P3*/ sRGB	85% / 110%				
Surface Treatment	Anti-glare				
Display Colors	16.7 Million				
Speaker	2 x 1W				
Monitor Power Options	19.0V 2.58A	19.0V === 3.42A			
External Power Supply	Model: ADS- 65HI-19A-1 19050E	Model: ADS-65HI	-19A-1 19065E		
Power Input	100~240Vac, 100~240Vac, 50~60Hz, 1.5A Max 50~60Hz, 1.5A Max				
Power Output	19.0V 2.58A 19.0V 3.42A				
Adjustment (Tilt)	-5° ~ 20°				
Adjustment (Swivel)	-30° ~ 30°				
Adjustment (Pivot)	-90° ~ 90°				
Adjustment (Height)	0 ~ 110 mm				

Model		Modern	Modern	Modern		
		MD241P	MD271P	MD271QP		
Kensington Lo	ck	Yes				
		Plate Type: 75 x 75	mm			
		• Screw Type: M4 >	x 10 mm			
VESA Mountin	g	 Thread Diamet 	er: 4 mm			
		• Thread Pitch: 0).7 mm			
		• Thread Length: 10 mm				
Dimension (W	x H x D)	541.9 x 380.9 x 200.8mm 613.5 x 401.5 x 200.8mm				
M/-:		4.7Kg (Net),	5.8Kg (Net),			
Weight		6.5Kg (Gross)	8.4Kg (Gross)			
	Operating	• Temperature: 0°C to 40°C				
		• Humidity: 10% to 85%, non-condensing				
Environment	ent • Altitude: 0 ~ 5000m					
	Storage	• Temperature: -20°C to 60°C				
		• Humidity: 10% to 90%, non-condensing				

* Based on CIE1976 test standards.

Preset Display Modes

Important

All information is subject to change without prior notice.

Standard	Resolution		HDMI™	USB-C
VGA	640x480	@60Hz	V	V
		ଗ72Hz	V	V
		ି 1075Hz	V	V
Dos-Mode	720x400	ା ପଥ୍ୟ ସେଥି ସେଥି ସେଥି ସେଥି ସେଥି ସେଥି ସେଥି ସେଥି	V	V
	720x480	@60Hz	V	V
	720x576	@50Hz	V	V
SVGA	800x600	@60Hz	V	V
		ଗ72Hz	V	V
		@75Hz	V	V
XGA	1024x768	@60Hz	V	V
		ି Martia Ma Artia Martia Ma	V	V
SXGA	1280×720	@50Hz	V	V
		@60Hz	V	V
	1280x1024	@60Hz	V	V
		ି Martin Ma Martin Martin Ma Martin Martin Ma	V	V
WXGA+	1440x900	@60Hz	V	V
WSXGA+	1680x1050	@60Hz	V	V
Full HD	1920x1080	@50Hz	V	V
		@60Hz	V	V
		ି Martin Ma Martin Martin Ma Martin Martin Ma	V	V
Video	480P		V	V
Timing Resolution	576P		V	V
Resolution	720P		V	V
	1080P		V	V

Modern MD241P / Modern MD271P

Modern MD271QP

Standard	Resolution		HDMI™	DP	USB-C
VGA	640x480	@60Hz	V	V	V
		ି 075Hz	V	V	V
Dos-Mode	720x400	@70Hz	V	V	V
	720x480	@60Hz	V	V	V
	720x576	@50Hz	V	V	V
SVGA	800x600	@60Hz	V	V	V
		ି 075Hz	V	V	V
XGA	1024x768	@60Hz	V	V	V
		ି 075Hz	V	V	V
SXGA	1280×720	@50Hz	V	V	V
		@60Hz	V	V	V
	1280x1024	@60Hz	V	V	V
		ି 075Hz	V	V	V
WXGA+	1440x900	@60Hz	V	V	V
WSXGA+	1680x1050	@60Hz	V	V	V
Full HD	1920x1080	@50Hz	V	V	V
		@60Hz	V	V	V
QHD	2560x1440	@60Hz	V	V	V
		ି 075Hz	V	V	V
Video	480P		V	V	V
Timing Resolution	576P		V	V	V
resolution	720P		V	V	V
	1080P		V	V	V

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Battery

Please take special precautions if this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

European Union:



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

BSMI:



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

• TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.



• TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards

at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.

- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2014/35/EU) and RoHS directive (2014/35/EU) and RoHS directive (2014/35/EU).

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if



ſF

not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}° 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

