Dell UltraSharp U2718Q Monitor User's Guide

Model: U2718Q Regulatory model: U2718Qb



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



 \bigwedge CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



/ WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2017 Dell Inc. All rights reserved.

This product is protected by U.S. and international copyright and intellectual property laws. DellTM and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

Contents

Abo	out Your Monitor	5
	Package Contents	.5
	Product Features	.7
	Identifying Parts and Controls	.8
	Monitor Specifications	L2
	Plug and Play Capability	21
	Universal Serial Bus (USB) Interface.	21
	LCD Monitor Quality and Pixel Policy	22
	Maintenance Guidelines	23
Set	ting Up the Monitor	: 4
	Attaching the Stand	24
	Connecting Your Monitor	27
	Organizing Your Cables	29
	Removing the Monitor Stand 3	30
	Wall Mounting (Optional)	50
Ор	erating the Monitor3	2
	Power On the Monitor	32
	Using the Front Panel Controls	32

	Using the On-Screen Display (OSD) Menu	34
	Setting the Maximum Resolution	45
	Using the Tilt, Swivel, and Vertical Extension	47
	Rotating the Monitor.	48
	Adjusting the Rotation Display Settings of Your System	49
Tro	oubleshooting5	50
	Self-Test	50
	Built-in Diagnostics	51
	Common Problems	52
	Product Specific Problems	54
	Universal Serial Bus (USB) Specific Problems	55
	Speakers Specific Problems	55
App	pendix	56
	FCC Notices (U.S. Only) and Other Regulatory Information	56
	Contact Dell.	56

About Your Monitor

Package Contents


Your monitor ships with the components shown below. Ensure that you have received all the components and Contact Dell if something is missing.



NOTE: Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.



NOTE: To set up with any other stand, please refer to the respective stand setup guide for setup instructions.

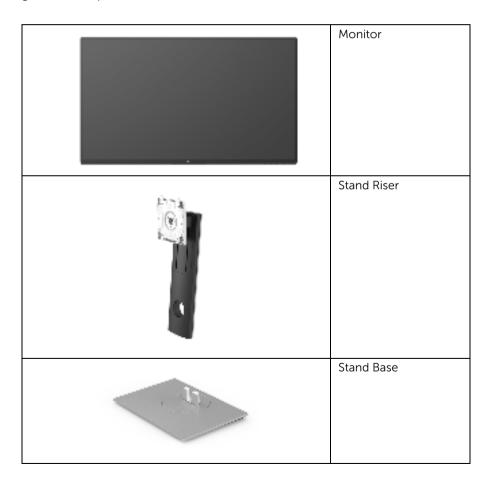

	Power Cable (Varies by Country)
	DP Cable (Mini-DP to DP)
0	USB 3.0 Upstream Cable (Enables the USB Ports on the Monitor)
	 Drivers and Documentation Media Quick Setup Guide Factory Calibration Report Safety, Environmental, and Regulatory Information

Product Features

The **Dell U2718Q** flat panel display has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD) and LED backlight. The monitor features include:

- 68.47 cm (27-inch) viewable area display (measured diagonally). 3840 x 2160 (16:9) resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position.
- Tilt, swivel, vertical extension, and rotation adjustment capabilities.
- Ultra-thin bezel minimizes the bezel gap in multi-monitor usage, enabling easier setup with an elegant viewing experience.
- Removable stand and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- Plug and play capability if supported by your system.
- Color gamut of 99.9% sRGB with an average Delta E \leq 2.
- HDR compatible with HDMI 2.0a.
- Extensive digital connectivity with DP, mDP, HDMI, and USB3.0 helps future-proof your monitor.
- On-Screen Display (OSD) adjustments for ease of setup and screen optimization.
- Software and documentation media includes an Information File (INF), Image Color Matching File (ICM), and product documentation.
- Dell Display Manager Software included (comes in the CD shipped with the monitor).
- Security lock slot.
- Stand lock.
- 0.3 W standby power when in the sleep mode.
- Optimizes eye comfort with a flicker-free screen.




NOTE: The possible long-term effects of blue light emission from the monitor may cause damage to the eyes, including eye fatigue or digital eye strain. ComfortView feature is designed to reduce the amount of blue light emitted from the monitor to optimize eye comfort.

Identifying Parts and Controls

Front View



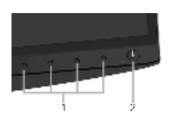

Front panel controls

Label	Description			
1	Function buttons (For more information, see Operating the Monitor)			
2	Power On/Off button (with LED indicator)			

Back View



Back view with monitor stand

Label	Description	Use	
1	VESA mounting holes (100 mm x 100 mm - behind attached VESA Cover)	Wall mount monitor using VESA-compatible wall mount kit (100 mm x 100 mm).	
2	Regulatory label	Lists the regulatory approvals.	
3	Stand release button	Releases stand from monitor.	
4	Security lock slot	Secures monitor with security lock (security lock not included).	
5	Barcode serial number label	Refer to this label if you need to contact Dell for technical support.	
6	Cable management slot	Use to organize cables by placing them through the slot.	


Side View



Label	Description	Use		
1	USB downstream port	Connect your USB device. You can only use this connector after you have connected the USB cable to the computer and USB upstream connector on the monitor.*		
2	USB downstream port with Power Charging	Connect to charge your device.		

^{*} To avoid signal interference, when a wireless USB device has been connected to a USB downstream port, it is NOT recommended to connect any other USB devices to the adjacent port(s).

Bottom View

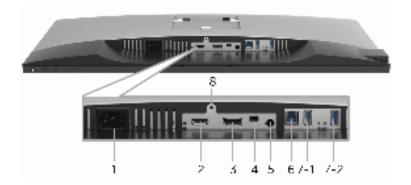

Bottom view without monitor stand

Label	Description	Use		
1	AC power connector	Connect the power cable.		
2	HDMI port connector	Connect your computer with an HDMI cable.		
3	DisplayPort in connector	Connect your computer with a DP cable.		
4	Mini DisplayPort in connector	Connect your computer with a Mini-DP to DP cable.		
5	Audio-Line out	Connect your speakers.*		
6	USB upstream port	Connect the USB cable that came with your monitor to the computer. Once this cable is connected, you can use the USB connectors on the monitor.		
7-1	USB downstream port	Connect your USB device. You can only use this connector after you have connected the USB cable to the computer and USB upstream connector on the monitor.**		
7-2	USB downstream port with Power Charging	Connect to charge your device.		
8	Stand lock feature	To lock the stand to the monitor using a M3 x 6 mm screw (screw not included).		

^{*} Headphone usage is not supported for the audio line out connector.

^{**} To avoid signal interference, when a wireless USB device has been connected to a USB downstream port, it is NOT recommended to connect any other USB devices to the adjacent port(s).

Monitor Specifications

Flat Panel Specifications

Model	U2718Q		
Screen type	Active matrix - TFT LCD		
Panel technology	In-Plane Switching Type		
Aspect ratio	16:9		
Viewable image			
Diagonal	684.7 mm (27 inches)		
Horizontal, Active Area	596.74 mm (23.49 inches)		
Vertical, Active Area	335.66 mm (13.21 inches)		
Area	200301.7 mm ² (310.47 inch ²)		
Pixel pitch	0.1554 mm x 0.1554 mm		
Pixel per inch	163		
Viewing angle	178° (vertical) typical		
	178° (horizontal) typical		
Luminance output	350 cd/m² (typical)		
Contrast ratio	1300 to 1 (typical)		
Faceplate coating Antiglare with hard-coating 3H			
Backlight LED edgelight system			
Response time	8 ms (Normal)/5 ms (Fast)		
Color depth 1.07 billion colors			
Color gamut*	99.9% sRGB, 99.9% Rec 709, 80.7% DCI-P3		
Calibration accuracy	Delta E ≤ 2 (average)		
Built-in devices	USB 3.0 super-speed hub (with 1 x USB 3.0 upstream port)		
	• 4 x USB 3.0 downstream ports		
Connectivity	• 1 x HDMI 2.0 (HDCP 2.2)		
	• 1 x DP 1.2 (HDCP 2.2)		
	• 1 x mDP (HDCP 2.2)		
	1 x Audio Line Out port1 x USB 3.0 Upstream port		
	• 4 x USB 3.0 Downstream port (2 x BC1.2 included)		
Border width (edge of	7.3 mm (Top/Left/Right)		
monitor to active area)	9.0 mm (Bottom)		

Adjustability		
Height adjustable stand 0 to 130 mm		
Tilt	-5° to 21°	
Swivel	-45° to 45°	
Pivot	-90° to 90°	
Dell Display Manager Compatibility (DDM)	Easy Arrange and other key features	
Security	Security lock slot (cable lock sold separately)	

^{*} At panel native only, under Custom Mode preset.

Resolution Specifications

Model U2718Q	
Horizontal scan range	10 kHz to 137 kHz (automatic)
Vertical scan range	49 Hz to 86 Hz (automatic)
Maximum preset resolution	3840 x 2160 at 60Hz

Supported Video Modes

Model	U2718Q
Video display capabilities (HDMI & DP playback)	480p, 480i, 576p, 576i, 720p, 1080i, 1080p, QHD, UHD

Preset Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/ Vertical)
VESA, 640 x 400	31.5	70.1	25.2	+/-
VESA, 640 x 480	31.5	59.9	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 720 x 400	31.5	70.1	28.3	-/+
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+
VESA, 1280 x 800 - R	49.3	59.9	71.0	+/-
VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1600 x 1200	75.0	60.0	162.0	+/+
VESA, 1920 x 1080	67.5	60.0	148.5	+/+
VESA, 2048 x 1280- R	78.9	59.9	174.3	+/-
VESA, 2560 x 1440	88.8	60.0	241.5	+/-
VESA, 3840 x 2160- R*	133.3	60.0	533.3	+/-

^{*} Requires a graphics card that supports HDMI 2.0.

Electrical Specifications

Model	U2718Q
Video input signals	HDMI 2.0, 600 mV for each differential line, 100 ohm input impedance per differential pair.
	 DisplayPort & Mini DisplayPort 1.2, 600 mV for each differential line, 100 ohm input impedance per differential pair
AC input voltage/frequency/ current	100 VAC to 240 VAC / 50 Hz or 60 Hz \pm 3 Hz / 1.5 A (typical)
Inrush current	• 120 V: 30 A (Max.) at 0 °C (cold start)
	• 220 V: 60 A (Max.) at 0 °C (cold start)

Physical Characteristics

Model	U2718Q
Signal cable type	Digital: detachable, HDMI, 19 pins (cable not included)
	 Digital: detachable, Mini-DP to DP, 20 pins
	 Universal Serial Bus: detachable, USB, 9 pins
Dimensions (with stand)	
Height (extended)	540.2 mm (21.27 inches)
Height (compressed)	410.2 mm (16.15 inches)
Width	611.3 mm (24.07 inches)
Depth	200.3 mm (7.89 inches)
Dimensions (without stand)	
Height	356.2 mm (14.02 inches)
Width	611.3 mm (24.07 inches)
Depth	49.1 mm (1.93 inches)
Stand dimensions	
Height (extended)	433.4 mm (17.06 inches)
Height (compressed)	387.2 mm (15.24 inches)
Width	292.4 mm (11.51 inches)
Depth	200.3 mm (7.89 inches)
Weight	
Weight with packaging	9.40 kg (20.72 lb)
Weight with stand assembly and cables	6.55 kg (14.44 lb)
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	3.70 kg (8.16 lb)
Weight of stand assembly	2.53 kg (5.58 lb)

Environmental Characteristics

Model U2718Q		
Compliant Standards		
ENERGY STAR certified N	Monitor	
9	n the U.S. EPEAT registration varies by country. See tration status by country.	
 RoHS-compliant 		
 TCO-Certified Displays 		
 BFR/PVC-free (Halogen- 	free) excluding external cables	
 Meets NFPA 99 leakage 	current requirements	
Arsenic-Free glass and Mercury-Free for the panel only		
Temperature		
Operating	0 °C to 40 °C (32 °F to 104 °F)	
Non-operating -20 °C to 60 °C (-4 °F to 140 °F)		
Humidity		
Operating 10% to 80% (non-condensing)		
Non-operating 5% to 90% (non-condensing)		
Altitude		
Operating 5,000 m (16,404 ft) (maximum)		

Power Management Modes

Non-operating

Thermal dissipation

If you have VESA's DPMTM compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. This is referred to as *Power Save Mode**. If the computer detects input from the keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power saving feature.

12,192 m (40,000 ft) (maximum)

337.79 BTU/hour (maximum)102.36 BTU/hour (typical)

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	White	99 W (maximum)** 30 W (typical)
Active-off mode	Inactive	Inactive	Blanked	White (blinking)	Less than 0.3 W
Switch off	-	-	-	Off	Less than 0.3 W

Energy Star	Power Consumption
Pon	24.32 W
E _{TEC}	76.39 kWh

The OSD functions only in the normal operation mode. When any button is pressed in the Active-off mode, the following message will be displayed:



Activate the computer and the monitor to gain access to the OSD.



NOTE: The message may be slightly different according to the connected input signal.



NOTE: This monitor is **ENERGY STAR**[®]-compliant.



NOTE:

Pon: Power consumption of on mode as defined in Energy Star 7.0 version. **E**_{TEC}: Total energy consumption in kWh as defined in Energy Star 7.0 version.

- * Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.
- ** Maximum power consumption with max luminance, and USB active.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information. Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.


Pin Assignments

DisplayPort Connector



Pin Number	20-pin Side of the Connected Signal Cable
1	MLO(p)
2	GND
3	ML0(n)
4	ML1(p)
5	GND
6	ML1(n)
7	ML2(p)
8	GND
9	ML2(n)
10	ML3(p)
11	GND
12	ML3(n)
13	GND
14	EDID WP
15	AUX(p)
16	GND
17	AUX(n)
18	Hot Plug Detect
19	Re-PWR
20	+3.3 V DP_PWR

Mini DisplayPort Connector



Pin 20-pin Side of the Number Connected Signal Ca		
1	GND	
2	Hot Plug Detect	
3	ML3(n)	
4	GND	

5	ML3(p)
6	GND
7	GND
8	GND
9	ML2(n)
10	ML0(n)
11	ML2(p)
12	MLO(p)
13	GND
14	GND
15	ML1(n)
16	AUX(p)
17	ML1(p)
18	AUX(n)
19	GND
20	+3.3 V DP_PWR

HDMI Connector



Pin Number	19-pin Side of the Connected Signal Cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK+
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	CEC
14	Reserved (N.C. on device)
15	DDC CLOCK (SCL)
16	DDC DATA (SDA)
17	DDC/CEC Ground
18	+5V POWER
19	HOT PLUG DETECT

Plug and Play Capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different settings if desired. For more information about changing the monitor settings, see Operating the Monitor.

Universal Serial Bus (USB) Interface

This section gives you information about the USB ports that are available on the monitor.




NOTE: This monitor is Super-Speed USB 3.0 compatible.

Transfer Speed	Data Rate	Power Consumption*
Super-speed	5 Gbps	4.5 W (Max, each port)
High speed	480 Mbps	4.5 W (Max, each port)
Full speed	12 Mbps	4.5 W (Max, each port)

^{*} Up to 2A on USB downstream port (port with SSCI) battery icon) with BC1.2 compliance devices or normal USB devices.

USB Upstream Connector



Pin Number	9-pin Side of the Connector
1	VCC
2	D-
3	D+
4	GND
5	SSTX-
6	SSTX+
7	GND
8	SSRX-
9	SSRX+

USB Downstream Connector



mber	Р	9-pin Side of the Connector
		VCC
		D-
		D+
		GND
		SSRX-
		SSRX+
		GND
		SSTX-
		SSTX+
		D- D+ GND SSRX- SSRX+ GND SSTX-

USB Ports

- 1 x USB 3.0 upstream bottom
- 2 x USB 3.0 downstream bottom
- 2 x USB 3.0 downstream side
- Power Charging Port- the port with **SSCI** battery icon; supports fast current charging capability if the device is BC1.2 compatible.



NOTE: USB 3.0 functionality requires a USB 3.0-capable computer.



NOTE: The monitor's USB interface works only when the monitor is On or in the power save mode. If you turn Off the monitor and then turn it On, the attached peripherals may take a few seconds to resume normal functionality.

LCD Monitor Quality and Pixel Policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: http://www.dell.com/support/monitors.

Maintenance Guidelines

Cleaning Your Monitor

CAUTION: Read and follow the Safety Instructions before cleaning the monitor.

WARNING: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your anti-static screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
- Use a lightly-dampened, warm cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as a darker-colored monitor may get scratched and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn Off your monitor when not in use.

Setting Up the Monitor

Attaching the Stand



NOTE: The stand is detached when the monitor is shipped from the factory.




NOTE: This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for the setup instructions.



CAUTION: Do not remove the monitor from the packaging box before attaching the stand.

To attach the monitor stand:

- 1 Follow the instructions on the flaps of carton to remove the stand from the top cushion that secures it.
- 2 Insert the stand base blocks fully into the stand slot.
- 3 Lift the screw handle and turn the screw clockwise.
- **4** After fully tightening the screw, fold the screw handle flat within the recess.

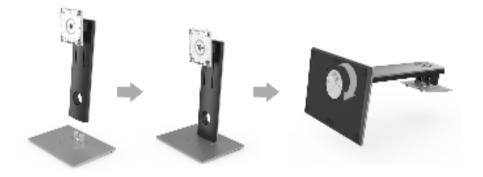

5 Lift the cover, as shown, to expose the VESA area for stand assembly.




- 6 Attach the stand assembly to the monitor.
 - **a** Fit the two tabs on the upper part of the stand to the groove on the back of the monitor.
 - **b** Press the stand down till it snaps into place.




- 7 Place the monitor upright.
 - **a** Slide one hand in the cutout area on the bottom cushion and use the other hand to hold the stand.
 - **b** Lift the monitor carefully to prevent it from slipping or falling.

CAUTION: Do not press on the panel screen when lifting the monitor.

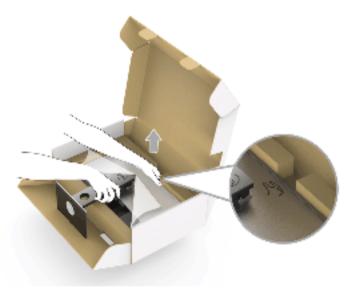

8 Remove the cover from the monitor.

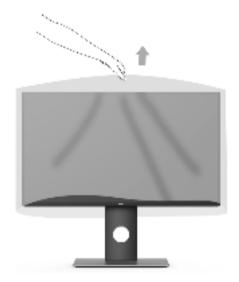

Connecting Your Monitor



WARNING: Before you begin any of the procedures in this section, follow the Safety Instructions.



NOTE: Do not connect all cables to the computer at the same time.

To connect your monitor to the computer:

1 Turn Off your computer and disconnect the power cable.

Connect the DP/Mini-DP to DP/HDMI cable from your monitor to the computer.

Connecting the HDMI cable (Optional Purchase)



Connecting the DisplayPort (Mini-DP to DP) cable



Connecting the DisplayPort (DP to DP) cable (Optional Purchase)



CAUTION: The graphics are used for the purpose of illustration only. Appearance of the computer may vary.

Connecting the USB 3.0 cable

After you have completed connecting the DP/Mini-DP to DP/HDMI cable, follow the procedures below to connect the USB 3.0 cable to the computer and complete your monitor setup:

- 1 Connect the upstream USB 3.0 port (cable supplied) to an appropriate USB 3.0 port on your computer.
- 2 Connect the USB 3.0 peripherals to the downstream USB 3.0 ports on the monitor.
- 3 Plug the power cables for your computer and monitor into a nearby outlet.



- **4** Turn On the monitor and the computer. If your monitor displays an image, installation is complete. If it does not display an image, see Universal Serial Bus (USB) Specific Problems.
- 5 Use the cable slot on the monitor stand to organize the cables.

Organizing Your Cables



After attaching all necessary cables to your monitor and computer, (See Connecting Your Monitor for cable attachment,) organize all cables as shown above.


Removing the Monitor Stand



NOTE: To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a soft, clean surface.



NOTE: This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for the setup instructions

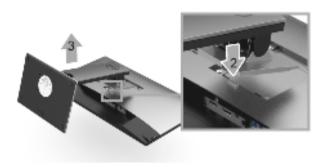

To remove the stand:

- 1 Place the monitor on a soft cloth or cushion.
- 2 Press and hold the stand release button.
- **3** Lift the stand up and away from the monitor.

Wall Mounting (Optional)



(Screw dimension: M4 x 10 mm).

Refer to the instructions that come with the VESA-compatible wall mounting kit.

- 1 Place the monitor panel on a soft cloth or cushion on a stable, flat table.
- **2** Remove the stand.
- **3** Use a Phillips crosshead screwdriver to remove the four screws securing the plastic cover.

- 4 Attach the mounting bracket from the wall mounting kit to the monitor.
- 5 Mount the monitor on the wall by following the instructions that comes with the wall mounting kit.



NOTE: For use only with UL-listed wall mount bracket with minimum weight/load bearing capacity of 3.70 kg.

Operating the Monitor


Power On the Monitor

Press the **b**utton to turn On the monitor.



Using the Front Panel Controls

The front panel control buttons provide quick access to primary software functionalities for controlling the monitor.

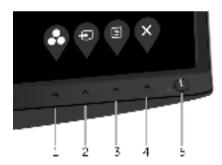


The following table describes the front panel buttons:

Front Panel Button		Description	
1	•	Use this button to choose from a list of preset color modes.	
	Shortcut key/		
	Preset Modes		
2	a	Use this button to choose from a list of video signals that may	
	•	be connected to your monitor.	
	Shortcut key/		
	Input Source		
2	a	Use the MENU button to launch the On-Screen Display	
	₩	(OSD). See Accessing the Menu System.	
	Menu		
3	×	Use this button to exit the OSD main menu.	
	▼		
	Exit		
4	Δ	Use the Power button to turn the monitor On and Off .	
		The white light indicates the monitor is On and fully	
	Power	functional. A glowing white light indicates the power save	
	(with power light indicator)	mode.	

Front Panel Button

Use the buttons on the front of the monitor to adjust the image settings.

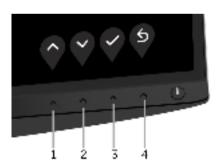


Front I	Panel Button	Description
1	Q Up	Use the Up button to adjust (increase ranges) items in the OSD menu.


2	Down	Use the Down button to adjust (decrease ranges) items in the OSD menu.
3	OK OK	Use the OK button to confirm your selection.
4	G Back	Use the Back button to go back to the previous menu.

Using the On-Screen Display (OSD) Menu

Accessing the Menu System



1 Press the **a** button to launch the OSD menu and display the main menu.

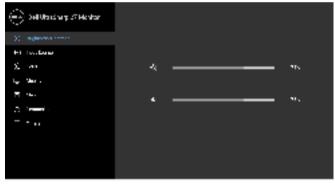



- 2 Press the and buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the following table for a complete list of all the options available for the monitor.
- **3** Press the **1** button once to activate the highlighted option.
- 4 Press and button to select the desired parameter.
- 5 Press to enter the submenu and then use the and buttons, according to the indicators on the menu, to make your changes.
- 6 Select the **1** button to return to the main menu.

Icon Menu and Submenus





Brightness/ Contrast

Use this menu to activate **Brightness/Contrast** adjustment.





Brightness

Brightness adjusts the luminance of the backlight.

Press the button to increase the brightness and press the button to decrease the brightness (min. 0 / max. 100).

NOTE: Manual adjustment of **Brightness** is disabled when **Dynamic Contrast** is switched On.

Contrast

Adjust the **Brightness** first, and then adjust the **Contrast** only if further adjustment is necessary.

Press the button to increase the contrast and press the button to decrease the contrast (min. 0 / max. 100).

The **Contrast** function adjusts the degree of difference between darkness and lightness on the monitor screen.



Input Source

Use the **Input Source** menu to select between the different video signals that may be connected to your monitor.









DP	Select the DP input when you are using the DisplayPort (DP)
	connector.
mDP	Select the mDP input when you are using the Mini DisplayPort (mDP)
	connector.
НДМІ	Select the HDMI input when you are using the HDMI connector.
Auto Select	Turning on the function allows you to scan for available input sources.
Reset Input Source	Reset your monitor input settings to the factory settings.



Color

Use **Color** to adjust the color setting mode.









Preset Modes

When you select **Preset Modes**, you can choose **Standard**,

ComfortView, Movie, Game, Color Temp., or Custom Color from the list.

- **Standard**: Loads the monitor's default color settings. This is the default preset mode.
- **ComfortView**: Decreases the level of the blue light emitted from the screen to make viewing more comfortable for your eyes.
- Movie: Loads color settings ideal for movies.
- Game: Loads color settings ideal for most gaming applications.
- Color Temp.: Allows users to select the color temperature: 5000K, 5700K, 6500K, 7500K, 9300K, and 10000K.
- Custom Color: Allows you to manually adjust the R, G, B color settings.

Press the and buttons to adjust the R, G, B colors values and create your own preset color mode.









NOTE: To reduce the risk of eye strain and neck/arm/back/shoulders pain from using the monitor for long periods of time, we suggest you:

- set the screen about 20 to 28 inches (50-70 cm) from your eyes.
- blink frequently to moisten or rewet your eyes when working with the monitor.
- take regular and frequent breaks for 20 minutes every two hours.
- look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
- perform stretches to relieve tension in the neck/arm/back/ shoulders during the breaks.

Input Color Format

Allows you to set the video input mode to:

RGB: Select this option if your monitor is connected to a computer (or DVD player) using an HDMI cable (or DisplayPort cable).

YPbPr: Select this option if your DVD player supports only YPbPr output.







Hue

This feature can shift the color of the video image to green or purple. This is used to adjust the desired flesh tone color. Use or to adjust the hue from '0' to '100'.

Use 😭 to increase the purple shade of the video image.

Use 🕎 to increase the green shade of the video image.

NOTE: Hue adjustment is available only when you select **Movie** or **Game** preset mode.

Saturation

This feature can adjust the color saturation of the video image. Use or to adjust the saturation from '0' to '100'.

Use **a** to increase the colorful appearance of the video image.

Use 🕎 to increase the monochrome appearance of the video image.

NOTE: Saturation adjustment is available only when you select **Movie** or **Game** preset mode.

Reset Color

Resets your monitor color settings to the factory settings.



Display

Use **Display** to adjust images.





Aspect Ratio	Adjusts the image ratio to Wide 16:9 , 4:3 , or 5:4 .
Sharpness	This feature can make the image look sharper or softer. Use or or
	to adjust the sharpness from '0' to '100'.
Dynamic	Allows you to increase the level of contrast to provide sharper and
Contrast	more detailed image quality.
	Press the putton to select the Dynamic Contrast "On" or "Off".
	NOTE: Dynamic Contrast provides higher contrast if you select Game or Movie preset mode.

Response Time Allows you to set the Response Time to Normal or Fast.

Smart HDR

HDR is short for High Dynamic Range. This technology simulates the human visual system to process a wider range of luminosity than traditional imaging technique can do. It is most suitable for displaying images with a large amount of darkness or bright scenes.

NOTE: This function is only available when an HDMI signal is detected. While the monitor is processing HDR content, **Preset Modes Brightness**, and **Dynamic Contrast** will be disabled. The following message appears if you press the **Preset Modes** shortcut key on the front panel.



NOTE: The possible peak luminance during HDR mode is 550-nit. The actual value and duration during HDR playback might vary according to the video content.

Reset Display

Select this option to restore default display settings.



Menu

Select this option to adjust the settings of the OSD, such as, the languages of the OSD, the amount of time the menu remains on screen, and so on.




0000

	* * * * *
Language	Sets the OSD display to one of the eight languages (English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).
Rotation	Rotates the OSD by 90 degrees counter-clockwise. You can adjust the menu according to your Display Rotation.
Transparency	Select this option to change the menu transparency by pressing the and buttons (Minimum: 0 ~ Maximum: 100).
Timer	Sets the length of time the OSD will remain active after the last time you pressed a button. Use or to adjust the slider in 1 second increments, from 5 to 60 seconds.
Reset Menu	Resets all OSD settings to the factory preset values.




Personalize

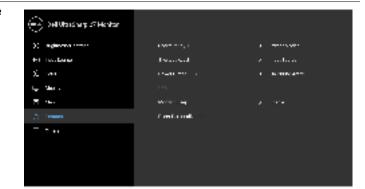








	Users can choose a feature from Preset Modes, Brightness/Contrast,		
Snortcut Key 2	Input Source, Aspect Ratio, Smart HDR, or Rotation and set it as a		
	shortcut key.		
Power Button	Allows you to set the power LED indicator On or Off when the		
LED	monitor is active to save energy.		
USB	Allows you to enable or disable USB function during monitor standby		
	mode.		
	NOTE: USB On/Off During Standby mode is only available when the USB upstream cable is unplugged. This option will be greyed out when the USB upstream cable plugs in.		
Monitor Sleep	Allows you to let the monitor turn off automatically or stay on when		
	your computer goes into sleep mode. When Enable is selected, the		
	monitor goes to sleep as the system sleeps; when $\textbf{Disable}$ is selected,		
	you may prevent the screen from going off as the system sleeps for		
	speedy display recovery from PC wake up.		
Reset	Reset all settings under the Personalize menu to the factory preset		
Personaliza-	values.		
tion			



Others

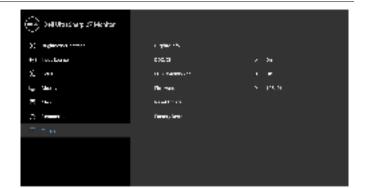





Displays the monitor's current settings.

DDC/CI

DDC/CI (Display Data Channel/Command Interface) allows your monitor parameters (brightness, color balance, and etc.) to be adjustable via the software on your computer.

You can disable this feature by selecting Off.

Enable this feature for best user experience and optimum performance of your monitor.









LCD Conditioning

Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. You can enable this feature by selecting **On**.





Firmware Displays the current firmware version.		Displays the current firmware version.
Reset Others Resets all settings under the Others menu to the factory		Resets all settings under the Others menu to the factory preset values.
Fa	actory Reset	Resets all settings to the factory preset values.



NOTE: This monitor has a built-in feature to automatically calibrate the brightness to compensate for LED aging.

OSD Warning Messages

When the **Dynamic Contrast** feature is enabled (in these preset modes: **Game** or **Movie**), the manual brightness adjustment is disabled.



When the monitor does not support a particular resolution mode, you will see the following message:



1

NOTE: The message may be slightly different according to the connected input signal.

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See Monitor Specifications for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 3840 x 2160.

You will see the following message before the DDC/CI function is disabled:



When the monitor enters the **Power Save** mode, the following message appears:



Activate the computer and wake up the monitor to gain access to the OSD.



NOTE: The message may be slightly different according to the connected input signal.

If you press any button other than the power button, the following message will appear depending on the selected input:





NOTE: The message may be slightly different according to the connected input signal.

If either DP, mDP, or HDMI input is selected and the corresponding cable is not connected, a floating dialog box as shown below appears.





NOTE: The message may be slightly different according to the connected input signal.

See Troubleshooting for more information.

Setting the Maximum Resolution

To set the maximum resolution for the monitor:

In Windows® 7. Windows® 8. and Windows® 8.1:

- 1 For Windows[®] 8 and Windows[®] 8.1 only, select the Desktop tile to switch to classic desktop.
- 2 Right-click on the desktop and click Screen Resolution.
- 3 Click the Dropdown list of the Screen Resolution and select 3840 x 2160.
- 4 Click OK.

In Windows® 10:

- 1 Right-click on the desktop and click **Display settings**.
- 2 Click Advanced display settings.
- 3 Click the dropdown list of **Resolution** and select **3840 x 2160**.
- 4 Click Apply.

If you do not see 3840 x 2160 as an option, you may need to update your graphics driver.

Depending on your computer, complete one of the following procedures:

If you have a Dell desktop or portable computer:

• Go to http://www.dell.com/support, enter your service tag, and download the latest driver for your graphics card.

If you are using a non-Dell computer (portable or desktop):

- Go to the support site for your computer and download the latest graphic drivers.
- Go to your graphics card website and download the latest graphic drivers.

Using the Tilt, Swivel, and Vertical Extension



NOTE: This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for set up instructions.

Tilt, Swivel

With the stand attached to the monitor, you can tilt and swivel the monitor for the most comfortable viewing angle.





NOTE: The stand is detached when the monitor is shipped from the factory.

Vertical Extension



NOTE: The stand extends vertically up to 130 mm. The figure below illustrates how to extend the stand vertically.



Rotating the Monitor

Before you rotate the monitor, your monitor should be fully vertically extended (Vertical Extension) and fully tilted up to avoid hitting the bottom edge of the monitor.



Rotate clockwise



Rotate counterclockwise





NOTE: To use the Display Rotation function (Landscape versus Portrait view) with your Dell computer, you require an updated graphics driver that is not included with this monitor. To download the graphics driver, go to www.dell.com/support and see the **Download** section for **Video Drivers** for latest driver updates.



NOTE: When in the *Portrait View Mode*, you may experience performance degradation in graphic-intensive applications (3D Gaming and etc.).

Adjusting the Rotation Display Settings of Your System

After you have rotated your monitor, you need to complete the procedure below to adjust the Rotation Display Settings of your system.



NOTE: If you are using the monitor with a non-Dell computer, you need to go the graphics driver website or your computer manufacturer website for information on rotating the 'contents' on your display.

To adjust the Rotation Display Settings:

- Right-click on the desktop and click **Properties**.
- 2 Select the **Settings** tab and click **Advanced**.
- 3 If you have an ATI graphics card, select the **Rotation** tab and set the preferred rotation.
- If you have an nVidia graphics card, click the nVidia tab, in the left-hand column 4 select NVRotate, and then select the preferred rotation.
- If you have an Intel[®] graphics card, select the **Intel** graphics tab, click **Graphic** 5 **Properties**, select the **Rotation** tab, and then set the preferred rotation.



NOTE: If you do not see the rotation option or it is not working correctly, go to www.dell.com/support and download the latest driver for your graphics card.

Troubleshooting



WARNING: Before you begin any of the procedures in this section, follow the Safety Instructions.

Self-Test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

- Turn off both your computer and the monitor.
- 2 Unplug the video cable from the back of the computer.
- 3 Turn on the monitor

The floating dialog box should appear on-screen (against a black background), if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains white. Also, depending upon the selected input, the dialog shown below will continuously scroll through the screen.





NOTE: The message may be slightly different according to the connected input signal.

- 4 This box also appears during normal system operation, if the video cable becomes disconnected or damaged.
- Turn Off your monitor and reconnect the video cable; then turn On both your computer and the monitor.


If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

Built-in Diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.



NOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in *self-test mode*.

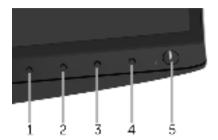

To run the built-in diagnostics:

- **1** Ensure that the screen is clean (no dust particles on the surface of the screen).
- **2** Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
- **3** Press and hold **Button 1** on the front panel for 5 seconds. A gray screen appears.
- 4 Carefully inspect the screen for abnormalities.
- **5** Press **Button 1** on the front panel again. The color of the screen changes to red.
- 6 Inspect the display for any abnormalities.
- **7** Repeat steps 5 and 6 to inspect the display in green, blue, black, white and text screens

The test is complete when the text screen appears. To exit, press **Button 1** again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

Troubleshooting | **51**

Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	What You Experience	Possible Solutions
No Video/Power LED off	No picture	 Ensure that the video cable connecting the monitor and the computer is properly connected and secure. Verify that the power outlet is functioning properly using any other electrical equipment. Ensure that the power button is pressed fully. Ensure that the correct input source is selected in the Input Source menu.
No Video/Power LED on	No picture or no brightness	 Increase brightness & contrast controls via OSD. Perform monitor self-test feature check. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics. Ensure that the correct input source is selected in the Input Source menu.
Poor Focus	Picture is fuzzy, blurry, or ghosting	 Eliminate video extension cables. Reset the monitor to factory settings. Change the video resolution to the correct aspect ratio.
Shaky/Jittery Video	Wavy picture or fine movement	 Reset the monitor to factory settings. Check environmental factors. Relocate the monitor and test in another room.
Missing Pixels	LCD screen has spots	 Cycle power On-Off. Pixel that is permanently Off is a natural defect that can occur in LCD technology. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: http://www.dell.com/support/monitors.
Stuck-on Pixels	LCD screen has bright spots	 Cycle power On-Off. Pixel that is permanently off is a natural defect that can occur in LCD technology. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: http://www.dell.com/support/monitors.
Brightness Problems	Picture too dim or too bright	 Reset the monitor to factory settings. Adjust brightness & contrast controls via OSD.
Geometric Distortion	Screen not centered correctly	 Reset the monitor to factory settings. Adjust horizontal & vertical controls via OSD.

Horizontal/ Vertical Lines	Screen has one or more lines	 Reset the monitor to factory settings. Perform monitor self-test feature check and determine if these lines are also in self-test mode. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics.
Synchronization Problems	Screen is scrambled or appears torn	 Reset the monitor to factory settings. Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode. Check for bent or broken pins in the video cable connector. Restart the computer in the safe mode.
Safety Related Issues	Visible signs of smoke or sparks	Do not perform any troubleshooting steps.Contact Dell immediately.
Intermittent Problems	Monitor malfunctions on & off	 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Reset the monitor to factory settings. Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing Color	Picture missing color	 Perform monitor self-test feature check. Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Check for bent or broken pins in the video cable connector.
Wrong Color	Picture color not good	 Change the settings of the Preset Modes in the Color menu OSD depending on the application. Adjust R/G/B value under Custom Color in Color menu OSD. Change the Input Color Format to RGB or YPbPr in the Color menu OSD. Run the built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	 Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see Power Management Modes). Alternatively, use a dynamically changing screensaver.

Product Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	 Check the Aspect Ratio setting in the Display menu OSD. Reset the monitor to factory settings.
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	Turn Off the monitor, unplug the power cord, plug it back, and then turn On the monitor.
No Input Signal when user controls are pressed	No picture, the LED light is white	 Check the signal source. Ensure the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard. Check whether the signal cable is plugged in properly. Replug the signal cable if necessary. Reset the computer or video player.
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	 Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen. Run the built-in diagnostics.

Universal Serial Bus (USB) Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
USB interface is not working	USB peripherals are not working	 Check that your monitor is turned On. Reconnect the upstream cable to your computer. Reconnect the USB peripherals (downstream connector). Switch Off and then turn On the monitor again. Reboot the computer. Some USB devices like external portable HDD require higher electric current; connect the device directly to the computer system.
High Speed USB 3.0 interface is slow	High Speed USB 3.0 peripherals working slowly or not working at all	 Check that your computer is USB 3.0-capable. Some computers have USB 3.0, USB 2.0, and USB 1.1 ports. Ensure that the correct USB port is used. Reconnect the upstream cable to your computer. Reconnect the USB peripherals (downstream connector). Reboot the computer.
Wireless mouse is not working or lagging	Do not respond or responds slowly	 Increase the distance between the USB 3.0 peripherals and the wireless USB receiver. Position your wireless USB receiver as close as possible to the wireless mouse. Use a USB-extender cable to position the wireless USB receiver as far away as possible from the USB 3.0 port.

Speakers Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
No sound coming from the speakers	Cannot hear any sound	Turn Off the monitor, unplug the monitor power cord, replug it, and then turn On the monitor. Check the audio cable connection is connected correctly
and opeaners		to the computer Audio Line Out port.
		• Unplug the audio cable from the Audio Line Out port.
		 Reset the monitor to factory settings.

Appendix

WARNING: Safety Instructions



WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the Safety, Environmental, and Regulatory Information (SERI).

FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contact Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.

- Online technical assistance www.dell.com/support/monitors
- Contacting Dell www.dell.com/contactdell