Dell SE2722H/SE2722HX Monitor

User's Guide



Monitor Model: SE2722H/SE2722HX Regulatory Model: SE2722Hc

- NOTE: A NOTE indicates important information that helps you make better use of your computer.
- MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2021 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2021 - 06

Rev. A01



Contents



Connecting your monitor
Connecting the VGA Cable(Only for SE2722HX) and HDMI Cable 28
Organizing cables
Securing your monitor using Kensington lock (optional) 30
Removing the stand
Wall mounting (optional)
Operating your monitor
Turning on the monitor
Using the control buttons
Control buttons
Using the OSD lock function
Use the Lock menu to lock the button(s)
Use the front-panel control button to lock the button(s)3
OSD controls
Using the On-Screen Display (OSD) menu 39
Accessing the OSD menu
Tilt Extension
Troubleshooting
Self-Test
Built-in diagnostics
Common problems
Product-specific problems 60



Α _Ι	ppendix	61
	FCC notices (U.S. Only) and other regulatory information	61
	Contacting Dell	61
	EU product database for energy label and product information sheet	61



Safety instructions

Use the following safety guidelines to protect your monitor from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your monitor.

- <u>U</u>
- Before using the monitor, read the safety information that is shipped with your monitor and also printed on the product. Keep the documentation at a secure location for future reference.
- Place the monitor on a solid surface and handle it carefully. The screen is fragile and can be damaged if dropped or hit sharply.
- Always be sure that your monitor is electrically rated to operate with the AC power available in your location.
- Keep the monitor in room temperature. Excessive cold or hot conditions can have an adverse effect on the liquid crystal of the display.
- Connect the power cable from the monitor to a wall outlet that is near and accessible. See Connecting your monitor.
- · Do not place and use the monitor on a wet surface or near water.
- Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
- Unplug the monitor when it is going to be left unused for an extended period of time.
- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.
- Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on product.
- The equipment can be installed on wall or ceiling mounting in horizontal position.



About your monitor

Package contents

Your monitor ships with the components shown in the table below. If any component is missing, contact Dell. For more information, see Contacting Dell.



NOTE: Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.

	Display
	Stand riser
	Stand base
200	Power cable (varies by countries)
	HDMI 1.4 cable



VGA cable (only for SE2722HX)
VESA cover
Quick Setup Guide Safety and Regulatory Information



Product features

The Dell SE2722H/SE2722HX monitor has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD), anti-static, and LED backlight. The monitor features include:

- 68.47 cm (27.0 in.) viewable area display (measured diagonally).
- 1920 x 1080 resolution, with full-screen support for lower resolutions.
- · Easy and simple connectivity with legacy and new systems via HDMI.
- · Supports 48 Hz to 75 Hz (HDMI) in FreeSync Mode.
- Supports AMD FreeSync™ technology,
- · Plug and play capability if supported by your computer.
- · On-Screen Display (OSD) adjustments for ease of setup and screen optimization.
- Removable stand and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- · Security-lock slot.
- · ≤0.3 W in Standby Mode.
- · Supports Dell Display Manager.
- · Optimize eye comfort with a TÜV-certified flicker-free screen.

MARNING: If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.


Please confirm the distribution system in building installation shall provide the circuit breaker rated 120/240V, 20A (maximum).

MARNING: The possible long-term effects of blue light emission from the monitor may cause damage to the eyes, including eye fatigue, digital eye strain, and so on. a TÜV-certified ComfortView is designed to reduce the amount of blue light emitted from the monitor to optimize eye comfort.



Identifying parts and controls

Front view

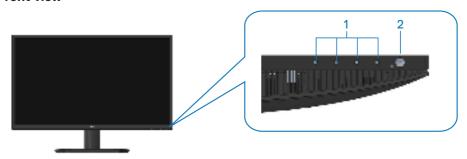


Control buttons

Label	Description	Use
1	Function buttons	To access the on-screen display (OSD) menu. (For more information, see Using the control buttons)
2	Power On/Off button (with LED indicator)	To turn the monitor on or off. Solid white light indicates that the monitor is turned on and functioning normally. Blinking white light indicates that the monitor is in Standby Mode.



Back view



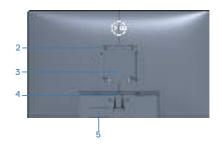

Back View with monitor stand

Label	Description	Use
1	Cable management slot	To organize cables.
100mm-behind the VESA cover) compa		Wall mount the monitor using VESA-compatible wall mount kit(100mm x 100mm).
		NOTE:Wall mount kit is not shipped with your monitor and is sold separately.
3	Regulatory information label	Lists the regulatory approvals.
4	Stand release button	Releases the stand from the monitor.
5	Regulatory label (including Barcode, serial number and Service Tag label)	Lists the regulatory approvals. Refer to this label if you need to contact Dell for technical support. The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.



Side view



Bottom view



Bottom view without monitor stand

Label	Description	Use
1	Security-lock slot	Secure your monitor using a security lock (purchased separately) to prevent unauthorized movement of your monitor. See Securing your monitor using Kensington lock (optional).
2	Power port	Connect the power cable
3	HDMI port	Connect your computer with HDMI cable.
4	VGA port	Connect your computer with VGA cable (purchased separately, only for SE2722HX).



Monitor specifications

Model	SE2722H/SE2722HX			
Screen type	Active matrix-TFT LCD			
Panel type	Vertical Alignment			
Viewable image				
Diagonal	684.66 mm (27 in.)			
Horizontal, Active Area	596.74 mm (23.49 in.)			
Vertical, Active Area	335.66 mm (13.22 in)			
Area	2003.02 cm ² (310.54 in. ²)			
Native resolution and refresh rate	1920 x1080 at 75Hz (HDMI 1.4)			
Pixel pitch	0.3108 mm x 0.3108 mm			
Pixel per inch (PPI)	81			
Viewing angle				
Horizontal	178° (typical)			
Vertical	178° (typical)			
Luminance output	250 cd/m² (typical)			
Contrast ratio	3000 to 1 (typical)			
Faceplate coating	Anti-glare with 3H hardness			
Backlight	LED edgelight system			
Response time (Gray to Gray)	Normal mode 8ms Fast mode 5ms Extreme mode 4ms NOTE:			
	The 4 ms gray-to-gray mode is achievable in the Extreme mode to reduce visible motion blur and increased image responsiveness. However this may introduce some slight and noticeable visual artifacts into the image.			
Color depth	16.7 million colors			
Color gamut	NTSC CIE1976(84%) CIE1931(72%)			



	T T			
Connectivity	1 x HDMI (ver 1.4)			
	1 x VGA			
Bezel width (edge of monitor to active area)				
Top 13.22 mm				
Left/Right	13.28 mm			
Bottom	16.44 mm			
Adjustability				
Tilt	-5° to 21°			
Swivel	N/A			
Slant Adjust	N/A			
Dell display manager compatibility	Easy Arrange and other key features			
Security	Security-lock slot (cable lock optional purchase)			



Resolution specifications

Model	SE2722H/SE2722HX		
Horizontal scan range	30 kHz to 83 kHz (automatic)		
Vertical scan range	56 Hz to 75 Hz (VGA)		
	48 Hz to 75 Hz (HDMI)(automatic)		
Maximum preset	1920 x 1080 at 75 Hz (HDMI)		
resolution	1920 x 1080 at 60 Hz (VGA)		





Preset display modes

HDMI Preset display modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal / Vertical)
640 x 480	31.47	60.0	25.175	-/-
640 x 480	37.5	75.0	31.5	-/-
720 x 400	31.47	70.0	28.32	-/+
800 x 600	37.88	60.0	40	+/+
800 x 600	46.86	75.0	49.5	+/+
1024 x 768	48.36	60.0	65	-/-
1024 x 768	60.02	75.0	78.75	+/+
1152 x 864	67.5	75.0	108	+/+
1280 x 1024	63.98	60.0	108	+/+
1280 x 1024	79.98	75.0	135	+/+
1600 x 900	60	60	108	+/+
1920 x 1080	67.5	60	148.5	+/+
1920 x 1080	83.89	75	174.5	-/+



VGA Preset display modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal / Vertical)
640 x 480	31.47	60.0	25.175	-/-
640 x 480	37.5	75.0	31.5	-/-
720 x 400	31.47	70.0	28.32	-/+
800 x 600	37.88	60.0	40	+/+
800 x 600	46.86	75.0	49.5	+/+
1024 x 768	48.36	60.0	65	-/-
1024 x 768	60.02	75.0	78.75	+/+
1152 x 864	67.5	75.0	108	+/+
1280 x 1024	63.98	60.0	108	+/+
1280 x 1024	79.98	75.0	135	+/+
1600 x 900	60	60	108	+/+
1920 x 1080	67.5	60	148.5	+/+



Electrical specifications

Model	SE2722H/SE2722HX	
Video input signals	HDMI 1.4, 600mV for each differential line,100 ohm input impedance per differential pair	
	Analog RGB, 0.7 Volts +/-5%, positive polarity at 75 ohm input impedance	
AC input voltage/ frequency/current	100 VAC to 240 VAC / 50 Hz or 60 Hz ± 3 Hz / 1.6 A (max.)	
Inrush current	120 V: 30 A (max.) at 0°C (cold start)	
	240 V: 60 A (max.) at 0°C (cold start)	
Power consumption	0.3 W (Off mode) ¹	
	0.3 W (Standby Mode) ¹	
	20 W (On Mode) ¹	
	24 W (Max.) ²	
	19 W (Pon) ³	
	59.96 kWh (TEC) ³	

¹ As defined in EU 2019/2021 and EU 2019/2013.

TEC: Total energy consumption in kWh measured with reference to Energy Star test method.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information.

Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.



² Max brightness and contrast setting.

 $^{^{3}}$ Pon: Power consumption of On Mode measured with reference to Energy Star test method.

Physical characteristics

Model	SE2722H/ SE2722HX
Signal cable type	· Digital: detachable, HDMI, 19 pins
	· Analog: detachable, D-Sub, 15 pins
Dimensions (with stand)	
Height	459.21 mm (18.08 in.)
Width	623.30 mm (24.54 in.)
Depth	199.87 mm (7.87 in.)
Dimensions (without stand)
Height	369.61 mm (14.55 in.)
Width	623.30 mm (24.54 in.)
Depth	55.56 mm (2.19 in.)
Stand dimensions	
Height	173.83 mm (6.84 in.)
Width	290.07 mm (11.42 in.)
Depth	199.87 mm (7.87 in.)
Weight	
Weight with packaging	6.37 kg (14.04 lb) SE2722H
	6.48 kg (14.29 lb) SE2722HX
Weight with stand assembly	4.63 kg (10.21 lb) SE2722H
and cables	4.74 kg (10.45 lb) SE2722HX
Weight without stand assembly (no cables)	3.8 kg (8.38 lb)
Weight of stand assembly	0.60 kg (1.32 lb)
Front-frame gloss	Black frame 2-4 gloss units



Environmental characteristics

Model	SE2722H/SE2722HX			
Compliant Standards				
RoHS-compliant				
BFR/PVC redulaminates.)	uce monitor(Its circuit boards are made from BFR/PVC-free			
· Arsenic-free glass and Mercury-free for the panel only				
Temperature				
Operating	0°C to 40°C (32°F to 104°F)			
Non-operating	• Storage: -20°C to 60°C (-4°F to 140°F)			
	· Shipping: -20°C to 60°C (-4°F to 140°F)			
Humidity				
Operating	10% to 80% (non-condensing)			
Non-operating	· Storage 10% to 90% (non-condensing)			
	· Shipping 10% to 90% (non-condensing)			
Altitude				
Operating (maximum)	5,000 m (16,400 ft)			
Non-operating (maximum)	12,192 m (40,000 ft)			

· 81.95 BTU/hour (maximum)

· 68.29 BTU/hour (typical)



Thermal dissipation

Plug and play capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic, you can select different settings if desired. For more information about changing the monitor settings, see Operating your monitor.

LCD monitor quality and pixel policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at www.dell.com/pixelguidelines.



Ergonomics

iniurv.


may result in eye strain.

For comfort and efficiency, observe the following guidelines when setting up and using your computer workstation:

- · Position your computer so that the monitor and keyboard are directly in front of you as you work. Special shelves are commercially available to help you correctly position your keyboard.
- · To reduce the risk of eye strain and neck/arm/back/shoulder pain from using the monitor for long periods of time, we suggest you to:
 - 1. Set the distance of the screen between 20 to 28 in. (50 70 cm) from your eves.
 - 2. Blink frequently to moisten your eyes or wet your eyes with water after prolonged usage of the monitor.
 - **3.** Take regular and frequent breaks for 20 minutes every two hours.
 - 4. Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
 - 5. Perform stretches to relieve tension in the neck, arm, back, and shoulders during the breaks.
- · Make sure that the monitor screen is at eye level or slightly lower when you are sitting in front of the monitor.
- · Adjust the tilt of the monitor, its contrast, and brightness settings.
- · Adjust the ambient lighting around you (such as overhead lights, desk lamps, and the curtains or blinds on nearby windows) to minimize reflections and glare on the monitor screen.
- · Use a chair that provides good lower-back support.
- · Keep your forearms horizontal with your wrists in a neutral, comfortable position while using the keyboard or mouse.
- · Always leave space to rest your hands while using the keyboard or mouse.
- Let your upper arms rest naturally on both sides.
- · Ensure that your feet are resting flat on the floor.



- When sitting, make sure that the weight of your legs is on your feet and not on the front portion of your seat. Adjust your chair's height or use a footrest if necessary to maintain a proper posture.
- Vary your work activities. Try to organize your work so that you do not have to sit and work for extended periods of time. Try to stand or get up and walk around at regular intervals.
- Keep the area under your desk clear of obstructions and cables or power cords that may interfere with comfortable seating or present a potential trip hazard.

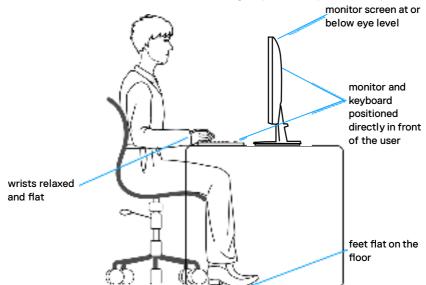





Handling and moving your display

To ensure the monitor is handled safely when lifting or moving it, follow the guidelines mentioned below:

- Before moving or lifting the monitor, turn off your computer and the monitor.
- · Disconnect all cables from the monitor.
- Place the monitor in the original box with the original packing materials.
- Hold the bottom edge and the side of the monitor firmly without applying excessive pressure when lifting or moving the monitor.

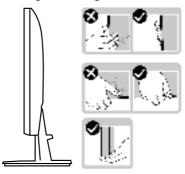


• When lifting or moving the monitor, ensure the screen is facing away from you and do not press on the display area to avoid any scratches or damage.

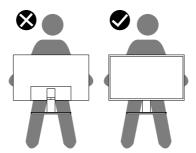

- · When transporting the monitor, avoid any sudden shock or vibration to it.
- When lifting or moving the monitor, do not turn the monitor upside down while holding the stand base or stand riser. This may result in accidental damage to the monitor or cause personal injury.



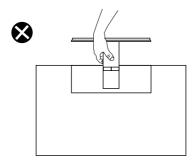

Maintenance guidelines

Cleaning your monitor



MARNING: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

CAUTION: Read and follow the Safety instructions before cleaning the monitor.

For best practices, follow the instructions in the list below while unpacking, cleaning or handling your monitor:

- · To clean your screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners or compressed air.
- · Use a lightly-dampened cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- · If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as the black-colored monitor may get scratched and show white scuff marks.
- · To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.




Setting up the monitor

Connecting the stand


- NOTE: The stand is detached when the monitor is shipped from the factory.
- NOTE: The following procedure is applicable for the stand that shipped with your monitor. If you are connecting a third-party stand, see the documentation that shipped with the stand.

To attach the monitor stand:

- 1. Follow the instructions on the flaps of packaging box to remove the stand from the top cushion that secures it.
- 2. Connect the stand base to the stand riser.

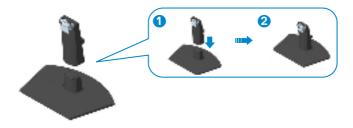


3. Slide the tabs on the stand assembly into the slots on the monitor and press the stand assembly down to snap it into place.

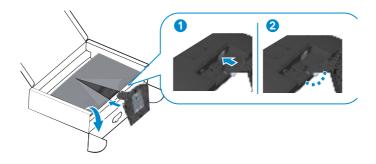




4. Open the monitor protective cover, install the VESA screw cover.

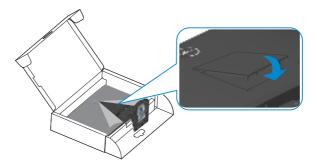

5. Place the monitor in an upright position.

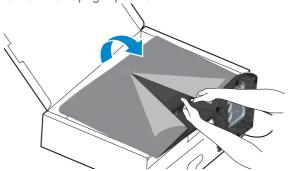




Connecting your monitor

- MARNING: Before you begin any of the procedures in this section, follow the Safety instructions.
- NOTE: Do not connect all cables to the monitor at the same time. It is recommend to route the cables through the cable-management slot before you connect them to the monitor.


To connect your monitor to the computer:

- 1. Turn off your computer and disconnect the power cable.
- **2.** Connect the VGA cable (for SE2722HX) and HDMI cable from your monitor to the computer.

Connecting the VGA Cable(Only for SE2722HX) and HDMI Cable

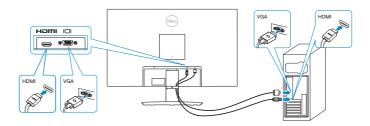


3. Connect the power cables from your computer and monitor into a wall outlet.

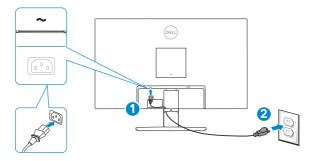



Organizing cables

Use cable management slot on stand assembly to route the cables connected to your monitor.

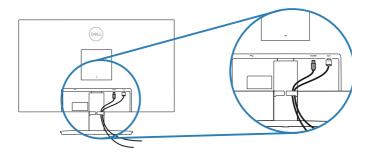

4. Turn on the Monitor.




Securing your monitor using Kensington lock (optional)

You can fasten the monitor using a Kensington security lock to a fixed object that could support the weight of the monitor to prevent it from falling accidentally.

The security lock slot is located at the bottom of the monitor. (See Security-lock slot)

For more information on using the Kensington lock (purchased separately), see the documentation that is shipped with the lock.

Secure your monitor to a table using the Kensington security lock.

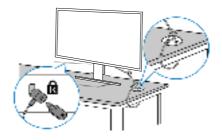

NOTE: The image is for the purpose of illustration only. Appearance of the lock may vary.




Removing the stand

- NOTE: To prevent scratches on the screen when removing the stand, ensure that the monitor is placed on a soft and clean surface.
- NOTE: The following procedure is applicable only for the stand that shipped with your monitor. If you are connecting a third-party stand, see the documentation that shipped with the stand.

To remove the stand:


1. Place the monitor on a soft cloth or cushion at the edge of the desk.



2. Tilt the stand downwards to access to the release button.




3. Using a long screwdrover press the release button.

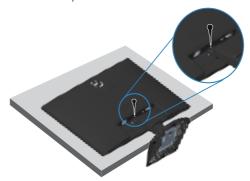




4. While keeping the release button pressed, push the stand out.

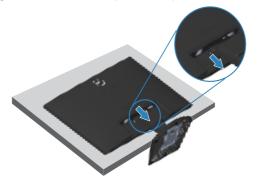



Wall mounting (optional)

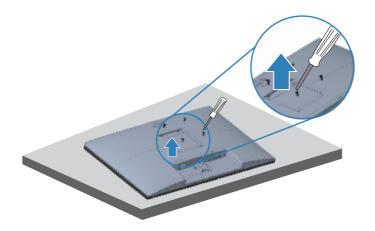

(Screw dimension: M4 x 10 mm).

See the documentation that shipped with the VESA-compatible wall mounting kit.

- 1. Place the display on a soft cloth or cushion at the edge of the desk.
- 2. Remove the stand. See Removing the stand.
- 3. Remove the four screws that secure the display back cover.
- 4. Remove VESA cover.
- 5. Install the mounting bracket from the wall mounting kit to the display.
- **6.** To mount the monitor on the wall, see the documentation that shipped with the wall mounting kit.
- NOTE: For use only with UL or CSA or GS-listed wall mount bracket with minimum weight/load bearing capacity of 14.72 kg.
- NOTE: When using the display, fasten the LCD to a wall using a cord or chain that can support the weight of the monitor in order to prevent the monitor from falling. Installing must be done by a qualified technician, and please contact your supplier for more information.



Operating your monitor


Turning on the monitor

Press the **b**utton to turn on the monitor.



Using the control buttons

Use the control buttons at the bottom edge of the monitor to adjust the image being displayed.

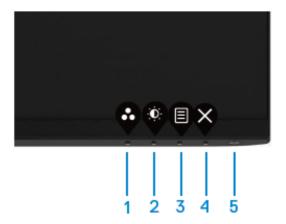



Control buttons

The following table describes the control buttons:


	Control Buttons	Description
1	•	Use this button to choose from a list of preset modes.
	Preset mode	
2	•	For direct access to the Brightness and Contrast menu.
	Brightness/Contrast	
3		To launch the On-Screen Display (OSD) menu, or to
	Menu	access the list of items / options of a menu item. For
		more information, see Accessing the OSD menu.
4	S	To exit or return to the OSD main menu.
	Exit	
5 (w	A	To turn the monitor on or off.
	Power button (with power-status light)	Solid white light indicates the monitor is turned on and functioning normally. Blinking white light indicates the monitor is in Standby Mode.

Using the OSD lock function

You can lock the front-panel control buttons to prevent access to the OSD menu and/or power button.


Use the Lock menu to lock the button(s).

1. Select one of the following options.

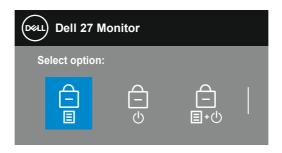




2. The following message appears.




3. Select Yes to lock the buttons. Once locked, pressing any control button will display the lock icon

Use the front-panel control button to lock the button(s).

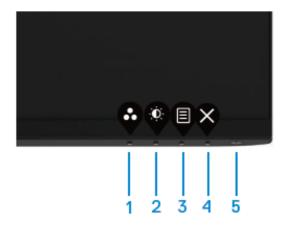

- 1. Press and hold Button 4 for four seconds, a menu appears on the screen.
- 2. Select one of the following options:



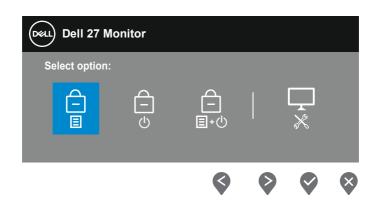

	Control Buttons	Description
1	<u> </u>	Select this option to lock OSD menu function.
	Menu Buttons lock	
2	Power Button lock	Use this option to lock power button. This will prevent the user to turn off the monitor using the power button.
	rowel Buttoll lock	<u> </u>
3	i 🖹 i ure	Use this option to lock OSD menu and power button to turn off the monitor.
	Menu and Power Buttons lock	
4	¥.	Use this option to run the built-in diagnostics, see Built-in diagnostics
	Built-in Diagnostics	

To unlock the button(s).

Press and hold **Built-in diagnostics** button (**button 4**) for four seconds until a menu appears on the screen. The following table describes the options to unlock the front-panel control buttons.












OSD controls

Use the buttons on the bottom edge of the monitor to adjust the image settings.

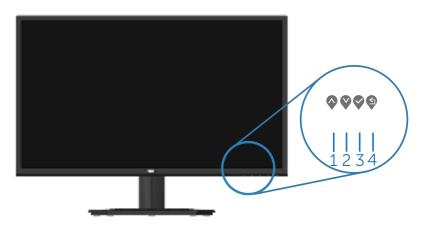


	Control Buttons	Description
1	O Up	Use the Up button to increase values or move up in a menu.
2	Down	Use the Down button to decrease values or move down in a menu.
3	♥ OK	Use the OK button to confirm your selection in a menu.
4	S Back	Use the Back button to go back to the previous menu.



Using the On-Screen Display (OSD) menu

Accessing the OSD menu



1. Press the putton to display the OSD main menu.

Main menu for HDMI input





- 2. Press the \bigcirc and \bigcirc buttons to move between the setting options. As you move from one icon to another, the option is highlighted.
- 3. Press the ♥ or ♥ or ♥ button once to activate the highlighted option.
- **4.** Press \bigcirc and \bigcirc button to select the desired parameter.
- **5.** Press \lozenge and then use the \lozenge and \lozenge buttons, according to the indicators on the menu, to make your changes.
- 6. Select the

 to return to previous menu or

 to accept and return to previous menu.



Icon	Menu and Submenus	Description
₩ -	Brightness/ Contrast	Use this option to control the brightness or contrast settings.
	Brightness	Brightness adjusts the luminance of the backlight. Press the button to increase the brightness and press the button to decrease the brightness (min. 0 / max. 100).
	Contrast	Adjust the brightness first, and then adjust the contrast only if further adjustment is necessary. Press the button to increase the contrast and press the button to decrease the contrast (min. 0 / max. 100). The contrast function adjusts the degree of difference between darkness and lightness on the monitor screen.





Auto Adjust

Use this option to activate automatic setup and adjust menu.



The following dialog appears on a black screen as the monitor self-adjusts to the current input:

Auto Adjustment in Progress...

Auto Adjust allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under Display.



MOTE: Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables. This option is only available when you are using the analog(VGA) connector.



_			
Θ	Input Source	·	
		ent video signals that may be connected to your monitor.	
		one VGA and one HDMI input	
		Color 27 Montor ***Directions / Contract ***Directions / Contract ***DAM ***DAGuet ***DAM ***DAGuet ***DAM ***DAGuet ***DAM ***DAGuet ***DAM ***DAGuet ***DAM ***DAGuet **DAGuet ***DAGuet **DAGuet ***DAGuet ***DAG	
		◊ ◊ ◊	
	VGA	Push to select the VGA input source when using.	
	HDMI	VGA connector.	
	TIDIVII	Push $ ho >$ to select the HDMI input source when using.	
	Auto Octors	HDMI connector.	
	Auto Select	Select Auto Select to scan for available input signals.	
	Reset Input Source	Select this option to restore default Input Source.	
(5)	Color	Use color to adjust the color setting mode.	
		Deplement Commiss Company	
	Preset Modes	When you select preset modes, you can choose Standard , ComfortView , Movie , FPS , RTS , RPG , Warm , Cool , or Custom color from the list.	
		Standard: Loads the monitor's default color settings. This is the default preset mode.	
		 ComfortView: Decreases the level of blue light emitted from the screen to make viewing more comfortable for your eyes. 	



- NOTE: To reduce the risk of eye strain and neck/ arm/back/shoulders pain from using the monitor for long periods of time,we suggest that you:
 - Set the screen about 20~28 inches (50~70 cm) from your eyes.
 - · Blink frequently to moisten or lubricate your eyes.
 - Take regular 20-minute breaks every two hours.
 - Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
 - Perform stretches to relieve tension in the neck/arm/ back/shoulders during the breaks.
- Movie: Loads color settings ideal for movies.
- FPS: Loads color settings ideal for First-Person Shooter games.
- RTS: Loads color settings ideal for Real-Time Strategy games.
- RPG: Loads color settings ideal for Role-Playing games.
- Warm: Increases the color temperature. The screen appears warmer with a red/yellow tint.
- Cool: Decreases the color temperature. The screen appears cooler with a blue tint.
- Custom Color: Allows you to manually adjust the color settings. Press the

 and

 buttons to adjust the three colors (R, G, B) values and create your own preset color mode.










Input Color Format	Allows you to set the video input mode to: • RGB: Select this option if your monitor is connected to
	a computer or a media player that supports RGB output.
	 YCbCr/YPbPr*: Select this option if your media player supports only YCbCr/YPbPr output.
	Descriptions Descriptions
	◊ ◊ ◊ ⑤
	*When VGA input is selected.
Hue	This feature can shift the color of the video image to green or purple. This is used to adjust the desired flesh tone color. Use or to adjust the hue from 0 to 100.
	Press oto increase the green shade of the video image.
	Press v to increase the purple shade of the video image.
	NOTE: Hue adjustment is available only when you select Movie and Game mode.
Saturation	This feature can adjust the color saturation of the video image. Use \bigcirc or \bigcirc to adjust the saturation from 0 to 100.
	Press video image.
	Press \lozenge to increase the colorful appearance of the video image.
	NOTE: Saturation adjustment is available only when you select Movie and Game mode.
Reset Color	Resets your monitor's color settings to the factory default.



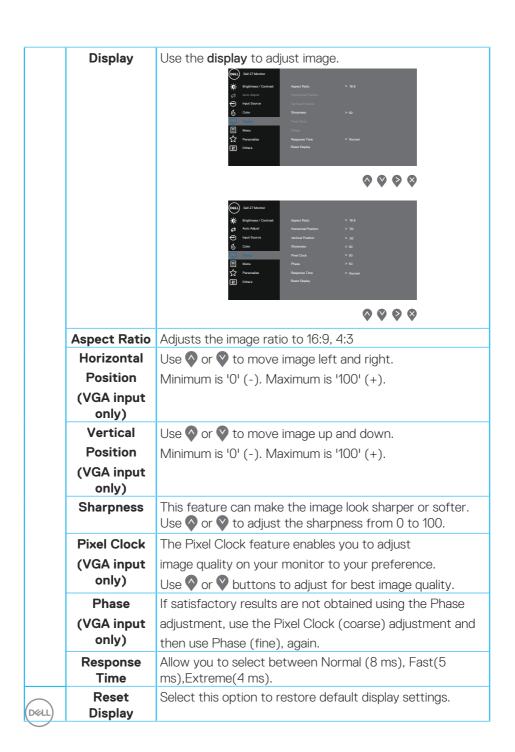

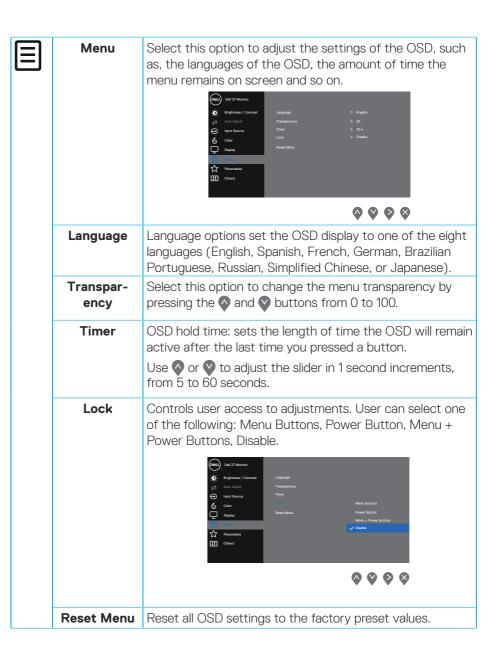



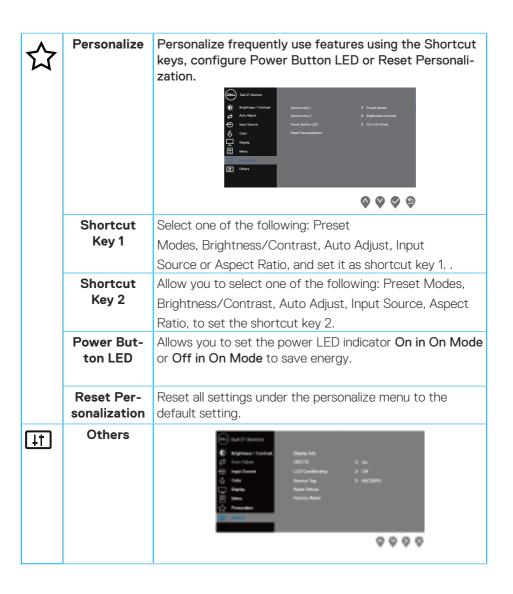




Display Info Press to display the information about the display. $\Diamond \Diamond \Diamond \Diamond \Diamond$ DDC/CI DDC/Cl (Display Data Channel/Command Interface) allows you to adjust the monitor settings using software on your computer. Select Off to turn of this feature. Enable this feature for best user experience and optimum performance of your monitor. 0000 LCD Condi-Helps to reduce minor cases of image retention. Depending on the degree of image retention, the program tioning may take some time to run. To start LCD conditioning, select on.



0000

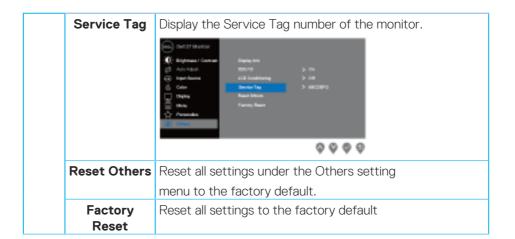



OSD warning messages

Before the DDC/CI function is disabled, the following message is displayed.



When the monitor enters Standby Mode, the following message appears.




If VGA or HDMI cable is not connected, a foating dialog box as shown below appears. The monitor will enter Standby Mode after 4 minutes if left at this state.



or




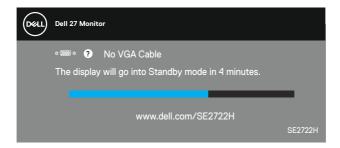


See Troubleshooting for more information.



Tilt Extension

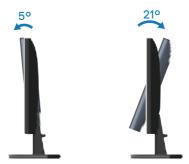





Troubleshooting


MARNING: Before you begin any of the procedures in this section, follow the Safety instructions.


Self-Test


Your monitor provides a self-test feature that allows you to check if your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

- 1. Turn off both your computer and the monitor.
- 2. Disconnect all video cables from the monitor. This way, the computer doesn't have to be involved.
- 3. Turn on the monitor.

If the monitor is working correctly, it detects that there is no signal and one of the following message appears. While in self-test mode, the power LED remains white.

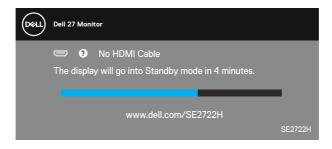

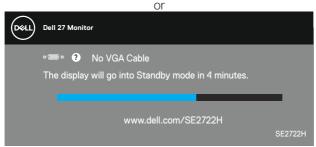





4. Turn Off your monitor and reconnect the video cable; then turn on your computer and the monitor.

If your monitor remains dark after you reconnect the cables, check your video controller and computer.




Built-in diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if any screen abnormality you experience is an inherent problem with your monitor, or with your computer and video card.




NOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in self-test mode.

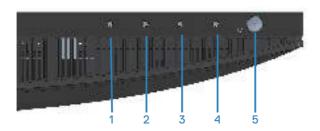


To run the built-in diagnostics:

- 1. Ensure that the screen is clean (no dust particles on the surface of the screen).
- 2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
- 3. Press and hold the Exit button (button 4) for four seconds to enter the OSD lock/unlock menu.

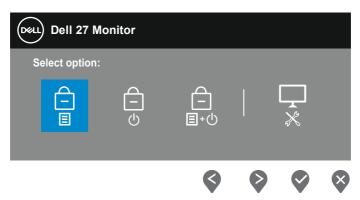



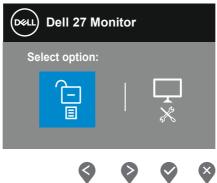



- 5. Carefully inspect the screen for abnormalities.
- **6.** Press the Up button (button 1) on the back cover again. The color of the screen changes to grey.
- 7. Inspect the display for any abnormalties.
- **8.** Repeat step 6 and 7 to inspect the display in red, green, blue, black, white and text pattern screens.

The test is complete when the text pattern screen appears. To exit, press the Up button (button 1) again.

If you do not detect any screen abnormalties upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.



Common problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	Possible Solutions
No Video/Power LED off	Ensure that the video cable connecting the monitor and the computer is properly connected and secure.
	 Verify that the power outlet is functioning properly using any other electrical equipment.
	· Ensure that the power button is pressed.
	Ensure that the correct input source is selected via the Input Source menu.
No Video/Power	· Increase brightness and contrast controls using the OSD.
LED on	Perform monitor self-test feature check.
	Check for bent or broken pins in the video cable connector.
	· Run the built-in diagnostics.
	Ensure that the correct input source is selected via the Input Source menu.
Poor Focus	· Eliminate video extension cables.
	· Reset the monitor to Factory Settings (Factory Reset).
	· Change the video resolution to the correct aspect ratio.
Shaky/Jittery Video	· Reset the monitor to Factory Settings (Factory Reset).
	· Check environmental factors.
	· Relocate the monitor and test in another room.
Missing Pixels	· Cycle power On-Off.
	 Pixel that is permanently Off is a natural defect that can occur in LCD technology.
	 For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: www.dell.com/pixelguidelines.



Stuck-on Pixels	· Cycle power On-Off.
	Pixel that is permanently off is a natural defect that can occur in LCD technology.
	 For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: www.dell.com/pixelguidelines.
Brightness	• Reset the monitor to Factory Settings (Factory Reset).
Problems	· Adjust brightness & contrast controls via OSD.
Geometric	· Reset the monitor to Factory Settings (Factory Reset).
Distortion	· Adjust horizontal & vertical controls via OSD.
Horizontal/Vertical	Reset the monitor to Factory Settings (Factory Reset).
Lines	 Perform monitor self-test feature check and determine if these lines are also in self-test mode.
	Check for bent or broken pins in the video cable connector.
	· Run the built-in diagnostics.
Synchronization	Reset the monitor to Factory Settings (Factory Reset).
Problems	Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode.
	Check for bent or broken pins in the video cable connector.
	Restart the computer in the safe mode.
Safety Related	· Do not perform any troubleshooting steps.
Issues	· Contact Dell immediately.
Intermittent Problems	Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.
	· Reset the monitor to Factory Settings (Factory Reset).
	Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing Color	Perform monitor self-test feature check.
	Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.
	Check for bent or broken pins in the video cable connector.



Wrong Color	 Try different Preset Modes in Color settings OSD. Adjust R/G/B value in Custom Color in Color settings OSD. Change the Input Color Format to RGB or YCbCr/YPbPr in the Color settings OSD. Run the built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	 Set the screen to turn off after a few minutes of screen idle time. These can be adjusted in Windows Power Options or Mac Energy Saver setting. Alternatively, use a dynamically changing screensaver.
Video Ghosting or Overshooting	Change the Response Time in the Display OSD to Normal, Fast or Extreme depending on your application and usage.



Product-specific problems

Specific Symptoms	Possible Solutions
Screen image is too small	 Check the Aspect Ratio setting in the Display settings OSD.
	· Reset the monitor to Factory Settings (Factory Reset).
Cannot adjust the monitor with the	 Turn Off the monitor, unplug the power cord, plug it back, and then turn On the monitor.
buttons on the bottom of the panel	 Check if the OSD menu is locked. If yes, press and hold the Exit button (button 4) for four seconds to unlock.
No Input Signal when user controls are pressed	 Check the signal source. Ensure the computer is not in Standby Mode by moving the mouse or pressing any key on the keyboard.
	 Check if the video cable is plugged in properly. Disconnect and reconnect the video cable if necessary.
	· Reset the computer or video player.
The picture does not fill the entire	 Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.
screen	· Run the built-in diagnostics.



Appendix

MARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the Safety Environment and Regulatory Information (SERI).

FCC notices (U.S. Only) and other regulatory information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in vour area.

- · Online technical assistance www.dell.com/support/monitors
- · Contacting Dell www.dell.com/contactdell

EU product database for energy label and product information sheet

SE2722H: https://eprel.ec.europa.eu/qr/471652

SE2722HX: https://eprel.ec.europa.eu/gr/471677



