


Pro Lite

LCD Monitor

ENGLISH

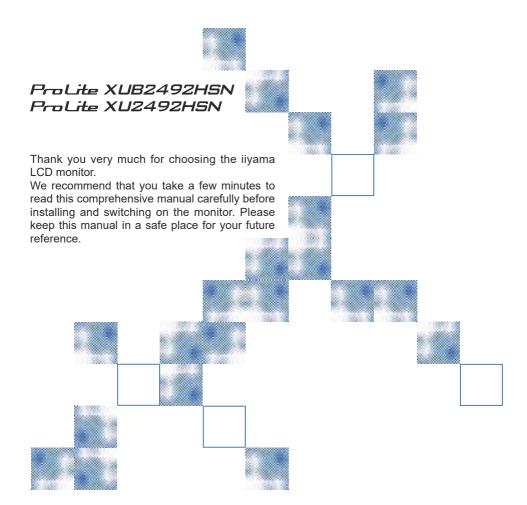

iiyama | Servicecard





Dear user, we congratulate you on the purchase of your iiyama LCD.

please check the iiyama website. For details on warranty and locally used pixel policies that apply directly after installation of your product

your local support centre found at www.iiyama.com/service To report a fault, please contact

Things to check before you call the iiyama information line

if the power cable is connected securely and turned on?

if the display has been turned on?

If the signal cable is connected securely and the correct input selected?

I if the computer has been restarted with the display connected?

if the graphics card is correctly installed with the latest drivers possible?

if the correct native resolution has been selected via 'Display Properties'?

If the R/G/B signal configuration is correct?

I if the displays On Screen Menu is shown?

If the correct brightness and contrast settings have been set?

If given display tolerances and compatibility have been considered?

If via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

model number *

purchase receipt and serial number *

name and address for collection

I telephone/fax number, for availability during the day

convenient collection date (date, time)

short description of the defect


Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

^{*} see the identification plate on the back of the case.



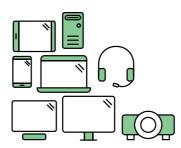

Say hello to a more sustainable product

IT products are associated with a wide range of sustainability risks throughout their life cycle. Human rights violations are common in the factories. Harmful substances are used both in products and their manufacture. Products can often have a short lifespan because of poor ergonomics, low quality and when they are not able to be repaired or upgraded.

This product is a better choice. It meets all the criteria in TCO Certified, the world's most comprehensive sustainability certification for IT products. Thank you for making a responsible product choice, that help drive progress towards a more sustainable future!

Criteria in TCO Certified have a life-cycle perspective and balance environmental and social responsibility. Conformity is verified by independent and approved verifiers that specialize in IT products, social responsibility or other sustainability issues. Verification is done both before and after the certificate is issued, covering the entire validity period. The process also includes ensuring that corrective actions are implemented in all cases of factory non-conformities. And last but not least, to make sure that the certification and independent verification is accurate, both TCO Certified and the verifiers are reviewed regularly.

Want to know more?

Read information about TCO Certified, full criteria documents, news and updates at **tcocertified.com.** On the website you'll also find our Product Finder, which presents a complete, searchable listing of certified products.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive"

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No.: PL2492HC



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: http://www.iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- Eprel registration number XUB2492HSN-B1 : 349877, XU2492HSN-B1 : 349848

TABLE OF CONTENTS

FOR YOUR SAFETY	
SAFETY PRECAUTIONS	
SPECIAL NOTES ON LCD MONITORS	
CUSTOMER SERVICE	
CLEANING	
BEFORE YOU OPERATE THE MONITOR	4
FEATURES	4
CHECKING THE CONTENTS OF THE PACKAGE	4
INSTALLATION	!
FITTING AND REMOVAL OF BASE: ProLite XUB2492HSN	
FITTING AND REMOVAL OF BASE : ProLite XU2492HSN	8
CONTROLS AND CONNECTORS : ProLite XUB2492HSN	9
CONTROLS AND CONNECTORS: ProLite XU2492HSN	10
CONNECTING YOUR MONITOR	1
DISCONNECTING YOUR MONITOR	
COMPUTER SETTING	14
ADJUSTING THE HEIGHT AND THE VIEWING ANGLE :	
ProLite XUB2492HSN	14
ADJUSTING THE VIEWING ANGLE: ProLite XU2492HSN	1
OPERATING THE MONITOR	16
ADJUSTMENT MENU CONTENTS	1
STANDBY FEATURE	2
TROUBLE SHOOTING	2
RECYCLING INFORMATION	2
APPENDIX	29
SPECIFICATIONS : ProLite XUB2492HSN	29
SPECIFICATIONS : ProLite XU2492HSN	30
DIMENSIONS : ProLite XUB2492HSN	3
DIMENSIONS : ProLite XU2492HSN	3
COMPLIANT TIMING	2

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls. When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height. (Just for height adjustable model.)

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

NOTE

- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE



■ If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING

If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

CAUTION

■ For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner Spray-type cleaner

Benzine Wax

Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET

Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

LCD

Periodic cleaning with a soft dry cloth is recommended.

SCREEN

Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 1920 × 1080
- High Contrast 1000:1 (Typical), Adv. Contrast Function Available / Brightness 250cd/m² (Typical)
- Quick Response Time 4ms (Gray to Gray)
- Blue Light Reducer
- ◆ Digital Character Smoothing
- **♦ Automatic Set-up**
- ◆ USB Type-C / RJ45 / DP Out Connectors
- ◆ USB Power Delivery supports up to 65W
- ♦ 2 × 2W Stereo Speakers
- **♦ Ergonomic Design TCO Certified**
- Standby Mode (VESA DPMS Compliant)
- ♦ VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

■ Power Cable*¹

■ Stand-Base with a screw

- HDMI Cable
- Stand-Neck*2
- Cable Holder*2

■ USB Type-C Cable (C to C)

- Safety Guide
- Quick Start Guide

CAUTION


- *1 The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama. An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.
- *2 Accessory for ProLite XU2492HSN



WARNING ■ Before installation, make sure the wall, ceiling or desktop arm is strong enough to hold the necessary weight of the monitor and the mount.

< WALL MOUNTING >


WARNING ■ When you use with the wall mounting, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) with washer which "L" length is 7mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

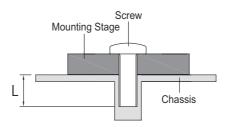

< ROTATING THE MONITOR >

ProLite XUB2492HSN

The monitor is designed to be compatible with both landscape and portrait modes. Graphics card for portrait display will be required for rotating the image on the screen.

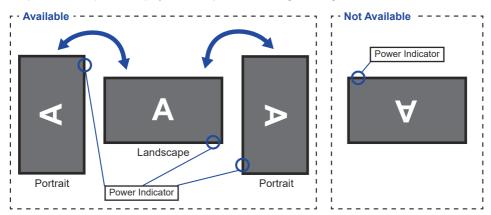


With Stand:



- Adjust the monitor's height before panel rotation.
- Attempting to rotate the panel forcibly without adjusting the stand height may cause damage to the panel or the stand.

ProLite XU2492HSN

The monitor is designed to be compatible only with the landscape mode.

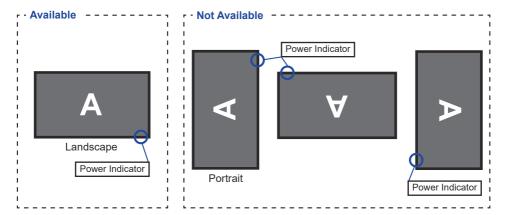


FITTING AND REMOVAL OF BASE: ProLite XUB2492HSN

CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>

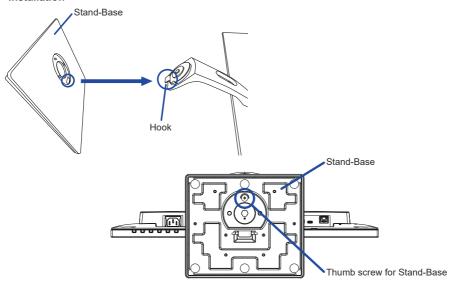

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Install the Stand-Base as shown on the above picture.
- 3 Tighten the 'thumb screw' to secure the Stand-Base to the monitor.

<Removal>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- 2 Loosen the 'thumb screw' to remove the Stand-Base from the monitor.

FITTING AND REMOVAL OF BASE: ProLite XU2492HSN


CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>


- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Hold the monitor and install the Stand-Neck to the monitor until it clicks to secure.
- (3) Install the Stand-Base to the Stand-Neck.
- ④ Tighten the 'thumb screw' to secure the Stand-Base to the monitor.
- (5) Place the Cable Holder.



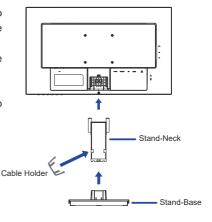


<Removal>


- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Loosen the 'thumb screw' to remove the Stand-Base from the monitor
- ③ Press the Hook on the back of the monitor and remove the Stand-Neck from the monitor
- Pull the hook of the Cable Holder outside and remove it.

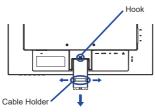



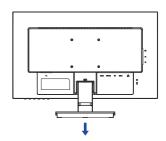


CONTROLS AND CONNECTORS: ProLite XUB2492HSN

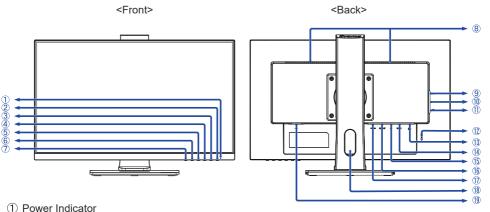

- - NOTE Blue: Normal operation Orange: Standby Mode
- 2 Power Switch ((b))
- 3 Menu / Select Button (ENTER)
- ④ Scroll Up / Volume Button (► / ♥)
- ⑤ Scroll Down / ECO Button (◀ / Ø)
- 6 Exit Button (EXIT)
- (7) Input Select Button (INPUT)
- 8 Speakers
- (9) Headphone Connector ()
- (1) USB Downstream Connector (← : 5V, 900mA)
- (1) USB Downstream Connector (> : 5V, 900mA)
- (12) Keyhole for Security Lock
 - NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.
- 13 LAN(RJ45) Connector (🖳)
- (A) USB Type-C Connector (USB C: 20V, 3.25A)
- (15) DisplayPort Connector (DP)
- (f) DisplayPort Out Connector (DP OUT) *
- (17) HDMI Connector (HDMI)
- (18) Cable Hole
- (19) AC Connector (~: Alternating current)

^{*} DP OUT Connector has a black rubber cap already attached. Remove the cap before connection.

CONTROLS AND CONNECTORS: ProLite XU2492HSN

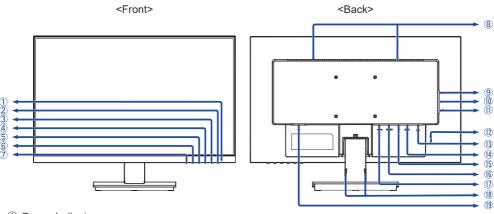

1 Power Indicator

NOTE Blue: Normal operation
Orange: Standby Mode

- 2 Power Switch ((h))
- 3 Menu / Select Button (ENTER)
- ④ Scroll Up / Volume Button (► / 🔘)
- ⑤ Scroll Down / ECO Button (◀ / Ø)
- 6 Exit Button (EXIT)
- 7) Input Select Button (INPUT)
- 8 Speakers
- (9) Headphone Connector (()
- (II) USB Downstream Connector (St. 900mA)
- USB Downstream Connector (o← : 5V, 900mA)
- Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

- 13 LAN(RJ45) Connector (📮)
- (I) USB Type-C Connector (USB C: 20V, 3.25A)
- (15) DisplayPort Connector (DP)
- (I) DisplayPort Out Connector (DP OUT) *
- (17) HDMI Connector (HDMI)
- (18) Installation Holes of Cable Holder
- (19) AC Connector (~: Alternating current)
- * DP OUT Connector has a black rubber cap already attached. Remove the cap before connection.


CONNECTING YOUR MONITOR

- (1) Ensure that both the computer and the monitor are switched off.
- 2 Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Type-C Cable when viewing images on your monitor through the USB Type-C Connector or when using the monitor's USB hub function.*
- 4 Connect the Power Cable to the monitor first and then to the power source.
- 5 Turn on your monitor and computer.
- * When charging connected device via USB Type-C Connector, check if the device is equipped with a USB Type-C Connector that supports charging function via USB PD (=Power Delivery).
 - The connected device can be charged via USB Type-C Connector even when the monitor is in standby mode. See page 21 for USB Battery Charge (USB BC) function.
 - The USB power delivery is up to 65W. If the connected device required more than 65W for operation or for boot up (when the battery is drained), use the original power adapter that came with the device.
 - If a separately purchased USB Type-C Cable is used, make sure the cable is certified by USB-IF and is full-featured with power delivery and video / audio / data transfer functions.
 - USB C to A cable is not included with the monitor. If you use a USB C to A cable, please note
 that you can only transfer data.
 - Compatibility with all connected devices is not guaranteed due to different user environments.

NOTE


- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection : ProLite XUB2492HSN]

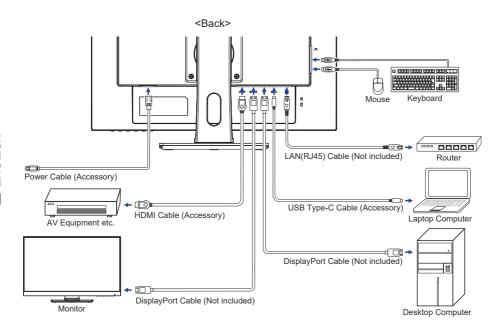


[Collect Cables]

Put the cables through the cable hole to bundle them.

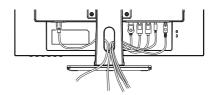


[Example of Connection : ProLite XU2492HSN]

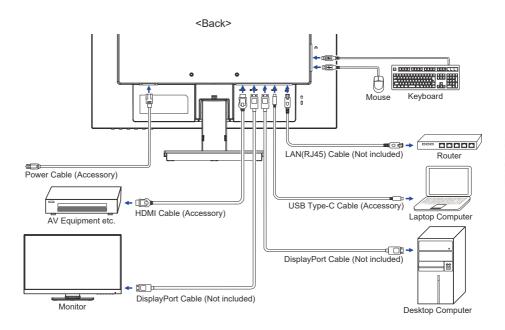

[Collect Cables]

Put the cables through the cable holder to bundle them.

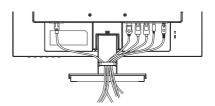

DISCONNECTING YOUR MONITOR

- (1) Ensure that both the computer and the monitor are switched off.
- 2 Disconnect the power source first and then the Power Cable from the monitor.
- ③ Disconnect the USB Type-C cable from the computer and the monitor.
- 4 Disconnect the signal cable from the computer and the monitor.


COMPUTER SETTING

■ Signal Timing Change to the desired signal timing listed on page 32: COMPLIANT TIMING.

ADJUSTING THE HEIGHT AND THE VIEWING ANGLE: ProLite XUB2492HSN

- For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 130mm, angle up to 45° right and left, 22° upward and 5° downward.

- NOTE Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the height or the angle.
 - Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.

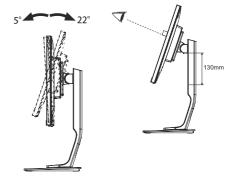






ADJUSTING THE VIEWING ANGLE: ProLite XU2492HSN

- For optimal viewing it is recommended to look at the full face of the monitor.
- Hold the stand so that the monitor does not topple when you change the monitor's angle.
- You are able to adjust the monitor's angle up to 22° upward, 5° downward.
- In order to ensure a healthy and relaxed body position when using the monitor at visual display workstations, it is recommended that the adjusted tilt angle should not exceed 10 degrees. Adjust the monitor's angle to your own preference.

NOTE


- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the angle.

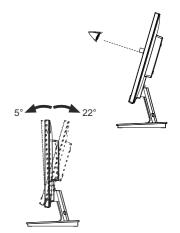

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 32. You are also able to adjust the picture by following the button operation shown below.

① Press the ENTER Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the ◀ / ▶ Buttons.

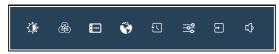

- ② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the ENTER Button. Then, use the ◀ / ▶ Buttons to highlight the desired adjustment icon.
- ③ Press the ENTER Button again. Use the ◀ / ▶ Buttons to make the appropriate adjustment or setting.
- Press the EXIT Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for OSD vertical position, select "OSD" of Menu item and then press the ENTER Button. Then, select "OSD Vertical Position" by using the ◀ / ▶ Buttons. An adjustment page appears after you press the ENTER Button.

Then, use the ◀ / ▶ Buttons to change the OSD vertical position settings. The OSD vertical position should be changing accordingly while you are doing this.



Press the EXIT Button lastly and all changes are saved in the memory.

NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Time has passed. Also, press the EXIT button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- All adjustments have only one setting which applies to all signal timings.

ADJUSTMENT MENU CONTENTS



Picture Adjust *1



Adjustment Item	Problem	n / Option Button to Press
Brightness *2,3,4	Too dark Too bright Too dull Too intense	
Contrast *3	Too dull Too intense	
	Off	Normal
ECO *3 Direct	Mode 1	Brightness of back-light is reduced.
Direct	Mode 2	Brightness of back-light is reduced more than Mode1.
	Mode 3	Brightness of back-light is reduced more than Mode2.
	Off	Typical
Blue Light Reducer	Mode 1	Blue light is reduced.
Blue Light Neducei	Mode 2	Blue light is reduced more than Mode1.
	Mode 3	Blue light is reduced more than Mode2.
Adv. Contrast *4	On	Increased Contrast Ratio
Adv. Contrast	Off	Typical Contrast Ratio
Overdrive	Off / 1 / 2 / 3 It will improve the gray level response time of the LCD panel. A higher level results in a faster response time.	

^{*1} Picture Adjust is disabled when i-Style Color is activated.

Direct

You can skip the Menu items and directly display an option settting screen by using the following button operations.

ullet ECO : Press the ${\mathscr O}$ Button when the Menu is not displayed.

^{*2} Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

^{*3} Brightness, Contrast and ECO adjustments are disabled when Adv. Contrast is activated.

^{*4} Brightness and Adv. Contrast adjustment are disabled when ECO is activated.





Adjustment Item	Probler	n / Option Button to Press
	9300K	Cool color
Color Temperature *1	7500K	Normal color
	6500K	Warm color
	Red	
User Preset *1	Green	Too weak Too strong
	Blue	100 Strong
	Off	Return to a state set by color adjustment except i-Style Color.
	Standard	For general windows environment and monitor default setting.
i-Style Color *2 Direct	Game	For PC game environment.
	Cinema	For movie and video environment.
	Scenery	For displaying outdoor scenery images
	Text	For text editing and viewing in a word processing environment.

^{*}¹ Color Temperature and User Preset settings are disabled when i-Style Color or Blue Light Reducer is activated.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.


• i-Style Color : Press the EXIT Button when the Menu is not displayed.

^{*2} i-Style Color adjustment is disabled when Blue Light Reducer is activated.



Adjustment Item	Problem / Option	Button to Press	
OSD Horizontal Position	OSD is too left OSD is too right	*	•
OSD Vertical Position	OSD is too low OSD is too high	+	▶ ◀
OSD Rotate *	Rotate the OSD. 0° (Normal) / +90° (Rotate right) / -90° (R	otate left)	▶ ◀
OSD Time	You can set the OSD display duration tir 5 and 30 seconds.	ne between	▶ ◀

^{*} Available for ProLite XUB2492HSN only.

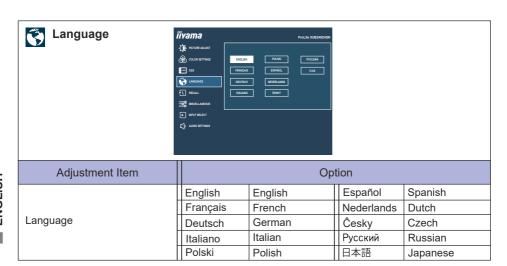







Adjustment Item	Problem / Option Button to Pr		Button to Press
	123456	123456	
Sharp and Soft	You can change the picture quality from 1 to 6 (sharp to soft). Press the Button to change the picture quality in numerical order. Press the Button to change the picture quality in reverse numerical order.		
Video Modo Adjust	Full	Full screen display	
Video Mode Adjust	Aspect *1	Expansion display of	Aspect
Opening Logo	On	iiyama Logo is displaturned on.	yed when the monitor is
Opening Logo	Off	iiyama Logo is not dis is turned on.	splayed when the monitor
LICD DC	On	USB devices can be of monitor is in the stand	charged even when the dby mode.
USB BC	Off	USB devices can not monitor is in the stand	be charged when the dby mode.

NOTE When the monitor is turned off, USB devices cannot be charged even when the USB BC function is on.

While this function is off, USB devices do not operate even when the monitor is in standby mode to save standby electricity. When operating USB devices, turn this function on.

MST *2,3,4	On	Video signal from computer can be extended on multiple monitors.
IVIOT	Off	Video signal from computer is duplicated on the other monitor.
Dianlay Information	1 ' '	nation regarding the current input signal coming ics card in your computer.
Display Information		our graphics card user guide for more information than the resolution and refresh.

- *1 Option is unavailable with 16:9 resolution.
- *2 Available for DisplayPort or USB Type-C input only.
- *3 On/Off of the MST function is not dependent on input signal switching.
- *4 Maximum monitor quantity that can be connected in a daisy chain using DP OUT connector Video format: 1920 × 1080 @60Hz

Input source	MST : On Extension mode	MST : Off Clone mode
USB Type-C	2	4
DisplayPort	4	4

Total number of monitors including the first one connected directly to the computer Connected monitor quantity may differ depending on the specification of the computer used.







Adjustment Item	Option			
	Auto *	Search for an available input source and select automatically.		
Input Source	Manual	HDMI	Select the Digital (HDMI) input.	
		DisplayPort	Select the Digital (DisplayPort) input.	
		USB C	Select the Digital (USB Type-C) input.	

NOTE If "Auto" is selected, only one source available is selected automatically.

Signal switching is not possible if the computer to which the signal you want to select is connected is in standby mode.

Input source is fixed and it will not be detected automatically when you select HDMI, DisplayPort or USB Type-C manually.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• Input Select: Press the INPUT Button when the Menu is not displayed.

^{*} Unavailable when MST is activated.



Adjustment Item	Problem /	Option	Button to Press
Volume Direct	Too soft Too loud		+ +
Mute Audio	On	Turn off the sound tem	porarily.
Mute Audio	Off	Return the sound volur	ne to the previous level.
NOTE Press the ◁ (▶) Button to display the volume adjustment bar and switch On and Off the Mute function by pressing the ◀ / ▶ Buttons.			

Direct

You can skip the Menu items and directly display an adjustment scale by using the following button operations.

■ Lock Mode

<OSD Menu>

The OSD can be locked to avoid an accidental setting change.

- 1 Make sure the monitor is turned ON
- The OSD lock will be activated by pressing the front ENTER Button for about 10 seconds. If you try to access the OSD by pressing any of the buttons, a message "OSD Locked" will appear on the screen.
- The OSD lock will be deactivated by pressing the front ENTER Button again for about 10 seconds.

<Power Switch>

The Power Switch can be locked to avoid an accidental power operation.

- 1. Make sure the monitor is turned ON.
- 2. The Power Switch lock will be activated by pressing the front ◀ Button for about 10 seconds. If you try to turn off the monitor by pressing the Power Switch, a message "Power Button Locked" will appear on the screen.
- The Power Switch lock will be deactivated by pressing the front Button again for about 10 seconds.


STANDBY FEATURE

The standby feature of this product complies with power saving requirement of VESA DPMS. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

To use the feature, the monitor needs to be connected to a VESA DPMS compliant computer. There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

■ Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

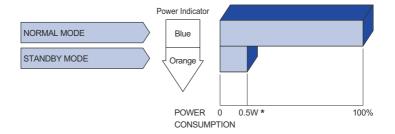

* USB peripheral and audio equipment are not connected.

NOTE Even when using the standby mode, the monitor consumes electricity. Turn off the Power Switch whenever the monitor is not in use, during the night and weekends, to avoid unnecessary power consumption.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- 3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

	Problem	Check
1	The picture does not appear.	
	(Power indicator does not light up.)	☐ The Power Cable is firmly seated in the socket. ☐ The Power Switch is turned ON. ☐ The AC socket is live. Please check with another piece of equipment.
	(Power indicator is blue.)	 ☐ If the blank screen saver is in active mode, touch the keyboard or the mouse. ☐ Increase the Contrast and/or Brightness. ☐ The computer is ON. ☐ The Signal Cable is properly connected. ☐ The signal timing of the computer is within the specification of the monitor.
	(Power indicator is orange.)	☐ If the monitor is in standby mode, touch the keyboard or the mouse. ☐ The computer is ON. ☐ The Signal Cable is properly connected. ☐ The signal timing of the computer is within the specification of the monitor.
2	The screen is not synchronized.	☐ The Signal Cable is properly connected.☐ The signal timing of the computer is within the specification of the monitor.
3	The screen position is not in the center.	$\hfill\square$ The signal timing of the computer is within the specification of the monitor.
4	The screen is too bright or too dark.	☐ The video output level of the computer is within the specification of the monitor.

heard.

Problem

\sim	The screen is shaking.	☐ The power voltage is within the specification of the monitor. ☐ The signal timing of the computer is within the specification of the monitor.
6	No sound.	 □ The audio equipment (computer etc.) is ON. □ The audio visual cable is properly connected. □ The Volume is turned up. □ The Mute Audio is OFF. □ The audio output level of the audio equipment is within the specification of the monitor.
7	The sound is too loud or too quiet.	☐ The audio output level of the audio equipment is within the specification of the monitor.
8	A strange noise is	☐ The audio visual cable is properly connected.

Check

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor. Please visit our web site: www.iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite XUB2492HSN

Size Category		24"	
	Panel technology	IPS Panel Technology	
	Size	Diagonal: 23.8" (60.5cm)	
1.00	Pixel pitch	0.275mm H × 0.275mm V	
LCD Panel	Brightness	250cd/m² (Typical)	
Fallel	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available	
	Viewable angle	Right / Left : 89 degrees each, Up / Down : 89 degrees each (Typical)	
	Response time	4ms (Gray to Gray)	
Display C	Colors	Approx. 16.7M	
Sync Fre	quency	Horizontal: 30.0-85.0kHz, Vertical: 55-75Hz	
Native Re	esolution	1920 × 1080, 2.1 MegaPixels	
Support i	max. resolution	HDMI: 1920 × 1080, 75Hz DisplayPort: 1920 × 1080, 75Hz USB Type-C: Alt Mode 1920 × 1080, 75Hz	
Input Cor	nnector	HDMI, Displayport, USB Type-C (Alt Mode)	
Plug & Pl	lay	VESA DDC2B™	
Input Video Signal		HDMI, Displayport, USB Type-C (Alt Mode)	
USB Standard		USB3.0 (DC5V, 900mA), USB Power Delivery (65W)	
Number of USB Ports Connector shape		1 Upstream : Type-C 2 Downstream : Series A	
LAN Port		RJ45	
Output V	ideo Connector	DisplayPort	
Input Aud	lio Signal	1.0Vrms maximum	
Headpho	ne Connector	ø 3.5mm mini jack (Stereo)	
Speakers	3	2W × 2 (Stereo speakers)	
Maximun	n Screen Size	527.0mm W × 296.5mm H / 20.7" W × 11.7" H	
Power So	ource	100-240VAC, 50/60Hz, 1.5A	
Power Consumption*		19W typical, Standby mode: 0.5W maximum	
Dimensions / Net Weight		539.5 × 366.5 - 496.5 × 210.0mm / 21.2 × 14.4 - 19.5 × 8.3" (W×H×D) 5.4kg / 11.9lbs	
Angle		Tilt: Upward: 22 degrees, Downward: 5 degrees Swivel: Left / Right: 45 degrees each Rotation: Clockwise / Counterclockwise: 90 degrees each	
Environm Consider		Operating: Temperature 5 to 35°C / 41 to 95°F Humidity 10 to 80% (No condensation) Storage: Temperature -20 to 60°C / -4 to 140°F Humidity 5 to 85% (No condensation)	
Approval	s	TCO Certified, CE, TÜV-GS, VCCI, PSE, EAC	


NOTE * USB peripheral and audio equipment are not connected.

SPECIFICATIONS: ProLite XU2492HSN

Size Category		24"		
LCD Panel	Panel technology	IPS Panel Technology		
	Size	Diagonal: 23.8" (60.5cm)		
	Pixel pitch	0.275mm H × 0.275mm V		
	Brightness	250cd/m² (Typical)		
	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available		
	Viewable angle	Right / Left : 89 degrees each, Up / Down : 89 degrees each (Typical)		
	Response time	4ms (Gray to Gray)		
Display Colors		Approx. 16.7M		
Sync Frequency		Horizontal: 30.0-85.0kHz, Vertical: 55-75Hz		
Native Resolution		1920 × 1080, 2.1 MegaPixels		
Support max. resolution		HDMI: 1920 × 1080, 75Hz DisplayPort: 1920 × 1080, 75Hz USB Type-C: Alt Mode 1920 × 1080, 75Hz		
Input Connector		HDMI, Displayport, USB Type-C (Alt Mode)		
Plug & Play		VESA DDC2B™		
Input Video Signal		HDMI, Displayport, USB Type-C (Alt Mode)		
USB Standard		USB3.0 (DC5V, 900mA), USB Power Delivery (65W)		
Number of USB Ports Connector shape		1 Upstream : Type-C 2 Downstream : Series A		
LAN Port		RJ45		
Output Video Connector		DisplayPort		
Input Audio Signal		1.0Vrms maximum		
Headphone Connector		ø 3.5mm mini jack (Stereo)		
Speakers		2W × 2 (Stereo speakers)		
Maximum Screen Size		527.0mm W × 296.5mm H / 20.7" W × 11.7" H		
Power Source		100-240VAC, 50/60Hz, 1.5A		
Power Consumption*		19W typical, Standby mode: 0.5W maximum		
Dimensions / Net Weight		539.5 × 394.5 × 197.0mm / 21.2 × 15.5 × 7.8" (W×H×D) 3.6kg / 7.9lbs		
Tilt Angle		Upward: 22 degrees, Downward: 5 degrees		
Environmental Considerations		Operating: Temperature 5 to 35°C / 41 to 95°F Humidity 10 to 80% (No condensation) Storage: Temperature -20 to 60°C / -4 to 140°F Humidity 5 to 85% (No condensation)		
Approval	S	TCO Certified, CE, TÜV-GS, VCCI, PSE, EAC		


NOTE * USB peripheral and audio equipment are not connected.


DIMENSIONS: ProLite XUB2492HSN

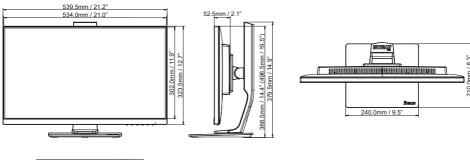

(): Maximum adjustment range

DIMENSIONS: ProLite XU2492HSN

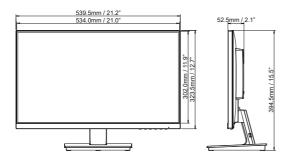

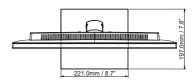

COMPLIANT TIMING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock
	31.469kHz	59.940Hz	25.175MHz
640 × 480	37.500kHz	75.000Hz	31.500MHz
	37.861kHz	72.809Hz	31.500MHz
	35.156kHz	56.250Hz	36.000MHz
800 × 600	37.879kHz	60.317Hz	40.000MHz
	46.875kHz	75.000Hz	49.500MHz
	48.363kHz	60.004Hz	65.000MHz
1024 × 768	56.476kHz	70.069Hz	75.000MHz
	60.023kHz	75.029Hz	78.750MHz
1280 × 1024	63.981kHz	60.020Hz	108.000MHz
1200 × 1024	79.976kHz	75.025Hz	135.000MHz
1440 × 900	55.935kHz	59.887Hz	106.500MHz
1440 × 900	70.635kHz	74.984Hz	136.750MHz
1680 × 1050	65.290kHz	60.000Hz	146.250MHz
1920 × 1080	67.500kHz	60.000Hz	148.500MHz
1920 × 1000	83.890kHz	74.970Hz	174.500MHz