

# USER MANUAL Prolite

# **LCD Monitor**

ENGLISH

# ProLite T2453MIS

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read carefully through this brief but comprehensive manual before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.

# iiyama | Servicecard





# Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

# To report a fault, please contact your local support centre found at www.iiyama.com/service

Things to check before you call the iiyama information line
if the power cable is connected securely and turned on?
if the display has been turned on?
if the signal cable is connected securely and the correct input selected?
if the computer has been restarted with the display connected?
if the graphics card is correctly installed with the latest drivers possible?
if the correct native resolution has been selected via 'Display Properties'?
If the R/G/B signal configuration is correct?
if the displays On Screen Menu is shown?
if the correct brightness and contrast settings have been set?
if given display tolerances and compatibility have been considered?
if via the On Screen Menu you have performed a Factory Reset/Recall?

# Before reporting the screen defect, please prepare the following information/evidence:

model number \*

purchase receipt and serial number \*

name and address for collection

telephone/fax number, for availability during the day

convenient collection date (date, time)

short description of the defect

#### Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

\* see the identification plate on the back of the case.



# **CE MARKING DECLARATION OF CONFORMITY**

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL2453MIS



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: http://www.iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- Eprel registration number T2453MIS-B1 : 1085889

# TABLE OF CONTENTS

# ENGLISH

# FOR YOUR SAFETY

# SAFETY PRECAUTIONS

## WARNING

### STOP OPERATING THE MONITOR IF YOU ARE AWARE OF ANY PROBLEMS

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

#### **NEVER REMOVE THE CABINET**

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

#### DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

#### INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

#### DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

#### **OPERATE UNDER THE SPECIFIED POWER SUPPLY**

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

#### **PROTECT THE CABLES**

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

#### **ADVERSE WEATHER CONDITIONS**

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

#### CAUTION

#### **INSTALLATION LOCATION**

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

#### DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

#### MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls. When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

#### DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

#### **UNPLUG THE MONITOR**

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

#### HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

### DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

#### WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

#### **REMARK FOR 24/7 USAGE**

This product is not specifically designed for 24/7 usage in all environments.

#### **OTHERS**

#### **ERGONOMIC RECOMMENDATIONS**

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

# ENGLISH

# SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- **NOTE** When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
  - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
  - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

# **CUSTOMER SERVICE**

**NOTE** If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

# CLEANING

**WARNING** If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

# **CAUTION** For safety reasons, turn off the power switch and unplug the monitor before you clean it.

#### NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Spray-type cleaner
Benzine	Wax
Abrasive cleaner	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.
- **CABINET** Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.
- LCD Periodic cleaning with a soft dry cloth is recommended.
- **SCREEN** Don't use tissue paper etc. because these will damage the LCD screen.

# **BEFORE YOU OPERATE THE MONITOR**

## FEATURES

- Supports Resolutions up to 1920 × 1080
- High Contrast 3000:1 (Typical), Adv. Contrast Function Available / Brightness 225cd/m<sup>2</sup> (Typical with touch panel) / Quick Response Time 4ms (Gray to Gray)
- Blue Light Reducer
- Digital Character Smoothing
- Automatic Set-up
- Stereo Speakers
   2 × 2.0W Stereo Speakers
- Standby Feature
- VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

# CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- Power Cable\*
- Stand-Base
- Quick Start Guide
- HDMI Cable

- USB Cable
- Screw for stand fixing (4pcs) Safety Guide


- CAUTION
  - \* The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

An approved power cable greater or equal to H05VVF, 3G, 0.75mm  $^{2}$  must be used.

**WARNING** ■ Before installation, make sure the wall, ceiling or desktop arm is strong enough to hold the necessary weight of the display and the mount.


## < WALL MOUNTING >

WARNING When you use with the wall mounting, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) which "L" length is 8mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

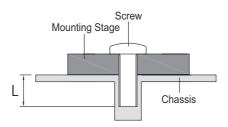

## < ROTATING THE DISPLAY >

The monitor is designed to be compatible only with the landscape mode.

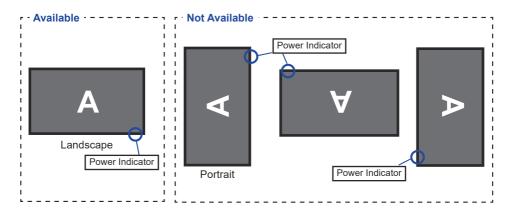


# FITTING AND REMOVAL OF BASE

- **CAUTION** Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
  - Do not give a strong impact to the monitor. It may cause damage.
  - Unplug the monitor before removal or installation to avoid an electric shock or a damage.

#### <Installation>


- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched.
- Lay the monitor flat on a table with front face down.
- 2 Hold the monitor and push the Stand-Base.
- ③ Use 'thumb screw' provided to secure base to monitor column.

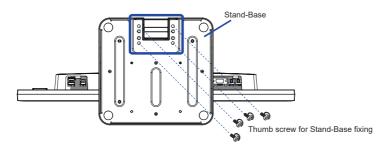

#### <Removal>

- (1) Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- 2 Remove 'thumb screw' to remove base from monitor column.

# CONTROLS AND CONNECTORS

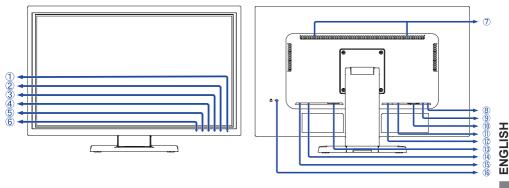

<Front>



Power Indicator

NOTE Blue: Normal operation Orange: Standby mode

- 2 Power Switch (h)
- ③ Menu / Enter Button (MENU/ENTER)\*
- ④ Scroll up / Audio Adjust Button ( ► /
- ⑤ Scroll down / ECO Button ( ◀ / ∅ )\*
- ⑥ Input / Exit Button (INPUT/EXIT)\*
- ⑦ Speakers
- (8) Headphone Connector (HEADPHONE)
- Audio Connector (AUDIO IN)
- 10 VGA Connector (VGA)
- 1 DisplayPort Connector (DP)
- 12 HDMI Connector (HDMI)
- (3) AC Connector (  $\sim$  : Alternating current) (AC IN)
- (Ⅰ) USB Upstream Connector (~~)
- (15) USB Downstream Connector (⊶♣ 5V, 900mA)
- 16 Keyhole for Security Lock

**NOTE** You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

\* You can skip the Menu items and display an adjustment scale directly.


# CONNECTING YOUR MONITOR

- 1 Ensure that both the computer and the monitor are switched off.
- 2 Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Cable.
- ④ Connect the monitor to the audio equipment with the Audio Cable for computer when using the audio features.
- (5) Connect the Power Cable to the monitor first and then to the power supply.
- ⑥ Turn on your monitor and computer.

NOTE Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).

- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- Make sure you tighten the finger screws at each end of the signal cable.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.


[Example of Connection]

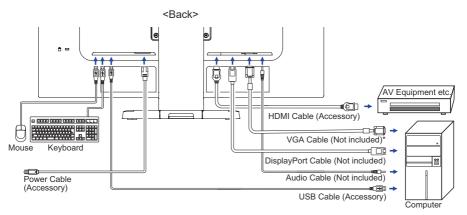


\* VGA cable is not supplied with the monitor. If you use low quality VGA cable, it may cause a result of electro-magnetic interference. Please contact the iiyama Support Centre in your country if you wish to connect the monitor via the VGA input.

# [ Collect Cables ]

- ① Remove the Cable Cover and pass the cables.
- 2 Put the cables through the cable hole of the back.
- Place the Cable Cover.





Signal Timing

Change to the desired signal timing listed on page 28: COMPLIANT TIMING.

TOUCH support operation system


	Mouse	Digitizer	Gestures*1
Windows8/8.1/10	0	0	0
Windows7	0	0	0
Mac OS X*2	0	×	×
Linux*3	0	×	×
Android*4	0	×	×
Functions	Click Drag Double-Click		Mouse & Digitizer functions Press & Tap, Rotate, Zoom-in/out

The other OS Versions not listed are not supported.

- $\bigcirc$ : Supported  $\times$ : Not supported
- \*<sup>1</sup> Gestures can be supported by application programs.
- \*<sup>2</sup> Mac OS 10.15 support single touch.
- \*<sup>3</sup> Linux kernel 4.x/3.x & latest single touch.
- \*<sup>4</sup> Android 7/8/9 support.

# ADJUSTING THE VIEWING ANGLE

- For optimal viewing it is recommended to look at the full face of the monitor.
- Hold the stand so that the monitor does not topple when you change the monitor's angle.
- You are able to adjust the monitor's angle up to 95° upward, 25° downward.
- In order to ensure a healthy and relaxed body position when using the monitor at visual display workstations, it is recommended that the adjusted tilt angle should not exceed 10 degrees. Adjust the monitor's angle to your own preference.
- NOTE Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
  - Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the angle.

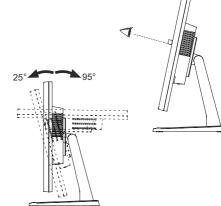

# **OPERATING THE MONITOR**

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 28. You are also able to adjust the picture by following the button operation shown below. For more detailed adjustments, see page 21 for SCREEN ADJUSTMENTS.

 Press the MENU Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the ◀ / ▶ Buttons.



- ② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the ENTER Button. Then, use the ◀ / ▶ Buttons to highlight the desired adjustment icon.
- ③ Press the ENTER Button again. Use the ◀ / ► Buttons to make the appropriate adjustment or setting.
- ④ Press the EXIT Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for vertical position, select Menu item of Geometry and then press the ENTER Button. Then, select Vertical Position by using the  $\blacktriangleleft$  /  $\blacktriangleright$  Buttons.

An adjustment page appears after you press the ENTER Button. Then, use the  $\blacktriangleleft$  /  $\blacktriangleright$  Buttons to change the vertical position settings. The vertical position of the overall display should be changing accordingly while you are doing this.



Press the EXIT Button lastly, it ends, all changes are saved in the memory.

## NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Timeout has passed. Also, press the EXIT button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- Adjustments for Horizontal / Vertical Position, Pixel Clock and Phase are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.

10 OPERATING THE MONITOR

# ADJUSTMENT MENU CONTENTS

Auto Adjust	Picks 7.26305  AND GARRY  AND GARRY  COCK DIVISION AND TO UND AND TO ADD ADD TO ADD	
Adjustment Item	Problem / Option	Button to Press
Auto Adjust * Direct	Adjust H. / V. Position, Clock a	nd Phase automatically.

### \* Only Analog Input.

For best results, use the Auto Adjust in conjunction with the adjustment pattern. See page 21 for SCREEN ADJUSTMENTS.

# Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Auto Adjust: Pressing and holding of the INPUT/EXIT Button for 3 seconds when the Menu is not displayed.

Picture	Adjust	*1
---------	--------	----

in an	12		 ProLite T2453M
AUTO ADJUST	BRIGHTNESS		
PICTURE ADJUST		-	-0
GEOMETRY	CONTRAST		
COLOR SETTINGS			
E] **	eco		•
LANGUAGE	BLUE LIGHT REDUCER		
RECALL	ADV. CONTRAST		017
MISCELLANEOUS	OVERDRIVE		
INPUT SELECT	CANNA		
AUDIO SETTINGS	X-RES TECHNOLOGY		

Adjustment Item	Problem / Option Button to Pre			
Brightness* <sup>2,3</sup>		Too dark Too bright Too dull		
Contrast *2.3	Too dull Too inte	nse		
	Off	Normal		
ECO * <sup>3</sup> Direct	Mode1	Brightness of back-light is reduced.		
	Mode2	Brightness of back-light is reduced more than Mode1.		
	Mode3	Brightness of back-light is reduced more than Mode2.		
	Off	Typical		
Dive Light Deduces *3	Mode1	Blue light is reduced.		
Blue Light Reducer *3	Mode2	Blue light is reduced more than Mode1.		
Direct	Mode3	Blue light is reduced more than Mode2.		
Adv. Contrast *3	Off	Typical Contrast Ratio		
Adv. Contrast	On	Increased Contrast Ratio		
Overdrive	Off / 1 / 2 / 3 It will improve the gray level response time of the LCD panel. A higher level results in a faster response time.			
Gamma	1.8 / 2.0 / 2.2 / 2.4 You can set the Gamma.			
	Off	Normal		
X-Res Technology	Soft	Enhance the picture edge.		
	Middle	Enhance the picture edge more than the Soft option.		
	Hard	Enhance the picture edge more than the Middle option.		

\*<sup>1</sup> Picture Adjust is disabled when i-Style Color is activated.

\*2 Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

\*<sup>3</sup> See page 20 for Disabled function matrix.

# Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

- ECO: Press the  $\triangleleft$  /  $\square$  Button when the Menu is not displayed.
- Blue Light Reducer: Pressing and holding of the ► / <a>/ <a>/ Button for 3 seconds when the Menu is not displayed.</a>

Geometry *	Photo 1203305	Packs 755385		
,	MULTINITIAL MULTIN			
Adjustment Item	Problem / Option	Button to Press		
Horizontal Position	Too left			
Vertical Position	Too low	Too low Too high		
Pixel Clock	Too narrow Too wide			
Phase	To correct flickering text or lines			

\* Only Analog Input.

See page 21 for SCREEN ADJUSTMENTS.

Color	Settings	*1
-------	----------	----

iivama				Vol.ite T2453MI
AUTO ADJUST	COLOR TEMPERATURE			
PICTURE ADJUST	9300K	7500K	) (	6500K
GEOMETRY	USER PRESET			
COLOR SETTINGS	RD 820		-	
E 050	GREEN		-	
LANSUAGE			-	
ED RECALL				
MECELLANEOUS				
E INFUT SELECT	SATURATION			
AUDIO SETTINGS	ISTYLE COLOR			- 2

ENGLISH

Adjustment Item	Problem / Option Button to Pre	
	9300K	Bluish white
Color Temperature *2	7500K	Greenish white
	6500K	Reddish white
	Red	
User Preset *2	Green	Too weak Too strong
	Blue	Too strong
	Red	
	Green	1
Hue * <sup>1,2</sup>	Blue	You can set the Colours.
nue	Cyan	You can set the Colours.
	Magenta	
	Yellow	
	Red	
	Green	
Saturation * <sup>1,2</sup>	Blue	You can set the Colours.
Saturation	Cyan	
	Magenta	
	Yellow	
	Off	Return to a state set by color adjustment except i-Style Color.
i-Style Color	Standard	For general windows environment and monitor default setting.
	Game	For PC game environment.
	Cinema	For movie and video environment.
	Scenery	For displaying outdoor scenery images
	Text	For text editing and viewing in a word processing environment.

\*1 See page 20 for Disabled function matrix.
 \*2 Functions other than i-Style Color is disabled when i-Style Color is activated.

OSD	Area A.Adt       Distance Strand, Harmang         Marka A.Adt       Distance Strand, Harmang         Distance Strand, Harmang       Distance Strand, Harmang         Distance Strand, Harmang       Distance Strand, Harmang         Marka Marka       Distance Strand, Harmang			
Adjustment Item	Problem / Option Button to Pres	SS		
OSD Horizontal Position	OSD is too left OSD is too right			
OSD Vertical Position	OSD is too left			
OSD Time	You can set the OSD display duration time between 5 and 30 seconds.			
	Off When power is back, the monitor returns to the mo it was in before AC loss.	ode		
After AC Cut	On Monitors stays in off mode when power is back. NOTE To turn the monitor back on, press the power switch.			

Lang	uage
------	------

YANTIA .			ProLite T2453M
AUTO ADJUST			
PICTURE ADJUST	ENGLISK	POLSKI	русский
GEOMETRY	PRANÇAIS	ESPAÑOL	
COLOR SETTINGS	DEUTSCH	NEDERLANDS	
2] 050	TALIANO	ČESKÝ	
LANGUAGE			
RECALL			
MISCELLANEOUS			
NPUT SELECT			
AUDIO SETTINGS			

ENGLISH

Adjustment Item	Problem / Option			Button to Press
	English	English	Español	Spanish
Language	Français	French	Nederlands	Dutch
	Deutsch	German	Ĉesky	Czech
	Italiano	Italian	Русский	Russian
	Polski	Polish	日本語	Japanese

	Matter and	
Adjustment Item	Problem / Option	Button to Press
Recall	Factory-preset data is restored.	

Miscellaneous		502 4.0437 Fill 51.0500			
Adjustment Item	Problem /	Option	Button to Press		
Sharp and Soft	to soft). Press the ▶ I numerical ord	You can change the picture quality from 1 to 6 (sharp			
Video Mode Adjust *1	Full	Expansion display			
	Aspect *2	Expansion display of Aspect			
Opening Logo	Off	iiyama Logo does is turned on.	not display when the monitor		
	On	iiyama Logo displayed when the monitor is turned on.			
DDC/CI	Off	DDC/CI function is	s turned Off.		
	On	Enable the DDC/C	Cl function.		
Display Information	Displays information regarding the current input signal coming from the graphic card in your computer. NOTE See your graphic card user guide for more information about changing the resolution and refresh.				

\*<sup>1</sup> Only HDMI input.
 \*<sup>2</sup> Option unavailable with 16:9 resolution.

Input Select Direct			NoCh 195305 BARC BARC BARC	
Adjustment Item	Problem	n / Option		Button to Press
	Auto			r an available input source and omatically.
Input Source		VGA	Select the	e Analog (VGA) input.
	Manual	HDMI	Select the	e Digital (HDMI) input.
		DP	Select the	e Digital (DisplayPort) input.
NOTE Input source is fix are selected.	ed, not selec	ted automatica	lly when V0	GA, HDMI and DisplayPort which

# Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Input Select : Press the INPUT/EXIT button when the Menu is not displayed.

Audio Settings	Âİİ YAMBA         ↓ AIIO ALBET       VILWE         ↓ AIIO ALBET       VILWE         ▲ AIIO ALBET       VILWE         ➡ COLORETROS       (1)         ➡ COLORETROS       (1)         ➡ MORIDARE       (1)			
Adjustment Item	Problem /	Option	Button to Press	
Volume Direct	Too soft			
Mute Audio	Off Return the sound volume to the previous leve		volume to the previous level.	
	On Turn off the sound temporarily.			
	HDMI	Select the HDMI in	nput.	
Audio Input*	DP	Select the DisplayPort input.		
	Line-In	Select the Line-In input.		

\* Suitable for HDMI/DisplayPort input only.

# Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

● Volume: Press the ► / <a> / <a> Button when the Menu is not displayed.</a>

### Lock Mode

#### <OSD Menu>

- 1. The OSD lock will be activated by pressing the front buttons MENU/ENTER for about 10 seconds. Then, OSD LOCKED will appear on the screen.
- 2. The OSD lock will be deactivated by pressing the front buttons MENU/ENTER again for about 10 seconds.

#### <Power Switch>

- 1. The power switch lock will be activated by pressing the front buttons ◀ / Ø for about 10 seconds. Then, POWER LOCK will appear on the screen.
- 2. The power switch lock will be deactivated by pressing the front buttons ◀ / ∅ again for about 10 seconds.

			After enabled function					
		Brightness	Contrast	ECO	Blue Light Reducer	Adv. Contrast	Color Settings	Hue Saturation
	ECO	×	0	_	0	0	0	0
Function	Blue Light Reducer	0	0	0	_	0	×	×
enabled	Adv. Contrast	×	×	0	0	—	0	0
	Color Temperature	0	0	0	0	0	_	×

#### Disabled function matrix

⊖: adjustable

 $\times$ : disabled

# SCREEN ADJUSTMENTS

Adjust the image by following the procedure below to get the desired picture when selecting Analog input.

- The screen adjustments described in this manual are designed to set image position and minimize flicker or blur for the particular computer in use.
- The monitor is designed to provide the best performance at resolution of 1920 × 1080, but can not provide the best at resolutions of less than 1920 × 1080 because the picture is automatically stretched to fit the full screen. It is recommended to operate at resolution of 1920 × 1080 in normal use.
- Displayed text or lines will be blurred or irregular in thickness when the picture is stretched due to the screen enlargement process.
- It is preferable to adjust the image position and frequency with the monitor controls, rather than the computer software or utilities.
- Perform adjustments after a warm-up period of at least thirty minutes.
- Additional adjustments may be required after the Auto Image Adjust depending on the resolution or signal timing.
- The Auto Image Adjust may not work correctly when displaying the picture other than the screen adjustment pattern. In this case, manual adjustments are required.


There are two ways to adjust the screen. One way is automatic adjustment for Position, Clock and Phase. The other way is performing each adjustment manually.

Perform the Auto Image Adjust first when the monitor is connected to a new computer, or resolution is changed. If the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Image Adjust, manual adjustments are required. Both adjustments should be made by using the screen adjustment pattern (Test.bmp) obtained via the iiyama web site (http:// www.iiyama.com).


Adjust the image by following the procedure below to get the desired picture. This manual explains adjustment under Windows<sup>®</sup> OS.


- ① Display the picture at the optimum resolution.
- 2 Enter the Test.bmp (screen adjustment pattern) to wallpaper.
  - **NOTE** Consult the appropriate documentation for doing this.
    - Test.bmp is made at resolution of 1280 × 1024. Set the display position to center in the wallpaper setting dialogue box.


[Adjustment pattern]

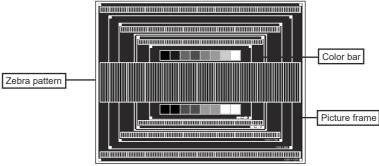


- ③ Pressing and holding of the INPUT/EXIT Button for 3 seconds when the Menu is not displayed. (Auto Adjust)
- ④ Adjust the image manually by following procedure below when the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Image Adjust.
- **(5)** Adjust the V.Position so that the top and bottom of the picture frame will fit to the display area.

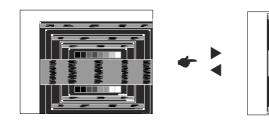











2) Stretch the right side of the picture frame to the right edge of the display area by adjusting the Clock.









- When the left side of the picture frame moves apart from the left edge of the display area during the Clock adjustment, adjust steps 1) and 2).
- Another way to make the Clock adjustment is to correct the vertical wavy lines in the zebra pattern.
- The picture may flicker during the Clock, H.Position and V.Position adjustment.
- In case the picture frame is bigger or smaller than the data display area after the Clock adjustment, repeat steps from ③.

#### ⑦ Adjust the Phase to correct horizontal wavy noise, flicker or blur in the zebra pattern.







NOTE In case the strong flicker or blurs remain on a part of the screen, repeat steps 6 and ⑦ because the Clock may not be adjusted correctly.

- Adjust the H.Position after the Phase adjustment if the horizontal position moves during the adjustment.
- ⑧ Adjust the Brightness and Color to get the desired picture after you complete the Clock and Phase adjustments.

Put back your favorite wallpaper.


## **STANDBY FEATURE**

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

#### Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W\*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

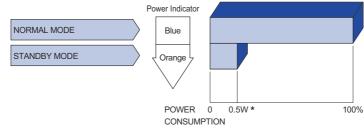

\* When the USB devices are not connected.

# ENGLISH

# **TROUBLE SHOOTING**

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- 2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- 3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

	Problem	Check
1	The picture does not appear.	
	(Power indicator does not light up.)	<ul> <li>The Power Cable is firmly seated in the socket.</li> <li>The Power Switch is turned ON.</li> <li>The Main Power Switch is turned ON.</li> <li>The AC socket is live. Please check with another piece of equipment.</li> </ul>
	(Power indicator is blue.)	<ul> <li>If the blank screen saver is in active mode, touch the keyboard or the mouse.</li> <li>Increase the Contrast and/or Brightness.</li> <li>The computer is ON.</li> <li>The Signal Cable is properly connected.</li> <li>The signal timing of the computer is within the specification of the monitor.</li> </ul>
	(Power indicator is orange.)	<ul> <li>If the monitor is in standby mode, touch the keyboard or the mouse.</li> <li>The computer is ON.</li> <li>The Signal Cable is properly connected.</li> <li>The signal timing of the computer is within the specification of the monitor.</li> </ul>
2	The screen is not synchronized.	<ul><li>☐ The Signal Cable is properly connected.</li><li>☐ The signal timing of the computer is within the specification of the monitor.</li></ul>
3	The screen position is not in the center.	□ The signal timing of the computer is within the specification of the monitor.
4	The screen is too bright or too dark.	The video output level of the computer is within the specification of the monitor.
5	The screen is shaking.	□ The power voltage is within the specification of the monitor. □ The signal timing of the computer is within the specification of the monitor.

#### Problem

#### Check

- 6 No sound.
- The audio equipment (computer etc.) is ON.
- The Audio Cable is properly connected.
  - ☐ The Volume is turned up.
  - ☐ The Mute is OFF.
  - □ The audio output level of the audio equipment is within the specification of the monitor.
- The sound is too loud or too quiet.The audio output level of the audio equipment is within the specification of the monitor.
- ⑧ A strange noise is heard.
- □ The Audio Cable is properly connected.

# **RECYCLING INFORMATION**

For better environment protection please don't dispose your monitor. Please visit our web site: www.iiyama.com for monitor recycling.

# APPENDIX


Design and specifications are subject to change without prior notice.

# SPECIFICATIONS

	Technology	IR Touch 10pts				
Touch Screen	Light transmission	90%				
	Communication system	USB				
Size Cate	egory	24"				
Panel technology		VA				
	Size	Diagonal: 23.6" (59.8cm)				
	Pixel pitch	0.272mm H × 0.272mm V				
LCD Panel	Brightness	250cd/m <sup>2</sup> (Typical without touch panel), 225cd/m <sup>2</sup> (Typical with touch panel)				
	Contrast ratio	3000 : 1 (Typical), Adv. Contrast Function Available				
	Viewable angle	Right / Left : 89 degrees each, Up / Down: 89 degrees each (Typical)				
	Response time	20ms (Typical), 4ms (Gray to Gray)				
Display C	Colors	Approx.16.7M				
Sync Fre	quency	VGA: Horizontal: 24.0-82.0kHz, Vertical: 50-75Hz HDMI: Horizontal: 24.0-82.0kHz, Vertical: 50-75Hz DisplayPort: Horizontal: 24.0-82.0kHz, Vertical: 50-75Hz				
Native Re	esolution	1920 × 1080, 2.1 MegaPixels				
Support r	nax. resolution	VGA: 1920 × 1080 60Hz HDMI: 1920 × 1080 60Hz DisplayPort: 1920 × 1080 60Hz				
Input Cor	nnector	VGA, HDMI, DisplayPort				
Input Syr	nc Signal	Separate sync: TTL, Positive or Negative				
Input Vid	eo Signal	Analog: 0.7Vp-p (Standard), 75Ω, Positive Digital: HDMI, DisplayPort				
USB Star	ndard	USB3.0 (DC5V, 900mA) × 2				
Number of Connector	of USB Ports or shape	1 Upstream : Series B 2 Downstream : Series A				
Input Auc	lio Connector	ø 3.5mm mini jack (Stereo)				
Input Auc	lio Signal	1.0Vrms maximum				
Headpho	ne Connector	ø 3.5mm mini jack (Stereo)				
Speakers	3	2W × 2 (Stereo speakers)				
Maximun	n Screen Size	521.3mm W × 293.2mm H / 20.5" W × 11.5" H				
Power So	ource	100-240VAC, 50/60Hz, 1.5A				
Power Co	onsumption*	18W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum				
Dimensio	ons / Net Weight	571.0 × 391.0 × 220.5mm / 22.5 × 15.4 × 8.7" (W×H×D), 6.0kg / 13.2lbs				
Tilt Angle		Upward: 95 degrees, Downward: 25 degrees				
Environm	nental Considerations	Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 80% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 10 to 90% (No condensation)				
Approval	S	CE, UKCA, VCCI, EAC				

**NOTE** \* When the USB devices are not connected.



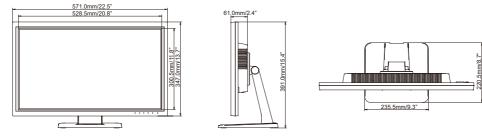

# COMPLIANT TIMING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock
640 × 480	31.469kHz	59.940Hz	25.175MHz
040 ^ 400	37.500kHz	75.000Hz	31.500MHz
800 × 600	37.879kHz	60.317Hz	40.000MHz
000 × 000	46.875kHz	75.000Hz	49.500MHz
1024 × 768	48.363kHz	60.004Hz	65.000MHz
1024 × 768	60.023kHz	75.029Hz	78.750MHz
1000 × 1004	63.981kHz	60.020Hz	108.000MHz
1280 × 1024	79.976kHz	75.025Hz	135.000MHz
1680 × 1050	65.290kHz	60.000Hz	146.250MHz
1920 × 1080	66.590kHz	59.930Hz	138.500MHz